


## 8. ASSEMBLY INSTRUCTION


### 8.1 Disassembly

1. Remove the battery, antenna and screws as shown above.

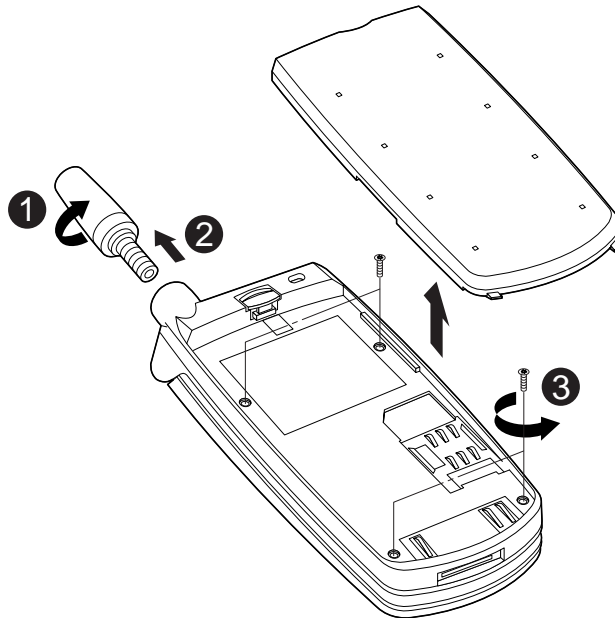

**Figure 8-1. Removing Battery pack, screws and Antenna**

2. Carefully lift up the bottom of Rear Cover first, then hold the covers and twist them.

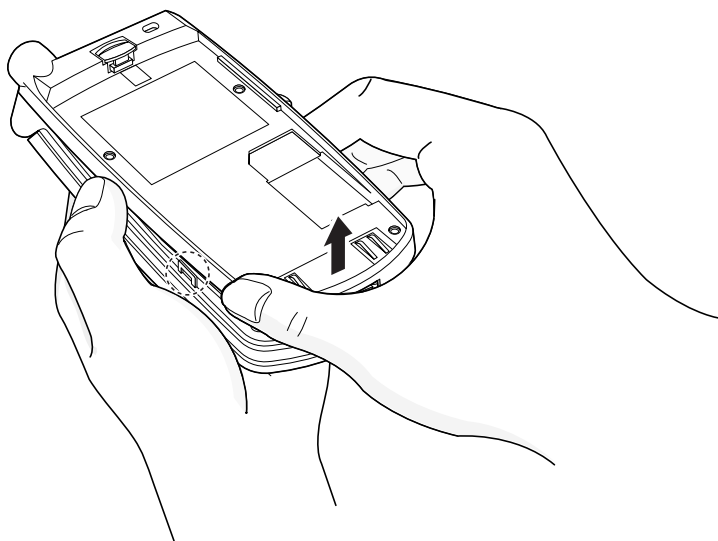


**Figure 8-2. Disassembly of Rear cover and Front cover**

## 8. ASSEMBLY INSTRUCTION


---

3.Finally carefully remove the rear-cover from the hooks on the top of front-cover.

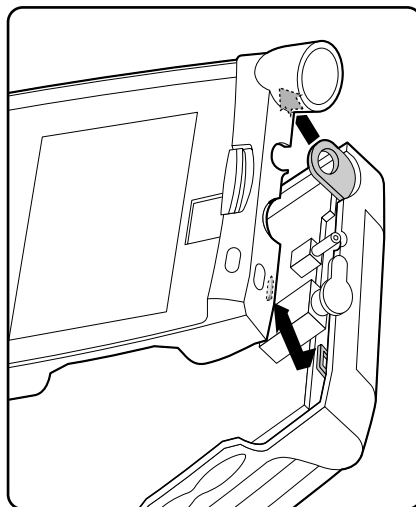

**Figure 8-3. Disassembly from the hooks**

4. Remove the pin shown below to unlock the PCB.

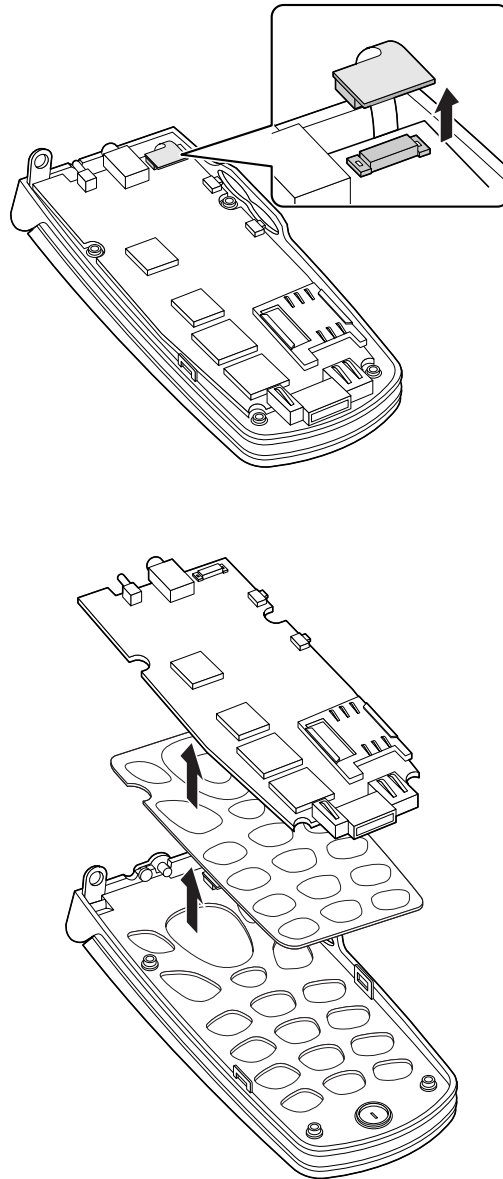


**Figure 8-4. Unlocking and removing the PCB**

## 8. ASSEMBLY INSTRUCTION


---

5. Use a sharp awl to push away the antenna-bushing.

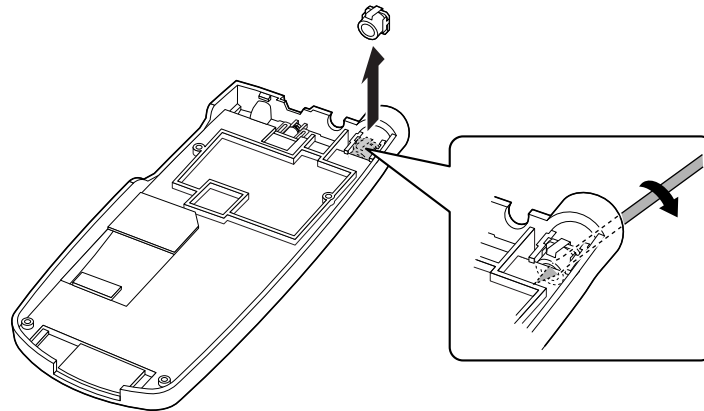


**Figure 8-5. Removing Antenna-bushing**

6. Use a tweezers to remove the Battery Locker.

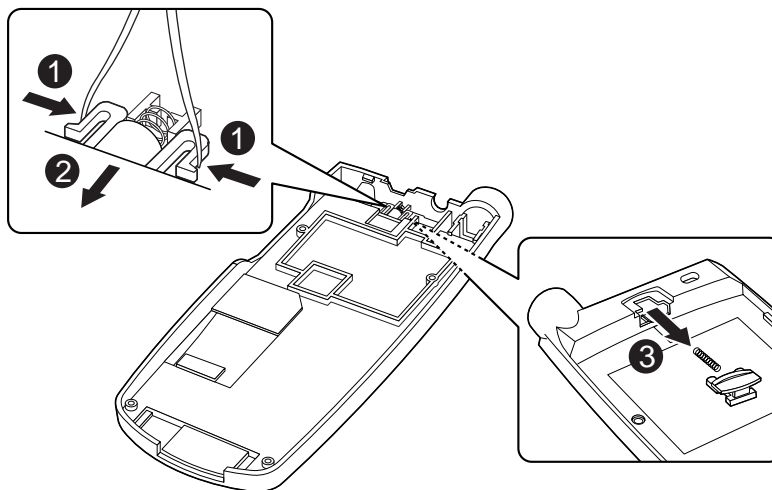


**Figure 8-6. Removing battery locker**

7. Remove the buttons.

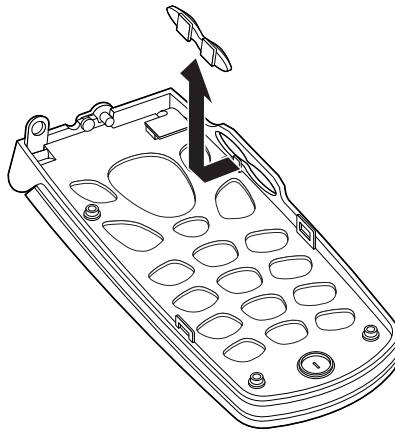

**Figure 8-7. Removing buttons**

8. Push away the hinge to remove the folder.

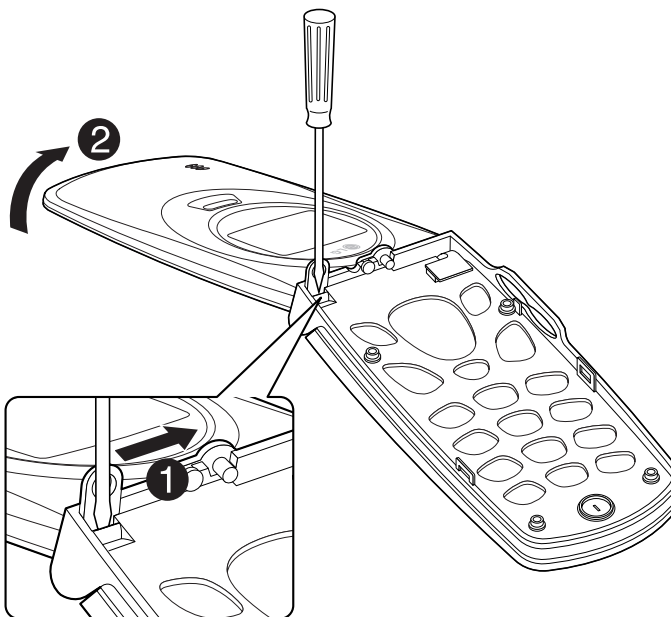


**Figure 8-8. Detaching Folder**

## 8. ASSEMBLY INSTRUCTION


---

9. Remove a hinge from the folder. Then detach screw caps and screws

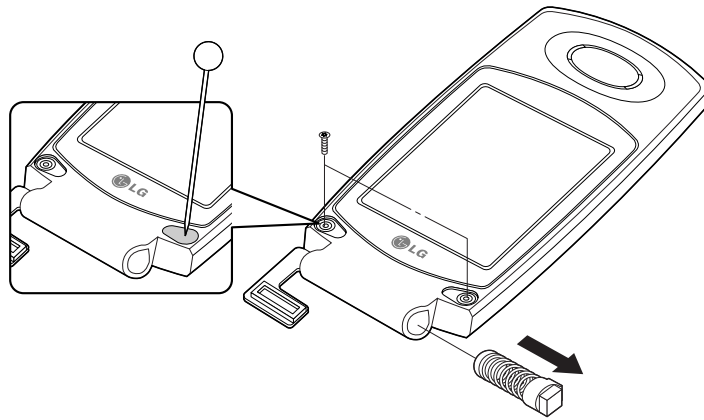


**Figure 8-9. Removing hinge and screws**

10. Place the folder on a desk. Then hold the hinge and push it down carefully. Finally, detach it from the rest hooks shown above.

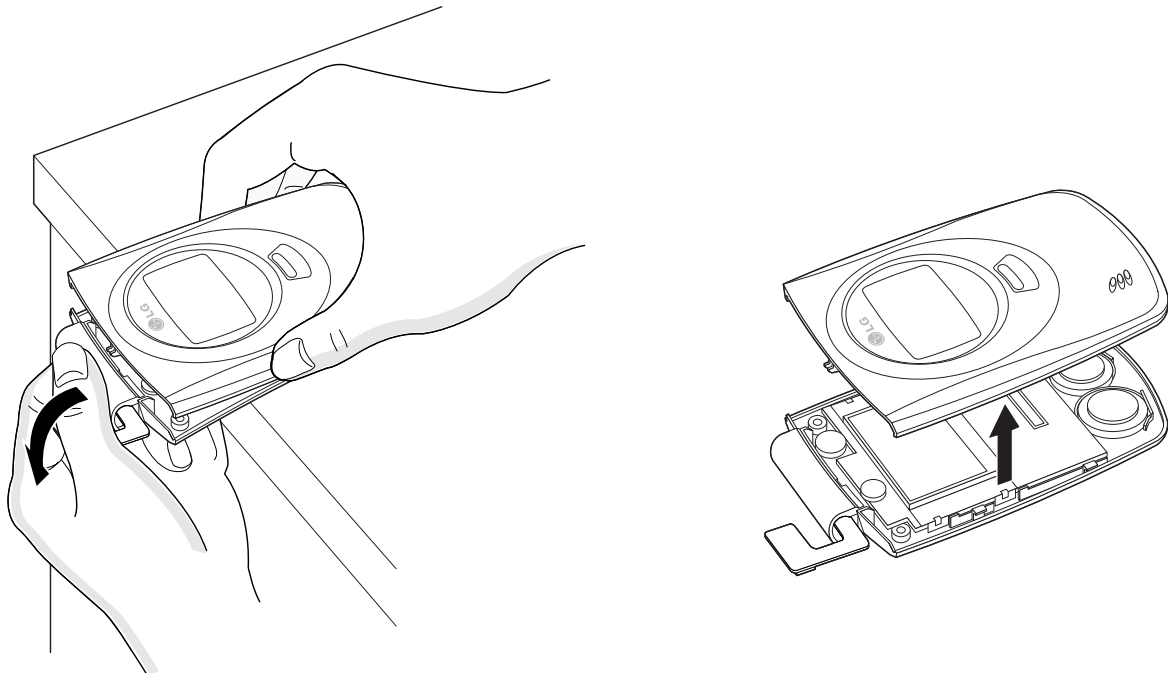


**Figure 8-10. Disassembly of Folder**

11. Detach the rest components as shown below.

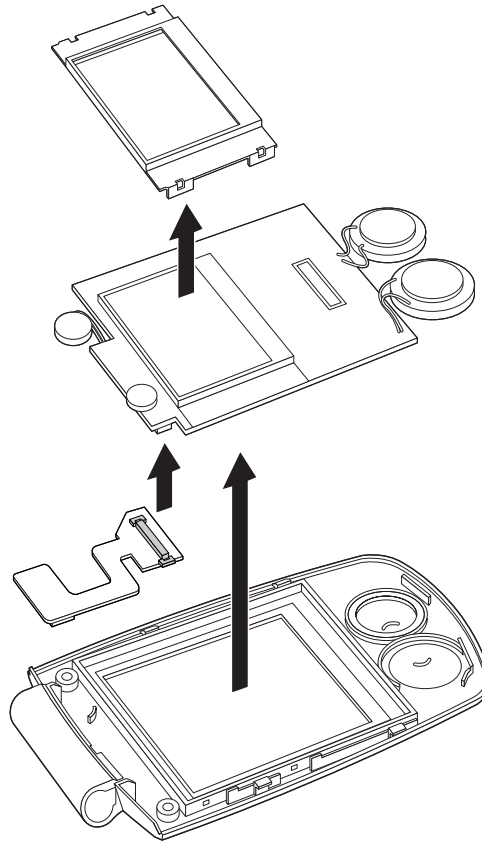

**Figure 8-11. Disassembly of Rest components**

12. Use a '-' driver to lift up the end-side of sub-window.

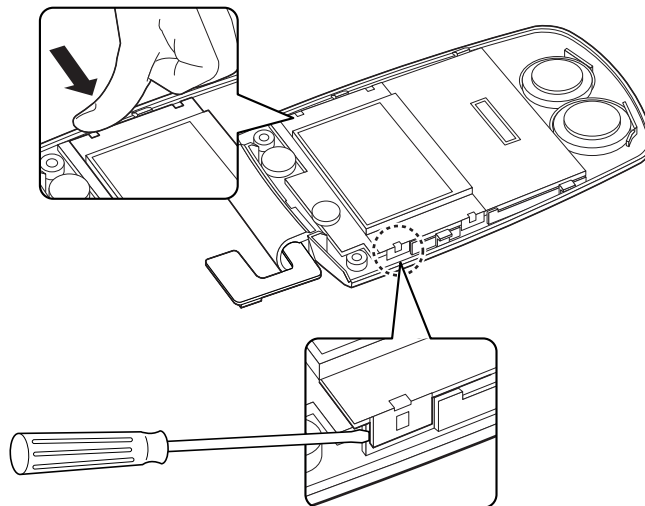

**Figure 8-12. Detaching sub-window.**