

8. DISASSEMBLY INSTRUCTION

1. Remove the battery and screws.

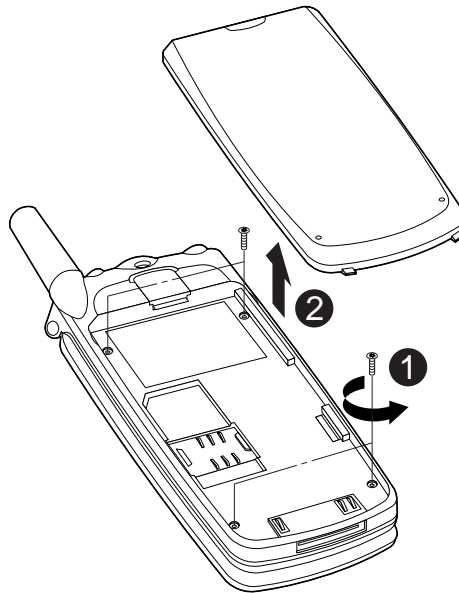


Figure 8-1. Removing Screws

8. DISASSEMBLY INSTRUCTION

2. Use a thin plastic sheet to slide and open the gap between front and rear covers, and detach them carefully with both hands.
3. Then carefully remove the rear cover from the hooks as shown in Figure 8-2.

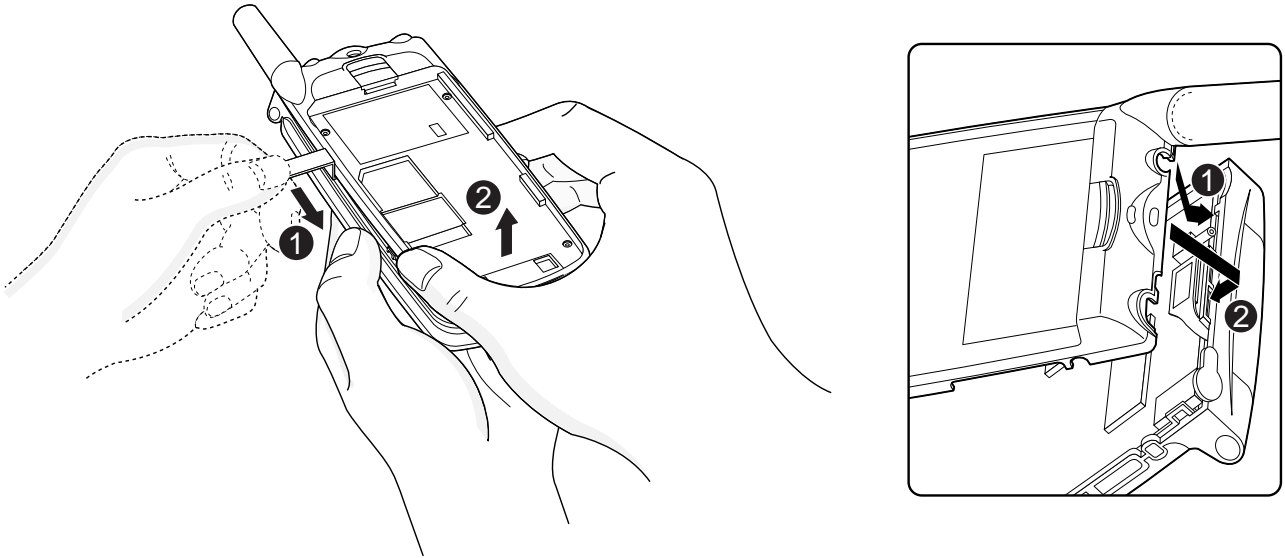


Figure 8-2. Disassembling covers

4. Unlock the PCB and remove other components as shown in Figure 8-3.

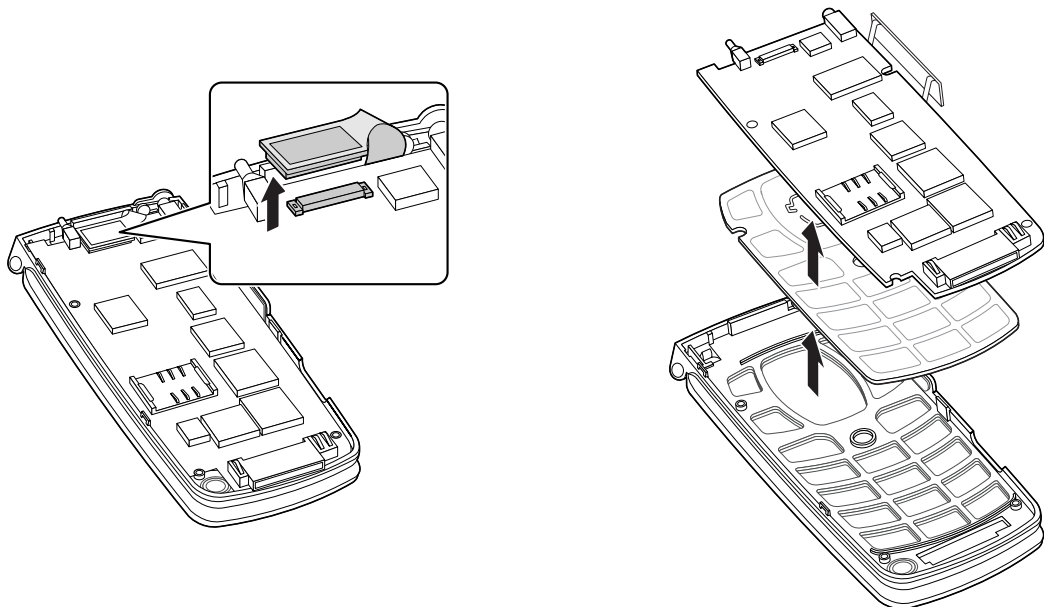


Figure 8-3. Unlocking and removing the PCB

5. Firstly, insert one side of FPCB carefully into the slot.
Then place the PCB under the hook② first and push the other end of PCB under the hook②.

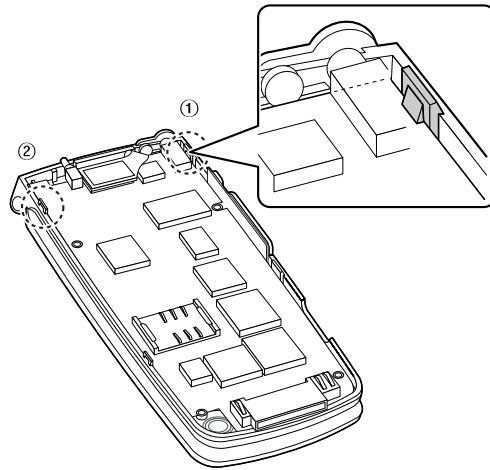
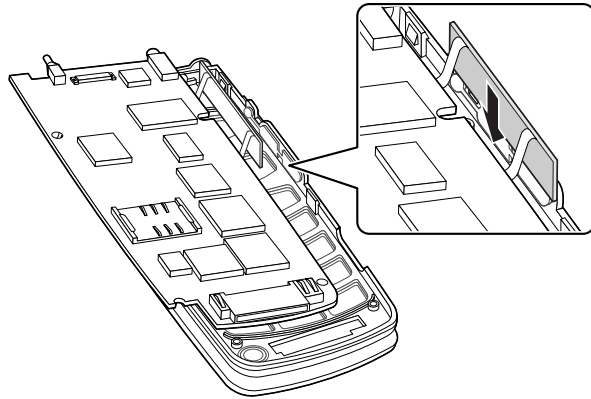


Figure 8-4. Assembly of PCB with the cover

8. DISASSEMBLY INSTRUCTION

6. Remove the antenna and use a sharp awl to push away the antenna-bushing.

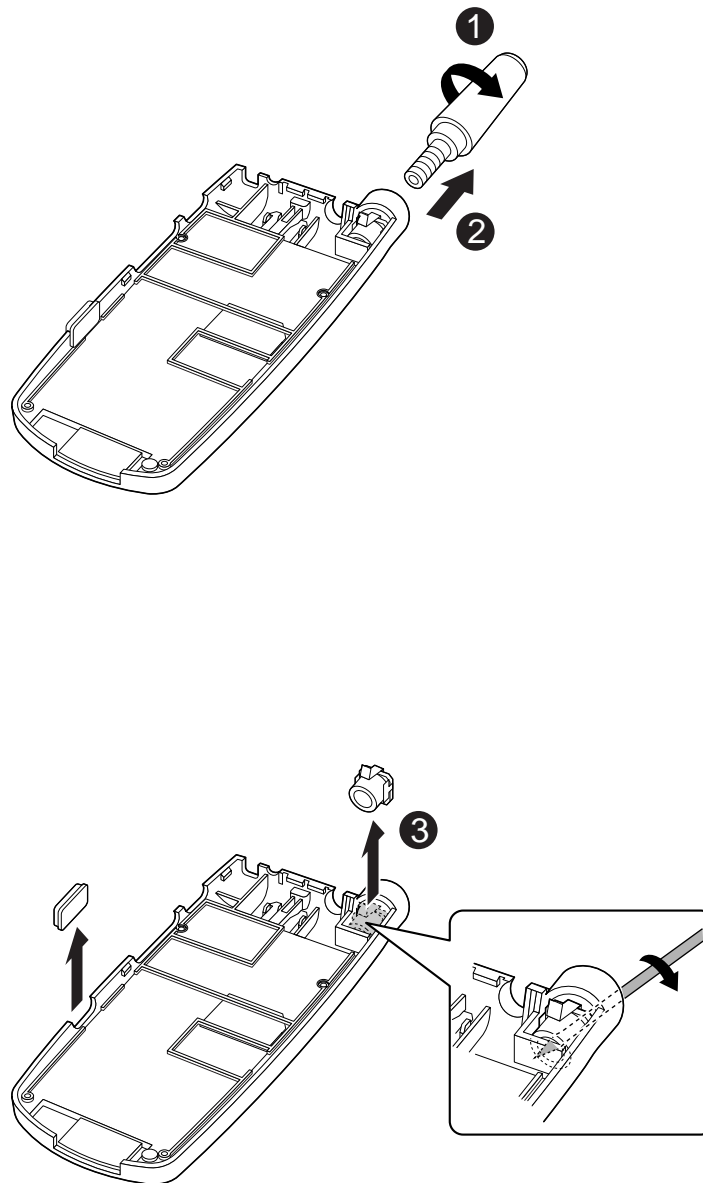


Figure 8-5. Removing antenna-bushing

7. Use a tweezers to remove the battery locker.

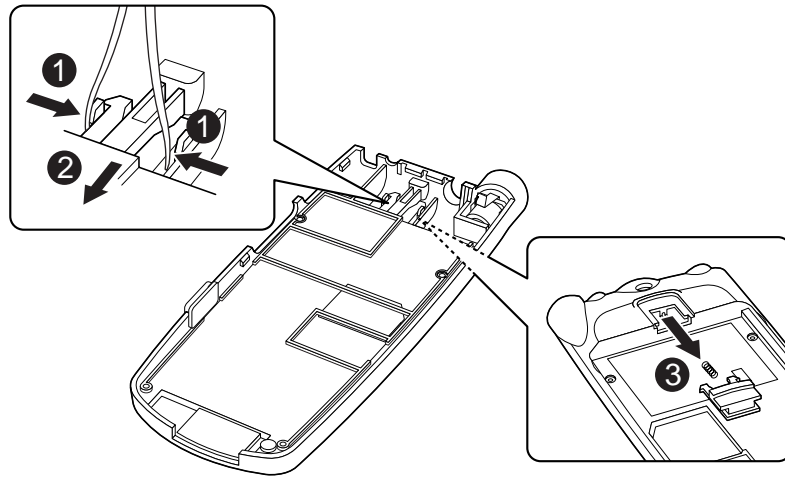


Figure 8-6. Removing battery locker

8. When removing the side button from the main front, please see the insert-nut next to the button and carefully remove it.

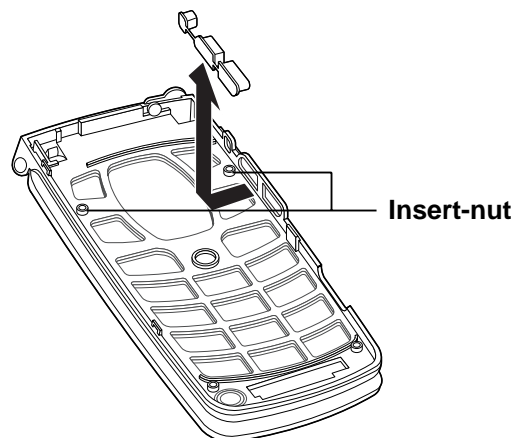


Figure 8-7. Removing a side button

8. DISASSEMBLY INSTRUCTION

9. Push away the hinge to remove the folder.

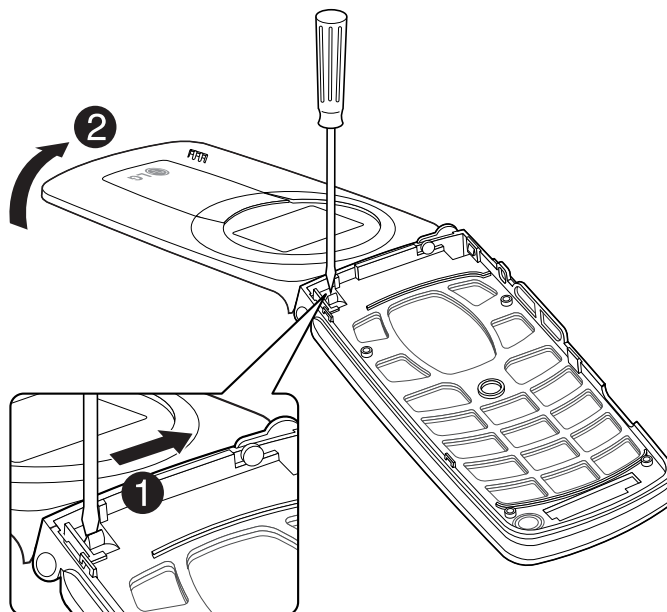


Figure 8-8. Removing Folder

10. Remove the hinge, and detach screw caps by using a pin.

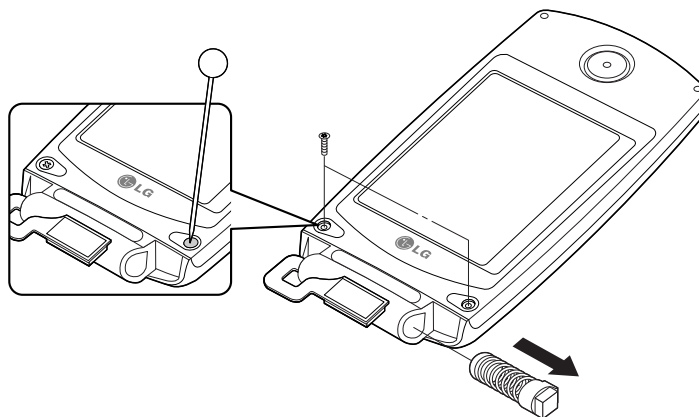


Figure 8-9. Removing hinge and screws

11. Use a thin plastic sheet to slide and open the gap between the folders.
Then detach them carefully with both hands.

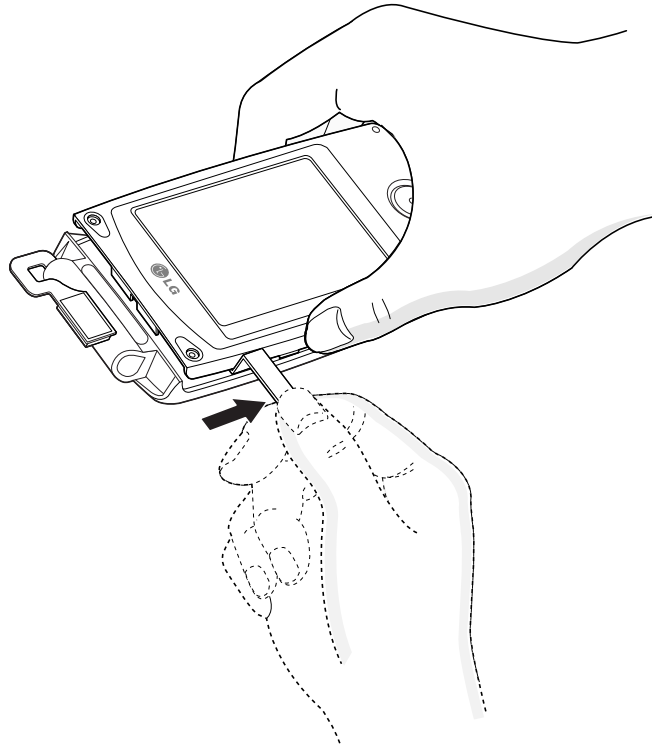


Figure 8-10. Disassembling Folders

8. DISASSEMBLY INSTRUCTION

12. Finally detach the rest components as shown in Figure 8-11.

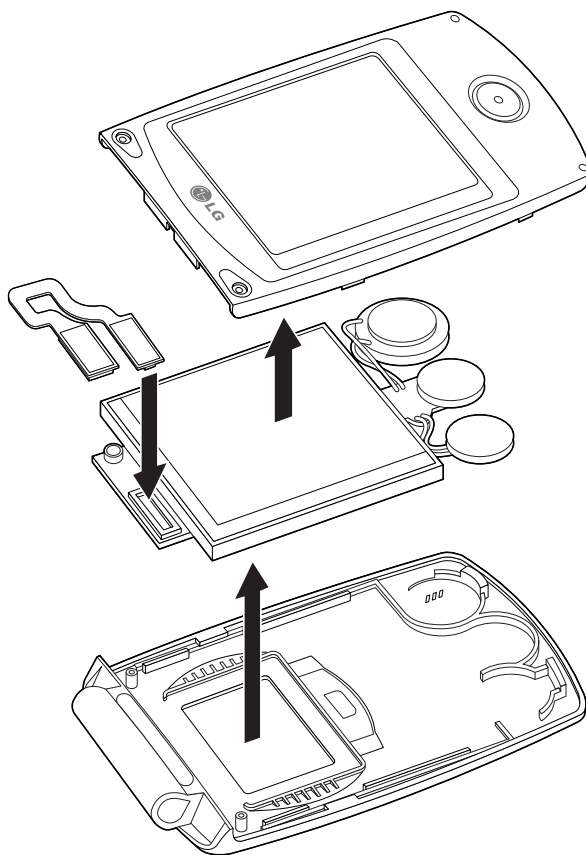


Figure 8-11. Disassembly of the rest components