




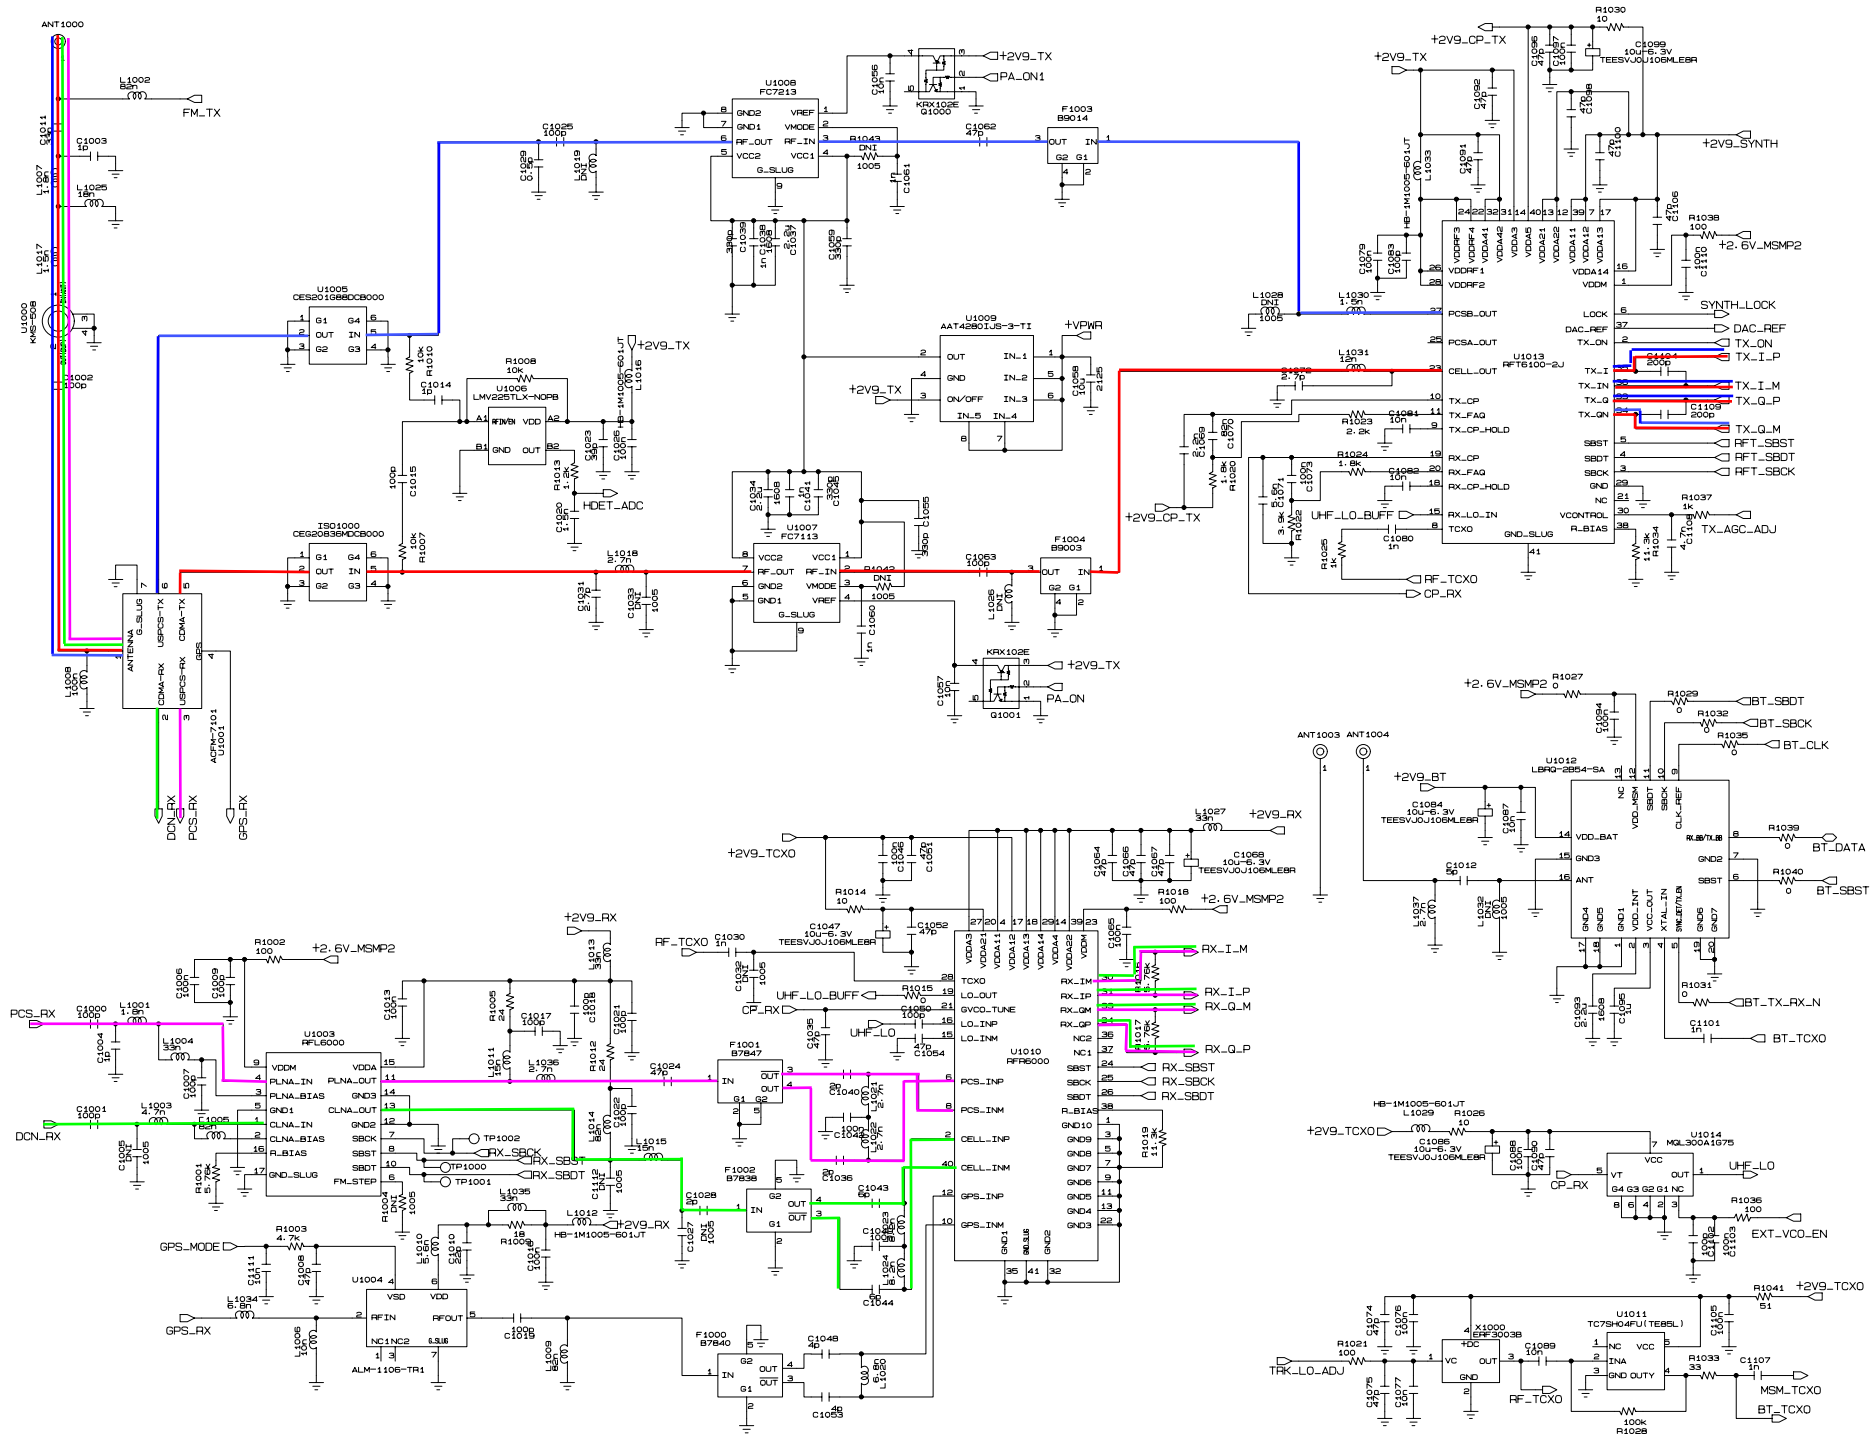


PCS TX
DCN TX
PCS RX
DCN RX

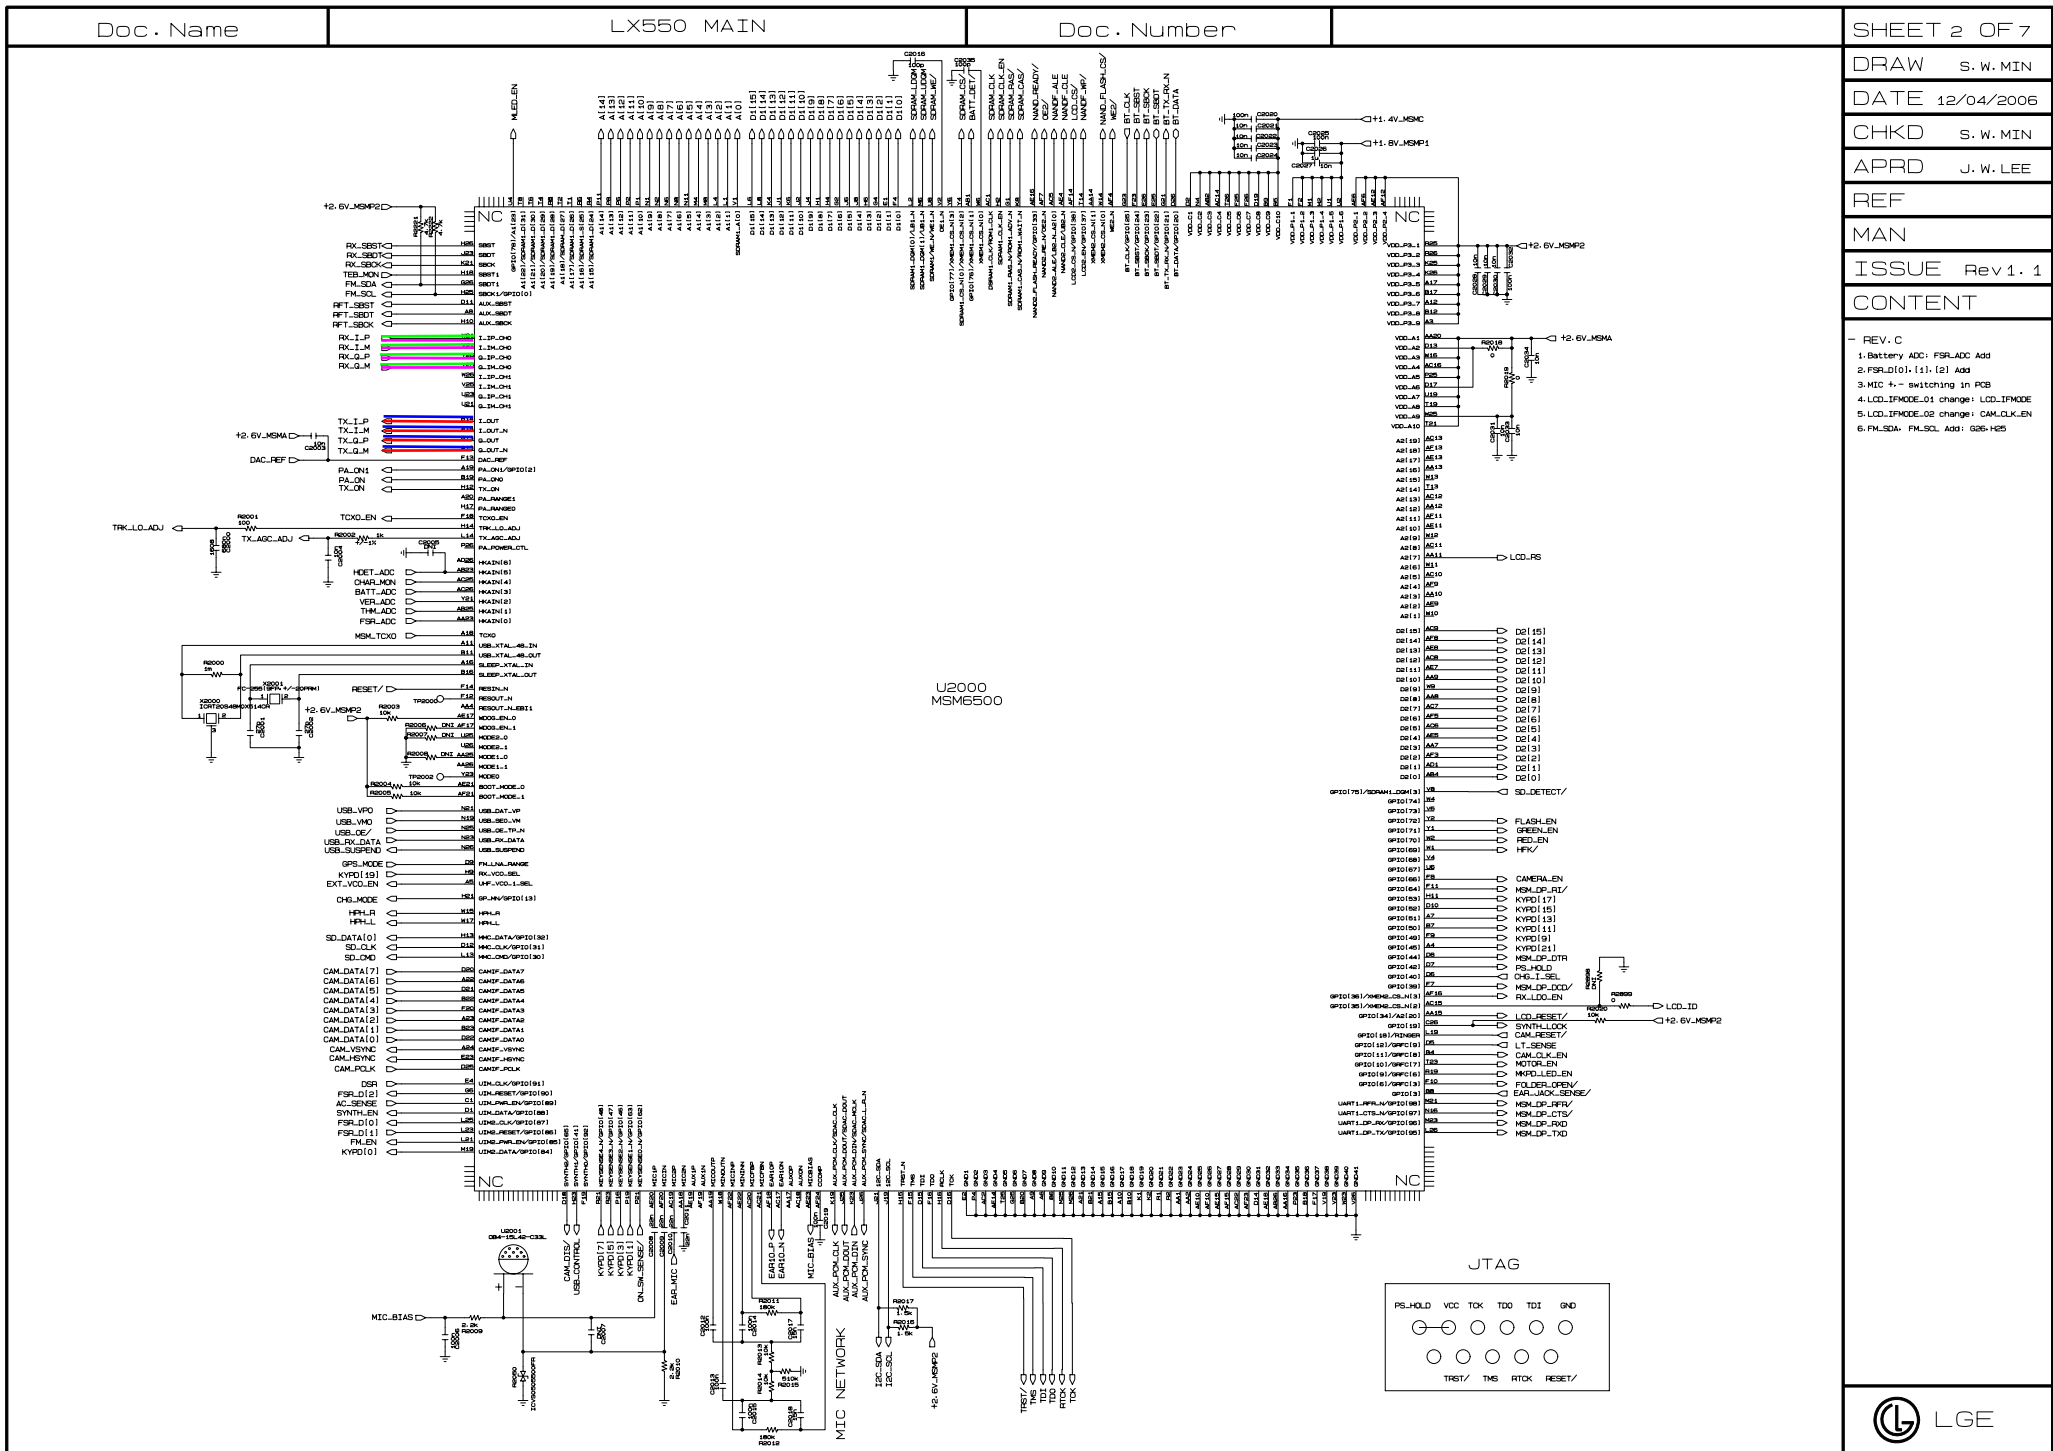


HYNIX MCP (512Mbit NAND FLASH + 512Mbit SDRAM)

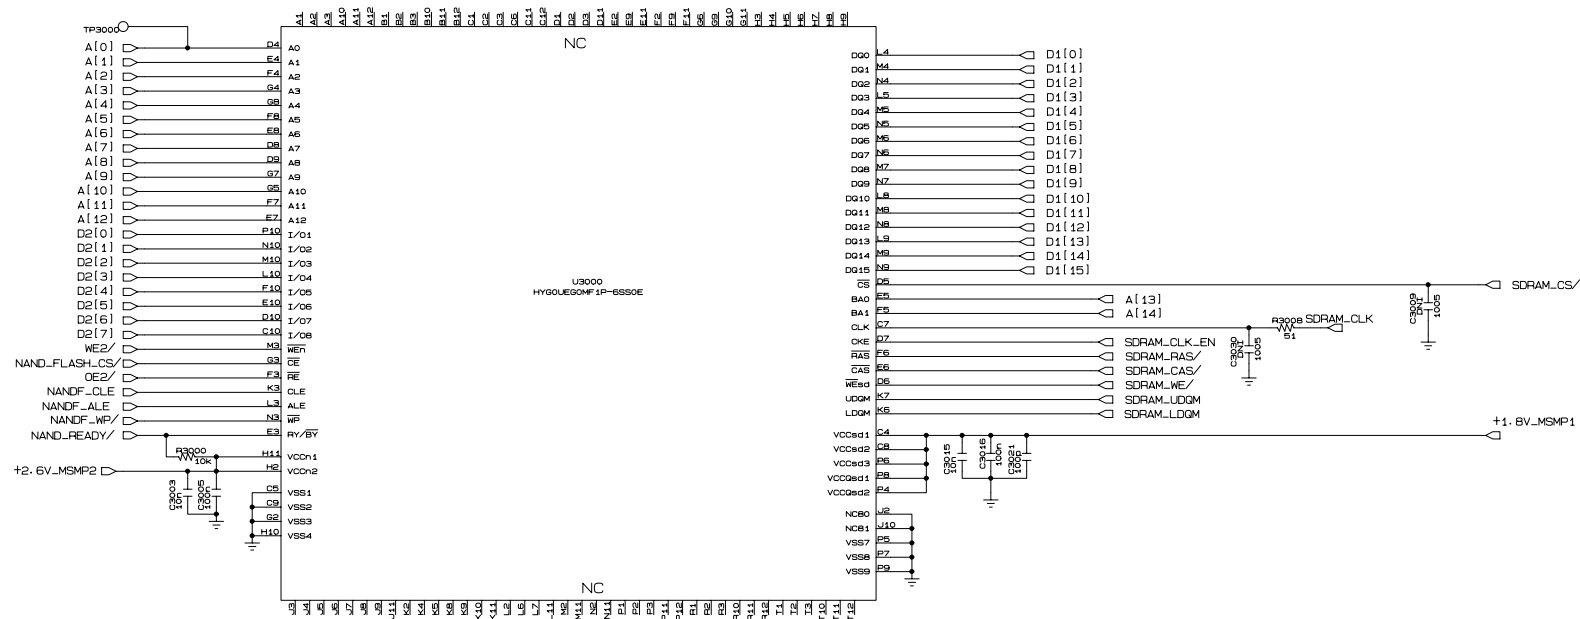


FLIP SWITCH

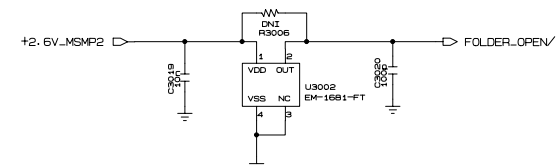


STEREO AUDIO AMP

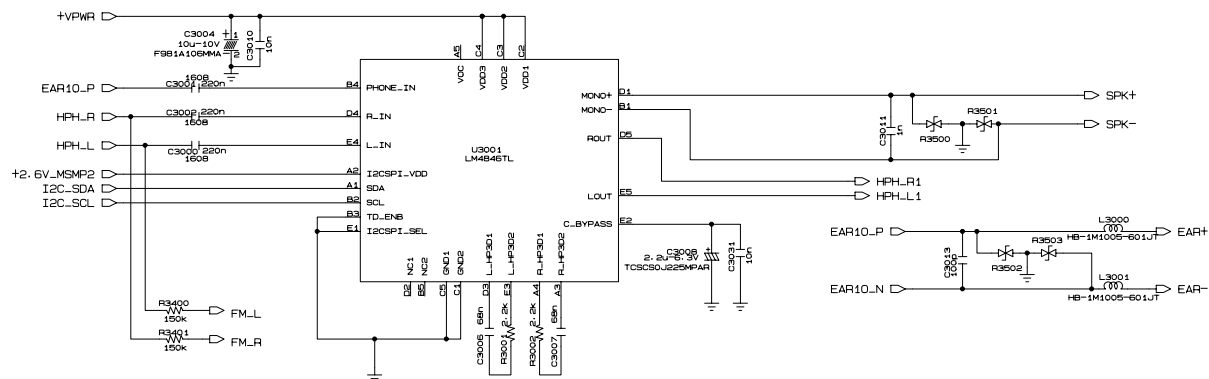


MOTOR CIRCUIT

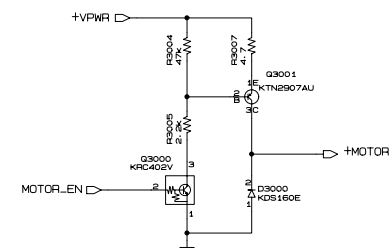


LCD CONNECTOR 50 PIN HEADER

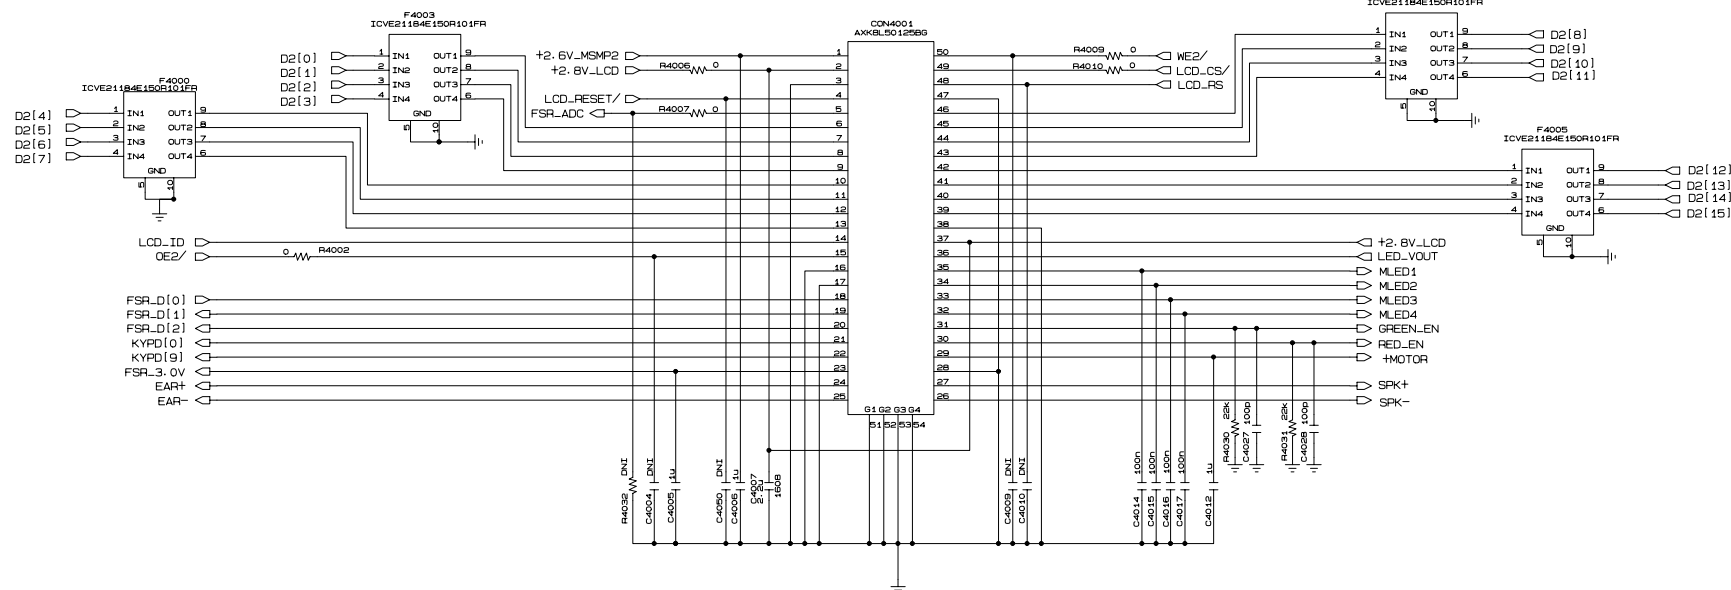


B2B CONNECTOR 14 PIN(+)

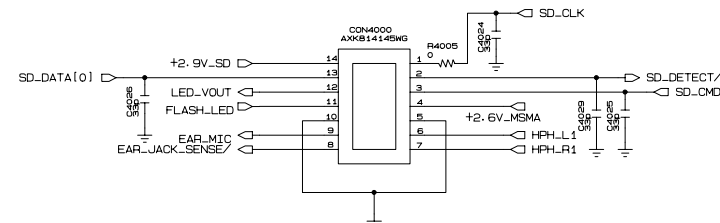


FLASH CHARGE PUMP

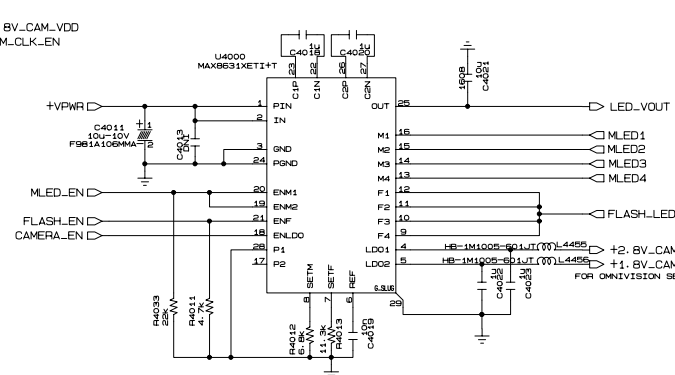


ZIF type 27pin Camera Connector

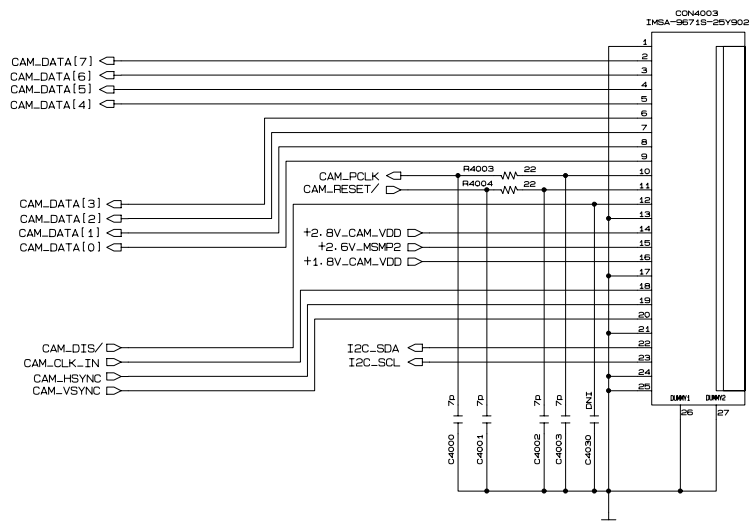


CAMERA TCXO
24MHz

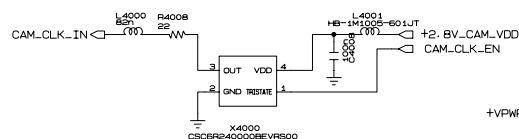


<PMIC PART>

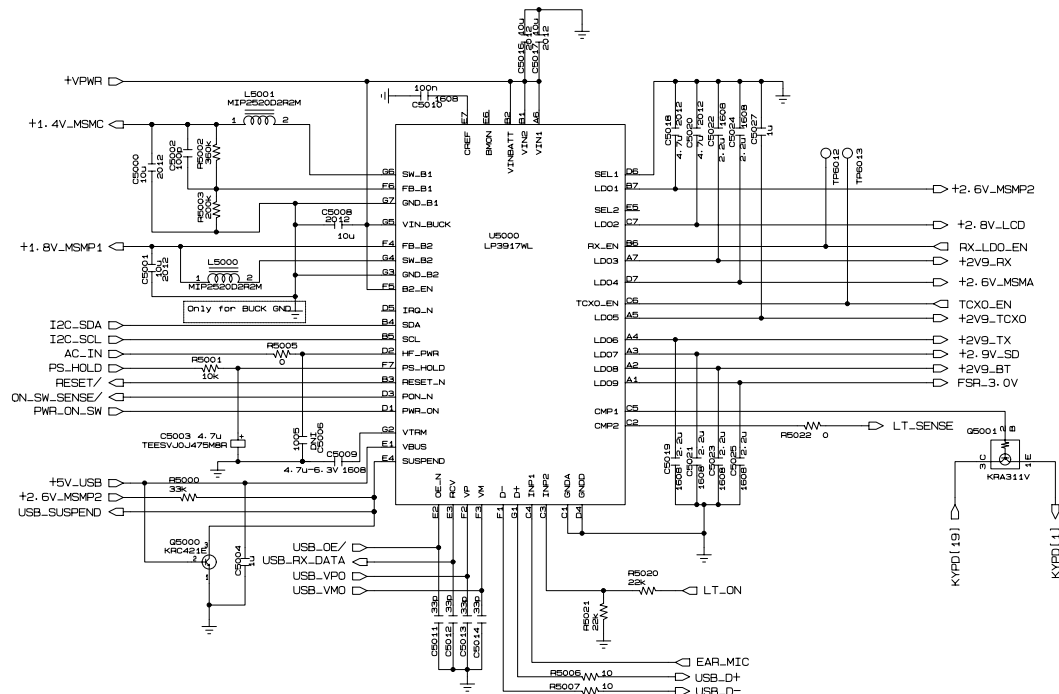


< FM LDO >

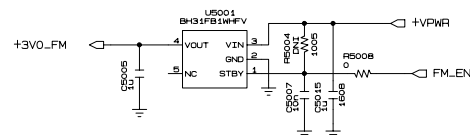


<SYNTH LDO>

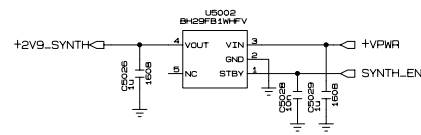


TEMP CHECK

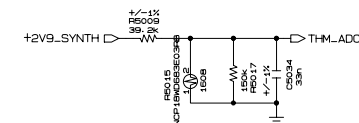

BATT LEVEL CHECK

 


PCB Revision CHECK

 

Revision	R5014	R5018	ADC_HEX
A	100K	5.6K	07. 15
C	100K	12K	16. 25
D	100K	19. 1K	26. 34
E	100K	27K	35. 43
F	100K	36K	44. 53
G	100K	47K	54. 60
H	100K	56K	61. 70
1.0	100K	75K	71. 83
1.1	100K	100K	84. 97
1.2	100K	130K	98. AC
1.3	100K	180K	AD. C1
1.4	100K	240K	C2. D5
1.5	100K	360K	D6. EA
1.6	100K	560K	EB. F9


MAIN KEY

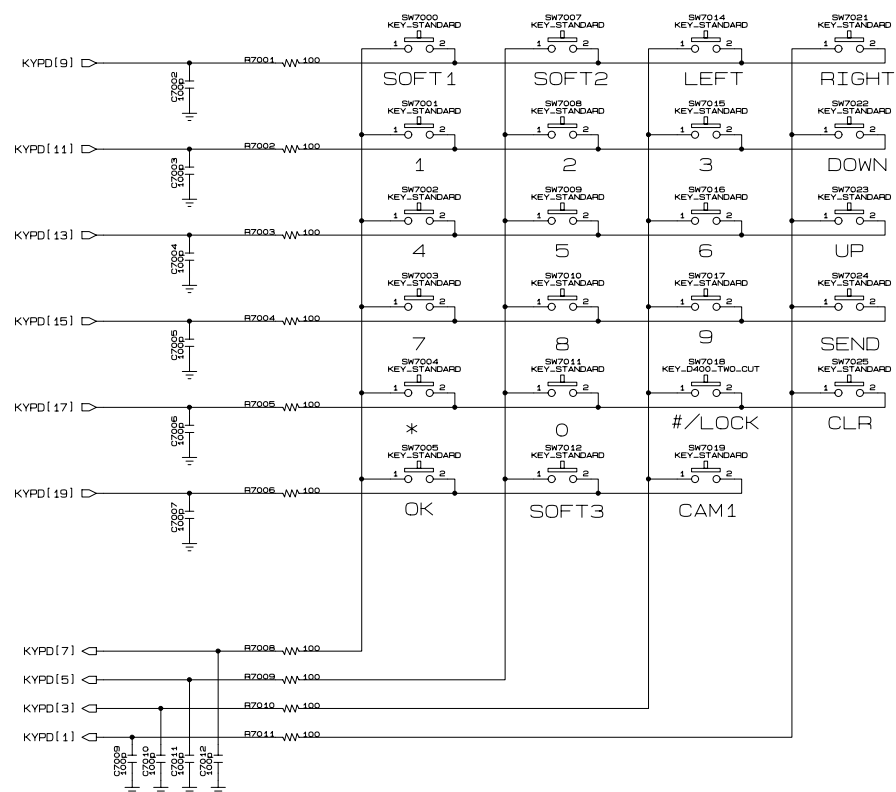


KEY MATRIX

	KEY07	KEY05	KEY03	KEY01	KEY00
KEY09	SOFT1	SOFT2	LEFT	RIGHT	FSR
KEY11	1	2	3	DOWN	
KEY13	4	5	6	UP	
KEY15	7	8	9	SEND	
KEY17	*	0	#	CLR	
KEY19	OK	EAR OR PTT	CAM1	EARPHONE KEY	
KEY21	REC(S)	CAM(S)	DOWN(S)	UP(S)	

 
POWER SWITCH




UP/DOWN SIDE KEY PAD

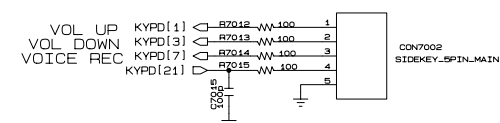


EL-KEY_DRIVER & PAD

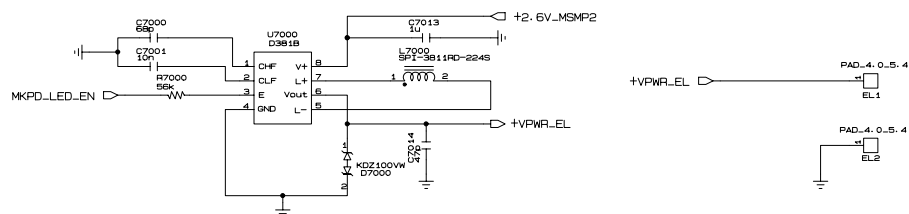


CAM SIDE KEY PAD

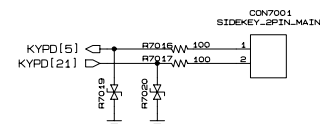

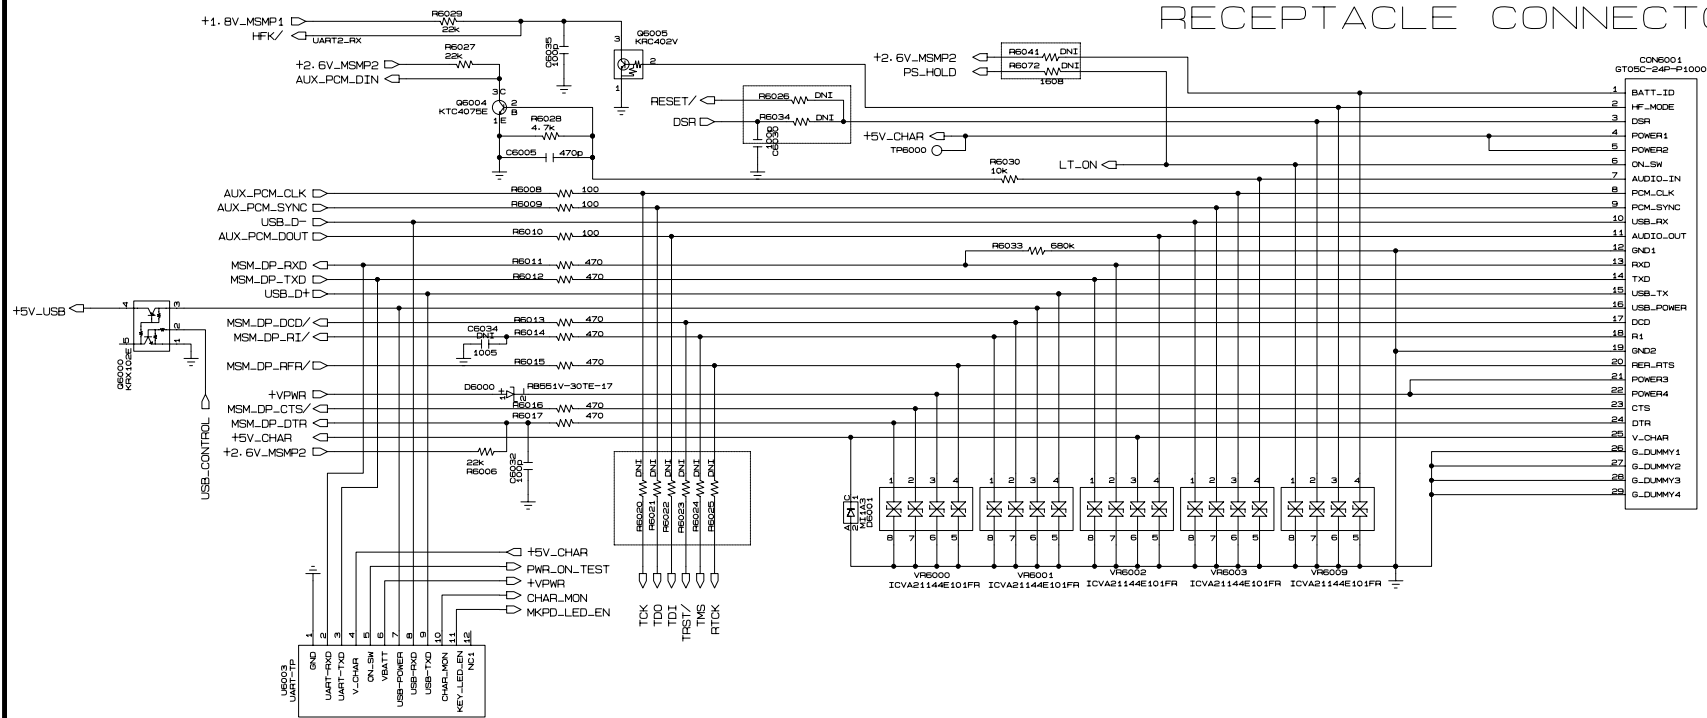

INNER CHARGER

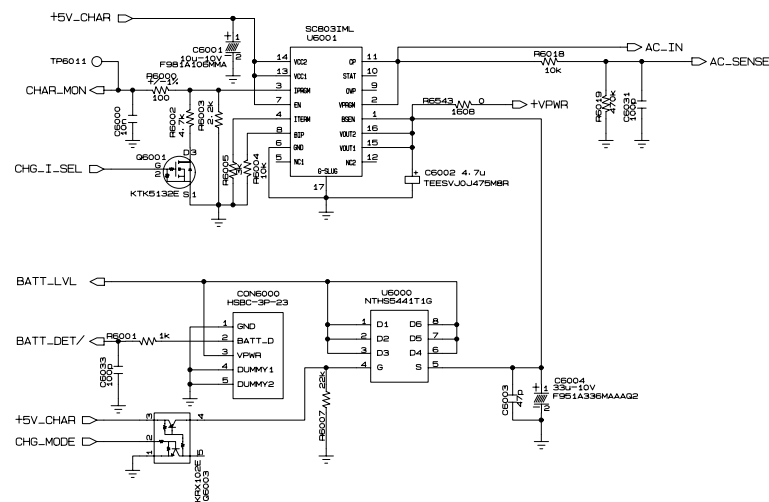

FM TRANSMITTER

