

TABLE OF CONTENTS

Warranty and Safety	4
After Sales Service	4
Safety Guidelines	4
General	4
Operating Environment	5
Electronic Devices	5
Battery Safety	6
SOS Soft Key	6
Care and Maintenance	7
FCC Notice	8
European RF Exposure Information	8
Licences	9
Declaration of Conformity of Toshiba	10
Setting up the Phone	11
Battery	11
Inserting or Changing the Battery	11
Charging the Battery	13
Charging Indicator	14
SIM Card	15
Inserting / Removing the SIM Card	15
Personal Identification Numbers (PINs)	17
Memory slot	17
General Information	20
Parts and Functions	20
Keys	21
The 4-Way Keys	22
Quick keys	23
Soft Keys	24
Main menu	25
Icons	28

Basic Phone Use	29
Making an Emergency Call	29
Making/Ending a Call	29
Receiving/Rejecting a Call	30
Holding a Call	30
Making/Receiving a Second Call	31
Making a Conference Call	31
Receiving a Third Call	31
Text Entry	32
Changing Entry Mode	32
T9 Language	32
Character Table	34
Settings	35
General	35
Language	35
Time & date	35
Security	36
Voice control	38
Auto keypad lock	39
Shortcuts	39
Default storage	39
Flight mode	40
Profiles	40
Default settings	40
Display	41
Wallpaper	41
Themes	41
Backlight level	41
Backlight duration	41
Greeting	42
Sounds	42
Alert type	42
Ringtones	42
Ring volume	42
Key sound	43
Shutter sound	43

Connectivity	43
Call options	43
Message settings	47
Network	47
Browser	49
Connections	49
Bluetooth	49
USB features	50
Memory card	51
Browser	52
WAP setup	52
WAP Page Connection	53
WAP push setting	53
Tools	54
Scheduler	54
Alarm	55
Appointments	55
Tasks	56
Notes	56
Calculator	57
Calculation keys	57
Unit converter	57
Countdown	58
STK (SIM Tool Kit)	58
Camera	59
Camera mode	59
Video mode	60
Messages	62
Text Messages	63
Multimedia Messages	65
E-mail	66
Templates	68
Cell info	68
Memory status	69
Voice mail	69
Entertainment	70
Games	70

Composer	70
Contacts	71
Create/View Contacts/SIM contact or PhoneBook	71
View groups	72
Special numbers	73
Quick call	73
Advanced	74
Memory status	74
My player	75
FM Radio	75
Tracks	76
Last played	76
Playlists	77
Voice memo	77
Background MP3	78
My data	79
Managing files	79
Phone memory	79
Memory card	79
Calls	80
Call history	80
Clear history	81
Call settings	81
Index	86

FLY is a registered trade mark of Meridian Group Services Limited.

TOSHIBA CORPORATION

IMPORTANT NOTE: PLEASE READ BEFORE USING YOUR MOBILE PHONE

BY ATTEMPTING TO USE ANY SOFTWARE ON THE SUPPLIED HANDSET THIS CONSTITUTES YOUR ACCEPTANCE OF THESE EULA TERMS. IF YOU REJECT OR DO NOT AGREE WITH ALL THE TERMS OF THIS EULA, PLEASE DO NOT ATTEMPT TO ACCESS OR USE THE SUPPLIED SOFTWARE.

End User Licence Agreement

This End User Licence Agreement ("EULA") is a legal agreement between you (as the user) and TOSHIBA CORPORATION ("Toshiba") with regard to the copyrighted software as installed in a Toshiba 2.5G mobile phone handset supplied to you (the "Handset").

Use or disposal of any software installed in the Handset and related documentations (the "Software") will constitute your acceptance of these terms, unless separate terms are provided by the Software supplier on the Handset, in which case certain additional or different terms may apply. If you do not agree with the terms of this EULA, do not use or dispose the Software.

1. **Licence Grant.** Toshiba grants to you a personal, non-transferable and non-exclusive right to use the Software as set out in this EULA. Modifying, adapting, translating, renting, copying, making available, transferring or assigning all or part of the Software, or any rights granted hereunder, to any other persons and removing any proprietary notices, labels or marks from the Software is strictly prohibited, except as expressly permitted in this EULA. Furthermore, you hereby agree not to create derivative works based on the Software.
2. **Copyright.** The Software is licenced, not sold. You acknowledge that no title to the intellectual property in the Software is or will be transferred to you. You further acknowledge that title and full ownership rights to the Software will remain the exclusive property of Toshiba, Toshiba's affiliates, and/or their suppliers, and you will not acquire any rights to the Software, except as expressly set out in this EULA. You may keep a back-up copy of the Software only so far as necessary for its lawful use. All copies of the Software must contain the same proprietary notices as contained in or on the Software and are subject to the terms of this EULA. All rights not expressly granted

under this EULA are reserved to Toshiba, Toshiba's affiliates and/or their suppliers.

3. Reverse Engineering. You agree that you will not attempt, and if you are a business organisation, you will use your best efforts to prevent your employees, servants and contractors from attempting to reverse engineer, decompile, modify, translate or disassemble the Software in whole or in part except to the extent that such actions cannot be excluded by mandatory applicable law and only if those actions are taken in accordance with such applicable law. Any failure to comply with the above or any other terms and conditions contained herein will result in the automatic termination of this licence and the reversion of the rights granted hereunder to Toshiba.
4. LIMITED WARRANTY. Only during the warranty period for the Handset, Toshiba, Toshiba's affiliate, its suppliers or its authorised service company will repair or replace, at Toshiba's sole discretion, defective Software unless such defect results from acts or phenomenon beyond the reasonable control of Toshiba. EXCEPT AS PROVIDED IN THIS EULA: (A) TOSHIBA, TOSHIBA'S AFFILIATES, AND THEIR SUPPLIERS DISCLAIM ALL WARRANTIES, CONDITIONS OR OTHER TERMS (WHETHER EXPRESS OR IMPLIED), INCLUDING BUT NOT LIMITED TO WARRANTIES, CONDITIONS AND TERMS OF SATISFACTORY QUALITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS; AND (B) THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE SOFTWARE IS WITH YOU. YOU ACCEPT THAT SOFTWARE MAY NOT MEET YOUR REQUIREMENTS AND NO WARRANTY CAN BE GIVEN THAT OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE.
5. 5. LIMITATION OF LIABILITY. TO THE FULLEST EXTENT LEGALLY PERMITTED, IN NO EVENT SHALL TOSHIBA, TOSHIBA'S AFFILIATES OR THEIR SUPPLIERS BE LIABLE TO YOU FOR ANY DAMAGES FOR (A) LOST BUSINESS OR REVENUE, BUSINESS INTERRUPTION, LOSS OF BUSINESS DATA; OR (B) CONSEQUENTIAL, SPECIAL, INCIDENTAL OR INDIRECT DAMAGES OF ANY KIND (WHETHER UNDER CONTRACT, TORT OR OTHERWISE) ARISING OUT OF: (I) THE USE OR INABILITY TO USE THE SOFTWARE, EVEN IF TOSHIBA, TOSHIBA'S AFFILIATES OR THEIR SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES; OR (II) ANY CLAIM BY A

THIRD PARTY. SAVE AS SET OUT IN THIS SECTION, TOSHIBA'S ENTIRE LIABILITY UNDER THIS EULA SHALL NOT EXCEED THE PRICE PAID FOR THE SOFTWARE, IF ANY.

THE ABOVE DISCLAIMER AND LIMITATION DOES NOT EXCLUDE OR LIMIT (A) LIABILITY FOR DEATH OR PERSONAL INJURY CAUSED BY NEGLIGENCE OR (B) ANY MANDATORY LEGAL RIGHT OR LIABILITY TO THE EXTENT THAT IT CANNOT BE LAWFULLY EXCLUDED OR LIMITED UNDER APPLICABLE LAW.

PLEASE MAKE AND RETAIN A COPY OF ALL DATA YOU HAVE INSERTED INTO YOUR PRODUCT, FOR EXAMPLE NAMES, ADDRESSES, PHONE NUMBERS, PICTURES, RINGTONES ETC, BEFORE SUBMITTING YOUR PRODUCT FOR A WARRANTY SERVICE, AS SUCH DATA MAY BE DELETED OR ERASED AS PART OF THE REPAIR OR SERVICE PROCESS.

6. Laws. This EULA will be governed by the laws of England and Wales. All disputes arising out of this EULA shall be subject to the exclusive jurisdiction of the English Court.
7. Export Laws. Any use, duplication or disposal of the Software involves products and/or technical data that may be controlled under the export laws of applicable countries or region and may be subject to the approval of the applicable governmental authorities prior to export. Any export, directly or indirectly, in contravention of the export laws of applicable countries or region is prohibited.
8. Third Party Beneficiary. You agree that certain suppliers of the Software to Toshiba have a right as a third party beneficiary to enforce the terms of this EULA against you as a user.
9. Transfers. The Software may be transferred only as installed on the Handset to a lawful third party user, where that party accepts the terms of this EULA which will continue to apply.
10. IF YOU ARE DEALING AS A CONSUMER IN THE UK & THE SOFTWARE QUALIFIES AS 'GOODS' YOUR STATUTORY RIGHTS UNDER APPLICABLE LAW ARE NOT AFFECTED.

Warranty and Safety

This section addresses important warranty and safety issues. You should read and thoroughly familiarise yourself with this section before using your phone.

After Sales Service

Your Toshiba mobile telephone contains no user serviceable parts. For further information on service, please contact your retailer or service provider.

Safety Guidelines

Follow the guidelines below to use your phone in a safe and legal manner.

General

- Use your phone in the intended manner, for example, hold it to your ear. Incorrect usage may affect its performance.
- Use only compatible batteries and accessories. Using incompatible items may permanently damage the phone.
- Do not connect the phone to any other device without reading the provided documentation. The other device may be incompatible.
- When making emergency calls from your phone, ensure that the phone is switched on and in service.
- Interference may affect your phone's performance. Once you move away from the source of interference, the phone should function as usual.
- When using ear buds or other headphones, be careful not to listen at excessive volume. Listening to very loud sound levels may lead to hearing loss. Also, listening through the ear buds or headphones for prolonged periods of time, even at normal sound levels, may lead to hearing loss. You should consult your doctor for more information on proper use of ear buds or headphones.

Operating Environment

- Do not use the phone hand-held while driving or otherwise operating machinery. If using the phone hand-held, park the vehicle before conversing. If using an integrated hands-free device, make sure the phone is securely in its holder.
- Switch your phone off when entering a hospital or other such institutions. Medical equipment may be effected by the phone so you should observe any building regulation governing phone usage.
- Switch your phone off when on an aircraft. The aircraft's systems may be affected by the phone signal. You are legally obliged to comply with this recommendation.
- Switch your phone off in any facility where posted notices so require.
- Do not use your phone when refuelling. You should keep your phone away from fuel and chemicals.
- Switch your phone off when blasting is in progress. Observe any provided guidelines or regulations.
- Switch your phone off when in an area of a potentially explosive atmosphere (for example fuel storage areas, spray paint facilities etc.).
- Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty. For more information, check with the manufacturer, or its representative for your vehicle.

Electronic Devices

- If you wear a pacemaker, or are in the company of someone who does, you should be aware that there is a small risk of your phone interfering with the operation of the pacemaker. Only certain types of pacemakers are affected and only if the mobile phone is placed directly next to one. You should consult your doctor or the pacemaker manufacturer for more information.
- Your phone may interfere with some hearing aids. If this happens you should contact your service provider or doctor.
- Your phone may interfere with the functionality of inadequately shielded medical devices. Consult a physician or the device manufacturer to ensure safe practice.

- Your phone may interfere with the functionality of any inadequately shielded electronic system in a motor vehicle. Examples include air-bags and fuel injection systems. You should contact the vehicle manufacturer to ensure proper shielding.

Battery Safety

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, buy a new battery.

- A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used. The battery can only be charged in temperatures between 0 °C (+32 °F) and +45 °C (+113 °F).
- Only use batteries approved by Toshiba and only recharge the battery with the recommended charger supplied by Toshiba.
- When the charger is not in use disconnect it from the power source.
- Do not leave the battery connected to the charger and power source for longer than necessary as overcharging it will shorten its life.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object causes a direct connection between the + and - terminals of the battery.
- Do not expose the battery to extreme temperatures, for example, a fridge or a car exposed to direct sunlight, as this will affect its performance.
- Do not dispose of the battery in a fire.
- Do not dispose of the battery in an ordinary bin. The battery contains toxic chemicals and must be disposed of in the correct manner. Contact your local authority for more information.

SOS Soft Key

The **SOS** soft key enables you to call the emergency services without entering your PIN, inserting your SIM card or when your phone is blocked.

The **SOS** soft key is only active prior to the PIN being entered. To use it simply press and confirm with the **Yes** soft key.

Care and Maintenance

If you maintain your phone and all other parts and accessories supplied with the original box, ("phone"), in good condition, the quality of your phone usage as well as the phone life span will be greatly enhanced. If you follow the suggestions below, this will also help you fulfil warranty obligations.

- Keep the phone and all the parts and accessories out of the reach of small children.
- Keep the phone dry as moisture of any kind can contain minerals that will corrode the electronic circuits.
- Do not use or store the phone in dusty or dirty locations as the movable parts of the phone can be damaged.
- Do not use or store the phone in excessively hot places. High temperatures will shorten the life-span of the phone, damage the battery or warp/melt the plastic used in the phone's manufacture.
- Do not store the phone in excessively cold places. When there is a difference in temperature between the room and the phone, condensation can form inside the phone, causing damage to the electronic circuits.
- Do not open the phone unless absolutely necessary, for example, to install the battery or SIM card. We recommend that you go to your dealer when problems arise with either of these items and allow their experts to handle the phone instead.
- Do not mishandle or abuse the phone. Dropping, knocking or shaking it can damage the internal circuits.
- Do not use harsh chemicals, strong detergents, or cleaning solvents to clean the phone. If you must clean it, then use a soft, clean and dry lint-free cloth.
- Do not apply paint or other such substances to the phone. This could clog the phone's movable parts.
- If the phone or any of the accessories are not working as they should, please consult your dealer who can provide you with the expert assistance required.
- Electrical interference may affect your phone's performance. This is perfectly normal and once you move away from the source of interference, the phone should function as usual.
- Do not attempt to disassemble your product, including accessories. Only Toshiba authorised personnel should perform the service.

The following information is for EU member states only:

The use of this symbol indicates that this product may not be treated as household waste. By ensuring the correct disposal of this product, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local city council, your household waste disposal service or the shop from where you purchased the product.



FCC Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.567 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body. In this case, the highest tested SAR value is 0.788 W/kg

As SAR is measured utilising the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organisation has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body. Additional

information can be found on the websites of the World Health Organisation (<http://www.who.int/emf>).

- * The tests are carried out in accordance with international guidelines for testing.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

Licences

- T9® Text Input and the T9® logo are registered trademarks of Tegic Communication. "T9 Text Input is licenced under one or more of the following:



U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; Australian Pat. Nos. 727539, 746674, and 747901; Canadian Pat. Nos. 1,331,057, 2,302,595, and 2,227,904; Japan Pat. No. 3532780, 3492981; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK1010924; Republic of Singapore Pat. No. 51383, 66959, and 71979; European. Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); Republic of Korea Pat. Nos. KR201211B1 and KR226206B1. People's Republic of China Pat. Application Nos. 98802801.8, 98809472.X and 96196739.0; Mexico Pat. No. 208141; Russian Federation Pat. No. 2206118; and additional patents are pending worldwide"

- This product contains Openwave Systems Inc.'s Openwave internet browser software.

Copyright © 2000-2005 Openwave Systems Inc.

Openwave® is a registered trademark or trademark of Openwave Systems Inc. in Japan and selected countries worldwide. It is certified with Master browser licence agreement No. 000336.

- CE 0168
- Bluetooth™ is a trademark of Bluetooth SIG, Inc. USA.



Declaration of Conformity of Toshiba

TOSHIBA

TOSHIBA INFORMATION SYSTEMS (U.K.) LTD
MOBILE COMMUNICATIONS DIVISION
Watchmoor Park, Riverside Way, Camberley, Surrey GU15 3YA
Tel: +44 (0)1276 405100 Fax: +44 (0)1276 405111

DECLARATION OF CONFORMITY

We, **Toshiba Information Systems UK (Ltd), Mobile Communications Division**

of **Toshiba Court
Weybridge Business Park
Addlestone Road
Weybridge
KT15 2UL**

declare under our sole responsibility that the product

TS608/TS30/TS2060
Type (Model) Name is SD3-E01

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

3GPP TS 51.010-1, EN 301 489-1, EN 301 489-7, EN 60950 and EN 50360

We hereby declare that all essential radio test suites, EMC & safety requirements have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10(5) and detailed in Annex IV of Directive 199/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Claremont House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ

Identification mark: **0168**

The technical documentation relevant to the above equipment will be held at:

**Toshiba Information Systems UK (Ltd), Mobile Communications Division
Riverside Way, Camberley, Surrey, GU15 3YA**

Name:- **Noritaka Tanigawa**

Title:- **Deputy Managing Director of TIU
General Manager Mobile Communications Division**

Signature:- 

Date:- **9.5.2006**



Registered Office: Toshiba Court, Weybridge Business Park, Addlestone Road, Weybridge, Surrey KT15 2UL
Registered Number: 918861 England. Telephone (Switchboard) 01932 841600 Facsimile 01932 852455
www.toshiba.co.uk



Setting up the Phone

This section describes basic operations such as inserting your SIM card, charging the battery, and entering your PIN.

The following must be completed before you begin using the phone:

 
- Ensure that the battery is inserted
- Ensure that the SIM card is inserted
- Charge the phone's battery

Battery


The battery included with your phone is not charged. Before you can switch on your phone for the first time, you need to insert the phone's battery and charge it.

Inserting or Changing the Battery


To insert or change the battery:

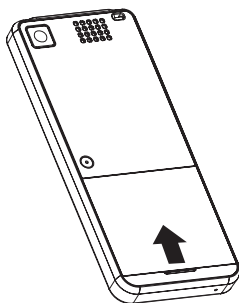

 Step 1:
Flip the battery cover up
to remove it.

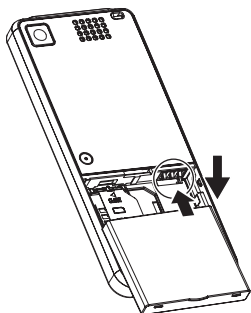

 
Step 2:
Insert your battery with the metallic part in contact with the phone's and gently press it down.

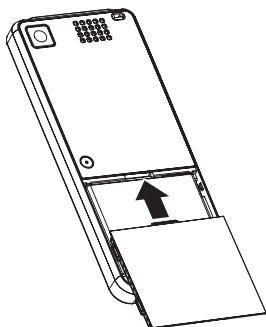


Step 3:
Replace the battery cover.

Charging the Battery

 To charge a battery:

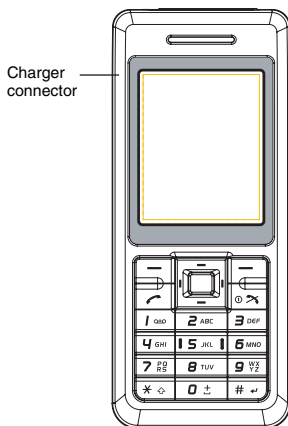

 Step 1:
Locate your charger connector on the left of your phone.

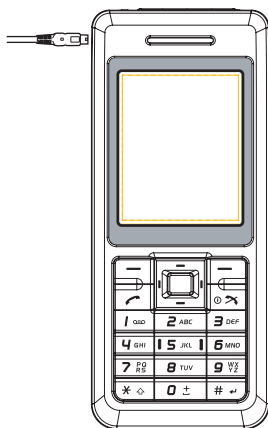

Step 2:
Connect the charger to the phone. Plug the charger into a power socket. The charger connection screen will be displayed.



During charging there is a possibility that the charging indicator may not appear. Please keep the phone charged for a while before you disconnect the charger.

Disconnecting the charger

To disconnect the charger, grip it tightly and pull. You should disconnect the charger from the power outlet before disconnecting the charger from the phone.

Charging Indicator

The first time you charge your battery, you should leave it charging for 8 hours. The battery only achieves optimum performance after two or three complete charges.

When the battery power is low, the phone starts beeping and **Battery empty!** will be displayed every 30 seconds and will be automatically power off within three minutes.

When in use and during charging, the indicator shows the following icons:

Icon	Description	Icon	Description
	Battery empty		Battery nearly full
	Battery nearly empty		Battery full
	Battery half full		

When the battery is fully discharged, the charging indicator is not displayed and will not appear after the phone has recharged sufficiently. For safety information regarding the battery, refer to ***"Battery Safety" on page 6.***



Always turn off the phone before removing the battery.



Please note that if the battery is empty and is not used for a couple of days there is the possibility that the charging indicator may not be displayed until after a maximum time of 30 minutes after the phone is charged again.

 
SIM Card

Your SIM card identifies your phone on the network and stores your details, including your PIN, call history, and subscription information. It can also be used to store some phone book data. For more information, refer to *"Contacts" on page 71*.


You should only remove your SIM card when absolutely necessary. If it is lost or damaged, the information stored on it cannot be retrieved.

Inserting / Removing the SIM Card


Turn to the back of your phone to locate your battery cover. To insert or remove the SIM card (Steps 1-5):

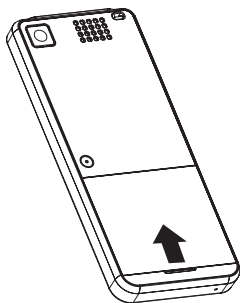

 
Step 1:
Flip the battery cover up
to remove it.

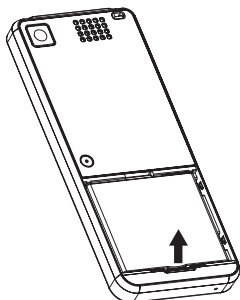

 Step 2:
Remove the battery.

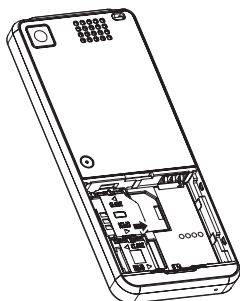


 Step 3:
Push the SIM locker to the right to unlock and lift it up.

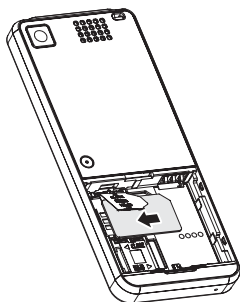

Step 4:
Insert your SIM card into the SIM card holder with the card's metallic connector in contact with the phone's and the notched corner on the right.

 (To remove your SIM card, simply lift it off the SIM card holder.)

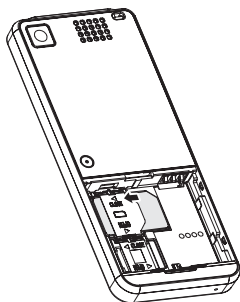

Step 5:
Gently press down the SIM locker and push it to the left to lock.

Personal Identification Numbers (PINs)

 
When you switch on your phone, you may be requested to enter your PIN or phone code if your phone requires you to do so. This number should be in the documentation supplied by your service provider.

If you enter the wrong PIN three times in a row your phone will become blocked. You will then require your PUK number to unblock it. For more information about your PIN and PUK number, refer to *"Security" on page 36.*


Memory slot

Your phone supports a Micro SD Flash memory card of up to 512 MB. The Memory card slot is located under the battery. The battery cover is located on the rear of the phone.


To insert or remove the Memory card (Steps 1-5):

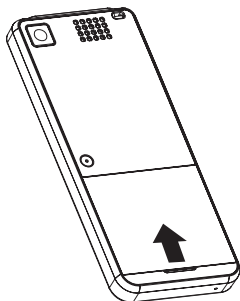

 
Step 1:
Flip the battery cover up
to remove it.

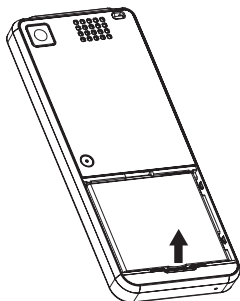

 Step 2:
Remove the battery.

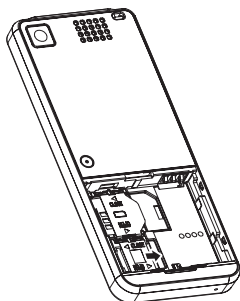


 Step 3:
Push the memory card
locker to the right to
unlock and lift it up.

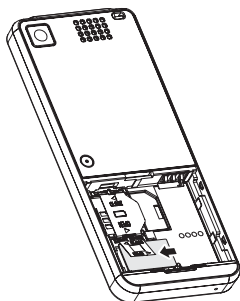

Step 4:
Insert your memory card
into the memory card
holder with the card's
metallic connector in
contact with the phone's
and the notched corner on
the right.

 (To remove your memory
card, simply lift it off the
memory card holder.)

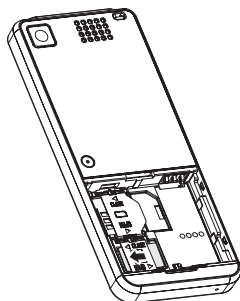


Step 5:
Gently press down the
memory locker and push it
to the left to lock.

 General Information




 


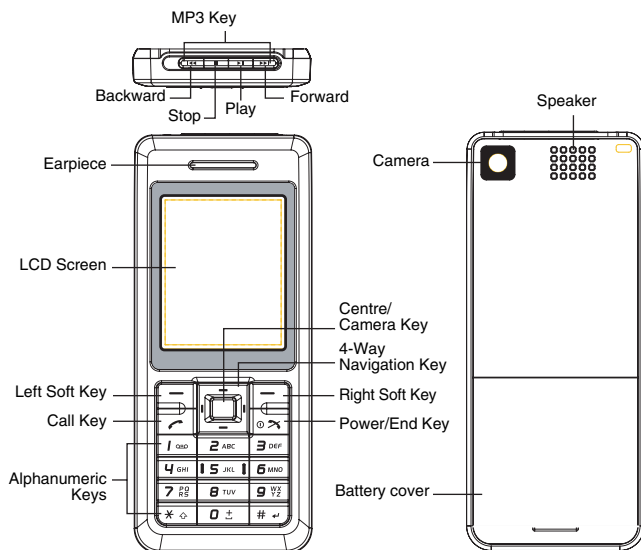
This section explains the features of your phone. Please familiarise yourself with the phone before you start using it.

Parts and Functions



Keys

 Each of the keys on your phone has one or more functions, as explained in the table below.

Key	Function(s)
4-way key	To navigate the phone's menu system. For more information, refer to <i>"The 4-Way Keys" on page 22.</i>
Centre key	To enter the selected menu, confirm the selection, submit an entered number or piece of text. For more information, refer to <i>"The 4-Way Keys" on page 22.</i>
Soft keys	Press to access the functions available for the soft keys. For more information, refer to <i>"Soft Keys" on page 24.</i>
	To dial a number or accept an incoming call; also from the idle screen, press once to display the Dialled calls list, and press twice to redial the last number called.
	To turn on/off the phone, reject an incoming call, end a call, cancel a selection, return to the idle screen from any phone menu.
	From the idle screen, press and hold to enter "+" and display the +List (for international codes)."
	From the idle screen, press and hold to access Voice mail .
	Press and hold to access shortcut functions. For more information, refer to <i>"Shortcuts" on page 39.</i>
	From the idle screen, press and hold to lock the keypad. During text editing, press to switch entry method.
	During text editing, press to access to the symbol chart. In idle screen, press and hold to bring up the Profiles menu. And it also can be personalised in "Shortcuts".
MP3 keys	From the top of the phone, you may access the MP3 keys From the left to right, they are Previous, Stop, Play and Next.

The 4-Way Keys

 
Your phone has an easy-to-use menu system that you can navigate using the 4-way key.

▲ Up

- To scroll up lists or move the cursor upwards.
- To access **Scheduler** menu from the idle screen.
- To increase the brightness level in camera preview mode.

◀ Left

- To scroll left or move the cursor to the left of the screen.
- Press and hold to access **Create** from the idle screen.
- To select camera mode under the video mode.
- To decrease volume during a call.

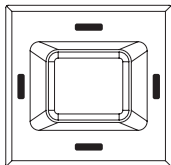

Right ▶

- To scroll right or move the cursor to the right of the screen.
- To access **My data** from the idle screen.
- To select Video mode under the camera mode.
- To increase volume during a call.


 
 

 
 
 

 

- To scroll down or move the cursor downwards.
- To access **Phonebook/SIM contacts** from the idle screen.
- To reduce the brightness level in camera preview mode.



Down ▼

Centre key

- To confirm the function.
- To access the Main Menu from the idle screen.
- To toggle a desired function on/off in a menu screen.
- To take a picture/shoot a video in camera/video mode.

Quick keys

To	Key Sequence	Mode
View recent calls	Press  once	Standby
Call voice mail	Press and hold 	Standby
Access Create SMS/MMS/E-mail	Press ◀ key	Standby
Access My data	Press ▶ key	Standby
Access Phonebook / SIM contacts	Press ▼ key	Standby
Access Scheduler	Press ▲ key	Standby
Quick dial a phonebook number	Enter the number of Position in SIM and press  to display the number quickly. Press  to dial the number.	Standby
Switch on/off the phone	Press and hold 	Standby
Select a menu item	Press Centre key or Left Softkey	In the menu
Exit a menu	Press  or Right Softkey	In the menu
Put a call on hold or retrieve a call on hold	Press Hold or Retrieve soft keys.	During a call
Reject/end a call	Press 	Receiving/during a call
Enter a space	Press 	Entering text
Enter a symbol	Press  until the desired symbol appears or press  to display the symbol chart	Entering text

To	Key Sequence	Mode
Lock keypad	Press and hold 	Standby
Unlock keypad	Press Right Softkey and 	Standby

Soft Keys

Your phone has two keys called “Soft keys.” The function of these keys depends on the menu being displayed at the time. The available function is displayed above the soft keys, as shown below.

 
The default soft keys (i.e. the ones displayed in stand-by mode) are **My player** and **Homepage**. Pressing the soft keys will take you directly to the functions. However, you can redefine the Softkey functions. For more information, refer to *“Shortcuts” on page 39*.



If PIN entry is required when you turn on your phone, the SOS soft key will be available before you enter the PIN. For more information, refer to *“SOS Soft Key” on page 6*.

Main menu

Your phone's menu structure starts with the 12 Main menu icons in a grid view. Press the Centre key to access the **Main Menu** from the idle screen. Navigate to the desired menu by using the 4-way navigation keys, then press the Centre key or **Select** to access the sub-menu.

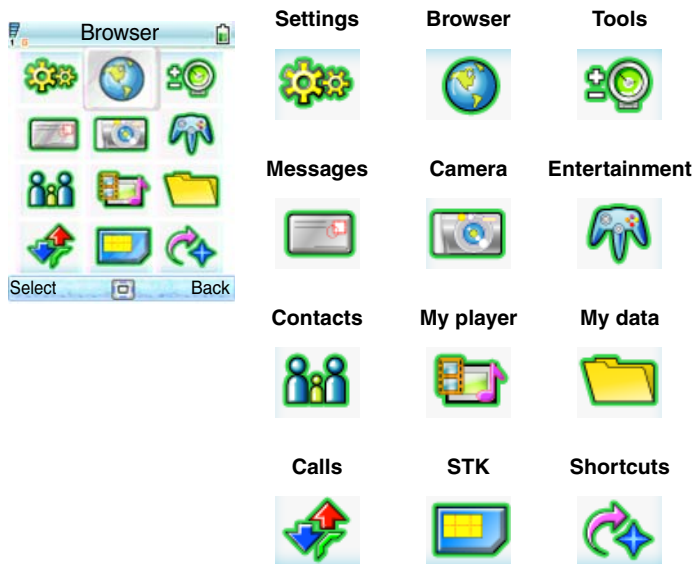

Menu	Description
Settings	Includes a variety of phone settings. For more information, refer to <i>"Settings" on page 35</i> .
Browser	Provides access to the Internet. For more information, refer to <i>"Browser" on page 52</i> .
Tools	Provides extra features such as Scheduler , Alarm , Appointments , Tasks , and Calculator . For more information, refer to <i>"Tools" on page 54</i> .

Menu	Description
Camera	Allows you to take a picture/shoot a video by using the display as a view finder. For more information, refer to <i>"Camera" on page 59.</i>
Messages	Provides SMS/MMS/E-mail functions. For more information, refer to <i>"Messages" on page 62.</i>
Entertainment	Provides some entertaining features: Default Games, Java Games and Composer. For more information, refer to <i>"Entertainment" on page 70.</i>
Contacts	Stores a list of phone contacts and shows memory status. For more information, refer to <i>"Contacts" on page 71.</i>
My player	Allows you to listen to music on your phone. For more information, refer to <i>"My player" on page 75.</i>
My data	Accesses all the files on your phone and allows you to manage your files. For more information, refer to <i>"My data" on page 79.</i>
Calls	Records a call history list. For more information, refer to <i>"Calls" on page 80.</i>
STK	Provides SIM related functions (depending on your SIM card).
Shortcuts	Allows you to access some features quickly. For more information, refer to <i>"Shortcuts" on page 39.</i>

Menu Structure



Note: On the **Main Menu** screen, you can press the 4-way keys to scroll to the desired option. Alternatively, you can press the number keys (0-9), the and the to access any menu directly. For example, press to access **My player**.


Key	Main Menu	2nd Level
	Settings	General Display Sounds Connectivity
	Browser	Homepage Favourites Settings
	Tools	Scheduler Alarm Appointments Tasks Notes Calculator Unit converter Countdown
	Messages	Create Inbox Outbox Drafts Templates Cell info Memory Status Settings
	Camera	<View Finder>
	Entertainment	Games Composer

Key	Main Menu	2nd Level
	Contacts	View Contacts View groups Special numbers Quick call Advanced Memory status
	My player	FM radio Tracks Last Played Playlists Voice memo Background MP3
	My data	My data Memory card
	Calls	Call history Clear history Call Settings
	STK*	SIM related functions
	Shortcuts	Fast keys Hot keys



* The feature is subscription dependent. Please contact your service provider.

 Icons

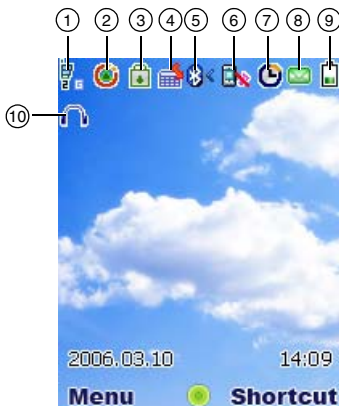Your phone has a 262,000-colour LCD screen. The icons displayed on the screen are explained below.



No.	Icon	Description
1		Signal strength (low to high)
2		Roaming
3		Keypad lock
4		Appointments
5		Bluetooth (active/ connecting)
6		Phone set to mute/Vibrate
7		Alarm set
8		SMS message indicator

No.	Icon	Description
9		Battery level (empty to full)
10		Headset

Basic Phone Use


 
Making an Emergency Call


Emergency calls can be made without credit on your phone and in some cases without a SIM card inserted. To make an emergency call, dial the local emergency number or, if available, press **SOS**, followed by **Yes**.

Making/Ending a Call



Before you can make a call, you need to insert your SIM card and make sure your phone is switched on.

To make/end a call (Steps 1-3):


1. Enter a phone number (including area codes if necessary) using the keypad keys.
2. Press  to dial the number.
3. Press  to terminate the call.

Alternatively, you can select a contact from Contacts and press  to dial the number:

To make a call from Contacts (Steps 1-3):

 

1. Press  > **Contacts** > **View Contacts**. Alternatively, press ▼ from the idle screen to view contacts.
2. Scroll to the desired entry.
3. Press .

When there are more than one phone entries in a contact, you may set one of the numbers as **Default number**. Therefore, you can view/call it whenever you bring up the contact's detail.





1. Press  > **Contacts** > **View Contacts** > Select **SIM contacts** or **Phonebook**.
2. Scroll to the desired entry.
3. Press **Options** > **Default number**

When you enter a new entry in your contacts, the phone assigns a **Position in SIM** number. Using this, you can speed dial a number.

To speed dial a number (Steps 1-3):

1. Enter a **Position in SIM** number by using the keypad keys.
2. Press  to request the phone number from the contacts.
3. Press .

To dial a number from the **Call history** lists (Steps 1-4):

1. Press  from the idle screen.
2. Press  to scroll to the desired call list.
3. Press  to scroll to the desired number.
4. Press .

Receiving/Rejecting a Call

When there is an incoming call, the phone rings/vibrates (depending on your Profile) and the screen displays the name (if recorded in the **Contacts**) or phone number of the caller (this feature is network dependent).

To receive a call, press  or **Options** > **Accept call**.

To reject a call, press  to **Reject** or press **Options** > **Reject call**.

Holding a Call

A call may be put on hold.

To place a call on hold:

During a call, press **Hold**. Alternatively, press **Options** and select **Hold**.

Making/Receiving a Second Call

Your first call is put automatically on hold by your phone when you receive or dial a second call.

To make a second call (Steps 1-3):

1. During a call, press the keypad keys to enter a number.
2. Press **Options** and select **Dial**.



When you make the second call, the first call will automatically be put on hold.

3. Press **Swap** to switch between two calls.


Making a Conference Call

When you have one active call and another one on hold, you can connect the two calls for a conference call.

To make a conference call (Steps 1-2):

1. Press **Options** > **Conference** to connect the two calls.
2. Press **Options** > **Private** to disconnect the two calls.

To make a second call (Steps 1-2):

1. During an active call or during a call on hold, enter a phone number by pressing the keypad keys.
2. Press .



This feature is subscription dependent.

Receiving a Third Call


If you have a third call coming in while you have one call on hold and another active, answering the third call will end the active call and replace it with the newly received one. Alternatively, you can receive a third call when you have the first two calls connected (using the **Conference Call** feature).

Text Entry

Changing Entry Mode

This section describes how to enter text by using your keypad keys.

In an edit screen, an indicator displays the currently applied entry mode. When creating a new SMS or MMS, there is a word counter above the indicator, telling you how many characters you can still enter.

To turn T9 predictive text input on/off, press and hold  in an edit screen.


To change entry method, press  to switch between the following modes:

T9 Entry Method	Normal Entry Method
T9 abc	abc
T9 Abc	Abc
T9 ABC	ABC
123	123

T9 Language

Your phone supports T9 predictive text input in a number of languages.

To select a T9 language (Steps 1-3):

1. Press  > **Settings** > **Language** > **T9 language** > **T9 language**.
2. Scroll to the desired language.
3. Press **Select**.




Setting the T9 language to **Automatic** allows the phone to select a language for you.

T9 Preferred

The T9 preferred setting displays the preferred T9 language when you edit SMS or MMS messages. If the setting is off, T9 entry will be switched off when you edit messages.



 


To disable T9 preferred (Steps 1-2):

1. Press  > **Settings > Language > T9 Language > T9 preferred.**
2. Press **Change.**


 
 
T9 English Entry Method

T9 predictive text offers possible word combinations by searching the T9 dictionary. Below is an example of how this is done.

To enter “Cat” in your edit screen (Steps 1-4):




1. Press    using the keypad keys. “**Act**” appears on the screen.
2. Press Left soft key to go to the next possible combination such as **Cat, Bat, Abu, Cau,** etc.
3. Stop pressing Left soft key when “**Cat**” appears on the screen.
4. Press  to add the word and press  to enter a space after the word.

Other key functions:

1. : Enters the word and adds a space after it.
2. Right soft key: Deletes the letter on the left of the cursor.
3. Left soft key: Opens **Options** menu or goes to the next possible T9 word combination.
4. : Press to switch between entry modes (upper or lower case).
5. : Press once to open the symbols chart; press and hold to turn T9 entry on/off.

Normal Entry Method

To enter “Act” in your edit screen (Steps 1-3):













1. Press  once to enter “**A**”.
2. Press  three times for the display to jump to “**c**”.
3. Press  once for “**t**”.

Numeric Entry Method


Press the numeric key to enter the number.

Character Table

Numeric keys have different functions under different entry methods.
Please refer to the following table for details

	Lower case	Upper case
	Press once to bring up the symbol chart; press and hold to select T9 language.	
	Press once to switch between different entry methods: ABC, Abc, abc or 123 .	
	Space 0	
	., @ ? ! ' / " , ; 1	
	abc2	ABC2
	def3	DEF3
	ghi4	GHI4
	jkl5	JKL5
	mno6	MNO6
	pqrs7	PQRS7
	tuv8	TUV8
	wxyz9	WXYZ9



To change upper/lower case, press the  to switch between different entry modes (for example: abc or ABC).



Settings

You can customise your phone by changing the following options in the **Settings** menu: **General**, **Display**, **Sounds** and **Connectivity**. After entering the **Settings** menu, you can press ◀/▶ key to scroll to the desired submenu.



General

Under the **General** submenu, you can define the following settings: **Language**, **Time & date**, **Security**, **Voice control**, **Auto keypad lock**, **Shortcuts**, **Default storage**, **Flight mode**, **Profiles** and **Default settings**.

Language

This menu allows you to select a text entry language (T9 language) and phone language (**Display language**). For details about T9 language, refer to *"Text Entry" on page 32*.

To set a phone language (Steps 1-3):

1. Press  > **Settings** > **General** > **Language** > **Display language**.
2. Scroll ▲/▼ to select a desired language.
3. Press **Select** or  to confirm.




If you set the **Display language** to **Automatic**, the phone will automatically select a language for you.



Time & date

This feature allows you to set the time and date.


To set the time display on/off (Steps 1-2):

1. Press  > **Settings** > **General** > **Time & date** > **Display time**.
2. Press **Change** to turn it on/off.


To set the **Time zone** (Steps 1-5):

1. Press  > **Settings** > **General** > **Time & date** > **Time zone**.
2. Press ◀▶ to scroll to the desired time zone.
3. Press **Select** or  to confirm.
4. Select **Yes/No** to use **Daylight saving** mode.



To set the time & date (Steps 1-5):

1. Press  > **Settings** > **General** > **Time & date** > **Set time & date**
2. Select **Time** and enter the time by using the keypad keys.
3. Press **Ok** to confirm and go back to the previous menu.
4. Select **Date** and enter the date by using the keypad keys.
5. Press **Ok** to confirm.


To set the **Time format** (Steps 1-2):

1. Press  > **Settings** > **General** > **Time & date** > **Time format**.
2. Press **Change** to switch between **12 hours** and **24 hours**.

To set the **Date format** (Steps 1-2):

1. Press  **Settings** > **General** > **Time & date** > **Date format**.
2. Press **Select** or  to choose a format (**DD/MM/YYYY**, **MM/DD/YYYY**, **YYYY/MM/DD**, **YYYY.MM.DD**, **DD.MM.YYYY**, **YYYY-MM-DD**, **DD-MM-YYYY**).

To set the **Power-on/Power-off time** (Steps 1-4):

1. Press  > **Settings** > **General** > **Time & date** > **Power-on time** or **Power-off time**.
2. Press **Change** and ◀▶ to turn the feature on/off.
3. When the **Power-on time/Power-off time** feature is turned on, you need to specify an exact time by using the keypad keys.
4. Press **Save**.

Security

The Security menu provides settings that prevent unauthorised use of your phone. Before you can change any security settings, you will be asked to enter the following codes:


- **PIN code request** (a SIM protection feature)

- **PIN code** (a protection code if your SIM is stolen. It is provided by your network)
- **PIN2 code** (a protection code for charging information and FDN service)
- **PUK/PUK 2 code** (unlocking codes in case you forget your PIN/PIN2 codes)
- **Phone lock** (provided by the phone)

PIN code request

This setting allows you to enable the SIM PIN feature, protecting your SIM card from unauthorised use. Please contact your service provider for your SIM PIN code.

To set your PIN code request (Steps 1-3):

1. Press  > **Settings** > **General** > **Security** > **PIN code request**.
2. Press **Select** to turn **PIN code request** on/off.
3. To turn on **PIN code request**, the phone asks you to **Enter PIN code**.




If you enter the wrong PIN code three times, the SIM card will be locked.


Changing PIN/PIN2

You will be requested to enter your PIN when the phone is switched on. However, this feature can be turned off, which leaves your phone at risk of unauthorised use if it is stolen or lost. You can only change PIN codes when they are active.

To activate PIN (Steps 1-3):

1. Press  > **Settings** > **General** > **Security** > **Change PIN**.
2. Enter your PIN.
3. Press **Ok**.

To change PIN/PIN2/lock code (Steps 1-5):


1. Press  > **Settings** > **General** > **Security** > **Change PIN/PIN2/lock code**.
2. Key in the current code.
3. Key in the new code.

4. Enter the new code again.
5. Press **Ok**.

Phone Lock

This setting allows you to enable the phone lock feature, preventing unauthorised use. Note that the default phone lock code is 123456#.

To turn on your phone lock (Steps 1-2):

1. Press  > **Settings** > **General** > **Security** > **Phone lock** > **On**.
2. When the phone lock is set to **On**, enter the default phone lock code to unlock your phone.


Voice control

By pre-recording voice tags on your phone, you can call up an option or a contact's phone number by saying the recorded voice tag to your phone. For example, if you have recorded **Calculator** in your phone, you can call up the feature later by saying **Calculator**.

Voice command

Voice command allows you to record a voice tag for the options you would like to activate by voice command later.


To create a Voice command (Steps 1-5):

1. Press  > **Settings** > **General** > **Voice control** > **Voice command**.
2. Scroll ▲/▼ to the desired feature and press **Record**.
3. Press **Yes** to create **Recording for**: the desired feature.
4. You can record the voice tag up to three times.
5. Press **Save**.

Quick call

Quick call allows you to record a voice tag for the contact's name.


To create a voice tag (Steps 1-5):

1. Press  > **Settings** > **General** > **Voice control** > **Quick call**.
2. Scroll ▲/▼ to the desired feature and press **Record**.
3. Press **Yes** to create **Recording for**: the desired contact's name.
4. You can record the voice tag up to three times.
5. Press **Save**.

Auto keypad lock

This feature allows you to lock the phone keypad automatically or after a desired period of time.





 

To set the Auto keypad lock (Steps 1-2):

1. Press  > **Settings** > **General** > **Auto keypad lock**.
2. Press **Select** to choose from the following settings: **Off**, **After 1 minute**, **After 2 minutes** and **After 5 minutes**.







Shortcuts

Shortcuts allow you to access phone functions quickly by pressing (and holding) keypad keys-including numeric keys and 4-way navigation keys.

To set shortcut functions for numeric keys (Steps 1-4):

1. Press  > **Settings** > **General** > **Shortcuts**.
2. Press  key to select **123** submenu.
3. Scroll  /  to a desired numeric key number and press **Options** > **Personalise**.
4. Scroll  /  to select a desired shortcut function for the key and press **Select** > **Ok**.


To set shortcut functions for 4-way navigation keys (Steps 1-4):

1. Press  > **Settings** > **General** > **Shortcuts**.
2. Press  key to select 4-way navigation key icon.
3. Scroll  /  to a desired key icon and press **Options** > **Personalise**.
4. Scroll  /  to select a desired shortcut function for the key and press **Select** > **Ok**.

Default storage

This feature allows you to check the memory space on your phone and in your memory card.


To check the **Phone memory** or **Memory card**:

Press  > **Settings** > **General** > **Default storage** > **Phone memory** or **Memory card**.

Flight mode

When you are on board an aircraft, your phone is not allowed to be turned on. This feature allows you quickly to disable cellular functionality so you can have your phone on for listening to music, playing games and so on. The FM radio is disabled in Flight mode.


To turn the **Flight mode On/Off** (Steps 1-2):

1. Press  > **Settings** > **General** > **Flight mode**.
2. Scroll ▲/▼ to set the feature **On/Off** and press **Select**.

Profiles

Your phone has five sound profiles-**Normal, Outdoors, Headset, Meeting** and **USB cable**. For different situations, you can set your phone to sound differently. For example, you can set your phone to **Meeting** mode when you are in a meeting, where muting your phone may be necessary. But for **USB cable** profile, you can select **Ringtones** only from Phone memory; do not support from External memory. For more details, please refer to **Sounds** on page 42.


To customise a profile (Steps 1-7):

1. Press  > **Settings** > **General** > **Profiles**.
2. Select a profile and press **Options** > **Personalise**.
3. Define an alert type: **Ring only, Vibrate only, Ring & Vibrate, Vibrate then ring** or **None**.
4. Set the **Key sound On/Off** by pressing **Select**.
5. Select **Ringtones** for a specific event.
6. Set the **Ring Volume**.
7. Press **Back** when you have finished.

Default settings

This feature allows you to restore default values for your phone.

To restore **Default settings** (Steps 1-2):

1. Press  > **Settings** > **General** > **Default settings**.
2. Select **Yes** and enter the phone lock code, as described on page 38, to confirm you want to **Restore default setting**.

Display

Under the **Display** submenu, you can define settings such as **Wallpaper**, **Themes**, **Backlight level**, **Backlight duration** and **Greeting**.

Wallpaper


You can select an image from the folders and set it as the background image to the idle screen.

To set the wallpaper (Steps 1-4):

1. Press  > **Settings** > **Display** > **Wallpaper**.
2. Select **On** to go to a desired folder.
3. Scroll ▲/▼ to go to the desired image and press **Select**.
4. Set the **Display wallpaper** to **Stretch** or **Centre**.

Themes

To set a different colour style for your phone (Steps 1-3):

1. Press  > **Settings** > **Display** > **Themes**.
2. Scroll ▲/▼ to select a theme from **Theme 1**, **Theme 2** and **Theme 3**.
3. Press **Select**.


Backlight level

To set the phone's backlight level (Steps 1-3):

1. Press  > **Settings** > **Display** > **Backlight level**.
2. Scroll ▲/▼ to select from **Maximum**, **High**, **Medium** and **Low**.
3. Press **Select**.

Backlight duration


To set the duration of the phone's backlight (Steps 1-3):

1. Press  > **Settings** > **Display** > **Backlight duration**.
2. Scroll ▲/▼ to select from **1 minute**, **30 seconds** and **15 seconds**.
3. Press **Select**.

Greeting

This feature provides a text greeting when the phone is switched on. When the text greeting is on, the animation is disabled.

To set a text greeting (Steps 1-3):


1. Press  > **Settings** > **Display** > **Greeting**.
2. Select **On** to open the text edit screen.
3. Enter the text and press **Ok**.

Sounds

Use the **Sounds** menu to set **Alert type**, **Ringtones**, **Ring Volume**, **Key sound** and **Shutter sound** for your phone. For details about customising a sound profile, refer to Profiles on page 40.


Alert type

To specify an Alert type (Steps 1-3):

1. Press  > **Settings** > **Sounds** > **Alert type**.
2. Scroll ▲/▼ to go to the desired alert type: **Ring only**, **Vibrate only**, **Ring & Vibrate**, **Vibrate then ring** or **None**.
3. Press **Select**.



Ringtones

To set a ring tone for a specific event (Steps 1-4):

1. Press  > **Settings** > **Sounds** > **Ringtones**.
2. Press ▲/▼ key to scroll to the desired event (**All contacts calls**, **All calls**, **Alarm**, **Appointments**, **Messages**, **Cell info** or **Group 1-10**).
3. Press **Select** and choose a **Ringtones** source: **Phone memory** or **Memory card**.
4. Scroll ▲/▼ to select a sound file and press **Select** > **Ok**.


Ring volume

To adjust the **Ring Volume** (Steps 1-3):

1. Press  > **Settings** > **Sounds** > **Ring Volume**.
2. Press ◀/▶ key to decrease/increase the volume.
3. Press  or **Ok** to confirm.


Key sound

To set Key sound (Steps 1-2):

1. Press  > **Settings** > **Sounds** > **Key sound**.
2. Press **Select** to turn the **Key sound On/Off**.

Shutter sound

To set Shutter sound (Steps 1-2):

1. Press  > **Settings** > **Sounds** > **Shutter sound**.
2. Press **Select** to turn the **Shutter sound Off** or select **Shutter sound 1/2**.

Connectivity


In addition to the network and phone connection settings, the **Connectivity** submenu also provides **Call options**, **Message settings**, **Bluetooth**, **USB features** and **Memory card** features.

Call options

Call Options include the following settings: **Auto Answer**, **Any key answer**, **Second reminder**, **Call services**, **Call divert**, **Bar calls**, **Fixed dialling** and **Closed user group**.


Auto Answer

To turn **Auto Answer On/Off** (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Auto Answer**.
2. Press **Change** to turn the **Auto Answer On/Off**.


Any key answer

To turn **Any key answer On/Off** (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Any key answer**.
2. Press **Change** to turn the **Any key answer On/Off**.

Seconds reminder


To turn **Seconds reminder On/Off** (Steps 1-4):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Seconds reminder**.
2. Press **Change** and ◀/▶ key to turn the **Auto Answer On/Off**.
3. When the feature is set to **On**, you need to specify the Start time by using the keypad keys.
4. Press **Save**.

Call services


Call services provides the following settings: **Time & cost**, **Call waiting**, **Hide ID**, **Caller ID** and **Cost Settings**.

To check/reset **Last call/Total incoming/Total outgoing/Cost left/All voice calls**:

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Time & cost** > **Last call/Total incoming/Total outgoing/Cost left/All voice calls**
2. Press **Ok** to return to the previous screen or **Reset** to clean the history record.

Call waiting


To Activate/Cancel **Call waiting**:

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Call waiting**
2. Scroll ▲/▼ to select **Activate/Cancel** and press **Select**.

To check status, press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Call waiting** > **Check status**.

Caller ID

To Hide ID (Steps 1-2):


1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Hide ID**.
2. Press **Yes** to **Hide ID** for all calls or **Hide ID for next call**.

To check Caller ID status, press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Caller ID**.


Cost Settings

To set **Currency**, press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Cost Settings** > **Currency**.


To set **Cost/unit** (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Cost Settings** > **Cost/unit**.
2. Enter the rate Per unit and Per minute.

To set **Maximum cost** (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Cost Settings** > **Maximum cost**.
2. Press **Edit** to turn **Display credit On/Off** and specify the **Maximum cost** by using the keypad keys.

To set **Auto display** (Step 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Cost Settings** > **Auto display**.
2. Set the **Auto display** to be **Off** or show **Cost/Duration/Both**.

Call divert

You can select call diversion when you are unable to pick up a phone call in the following conditions:

- **Divert for all calls** (diverts all incoming calls to the number you assigned).
- **All un-answer** (diverts an incoming call when it is not answered).
- **Not reachable** (diverts all incoming calls to the number you assigned when the phone is turned off or out of signal range).
- **When no reply** (diverts an incoming call when it is not answered for a period of time determined by your network).
- **Busy** (diverts the incoming call when the line is busy).
- **Divert all data calls active** (diverts the incoming call when the phone is receiving data).

To set **Call divert** (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call divert**.

2. Select **Call divert** condition: **Divert for all calls, All un-answer, Not reachable, When no reply, Busy, Divert all data calls active or Cancel all.**


To check **Call divert** status, press  > **Settings > Connectivity > Call options > Call divert > Check status.**

Bar calls

This feature allows you to bar different types of calls made or received on your phone. Ask your service provider for a 4-digit password if you want to activate the feature. There are five types of calls that can be barred:

1. **All outgoing** (except emergency calls)
2. **Outgoing international** (only calls within the home country can be dialled)
3. **Only here & home** (international calls to your home network are allowed, but all other international calls are barred)
4. **All incoming** (bars all incoming calls)
5. **When roaming** (bars incoming calls when you are out of your home network range)

To set **Bar calls** (Steps1-2):


1. Press  > **Settings > Connectivity > Call options > Bar calls.**
2. Select a barred call type: **All outgoing, Outgoing international, Only here & home, All incoming, When roaming or Cancel all.**

To check **Bar calls** status, press  > **Settings > Connectivity > Call options > Bar calls > Check status.**

Fixed dialling


Fixed dialling allows you to dial only certain predefined numbers.

To turn on Fixed dialling (Steps 1-3):


1. Press  > **Settings > Connectivity > Call options > Fixed dialling.**
2. Enter PIN2 code. An activating/deactivating message will be displayed on the screen.
3. Press **Ok.**


Closed user group

Closed user group is a network service that specifies the group of people whom you can call and who can call you. For more information, contact your network operator or service provider.

To turn **Closed user group On/Off**, press  > **Settings** > **Connectivity** > **Call options** > **Closed user group** > **Closed user group**.

To select a group, press  > **Settings** > **Connectivity** > **Call options** > **Closed user group** > **Select group**.

To turn **Outgo. access On/Off**, press  > **Settings** > **Connectivity** > **Call options** > **Closed user group** > **Outgo. access**.

To turn **Preferred group On/Off**, press  > **Settings** > **Connectivity** > **Call options** > **Closed user group** > **Preferred group**.

Message settings

This menu includes setting options for Text message, Multimedia message, E-mail and Voice mail. For detailed Message settings, refer to *"Messages" on page 62*.


Network

The Network menu provides the following settings.

Select network


This feature allows you to search for the network automatically.

To select the network automatically (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Network** > **Select network**.
2. Press **Yes** to search for available networks.

Search mode


To select a network search mode (Steps 1-3):

1. Press  > **Settings** > **Connectivity** > **Network** > **Search mode**.
2. Press **Change** to select a mode from **Manual** or **Auto**.


Preferred Networks

This feature gives a list of available networks. You can view, edit and delete a network from the list.

To create a Preferred network (Steps 1-5):


1. Press  > **Settings** > **Connectivity** > **Network** > **Preferred networks**.
2. Press **List**.
3. Press **Options** > **Insert/Add to end**.
4. Press **Select** to select a network.
5. Press **Ok**.

To delete a Preferred network (Steps 1-4):

1. Press  > **Settings** > **Connectivity** > **Network** > **Preferred networks**.
2. Press **List**.
3. Press **Options** > **Delete**.
4. Press **Ok**.


Select band

To select a network band (Steps 1-3):

1. Press  > **Settings** > **Connectivity** > **Network** > **Select band**.
2. Scroll to the desired band (900, 1800, 900/1800 MHz).
3. Press **Select**. The radio button will be marked when it is activated.

Select line

To select a phone line (Steps 1-3):

1. Press  > **Settings** > **Connectivity** > **Network** > **Line** > **Select line**.
2. Select a line from **Line 1** and **Line 2**.
3. Press **Select**.

To protect the line, press  > **Settings** > **Connectivity** > **Network** > **Line** > **Protected** and select **On/Off**.



This feature is only available depending on the region or country.


Browser

This menu includes browser setup options and Push messages. For detailed Browser settings, refer to *"Browser" on page 52*.


Connections

This menu includes settings for **CSD profile**, **GPRS profile** and **GPRS info**.


To create a **CSD profile** (Steps 1-4):

1. Press  > **Settings** > **Connectivity** > **Connections** > **CSD profiles**.
2. Scroll ▲/▼ to go to a profile and press **Select**.
3. Enter information such as **Name**, **Call type** (ISDN or Analogue), **Dial number**, **Login** and **Password**.
4. Press **Save**.

To create a **GPRS profile** (Steps 1-4):

1. Press  > **Settings** > **Connectivity** > **Connections** > **GPRS profiles**.
2. Scroll ▲/▼ to go to a profile and press **Select**.
3. Enter information such as **Name**, **APN**, **Login**, **Password** and **Authentication (On/Off)**.
4. Press **Save**.

To view **GPRS info** (Steps 1-3):

1. Press  > **Settings** > **Connectivity** > **Connections** > **GPRS info**.
2. Check **GPRS info** (Received data and Total time of GPRS service)
3. Press **Ok**.


Bluetooth

Your phone features Bluetooth wireless technology. With Bluetooth, you can connect your phone to a Bluetooth-compatible device within 10 metres. The connection can be affected by any obstruction such as a wall or other electronic devices. Your phone memory can support up to 350k.

Ensure that the other device supports Bluetooth features so that you can build a successful Bluetooth connection. Contact the device's manufacturer or refer to the accompanying documentation to see if other devices support Bluetooth.

Your phone allows you receive a VCard from other phone via Bluetooth. A notification is given when you receive a VCard, which will then be automatically saved in **My data > Others**. The VCard details appear after you unpack the VCard. The maximum number of VCard via Bluetooth is 9.

To create a Bluetooth connection (Steps 1-3):

1. Press  > **Settings > Connectivity > Bluetooth**.
2. Select **Activate > Search for devices**.
3. When the list of detected devices appears, select one to connect to.



If you do not intend to use Bluetooth for an extended period of time, deactivate it to save your phone's power.


The Bluetooth menu options include:

- **Activate:** Turn the Bluetooth feature on/off.
- **Search for devices:** Select to search for external devices that you would like to connect to your phone.
- **My devices:** Select to connect to devices that you prefer.
- **Preferences:** Select to change your **Preferences** settings, including **Phone name**, **Visible (On/Off)** and **Services supported (Dial-up, File transfer, Handsfree, Headset, Imaging, Object push, and Serial port)**.

USB features

This menu allows you to connect your phone to a USB-compatible device.

To make a USB connection (Steps 1-3):

1. Press  > **Settings > Connectivity > USB features**.
2. Scroll through **USB drive**.
3. Press **Select** to connect to the desired device.

Memory card

Your phone features a Micro SD memory card slot in order to increase the phone's memory. Your phone supports a Micro SD card up to 512MB with guaranteed performance and quality.

 
To format your memory card (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Memory card** > **Format**.
2. Press **Ok**.





Browser

Your phone provides WAP service, enabling you to get up to date information, content and downloads. The use of WAP service depends on your service provider and the WAP settings in your phone.

When you are connected to the WAP browser, the predefined browser homepage will be displayed. The available menu options depend on the page you connect to. Hold down the  to terminate the WAP connection.

WAP setup



To select WAP connection profiles (Steps 1-3):

1. Press  > **Browser** > **Settings** > **WAP profiles**. Alternatively, press  > **Settings** > **Connectivity** > **Browser** > **WAP profiles**.
2. Scroll to a desired network service provider.
3. Press **Options** > **Go to**.

Profile settings include the following items:

- **Name:** Enter the name of the service provider.
- **IP address:** Enter the IP address.
- **Port:** Enter the port number.
- **Homepage:** Enter the address of the homepage.
- **Linger time:** If the connection is not used for the preset linger time, the connection will cease.
- **Connection mode:** Select from **Auto**, **CSD** and **GPRS**.
- **CSD profiles:** Select a CSD profile from **Profile 1-10**.
- **GPRS profiles:** Select a GPRS profile from **Profile 1-10**.



WAP Page Connection

You can connect to a WAP page in the following two ways. Connect to your Homepage by pressing  > **Browser** > **Homepage**. Or connect to a previously saved Web page by pressing  > **Browser** > **Favourites** > the desired bookmark.

WAP push setting

This feature allows you to select your preferences for messages sent from your service provider.


To set WAP push settings (Steps 1-3):

1. Press  > **Browser** > **Settings** > **Push messages**. Alternatively, press  > **Settings** > **Connectivity** > **Browser** > **Push messages**.
2. Select a mode from: **Always accept**, **Never accept** and **Only from address**.
3. Press **Select**.



Tools

The Tools menu provides a variety of personal features to help you get the most out of your phone.

Press  > **Tools** to access this menu, which allows you to utilise the following features:


- Scheduler, Appointments, Tasks and Notes
- Alarm and Countdown
- Calculator and Unit converter

Scheduler

To view the calendar in day/week format (Step 1-2):

1. Press  > **Tools** > **Scheduler**.
2. Select **Options** > **View day/ View week**.


To schedule a new meeting (Steps 1-4):

1. Press  > **Tools** > **Scheduler**.
2. Select **Options** > **New meeting**.
3. On the **New entry** screen, enter the meeting details: **Subject**, **Location**, **Start date**, **Start time**, **End date**, **End time**, **Reminder** (**At event time**, **5 mn before**, **15 mn before**, **1 hour before**, **1 day before**, **Other**, **No reminder**), and **Repetition** (**Once**, **Daily**, **Weekly**, **Monthly**, **Annually**).
4. Press **Save**.

To go to a specific date (Steps 1-2):

1. Press  > **Tools** > **Scheduler**.
2. Select **Options** > **Go to date**.


To clear events (Steps 1-2):

1. Press  > **Tools** > **Scheduler**.
2. Select **Options** > **Advanced** > **Clear all** (**All events**, **One day old** and **One week old**).


Alarm

When an alarm is set, it will ring even if the phone is turned off.


To set **Simple alarm** (Steps 1-3):

1. Press  > **Tools** > **Alarm** > **Simple alarm**.
2. Press **Select** to turn the feature **On/Off**.
3. When **Alarm** is set to **On**, you need to specify the alarm time.

To set **Recurrent alarm** (Steps 1-5):

1. Press  > **Tools** > **Alarm** > **Recurrent alarm**.
2. Press **Select** to turn the feature **On/Off**.
3. When **Alarm** is set to **On**, you need to specify the alarm time.
4. Scroll to week day indicators and press **Change** to select alarm frequency.
5. Press **Save**.

To set an **Alarm tone** (Steps 1-3):


1. Press  > **Tools** > **Alarm** > **Alarm tone**.
2. Select **Ring tones** from **Phone memory** or **Memory card**.
3. Press **Select**.

Appointments

This feature allows you to create an appointment and to set a reminder.

Note that the phone will switch on automatically if the appointment alarm is set to a specific time.


To create an appointment (Steps 1-4):

1. Press  > **Tools** > **Appointments**.
2. Select **New events** or press **Add**.
3. On the **New entry** screen, enter the **Appointments** details: **Subject**, **Location**, **Start date**, **Start time**, **End date**, **End time**, **Reminder** (**At event time**, **5 mn before**, **15 mn before**, **1 hour before**, **1 day before**, **Other**, **No reminder**) and **Repetition** (**Once**, **Daily**, **Weekly**, **Monthly**, **Annually**).
4. Press **Save**.

Tasks

Tasks remind you of a task that is scheduled to be done at a specific time.


To create a **Tasks** (Steps 1-4):

1. Press  > **Tools** > **Tasks**.
2. Select **New events** or press **Add**.
3. On the **New entry** screen, enter the **Tasks** details: **Subject**, **Status** (**Pending** and **Done**), **Priority** (**High**, **Normal** and **Low**), Set date (**Yes** or **No**), **Due date**, **Due time**, and **Reminder** (**At event time**, **5 mn before**, **15 mn before**, **1 hour before**, **1 day before**, **Other**, **No reminder**).
4. Press **Save**.

Notes

This feature allows you to write down some text for later reference.

To create **Notes** (Steps 1-4):

1. Press  > **Tools** > **Notes**.
2. Select **<New Notes>** or press **Add**.
3. Write down information.
4. Press **Save**.

Options for Notes include:

- **View**: View the content of the notes.
- **Edit**: Edit the note.
- **New entry**: Create a new entry.
- **Delete**: Delete a note.
- **Delete all**: Delete all notes.
- **Send**: Sends the note.
- **Capacity**: Check the maximum and free memory space.

Calculator

You can perform calculations as if using a calculator. A maximum of 8 digits can be entered into this calculator, which will display a 9-digit or 6-decimal result. If the result exceeds 9 digits, the screen will display an **Over range** message.

Calculation keys

1. ▲: Addition
2. ►: Division
3. ◀: Multiplication
4. ▼: Subtraction
5. Centre key: Equals (=)
6. Right soft key: Clear
7. Left soft key: Options
8. : Decimal point (.)
9. : Negative (-)

To perform a calculation (Step 1-3):

1. Press > **Tools** > **Calculator**.
2. Enter the digits with numeric keys and other calculation keys (listed above).
3. Press to return to the idle screen.

Unit converter


This function allows you to enter a unit/ currency exchange rate and convert from one unit/currency to another.

To set an exchange rate (Steps 1-3):

1. Press > **Tools** > **Unit converter**
2. Press ◀/► to scroll to a desired unit (**Velocity, Mass, Area, Volume, Power, Time, Pressure, Length, Temperature, Currency or Energy**).
3. Enter a number and press **Change**.

Countdown

To start a Countdown (Steps 1-4):

1. Press  > **Tools** > **Countdown**.
2. Select **Options** > **Change**.
3. Press ◀▶ key to set the countdown time.
4. Press **Ok** > **Options** > **Start**.

STK (SIM Tool Kit)

This option is dependent on your service provider.



Camera


Your phone has an integrated camera that allows you to take pictures or shoot video clips and send them as MMS messages/attachments. The pictures are taken and saved in JPEG format, which can be viewed by most picture viewing programmes.



Do not apply force to your camera lens, it might get damaged.

Camera mode

To take a picture (Steps 1-4):

1. Press  > **Camera** to launch the Camera.
2. Press Centre key to take a picture.
3. The picture is saved automatically.
4. Press **Back** to go back to the camera's view finder screen.

Options for the saved image include:

- **Send:** Send the saved image **Via multimedia msg, Via Bluetooth or Via e-mail.**
- **Take new picture:** Select this option to go back to the camera's view finder screen.
- **As contact ID:** Set the image as the contact ID.
- **As wallpaper:** Set the image as the wallpaper.
- **Delete:** Delete the image.

Options for the view finder screen include:

- **Preview screen:** Set the size of the **Preview screen** to be **Large screen** or **Small screen** (1280 x 1024 resolution does not support **Large screen**).
- **Picture resolution:** Set the image resolution: **1280 x 1024, 800 x 600, 640 x 480, 320 x 240 or 160 x 120.**
- **Picture quality:** Set the image quality to be **SuperFine, Fine or Normal.**


- **View pictures:** View the saved images in the **Photos** file.
- **Mode:** Set the **Night mode** and **Multishot** to be **On/Off** or turn **On/Off** the **Self-timer**.
- **Effects:** Select the **Colour effects: Off, B&W, Sepia, Blue, Negative**.
- **Advanced:** Enter the **Default name** for the image to be saved; **Reset settings** under Camera menu; Set the Anti-flicker value (**50Hz** or **60Hz**).

On the camera's view finder screen, you can press the 4-way navigation keys to adjust the following two functions:

- **Zoom:** Press and hold **▲** to zoom in; press and hold **▼** to zoom out. The function is only available for image size 640 x 480, 320 x 240 and 160 x 120.
- **Brightness:** Press **▲** or **▼** to adjust the level of brightness on the camera's view finder screen.

Video mode

To shoot a video (Steps 1-4):

1. Press  > **Camera** to launch the Camera. Then, press the right navigation key to launch video mode.
2. Press Centre key to start recording a video clip and press again to stop.
3. The video is saved automatically.
4. Press **Back** to go back.

Options for the saved video clips include:

- **Play:** Play the recorded video clip.
- **Send:** Send the saved image **Via multimedia msg, Via Bluetooth** or **Via e-mail**.
- **Record new video:** Select this option to go back and shoot a new video.



During recording, if the user exceeds the maximum file size allowance, an envelope icon will appear with a red line drawn through it symbolising that this video clip cannot be sent via MMS.

- **Delete:** Delete the video clip.

Options for the view finder screen include:

- **Video length:** Set the **Video length** to be **MMS length** or **Maximum length**.
- **Video resolution:** Set the video resolution: **160** or **176X144**.
- **Video quality:** Set the video quality to be **Fine** or **Normal**.
- **View videos:** View the saved video clips in the **Videos** file.
- **Colour effects:** Select the **Colour effects: Off, B&W** or **Sepia**.
- **Advanced:** Enter the **Default name** for the image to be saved; **Reset settings** under Camera menu.

Before you start shooting a video clip, you can press the 4-way navigation keys to adjust the following two functions:

- **Zoom:** Press and hold ▲ or ▼ to zoom in/out. The function is only available for image size 176 X 144.
- **Brightness:** Press ▲ or ▼ to adjust the level of brightness.



Messages

Messages offers a variety of messaging functions, including text messages, multimedia messages and E-mail. This chapter guides you through each messaging function and setting options.

The messages you receive and create are saved in three folders: **Inbox** (the received messages), **Outbox** (the sent messages) and **Drafts** (the messages that haven't been finalised and are to be sent later).

When you navigate through the list of messages in **Inbox**, press **Options** to access the following features:

1. **View:** Displays message contents.
2. **Reply:** Sends a message to the sender.
3. **Forward:** Forwards the message to others.
4. **Delete:** Deletes the selected message.
5. **Delete all:** Deletes all messages in the current folder.
6. **Details:** Displays message details, including **Date**, **Delivery time** and sender information.
7. **Call back:** Calls the person who sent you the message.
8. **Select multiple:** Deletes multiple messages selected individually or by selecting all.

When you navigate through the list of messages in **Outbox**, press **Options** to access the following features:

1. **View:** Displays message contents.
2. **Forward:** Forwards the message to others.
3. **Delete:** Deletes the selected message.
4. **Delete all:** Deletes all messages in the current folder.
5. **Details:** Displays message details, including **Date**, **Delivery time** and sender information.
6. **Call:** Call the person who sent you the message.

When you navigate through the list of messages in **Drafts**, press **Options** to access the following features:

1. **View:** Displays message contents.
2. **Edit:** Edits the message.



3. **Delete:** Deletes the selected message.
4. **Delete all:** Deletes all messages in the current folder.
5. **Details:** Displays message details, including **Date**, **Delivery time** and the number of the sender.
6. **Select multiple:** Deletes multiple messages selected individually or by selecting all.

Text Messages

You can send a text message of up to 160 characters, including punctuation marks and spaces.

Creating/Sending/Saving Text Messages

To create a new **Text message** (Steps 1-4):

1. Press  > **Messages** > **Create** > **Text message**.
2. Input your message.
3. When done, press  and add phone number(s) from the **Contacts** or manually. Alternatively, press **Options** > **Continue**.
4. Or press **Options** > **Save as draft**.



For more information on entry methods, refer to *"Text Entry" on page 32*.

Options for Text Message editing include:


1. **Continue:** Continue to send the messages by selecting recipients from **Contacts** or by entering phone number(s) manually.
2. **Add symbol:** Display the symbol chart for selection.
3. **Insert object:** Insert objects from **Predefined sounds**, **Predefined animations**, **Own animations**, **Own pictures**, **Own sounds**, **Text template**, **Contact number** and **Bookmark**.
4. **Spell word:** Spell a word and add it to the message content.
5. **T9 language:** Select T9 language. For more information, refer to *"Text Entry" on page 32*.
6. **T9 dictionary:** Turn T9 dictionary on/off.
7. **Save as draft:** Save the message in the draft box.
8. **Text format:** Select the **Font style** and **Font colour** for the message.

Text Message Settings:

To select a text message account (Steps 1-3):

1. Press  > **Messages** > **Settings** > **Text message**.
2. Scroll ▲ or ▼ to select **Account 1** or **Account 2**.
3. Press **Options** > **Activate** or  > **Activate** to confirm your selection.

To personalise your text message account:

1. Press  > **Messages** > **Settings** > **Text message**.
2. Scroll ▲ or ▼ to select **Account 1** or **Account 2**.
3. Press **Options** > **Personalise**.

The personalise settings include the following:


- **Message centre:** Enter your text **Message centre** number.
- **Protocol:** Select your message type from **Standard text/Fax/X.400/Paging/ERMES/E-mail**.
- **Validity period:** Select the period from **1 hour/12 hours/1 day/1 week/Maximum**. This determines the length of time the SMS message is stored at the SMS centre. The radio button for the selection will be marked.
- **Delivery report:** This feature allows you to get a receipt when the SMS message is successfully delivered. Press **Select** to activate/inactivate the feature. This feature is network dependent.
- **SMS via GPRS:** This feature allows you to send your SMS via GRPS rather than CSD. Press **Select** to activate/inactivate the feature.
- **Direct reply:** If this feature is enabled and available from your service provider, you may pay for the message sent back to you. Press **Select** to activate/inactivate the feature.

Multimedia Messages

You can send a multimedia message, which includes multimedia files and texts.

Creating/Sending/Saving Multimedia Messages

To create a new Multimedia message (Steps 1-4):


1. Press  > **Messages** > **Create** > **Multimedia message**.
2. Insert multimedia objects by pressing **Options** > **Insert object** or **Insert new**.
3. When this has been done, add the recipients phone number(s) from the **Contacts** or manually. Alternatively, press **Options** > **Continue**.
4. Or alternatively press **Options** > **Save as draft**.

Options on the message editing screen include:


- **Continue:** Continue to send the messages by selecting recipients from **Contacts** or entering phone number(s) manually.
- **Insert object:** Insert objects from **Pictures**, **Photos**, **Videos**, **Sounds** and **Page**.
- **Insert new:** Insert objects by creating files from **Digital camera**, **Video camera** and **Sound recorder**.
- **Attachment:** Attach a **Business card** (of a contact's information) or an **Appointment** entry.
- **Preview message:** Select to preview the whole multimedia message content or page by page.
- **Timing:** Set the **Slide duration**.
- **Page list:** Display a page list. Scroll to the desired page and access it directly.
- **Save:** Save the message.

Multimedia Message Settings:

To edit MMS profiles (Step 1-3):

1. Press  > **Messages** > **Settings** > **Multimedia message** > **Profiles**.
2. Scroll ▲ or ▼ to select a profile.
3. Press **Options** > **Edit**.

To customise **MMS options** (Steps 1-2):

1. Press  > **Messages** > **Settings** > **Multimedia message** > **MMS options**.
2. Scroll ▲ or ▼ to go to the desired option and press **Select** to change the setting.



The Sending options include the following settings:

- **Sender visibility:** This feature indicates whether to hide or show the sender's ID by turning it on/off.
- **Priority:** Define the message priority to be **Low**, **Normal** or **High**.
- **Delivery report:** This feature allows you to get a receipt when the message is successfully delivered. Press **Select** to activate/inactivate the feature. This feature is network dependent.
- **Read report:** This feature allows you to get a report when the message is read. Press **Select** to activate/inactivate the feature. This feature is network dependent.
- **Expiry time:** When the expiry time is due, the message will be deleted. Set the **Expiry time:** 1 hour, 3 hours, 6 hours, **12 hours**, **1 day**, **1 week** or **Maximum**.
- **Retrieval:** Set the **Retrieval** mode--**Automatic**, **Deferred** or **Auto. homenet**.
- **Advertisements:** Set the **Spam filter** to be on/off to reject/receive junk messages.

E-mail

Creating/Sending/Saving E-mail

To compose E-mail (Steps 1-4):

1. Press  > **Messages** > **Create** > **E-mail**.
2. Enter the text.
3. When done, press  and add phone number(s) from the **Contacts** or manually. Alternatively, press **Options** > **Continue**.
4. Or press **Options** > **Save**.

Options for the E-mail editing screen include:


- **Continue:** Continue to send the messages by selecting recipients from **Contacts** or entering phone number(s) manually.
- **Save:** Save the input content.
- **New line:** Move the cursor back to the starting place of the message.
- **Clear all:** Delete all the input text in the edit screen.
- **Back:** Exit the E-mail edit screen and go back to the **Create** menu screen.

E-mail Settings

Before you start composing an E-mail, you need to set up an E-mail account. Under the E-mail settings, you can define the E-mail server and your E-mail account.

Server

To create an E-mail **Server** (Steps 1-3):


1. Press  > **Messages** > **Settings** > **E-mail** > **Server**.
2. Scroll ▲ or ▼ to select a server.
3. Press **Options** > **Edit**.

The **Server** details include the following information:

- **Connection:** Define settings such as **Connect using**, **CSD only** and **GPRS only**.
- **Incoming server:** Specify the name of the **Server**, **Port**, **Authentication** (**General** and **Security**), **Account**, **Password** and **Download** (**All** and **Header only**).
- **Outgoing server:** Specify the name of the **Server**, **Port**, **Authentication** (**None**, **General** and **Security**), **Account** and **Password**.

Account

To create an account (Steps 1-3):

1. Press  > **Messages** > **Settings** > **E-mail** > **Account**.
2. Edit the details.
3. Press **Save**.


The **Account** includes the following details:

- **User name:** Enter a user name.
- **Address:** Enter the E-mail address.
- **Signature:** Create your own signature and send it with E-mails.


Templates

The **Templates** menu provides a list of predefined text for you to add into your text/multimedia messages.

To add a template (Steps 1-3):

1. Press  > **Messages** > **Templates** > **Text template**.
2. Select <**New template**> or press **Add**.
3. Enter the text and press **Options** > **Templates**.
4. Scroll ▲/▼ to select a predefined text.
5. Press **Options** > **Save**.


Cell info

This feature is network dependent. You need to register with your service provider. To access this feature, press  > **Messages** > **Cell info**. From the menu, you can set up the following options:

- **Auto display:** This feature allows cell broadcast messages to be displayed automatically in standby mode. Press **Select** to activate/inactivate the feature.
- **Broadcast:** Set this feature on/off to read any new cell broadcast messages.
- **Message inbox:** Displays a list of received cell broadcast messages.
- **Topic list:** To select the received message type, select **Add new** from **My topics** to enter favourite topics or select an existing topic from the **Active topics** list to change or delete.
- **CB languages:** This feature allows you to specify the language in which your cell broadcast message is displayed.


Memory status

To check the phone memory (Steps 1-2):

1. Press  > **Messages** > **Memory status**.
2. Scroll ▲/▼ to see the memory space of **Text msgs in phone**, **Text msgs in SIM**, **Multimedia msgs** and **E-mail**.

Voice mail

To set up your voice mailbox (Steps 1-3):

1. Press  > **Messages** > **Settings** > **Voice mail**.
2. Enter the **Voice mail** number.
3. Press **Save**.



Entertainment


Your phone provides various entertaining features: Games that include default games and Java games and Composer that allows you to create your personal music.

Games

Default games

Your phone has a number of pre-installed games.

To play a game (Steps 1-3):

1. Press  > **Entertainment** > **Games** > **Default games**.
2. Scroll to the game you would like to play.
3. Press **Select** > **Options** > **New**.

Options for a game include:

- **New:** Select to start a new game.
- **Level:** Choose the game difficulty.
- **Top score:** See the best score record.
- **Instructions:** Information about how to play a game.


Java Games

Your phone supports Java. With this feature, you can run Java-compatible applications such as downloaded games. You can create folders to manage the game that you have downloaded from the network.

Composer

Your phone features a composer that allows you to create your own personal music.


To create sounds (Steps 1-4):

1. Press  > **Entertainment** > **Composer**.
2. Scroll **▲/▼** to a desired sound file.
3. Press **Options** > **Edit** and select from **Main track**, **Sub track 1/Sub track 2/Sub track 3**.
4. Press **Options** to **Play** the music, set **Tempo**, **Instruments**, or press **Save**.




Contacts

The Contacts menu is where you record names, phone numbers and other personal details. There are two storage areas: SIM card and phone memory. Contacts saved in the phone memory allow you to store more information (**E-mail**, **Web page**, **Street**, **Postal code**, **City** and **Country**). The space available for these on the SIM card may vary according to the manufacturer.

To access phonebook lists, press  > **Contacts** > **View contacts**. Alternatively, press ▼ from the idle screen.

Create/View Contacts/SIM contact or PhoneBook

To create a SIM/Phone contact (Steps 1-4):

1. Press  > **Contacts** > **View contacts** > **SIM contact** or **PhoneBook**.
2. Select **Add contact**.
3. Enter details.
4. Press **Save**.

Options for new SIM card entry include:

- **Name:** Enter the contact's name.
- **Home:** Enter the contact's home number.
- **Location:** Select where to save the entry: **SIM**, **Protected SIM**.
- **Position in SIM:** The phone will assign a number to the contact automatically; or you can enter one yourself.



To switch between SIM contacts and Phonebook contacts, press



> **Contacts** > **Advanced** > **Select address book**.

Options for new phone contact entry include the following:

- **First name/Last name:**
- **Mobile/Home/Work/Fax** numbers
- **E-mail/Webpage**

- **Picture/Ringtone/Voice command**
- **Groups**
- **Postal code/State/Province/City/Street/Country**
- **Additional info**

Make sure you provide at least a phone number so that you can create a contact. Not all of the fields require information.


Options for View contacts include:

- **View:** View the contact's detailed information.
- **Send message:** Send a **Text message** or **Multimedia message** to the selected contact.
- **Call:** Call the selected contact.
- **Delete:** Delete the contact.
- **Default number:** The user can choose which phone number is used to default number such as mobile, Home, work or Fax.
- **Send contact:** Send the contact's information via **Bluetooth**.
- **Copy contact:** Select to copy the contact to phone/SIM.
- **Move contact:** Move the contact to phone/SIM.
- **Add picture:** Assign a picture for contacts.
- **Select multiple:** Select to add multiple contacts, individually or as a group, to **Move to phone/SIM**, **Copy to phone/SIM**, **Delete**, and **Send contact**.

View groups

This feature allows you to manage your contacts by assigning images and/or ringtones to a group of contacts and sending messages to the group.

To view group contacts (Steps 1-3):

1. Press  > **Contacts** > **View groups**.
2. Scroll ▲/▼ to a desired group.
3. Press **Options** > **View**.


Options for View groups include:

- **View:** Display the group members.
- **Set ringtone:** Select a ringtone that will sound when a member of the group calls.
- **Rename:** Rename the group.
- **Remove entries:** Remove the selected contact from the group.
- **Add picture:** Add a picture to the group.
- **Send SMS:** Send an SMS to members of the group.

Special numbers

This feature allows you to keep a list of useful numbers such as **My numbers**, **Service numbers**, **Voice mail** and **Emergency** numbers.


To enter a special number (Steps 1-5):

1. Press  > **Contacts** > **Special numbers** > **My numbers/Service numbers/Voice mail** or **Emergency**.
2. Select <**Empty**>.
3. Press **Options** > **Edit**.
4. Enter details.
5. Press **Save**.

Options for **My numbers** include **View**, **Edit** and **Delete**.

Quick call

You can edit a list of quick calls (Steps 1-5):

1. Press  > **Contacts** > **Quick call**.
2. Scroll to a desired image.
3. Press **Add** to go to the **Contacts** list.
4. Select a contact.
5. Press **Done**.

Advanced


This menu provides a list of options so that you can view and edit your contacts.

Options for the **Advanced** menu include:

- **Select address book:** Switch between contacts recorded on the **SIM card** and **Phonebook**.
- **Sort names:** Find a contact by searching for his/her **First name** or **Last name** or **Position**.
- **Picture in contacts:** Turn the display of the caller's ID on/off.
- **Copy to SIM:** Copy all the contacts to SIM card.
- **Copy to phone:** Copy all the contacts to phone memory.
- **Move to SIM:** Move all the contacts to SIM card.
- **Move to phone:** Move all the contacts to phone memory.
- **Delete all entries:** Delete all contacts.

Memory status

This feature allows you to check your phone memory space.

To check Memory status, press  > **Contacts** > **Memory status**. You may see the following details: **SIM**, **Protected SIM** and **Phone**.



My player

Your phone allows you to listen to the music from the network, save the music files, edit the **Playlist** and play the music. Your phone will automatically stop playing the music when there is an incoming call. The supported music format includes MP3, AAC and AAC+.

FM Radio

You can listen to FM Radio on your phone. You can locate a channel by setting the frequency or set the channel ID, name and frequency for easy selection later.

To turn **FM Radio On/Off** (Steps 1-2):

1. Press  > **My player** > **FM Radio** > **Options** > **Switch On/Switch Off**.
2. Press **Select** to turn **FM Radio On/Off**.





This feature can be turned on only when the headset is plugged into the phone's headset connector.

Options for FM Radio include:

- **Switch On/Switch Off:** Turn FM Radio on/off.
- **LoudSpeaker:** Turn the loud speaker on/off.
- **Volume:** Press ◀▶ key to decrease/increase the volume.
- **Set Frequency:** Set the frequency by using the keypad keys.
- **Save Channel:** Enter **Channel ID** (from Ch0-Ch9), **Channel Name** and **Frequency**. Press and hold alphanumeric key to launch the channel ID.
- **Erase Channel:** Enter the **Channel ID** to erase the channel.
- **Autoswitchoff radio:** Select **AutoSwitchOff** on/off. When on, you must define the **Linger time**.
- **Display RDS:** RDS stands for Radio Data System. You can turn **Display RDS** on/off.
- **Backlight Mode:** Set the **Backlight Mode** to be **Automatic** or **On**.

Tracks

You can play the downloaded music from Phone memory or Memory card.
For example, to play tracks from a memory card (Steps 1-3):

1. Press  > **Music** > **Tracks** > **Memory card**.
2. Scroll ▲/▼ to the desired track.
3. Press **Options** > **Play** or .

Options for the tracks list screen include:

- **Play**: Play the selected track.
- **Play mode**: Set the mode to be **Off**, **Repeat**, **Shuffle** or **Shuffle & repeat**.
- **Add to playlist**: Add the selected track to the **Playlist**.
- **Details**: Show the detailed information of the selected track: **Name**, **Size**, **Time**, **Type** and **Duration**.
- **Delete**: Delete the selected track.

Last played

You can access this feature to see a list of songs that you previously played. The song list is arranged chronologically.



Options for the Last played tracks include:

- **Play**: Play the selected track.
- **Play mode**: Set the mode to be **Off**, **Repeat**, **Shuffle** or **Shuffle & repeat**.
- **Add to playlist**: Add the selected track to the **Playlist**.
- **Delete**: Delete the selected track.


Playlists

With Playlists, you can edit your favourite song list.

To add a playlist (Steps 1-3):

1. Press  > **My player** > **Playlists**.
2. Select **<New playlist>**.
3. Press **Add** or .

To edit the Playlists (Steps 1-3):

1. Press  > **Music** > **Playlists**.
2. Select a **Playlist** and press **Options**.
3. Scroll to a desired option and press **Select**.



Options for **Playlists** include:

- **Open**: Open the selected playlist.
- **Play**: Play the tracks in the selected playlist.
- **Delete**: Delete the selected playlist.
- **Rename**: Rename the selected playlist.
- **Help**: Help information about playlists.

Voice memo

This function allows you to record a voice clip (of up to 36 seconds) using your phone's microphone. You can send the recorded voice clip as an MMS message attachment.


To record a voice clip (Steps 1-5):

1. Press  > **My player** > **Voice memo**.
2. Press **Record** or  to start recording.
3. Press **Stop/Pause** to cease/hold the recording.
4. When you press **Stop**, the recorded voice is saved.
5. Select **Play** to hear the recorded voice or **Back** to return.


Background MP3

This feature allows you to define MP3 data source and customise font colour.

To select memory source (Step 1-3) :

1. Press  > **My player** > **Background MP3** > **Data**.
2. Scroll ▲/▼ to select data source from **Auto**, **Memory card**, **Phone memory**, and **Playlists**.
3. Press **Select** to confirm.

To customise the phone's font colour (Steps 1-3) :

1. Press  > **My player** > **Background MP3** > **Font colour**.
2. Scroll ▲/▼ to select font colour from **Dark green**, **Dark cyan**, **Dark blue**, **Dark magenta**, **Grey** and **White**.
3. Press **Select** to confirm.




My data

My data allows you to manage the files in your phone by separating them into different folders. In addition you can check the **Phone memory** or **Memory card** to see the memory capacity of your phone.

Managing files

Generally, **My data** in the **Phone memory** are separated into four folders: **Photos**, **Pictures**, **Videos**, **Sounds** and **Others**.

For example, to create a new folder under **My data** in **Phone memory** (Steps 1-5):


1. Press  > **My data**.
2. Scroll ◀/▶ to select the **Phone memory**.
3. Scroll ▲/▼ to select a folder and press **Select**.
4. Select **New Folder** and enter a name for the folder.
5. Press **Ok**.

Options for Folder list include:

- **New folder**: Create a new folder.
- **Change view**: Select the folder display type: **List view** or **Grid view**.


Phone memory

To check **Phone memory** (Steps 1-4):

1. Press  > **My data**.
2. Scroll ◀/▶ to select **Phone memory**.
3. Scroll ▲/▼ to the **Memory status**.
4. The displayed information includes **Free memory**, **Used** and **Total size**.

Memory card

To see all the files saved in the **Memory card** (Steps 1-3):

1. Press  > **My data**.
2. Scroll ◀/▶ to select **Memory card**.
3. Scroll ▲/▼ through the files that are saved in external cards.








Calls

Features under the Calls menu are mostly operator and/or subscription dependent and require either a PIN2 code or a phone code. For more information about PIN codes, refer to *"Security" on page 36*.

Call history

Call history keeps a record of your dialled, received and missed calls.

To see a call history (Steps 1-3):

1. Press  > **Calls**.
2. Scroll /  to switch between four **Call history** lists: **All calls**, **Missed calls**, **Answered calls** and **Outgoing calls**.
3. Scroll /  to select a call history.

Options for a known number include:

- **Delete:** Delete the record from the call history.
- **Call:** Call the selected number.
- **Delete all:** Delete all the numbers from the call history list.
- **Text message:** Send a text message to the selected number.
- **Multimedia message:** Send a multimedia message to the selected number.
- **Edit:** Edit the entry's details. For more information, refer to *"Contacts" on page 71*.


Options for an unknown number include:

- **Save number:** Save the number in the phonebook.
- **Delete:** Delete the selected number.
- **Call:** Call the selected number.
- **Delete all:** Delete all the numbers from the call history list.
- **Text message:** Send a text message to the selected number.
- **Multimedia message:** Send a multimedia message to the selected number.

Clear history

This menu allows you to clear a call history record. You can select **Clear outgoing**, **Clear answered**, **Clear missed**, or **Clear all**.

To clear a call history (Steps 1-3):


1. Press  > **Calls** > **Clear history**.
2. Scroll ▲/▼ to a desired option.
3. Press **Select** > **Yes**.

Call settings

Call settings include the following **Call options**: **Auto Answer**, **Any key answer**, **Second reminder**, **Call services**, **Call divert**, **Bar calls**, **Fixed dialling** and **Closed user group**.


Auto Answer

To turn **Auto Answer** on/off (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Auto Answer**.
2. Press **Change** to turn the **Auto Answer On/Off**.


Any key answer

To turn **Any key answer** on/off (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Any key answer**.
2. Press **Change** to turn the **Any key answer On/Off**.

Seconds reminder


To turn **Seconds Reminder** on/off (Steps 1-4):

1. Press  > **Calls** > **Call settings** > **Seconds Reminder**.
2. Press **Change** and ◀▶ key to turn the **Auto Answer On/Off**.
3. When the feature is set to **On**, you need to specify the **Start time** by using the keypad keys.
4. Press **Save**.

Call Services


Call services provides the following settings: **Time & cost**, **Call waiting**, **Hide ID**, **Caller ID** and **Cost Settings**.

To check/reset **Last call/Total incoming/Total outgoing/Cost left/All voice calls** (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Call services** > **Time & cost** > **Call duration/Total incoming/Total outgoing/Cost left/All voice calls**
2. Press **Ok** to return to the previous screen or **Reset** to clean the history record.

Call Waiting


To **Activate/Cancel Call waiting** (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Call services** > **Call waiting**
2. Scroll ▲/▼ to select **Activate/Cancel** and press **Select**.

To check status, press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Call waiting** > **Check status**.


Caller ID

To **Hide ID** (Steps 1-2):


1. Press  > **Calls** > **Call settings** > **Call services** > **Hide ID**.
2. Press **Yes** to **Hide ID for all calls** or **Hide ID for next call**.

To check Caller ID status, press  > **Calls** > **Call settings** > **Call services** > **Caller ID**.


Cost Settings

To set **Currency**, press  > **Calls** > **Call settings** > **Call services** > **Cost Settings** > **Currency**.


To set **Cost/unit** (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Call services** > **Cost Settings** > **Cost/unit**.
2. Enter the rate **Per unit** and **Per minute**.

To set **Maximum cost** (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Call services** > **Cost Settings** > **Maximum cost**.
2. Press **Edit** to turn **Display credit On/Off** and specify the **Maximum cost** by using the keypad keys.

To set **Auto display** (Steps 1-2):


1. Press  > **Calls** > **Call settings** > **Call services** > **Cost Settings** > **Auto display**.
2. Set the Auto display to be **Off** or show **Cost/Duration/Both**.


Call divert

You can select call diversion when you are unable to pick up a phone call in the following conditions:

- **Divert for all calls** (diverts all incoming calls to the number you assigned).
- **All un-answer** (diverts an incoming call when it is not answered)
- **Not reachable** (diverts all incoming calls to the number you assigned when the phone is turned off or out of signal range).
- **When no reply** (diverts an incoming call when it is not answered for a period of time determined by your network).
- **Busy** (diverts the incoming call when the line is busy).
- **Divert all data calls active** (diverts the incoming call when the phone is receiving data).

To set **Call divert** (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Call divert**.
2. Select **Call divert** condition: **Divert for all calls**, **All un-answer**, **Not reachable**, **When no reply**, **Busy**, **Divert all data calls active** or **Cancel all**.


To check **Call divert** status, press  > **Calls** > **Call settings** > **Call divert** > **Check status**.

Bar calls

This feature allows you to bar different types of calls made or received on your phone. Ask your service provider for a 4-digit password if you want to activate the feature. There are four types of calls that can be barred

- **All outgoing** (except emergency calls)
- **Outgoing international** (only calls within the home country can be dialled)
- **Only here & home** (international calls to your home network are allowed, but all other international calls are barred.)
- **All incoming** (bars all incoming calls)
- **When roaming** (bars incoming calls when you are out of your home network range)

To set **Bar calls** (Steps 1-2):


1. Press  > **Calls** > **Call settings** > **Bar calls**.
2. Select a barred call type: **All outgoing**, **Outgoing international**, **Only here & home**, **All incoming**, **When roaming** and **Cancel all**.

To check Bar calls status, press  > **Calls** > **Call settings** > **Bar calls** > **Check status**.

Fixed dialling


Fixed dialling allows you to dial only certain predefined numbers.


To turn on Fixed dialling (Steps 1-3):


1. Press  > **Calls** > **Call settings** > **Fixed dialling**.
2. Enter PIN2 code. An activating/deactivating message will be displayed on the screen.
3. Press **Ok**.


Closed user group

Closed user group is a network service that specifies the group of people whom you can call and who can call you. For more information, contact your network operator or service provider.

To turn **Closed user group On/Off**, press  > **Calls** > **Call settings** > **Closed user group** > **Closed user group**.

To select a group, press  > **Calls** > **Call settings** > **Closed user group** > **Select group**.

To turn **Outgo. access On/Off**, press  > **Calls** > **Call settings** > **Closed user group** > **Outgo. access**.

To turn **Preferred group On/Off**, press  > **Calls** > **Call settings** > **Closed user group** > **Preferred group**.

INDEX

A

- Alarm 55
- Alert type 42
- Any key answer 43, 81
- Appointments 55
- Auto Answer 43, 81
- Auto keypad lock 39

B

- Background MP3 78
- Backlight duration 41
- Backlight level 41
- Bar calls 46, 84
- Battery 11
- Bluetooth 49
- Browser 49, 52

C

- Calculator 57
- Call divert 45, 83
- Call history 80
- Call options 43
- Call Services 44, 82
- Call settings 81
- Call Waiting 44, 82
- Caller ID 44, 82
- Camera 59
- Camera mode 59
- Cell info 68
- Clear history 81
- Closed user group 47, 85
- Composer 70
- Connections 49
- Connectivity 43
- Contacts 71
- Cost Settings 45, 82
- Countdown 58

D

- Default settings 40
- Default storage 39

E

- E-mail 66
- Entertainment 70

F

- Fixed dialling 46, 84
- Flight mode 40
- FM Radio 75

G

- Games 70
- Greeting 42

H

- Holding a Call 30

K

- Key sound 43

L

- Language 35
- Last played 76

M

- Main menu 25
- Making a Conference Call 31
- Making an Emergency Call 29
- Making/Ending a Call 29
- Making/Receiving a Second Call 31
- Memory card 51, 79
- Memory slot 17
- Memory status 69, 74

Message settings 47
Messages 62
MP3 keys 21
Multimedia Messages 65
My Data 79
My player 75

N

Network 47
Notes 56

P

Personal Identification Numbers
(PINs) 17
Phone Lock 38
Phone memory 79
PIN 37
Playlists 77
Preferred Networks 47
Profiles 40

Q

Quick call 38, 73
Quick keys 23

R

Receiving a Third Call 31
Receiving/Rejecting a Call 30
Ring volume 42
Ringtones 42

S

Scheduler 54
Search mode 47
Second reminder 43, 81
Security 36
Select band 48

Select line 48
Shortcuts 39
Shutter sound 43
SIM Card 15
Soft Keys 24
SOS Soft Key 6
Special numbers 73
STK (SIM Tool Kit) 58

T

T9 Language 32
Tasks 56
Templates 68
Text Entry 32
Text Messages 63
The 4-Way Keys 22
Themes 41
Time & date 35
Tools 54
Tracks 76

U

Unit converter 57
USB features 50

V

Video mode 60
View groups 72
Voice command 38
Voice control 38
Voice mail 69
Voice memo 77

W

Wallpaper 41
WAP setup 52