



CDMA
C2205
HUAWEI Mobile Phone

USER MANUAL

All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei.

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, express or implied.

Safety Precautions

	Do not switch on the phone when phone use is prohibited.
	Do not use the phone while driving.
	Switch off the phone near medical apparatus.
	Switch off the phone in an aircraft.
	Switch off the phone near high-precision electronic devices.
	Do not attempt to disassemble the phone or its accessories.
	Do not place the phone or its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near the phone.
	Do not put the phone in a high-temperature place or use it in a place with flammable gas such as a gas station.
	Do not allow children to use the phone without guidance.
	Use approved batteries and chargers only to avoid explosion.
	Observe the laws or regulations on phone use.


Table of Contents

Getting to Know Your Phone	1
Your Phone	1
Keys and Functions	2
Screen Icons.....	3
Interfaces.....	4
Getting Started	5
Installing the Battery	5
Removing the Battery	5
Installing and Removing the UIM card	5
Charging the Battery	6
Powering On/Off the Phone	6
Changing the Language.....	6
Using the Function Menu	6
Voice Services	8
Making a Call.....	8
Receiving a Call.....	8
Options during a Call	8
Text Entry	10
Text Input Modes	10
Entering English	10
Entering Symbols.....	11
Menu Tree	12
Writing and Sending Messages	13
Phone Book	14
Adding a New Contact	14
Searching a Contact	14

Alarm Clock	15
Activating the Alarm Clock.....	15
Deactivating the Alarm Clock	15
Security	16
Enabling/Disabling the Phone Lock.....	16
Changing the Phone Lock Code.....	16
Setting the PIN Lock	16
Changing the PIN Code	17
Menu Commands	18
Warnings and Precautions	27

Getting to Know Your Phone

Your Phone

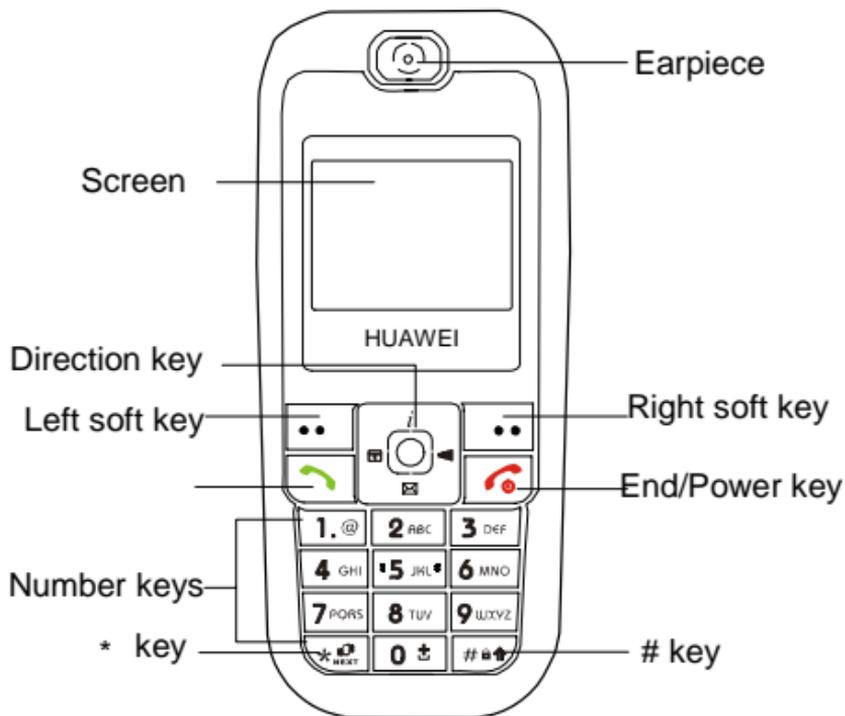

Keys and Functions

Key	Function
	<ul style="list-style-type: none">● Powers on or off the phone.● Ends a call.● Returns to the home screen.
	<ul style="list-style-type: none">● Makes a call.● Views dialed calls.
	<ul style="list-style-type: none">● Displays the menu.● Selects the highlighted menu option.
	Returns to the previous menu.
	<ul style="list-style-type: none">● : Displays the Brew Lite menu; increases the volume during a call.● : Displays the Write Message menu (by pressing it); displays the Messages menu (by pressing and holding it for two seconds); decreases the volume during a call.● : Displays the Scheduler menu; decreases the volume during a call.● : Displays the Ringer menu; increases the volume during a call.
	<ul style="list-style-type: none">● Enters numbers and characters.
...	<ul style="list-style-type: none">● Selects a menu item.
	

Key	Function
	<ul style="list-style-type: none"> ● Enters the * symbol. ● You can switch between the conference mode and the current mode (by pressing and holding it for two seconds). ● If the phone is locked, press  +  to unlock.
	<ul style="list-style-type: none"> ● Locks the keypad in the standby mode (by pressing and holding it for two seconds). ● Enters the # symbol. ● When editing texts, press it to change input modes.

Screen Icons

Icon	Meaning
	Indicates the signal strength. The larger the number of bars is, the stronger the signal is.
	Indicates that there is an incoming call, or a call is being set up, or the phone is in conversation.
	Indicates that the keypad is locked.
	Indicates that a new message is received or the inbox is full.
	Indicates that the silent mode is activated.
	Indicates that an alarm clock is set.
	Indicates that the alert type is set to vibration.

Icon	Meaning
------	---------



Indicates the battery power level. The larger the number of bars is, the more power of the battery is left.

Interfaces


Your phone provides two interfaces.

Interface	Function
Charger interface/ Headset jack	Located at the bottom of your phone. You can connect your travel charger or headset to this interface.

Getting Started

Installing the Battery

If your phone is powered on, press and hold  for two seconds to power off the phone.

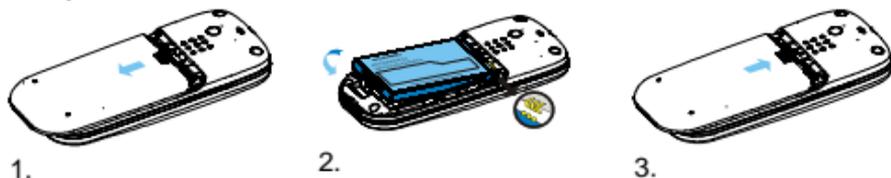


Removing the Battery

If the phone is powered on, press and hold  for two seconds to power off the phone.



Installing and Removing the UIM card

Power off your phone and remove the battery. The UIM card and the T-SIM card are the same, that is, subscriber identity module.

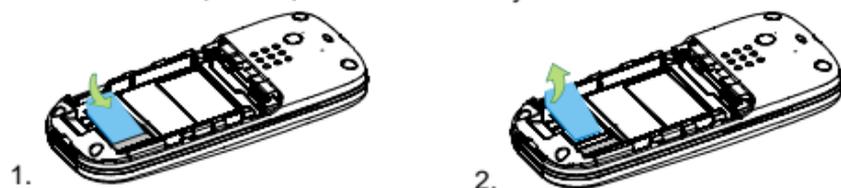

Charging the Battery

1. Connect the travel charger to the charger interface at the bottom of your phone.
2. Connect the charger to an AC power socket.
During the charging, the  icon on the upper right corner of the screen is in an animated status.
3. Wait until the phone is fully charged.
4. Disconnect the charger from the AC power socket.
5. Press the gray buttons on both sides of the charger connector to disconnect it from the phone.



Caution:

- Do not use the damaged battery or charger.
- Before using the travel charger, ensure that the battery is installed in your phone.

Powering On/Off the Phone

Press and hold  for two seconds to power on (or off) the phone.

Changing the Language

1. In the the standby mode, press  (**Menu**) and select **Settings > Phone Settings > Language**.
2. Press  to choose **English** or **हिन्दी**.
3. Press  (**Select**) to decide the language for display.

Using the Function Menu

1. In the the standby mode, press  (**Menu**).
2. Press the arrow key to select the desired function menu.
3. Press  (**Select**) to display the selected menu.
4. Display the submenu in either of the ways:

- Press  to select a submenu and then press  (**Select**) to display the selected submenu.
 - Press the number key corresponding to the serial number of a submenu to display it.
5. To return to the previous menu or quit the function menu, press  (**Back**) to return to the previous screen or quit the function menu. To return to the standby mode, press .

Voice Services

Making a Call

1. In the standby mode, enter the phone number.

Note:

- When the phone is locked, enter the lock code. You can dial emergency numbers only when the phone is locked.
 - If the PIN lock is enabled, type the PIN code.
2. Press  to dial this number.
 3. To end the call, press .

Receiving a Call

When there is an incoming call, you can press  or  (**Answer**) to answer it, or press  or  (by pressing and holding it for two seconds) to reject or end it.

- If the any-key answer function is enabled, you can press any key except  and  to answer an incoming call.
- If the headset auto answer function is enabled and the headset is connected to the phone, the incoming call is answered automatically.

Note:

You can set any-key answer function in the **Call Settings** menu, set headset auto answer function in the **Profiles > Headset > Edit**.

Options during a Call

During a call, you can press  or  to increase volume and press  or  to decrease volume.

Press  (**Options**), you can choose one of the following options:

- **Save Number:** Input a new number and save it in phonebook.
- **Phone Book:** Add the number into phonebook.
- **Messages:** Enter **Messages** menu.
- **Call Memo:** Records the information of a call.
- **Third Party Call:** This function depends on network. For more information, please consult your service provider.
- **Voice Privacy:** This function depends on network. For more information, please consult your service provider.

Text Entry

Text Input Modes

You can enter English letters/characters and numbers on your phone.

While entering text, you can change the input mode by pressing . The following table lists the input modes and their indicators.

Indicator	Text Input Mode	Indicator	Text Input Mode
eZiEn	Smart English	ABC	English upper case
Abc	Alphabetical English	abc	English lower case
123	Number input mode		

Note:

- Press  (**Clear**) once to delete the letter on the left of the cursor. By pressing and holding  (**Clear**) for about two seconds, you can delete all letters at a time.
- If you press any of the number keys or  in any of the text input modes, the system displays the maximum number of characters allowed to enter for the current input mode.

Entering English

Alphabetical Text Input

Alphabetical text input allows you to enter uppercase ("ABC") or lowercase ("abc") English letters. You can press a number key labeled with required letters once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

If the letter you want to enter is on the same key as the previous one, you can enter the latter only after the cursor appears again or after you move the cursor to the next space.

In the "Abc" input mode, only the first letter of a sentence is capitalized. A sentence may end with any of the following punctuations: period (.), question mark (?), exclamation mark (!), ellipsis (...), line feed character.

In the "ABC" or "abc" input mode, you can press  once to enter a space, twice to enter "0", and three times to move the cursor to the next line.

You can press  repeatedly to choose and enter the commonly used punctuations.

Smart English Input

The "eZiEn" input mode recognizes commonly used words for the numeric sequence of key presses and inserts the word into your message. It requires only one key press per letter of the word that you are spelling. If more than one word shares the same numeric sequence, "eZiEn" provides the most commonly used words. Among the possible words, you can press  to select the desired word.

Entering Symbols

In any input mode, press  to display a symbol list. You can press  to scroll to the desired symbol. Then press the number key labeled with the symbol to enter this symbol.

Menu Tree

Phone Book

- 1 Search
- 2 Add New
- 3 Groups
- 4 Speed Dial
- 5 Copy All
- 6 Delete All
- 7 My Phone No.
- 8 Memory Info

Messages

- 1 Write Message
- 2 Inbox
- 3 Outbox
- 4 Draft
- 5 Message Settings
- 6 Voice Mail
- 7 Delete All

Call History

- 1 Missed Calls
- 2 Received Calls
- 3 Dialed Calls
- 4 Call Duration
- 5 Call Memo
- 6 Delete All

Fun&Utility

- 1 Alarm
- 2 Scheduler
- 3 Calculator
- 4 Stopwatch
- 5 World Clock
- 6 Gallery
- 7 Line Game
- 8 Smash Game

Profiles

- 1 General
- 2 Meeting
- 3 Silent
- 4 Outdoor
- 5 Headset
- 6 Carkit

Settings

- 1 Display
- 2 Call Settings
- 3 Phone Settings
- 4 Security

Brew

Ringtones Categories

Writing and Sending Messages

1. Choose **Menu > Messages > Write Message**.
2. Write the message and press  (**Options**) to choose one of the following options:
 - **Send**: To send the message without saving.
 - **Send&Save**: To send the message and save it.
If the message is sent successfully, it is saved in the outbox, or it is saved in the draft.
 - **Save**: To save the message to the draft.
 - **Insert Templates**: To edit the message based on a template.
 - **Insert Phone Number**: To insert the phone number of a contact in the phonebook.
3. While entering the number(s) of the receiver(s), you can select **Search > Search Phone Book** to select the number of one contact from the phonebook, or select **Search > Search Groups** to select the numbers of a group of contacts.
4. Press  (**Send**) to send the message.

Phone Book

Adding a New Contact

The new contact will be saved to the memory in use.

1. Choose **Menu > Phone Book > Add New**.
2. Enter the name, and press  (**OK**).
3. Enter the number:
 - If the memory in use is the phone, you can enter the number in **General Number, Home Number, Office Number, and Memo**. (At least one number field should be set.)
 - If the memory in use is the UIM card, you can enter the information in **General Number**.
4. Press  (**OK**).
5. Press  (**Save**) to save the information.

Searching a Contact

1. Choose **Menu > Phone Book > Search**.
2. Enter the name you want to search, and press  (**OK**).
3. Press  (**View**) to view the contact.
4. Press  (**Options**) for one of the following operations:
 - Choose **Edit** to modify or view the entry.
 - If the contact is saved in the UIM card, choose **Copy To Phone** to copy it to the phone. If the contact is saved in phone, choose **Copy To UIM** to copy it to the UIM card.
 - Choose **Delete** to delete this contact.
 - Choose **Send Message** to write a message. After selecting the number, press  (**OK**), and then press  (**Options**) and choose  (**Send**) to send this message.

Alarm Clock

After the alarm clock is activated, the phone rings or vibrates at the specified time when the phone is powered on. You can set five alarm clocks at most.

Activating the Alarm Clock

1. Press  (**Menu**) and select **Fun&Utility > Alarm**.
2. Press  to select an alarm clock.
3. Select **Alarm On** to activate the alarm clock.
4. Set the time, and press  (**OK**).
5. Select the alerting mode:
 - If you select **Once**, the alarm clock alerts once.
 - If you select **Everyday**, the alarm clock alerts once a day.
 - If you select **Custom**, the alarm clock alerts at a specified time.

Note:

- When the alarm clock alerts, press  (**Stop**) to stop it. Alternatively, press  (**Snooze**) to delay it for five minutes, after which the alarm alerts again.
- If nothing is done to the alarm clock when it alerts, it stops temporarily and alerts again five minutes later. It alerts for five times before it stops thoroughly.

Deactivating the Alarm Clock

1. Press  (**Menu**) and select **Fun&Utility > Alarm**.
2. Press  to select an alarm clock.
3. Select **Alarm Off** to deactivate the alarm clock.

Note:

You can select **Cancel All** to deactivate all alarm clocks.

Security

Enabling/Disabling the Phone Lock

1. Press  (**Menu**) and select **Settings > Security > Phone Lock**.
2. Enter the correct phone lock code and press  (**OK**).
3. Select **On/Off** to enable/disable the phone lock.

Changing the Phone Lock Code

The default phone lock code is "0000". You can change it into any numeric string of 4 to 8 digits. Do remember your phone lock code. If you forget it, contact your local dealer.

1. Press  (**Menu**) and select **Settings > Security > Phone Lock**.
2. Enter the correct phone lock code and press  (**OK**).
3. Select **Change Code**.
4. Enter a new phone lock code and press  (**OK**).
5. Re-enter the new phone lock code and press  (**OK**).

Setting the PIN Lock

PIN protects your UIM card from unauthorized use. The personal unlocking key (PUK) is used for changing the locked PIN. PIN and PUK are delivered with the UIM card.

Note:

- If you enter wrong PINs for three times (The upper limit is determined by the UIM card),the phone prompts you to enter the correct PUK.
- If you enter wrong PUKs for 10 times, the UIM card becomes invalid. In this case, contact the service provider for a new card. If you forget the PUK, contact the service provider for help.

To set the PIN lock, do as follows:

1. Press **[..]** (**Menu**) and select **Settings > Security > PIN Lock**.
2. Enter the correct PIN and press **[..]** (**OK**).
3. Select **On/Off** to enable/disable the PIN lock.

Changing the PIN Code

If your PIN is locked, you can change your PIN by entering the correct PUK. If you enter wrong PUKs for 10 times, the UIM card becomes invalid permanently. Contact the service provider for a new card.

1. Enter the correct PUK code and press **[..]** (**OK**).
2. Enter a new PIN and press **[..]** (**OK**).
3. Re-enter the PIN and press **[..]** (**OK**).

Menu Commands



Phone Book

Search	Finds a phone number from the phonebook.
Add New	Adds new contacts to the phonebook. Each contact may have three numbers. The phone memory can save up to 500 contacts, while the capacity of the UIM card varies.
Groups	Views, renames, edits and deletes a group, or adds members to a group.
Speed Dial	Makes a call by pressing only one number key.
Copy All	If the UIM card is available, you can copy or move all contacts from the phone to the UIM card or from the UIM card to the phone.
Delete All	Deletes all the contacts in the phonebook, before you delete all the contacts, you should input correct phone code. If the UIM card is available, you can choose to delete all the contacts in the phone or the UIM card.
My Phone No.	Sets your own phone number.

Memory Info	<p>Sets the memory in use (either the phone or the UIM card), if the UIM card is available.</p> <p>Checks the remaining space in the phone and the UIM card.</p>
--------------------	--



Messages

Write Message	<p>Writes and sends a message.</p> <p>A message can contain up to 160 English letters.</p>
Inbox	<p>Stores the received messages and delivery ack.</p> <p>You can view, reply, delete, and forward the messages in the Inbox. You can save the numbers which sent the messages, or make a call for them.</p>
Outbox	<p>Stores the messages successfully sent, if the auto save function is activated.</p> <p>You can resend, edit, delete, and forward the messages in the outbox.</p>
Draft	<p>Stores draft messages and the messages failed to be sent.</p> <p>You can edit, send, and delete the messages in the draft.</p>

Message Settings

Group Settings

Enables you to set up to 10 SMS groups, each of which can contain up to 10 contacts.

Templates

Edits up to 10 predefined phrases.

Auto Save

Saves the messages successfully sent to the outbox, and saves the messages failed to be sent to the draft.

Auto Delete

If enabled, the earliest messages are automatically deleted to spare room for new messages. If disabled, the phone cannot receive new messages if the memory is full.

Priority

Sets the priority of messages sent from the SMS center. From the lowest to the highest, the priorities are normal, urgent, and emergency.

The message priority function is network dependent.

Delivery Ack

Requires a message delivery report from the SMSC.

Memory In Use

Sets the memory in use (either the phone or the UIM card), if the UIM card is available.

Message Settings	<p>Deferred Delivery</p> <p>Sets the time for deferring the message delivery from the SMS center to the recipient.</p> <p>Four options are available: Immediate, After 12 Hours, After 1 Days, and After 3 Days.</p> <p>Validity Period</p> <p>Sets the validity period of messages, the time during which messages failed to send are saved at SMS center before deleting.</p> <p>Four options are available: Default, After 12 Hours, After 1 Days, and After 3 Days.</p> <p>Memory Status</p> <p>Views the status of memory for messages (both the memory used and the total memory).</p> <p>The phone can save up to 100 messages and the capacity of the UIM card varies.</p>
Voice Mail	<p>Sends and receives voice mails.</p> <p>You can set the voice mail number, call voice mail center, and clear voice mail notifications.</p>
Delete All	<p>Deletes messages.</p>
<div data-bbox="70 1025 138 1093" data-label="Image"> </div> Call History	
Missed Calls	<p>Views, saves and deletes call records (up to 20), or sends messages to the corresponding numbers.</p>
Received Calls	
Dialed Calls	

Call Duration	Views the duration of the recent calls, or clears the call counter.
Call Memo	Records the information of a call. A memo can contain up to 80 English letters.
Delete All	Deletes all the missed calls, answered calls, or dialed calls.
 Fun&Utility	
Alarm	<p>If activated, alerts according to the specified mode at the specified time.</p> <p>The phone must be powered on. You can set five alarm clocks at most.</p>
Scheduler	Stores your appointments (up to 20), so that you're the phone reminds you at the specified time.
Calculator	<p>Calculates arithmetic expressions.</p> <p>The calculator supports fractional arithmetic. You can press  to choose different algorithmic signs and press  to enter a decimal point. You can press  (Options) to choose operations such as add, subtract, multiply and divide.</p>
Stopwatch	Records the time as long as 9 hours 59 minutes 59 seconds and 99 milliseconds.
World Clock	Views the current time of the Beijing Time and other 31 major cities/areas around the world.

Gallery	<p>Musics: Saves music files downloaded from brew.</p> <p>Sys Info: Views the information about your phone space.</p>
Line Game	<p>Provides games for entertainment.</p> <p>For details, see Help in your phone.</p>
Smash Game	<p>Provides games for entertainment.</p> <p>For details, see Help in your phone.</p>



Profiles

General	Allows you to set the alerting mode and other sound/vibration-related features.
Meeting	The general, outdoor, headset, and carkit modes contain settings for the volume, vibration, ring, alarm clock, ring tone, SMS alert, key tone, and power on/off tone.
Silence	
Outdoor	
Headset	The headset mode also contains the settings for headset ring and headset auto answer.
Carkit	



Settings

Display**Backlight**

Sets the backlight of the LCD and the keypad.

Contrast

Sets the LCD contrast by pressing the navigation keys.

Data Format

Sets the date format to yyyy-mm-dd, dd-mm-yyyy or mm-dd-yyyy.

Time Format

Sets the time format to a 12-hour clock or a 24-hour clock.

Banner

Enables or disables the banner.

If you choose **On**, you can edit the banner.

Call Settings

Call Forwarding

Forwards all your incoming calls to another number or a voice mail connection.

Any-key Answer

Answers an incoming call by pressing any key except  and .

Minute Alert

If activated, notifies you of the call duration by giving an alert 10 seconds before the end of each minute.

Voice Privacy

Sets the privacy mode, including **Standard** and **Enhanced**.

Call Timer

Displays the duration of the current call.

ISD Code

Sets the ISD code.

Phone Settings

Language

Selects the language, including English.

Keyguard

Protects the keypad from accidental dialing.

S/W version

Views the software version.

Security**Restrict All Calls**

If enabled, restricts all incoming calls.

Phone Lock

If enabled, protects the phone from unauthorized use.

You can also change the default phone lock code (0000) into any numeric string of four to eight digits.

PIN Lock

If enabled, protects your UIM card from unauthorized use.

You can also change the PIN Lock code.

Restore Factory Settings

Restores the phone to the factory settings.

**Brew**

Consult your service provider for more information about this function. This function may involve extra charging.

Warnings and Precautions

Operating Environment

- The phone, battery, and charger are not water-resistant. Keep them dry. Protect the phone, battery and charger from water or vapor. Do not touch the phone with a wet hand. Otherwise, short-circuit and malfunction of the product or electric shock may occur.
- Do not use the phone in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit may occur.
- Do not turn on or off the phone when it is near your ears to avoid negative impact on your health.
- If you feel uncomfortable (such as falling sick or qualm) after playing games with your phone for a long time, please go to see a doctor immediately.
- When you use the phone in the hands-free mode, do not put it too close to your ears. Otherwise, your hearing may be hurt by the loud volume.
- On a thunder stormy day, do not use your phone outdoors or when it is being charged.
- The phone may interfere with nearby TV sets, radios and PCs.
- In accordance with international standards for radio frequency and radiation, use phone accessories approved by Huawei only.

Cleaning and Maintenance

- Before you clean or maintain the phone, turn off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuit of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charger. Otherwise, part damage or a fire can be caused. You can clean the phone and the charger with a piece of soft antistatic cloth that is a little wet.
- Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor.

- Keep the plug dry when you clean it, to prevent fire.
- If the phone or any of its fittings does not work, turn to the local authorized service center for help.

Environmental Protection

Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling. Do not dispose of exhausted battery or old phone in a dustbin or fire. Otherwise, explosion may occur.

Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- Use the battery approved by Huawei only. Otherwise, explosion may occur.
- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- Do not connect two poles of the battery with conductors such as cables, jewelries or any other metal material. Otherwise, the battery is short-circuited and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, overheat, fire, or explosion may occur.
- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then turn to an authorized maintenance engineer for help.
- If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes can be hurt. Wash with clean water and seek medical assistance immediately.
- If there is battery deformation, color change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheat, explosion, or fire may occur.

- When installing the battery on your phone, do not push the battery by force lest battery fluid leak out or the battery crack.
- Do not take out the battery when the phone is turned on.
- If you do not use the battery for a long time, store it in normal temperature after charging.

Charger

- Use the charger approved by Huawei only. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the cable at once. Otherwise, electric shock, short-circuit of the charger, or fire may occur.
- Keep the charger away from water (or other liquid) or containers containing water (or other liquid). Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.
- Do not use the charger in a dusty and damp environment. Keep the power cord away from any heating appliance.
- Ensure the plug of the charger is properly inserted into the power socket when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear the power cord.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.
- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise, overheating, fire and other malfunction may occur.

Certification Information (SAR)

THIS DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO FREQUENCY ELECTROMAGNETIC FIELD.

Your mobile phone is a low-power radio transmitter and receiver. When it is powered on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below the value. This is because the mobile phone is designed to use the minimum power required to reach the network.

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure.

The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body with an accessory that contains no metal part. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.940W/kg, and when properly worn on the body is 0.831W/kg.



Ver: V1.11 BOM: 31016561