

Make the most of now.

Vodafone 725 Mobile Phone
User Guide



Notice

Copyright © 2008 Huawei Technologies Co. Ltd.

All Rights Reserved

Your Vodafone 725 is made exclusively for Vodafone by Huawei Technologies.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co. Ltd.

Trademarks

VODAFONE, the Vodafone logos, Vodafone Radio DJ are trade marks of the Vodafone Group. Other product and company names mentioned herein may be trade marks of their respective owners.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements,

information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

Read the safety precautions carefully to ensure that you use wireless device in a correct and safe manner. For details, see the section "Warnings and Precautions".

Huawei Technologies Co. Ltd.

Branch Address:

Huawei Technologies Deutschland GmbH,
Am Seestern 24, Dusseldorf, Germany
Postal Code: 40547

Head Office Address:

Administration Building, Huawei Technologies
Co. Ltd., Bantian, Longgang District,
Shenzhen, P. R. China
Postal Code: 518129

Website: <http://www.huawei.com>

Safety Precautions



Read the Safety Information section of this user guide on page 53.



Do not use hand-held while driving.



For body-worn operation maintain a separation of 1.5 cm.



Small parts may cause a choking hazard.



This device may produce a loud sound.



Keep away from pacemakers and other personal medical devices.



Switch off when instructed in hospitals and medical facilities.



Switch off when instructed in aircrafts and airports.



Do not use while re-fuelling.



This device may produce a bright or flashing light.



Do not dispose of in a fire.



Avoid contact with magnetic media.



Avoid Extreme Temperatures



Avoid contact with liquid, keep dry.



Do not try and disassemble.



Do not rely on this device for emergency communications.



Switch off in explosive environments.



Only use approved accessories.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.915 W/kg*. As mobile devices offer a range of functions, they can be

used in other positions, such as on the body as described in this user guide**.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

* The tests are carried out in accordance with EN 50360:2001; EN 50361:2001.

** Please see page 53 about body worn operation.

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section "Warnings and Precautions".

Table of Contents

Table of Contents 1

Getting to Know Your Phone 1

Packing List	1
Your Phone	2

Getting Started 6

Loading the SIM Card	6
Unloading the SIM Card	7
Charging the Battery	7
Loading/Removing a Memory Card.....	8
Powering On/Off	9

Call Service 11

Making or Answering Calls.....	11
Operations During a Voice Call	12
Operations During a Video Call	13
Calls	14

Text Input 15

T9® Input Method	15
Traditional Input Method	15
"123" Numeric Input Method	16
Symbol Input Method	16
Input Different Languages	16

Contacts 17

Making Calls from the Contacts	17
Searching for a Contact.....	17
Viewing Contacts in Phone/SIM	17
Other Operations	17
Groups.....	18

Messaging 20

Messages.....	20
Email	22
Broadcast Inbox	25
Templates	25

Music 26

Music Library.....	26
Playlists	27
Vodafone Radio DJ	27
Music Store	27
My Wishlist.....	27
Radio DJ Settings	27

Organiser & Tools 28

Alarms	28
Calendar	28
Task	29
Memo	30
Synchronise	30
Calculator.....	31
Unit converter.....	31
Currency converter	32
Voice recorder.....	32
World Time.....	33
Stopwatch	33
Timer.....	33
Service dial number	33

My Files 34

Vodafone live! 35

Open homepage.....	35
Open new page.....	35
Bookmarks	35
Saved pages	36
History	36
Resume	36
Settings	36
Entertainment 37	
Games.....	37
Camera.....	37
Mobile TV	39
Connections 40	
USB	40
Bluetooth®	43
Settings 46	
Phone settings.....	46
Display settings	47
Message settings	48
Call settings.....	48
Video call	50
Contact settings.....	51
JAVA settings	51
Connectivity	51
Network	51
Security	51
DRM Setting.....	52
Warnings and Precautions 53	
RF Exposure	53

Distraction	56
Product Handling	56
Electrical safety	58
Interference.....	59
Explosive environments	60
Environmental Protection.....	60

Acronyms and Abbreviations 61

Appendix 62

Index 1

1 Getting to Know Your Phone

Your Vodafone 725 phone can operate in virtually all countries, automatically switching between WCDMA 2100 and GSM/GPRS 900/1800/1900 networks. This allows you to enjoy communication wherever you use your mobile phone.

Note The services supported by your phone should be also supported by the network from where you use the phone. For details, please contact your local Vodafone customer care centre. Note that you can also access information on Vodafone services at www.vodafone.com.

6 One headset


7 One USB data cable

Packing List

Your phone package box contains the following:

- 1** One Vodafone 725 mobile phone
- 2** One travel charger
- 3** One Li-ion battery
- 4** One user Guide
- 5** One Quick Start Guide


Your Phone

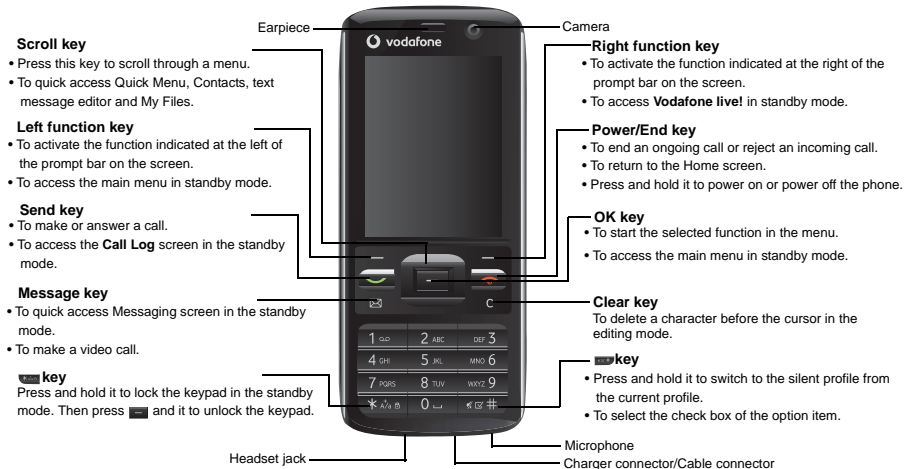


Back View



Side View

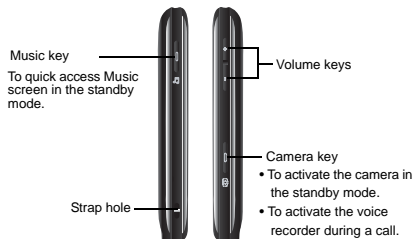

Home Screen

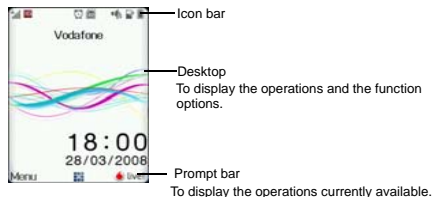
























◆ Icon bar

This area displays the phone status. The following table illustrates all the icons that may appear on this bar.

Icon	Description
	Indicates signal strength. The more bars that appear, the stronger the signal.
	The phone is currently in a GSM network.
	The phone is currently in a WCDMA network.

Your Phone




Icon	Description
	You are using the roaming service.
	Bluetooth is enabled.
	Indicates network connection state.
	Indicates security connection state of the network.
	The phone is in a call.
	Forwarding all incoming voice calls to line 1.
	Call line 2 is enabled currently.
	Forwarding all incoming voice calls to line 2.
	Alarm clock is enabled.
	You have new text messages.
	You have new PUSH messages.
	You have new multimedia messages.
	You have new voice mail.

Icon	Description
	SD card is inserted.
	Ringtone is enabled.
	The vibration mode is enabled.
	The phone is in mute mode.
	The normal profile is activated.
	The headset is plugged in.
	Your PC connects to the Internet through your phone.
	Indicates power level of the battery.
	The keypad is locked.
	The background play is activated.

Introduction to the Menu

Your phone provides an extensive range of functions. You can use these functions by navigating the following menus: Entertainment, Vodafone live!, Music,

Camera, Messaging, My Files, Organizer & Tools, Contacts, Calls, Profiles, Video call and Settings.

- 1 In the standby mode, press  to display the main menu.
- 2 Press the scroll key to scroll through the menu, and then press  to select.
- 3 If the menu contains further submenus, repeat step 2.
- 4 Use the selected function according to the prompts on the screen.
- 5 Select **Back** to return to the previous menu. Press  to return to the standby mode.

2 Getting Started

Loading the SIM Card

Load your SIM card before using your phone. To use the SIM card properly, please read the following instructions carefully.

Note

- Keep the SIM card out of the reach of children.
- The SIM card and its metal contacts can be easily damaged by scratching or bending. Ensure care when you carry, load or remove it.
- Always disconnect the charger from the phone before loading or removing the SIM card.

To load the SIM card, do as follows:

- 1 Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the top right. Then slide in as shown.



- 2 Fit the battery into the battery slot on back of the phone. Press the battery down until it clicks into place.



- 3 Slide the back cover to the phone.



Unloading the SIM Card

Only unload the SIM card and the battery after powering off your phone. Otherwise, your phone may be damaged.

To unload the SIM card:

- 1 Unload the back cover out of the phone.



- 2 Please unload the battery according to the following picture.



- 3 Press the SIM card with one finger and slide it out of the slot.



Charging the Battery

Before charging the battery, please read the following precautions carefully.

Note

- When you charge the battery for the first time, please charge it for a minimum of 12 hours.
- The battery discharges even while not being used. If you have not used it for a long time, please recharge it first.
- The charging time depends on the environmental temperature and the age of the battery.
- The battery can be recharged but eventually wears out. If the battery lasts for a

■ Loading/Removing a Memory Card

shorter time period than usual after being charged normally, replace it with a battery of the same type.

- Do not strike, throw or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, explosion or fire may occur.
- Charge the battery by using the charger supplied with your phone.

Charging with a Cable Charger

Before charging the battery with a cable charger, ensure that the battery has been properly loaded into your phone.

To charge the battery, do as follows:

- 1 Insert the plug of the charger into the connector of the phone as shown in the following figure.
- 2 Plug in the connector of the charger to a power socket.



Note

- When the battery power level is very low, the phone makes alert sounds and displays a prompt. When the battery power level is too low, the phone will power off automatically.
- When the battery is being charged, the charging indicator blinks continuously. When the charging indicator stops blinking, it indicates that the battery is full.

Loading/Removing a Memory Card

The Vodafone 725 phone supports a memory card (micro-SD) with a capacity up to 2 GB.

- 1 Unload the back cover out of the phone.



- 2** Insert the memory card into the slot, as shown in the following figure.




- 3** To remove a memory card, unload the back cover out of the phone. Then press the memory card gently. Now the memory card will pop up automatically. Then take it out as shown in the following figure.



Powering On/Off

Powering On

Ensure that the SIM card is in your phone and that the battery has been charged.

Press and hold  to power on your phone.

Powering Off

Press and hold  to power off your phone.

Access Codes

If you have set the phone password and the PIN is **ON**, you have to enter the corresponding access codes when you power on your phone. For setting and changing the access codes, please refer to "Settings/Security Setup" on page 51.

◆ Phone Password

The phone password is used to protect your phone from unauthorized use. The phone password is preset as 0000 for your Vodafone 725 phone.

■ Powering On/Off

◆ PIN

The personal identification number (PIN) code is used to protect your SIM card from unauthorized use. The PIN code is usually provided when you get the SIM card from Vodafone. If you have not received a PIN code or if you have forgotten it, contact your local Vodafone customer care centre.

◆ PIN2

Some SIM cards provide a PIN2 code. Some special functions such as the "Fixed Dialer Number" are not available until you enter the PIN2 code. At the same time, your SIM card should support these functions.

◆ PUK

To unlock a locked SIM card, you need to enter the PIN Unblocking Key (PUK) code. The PUK code is usually provided when you get the SIM card from Vodafone. If you have not received a PUK code or if you have forgotten it, contact your local Vodafone customer care centre.

◆ PUK2

Some SIM cards provide a PUK2 code that is used to unlock a locked PIN2 code. The PUK2 code is usu-



ally provided when you get the SIM card from Vodafone. If you have not received a PUK2 code or if you have forgotten it, contact your local Vodafone customer care centre.


3 Call Service

Making or Answering Calls

Making a Video Call

You can make a video call to other person whose phone also supports video calls.

- 1 Enter or edit a phone number in one of the following ways:
 - Enter a phone number through the keypad.
 - Select a number from the **Calls** screen.
 - Select a number from the **Contacts** screen.
- 2 Press  to dial.
- 3 Press  to end the video call.

Note To delete a wrong number, press  once to delete the digit to the left of the cursor.

Making a Voice Call

- 1 Enter or edit a phone number in one of the following ways:
 - Enter a phone number through the keypad.

- Select a number from the **Calls** screen.
- Select a number from the **Contacts** screen.

2 Press  to dial.

3 Press  to end the call.

Making Voice Calls Using SDN






You can make a voice call through speed dialing. For instructions on assigning speed dialing numbers, refer to "Contacts/Other Operations" on page 17. To make a call by speed dial number (SDN), press and hold the number key until the phone dials the corresponding phone number.

Answering or Rejecting Calls

You can set the answer mode to **Any key** or **Send key**. For details, refer to "Settings/Call settings/Answer mode".

The following describes how to answer or reject a call in different answer modes:

Operations During a Voice Call

Operation	Description
Answer a call	<ul style="list-style-type: none">If the answer mode is Any key, open the phone and press any key, except  and .If the answer mode is Send key, press .If the headset is in use, press the control key on the headset.
Reject a call	Press  or select Options > Reject .
End a call	<ul style="list-style-type: none">If the headset is not in use, you can close the phone or press .If the headset is in use, press the control key of the headset.
Reply by message	Select Options > Reply to send a pre-defined message to the caller.

You can also set the auto answer mode to **Immediate answer**, **Text message** or **Recorded voice**.

For details, refer to “Settings/Call settings/Auto answer”.

Operations During a Voice Call

Icon Description



: A call is ongoing.



: The call is on hold.

Operations






During a voice call, you can select **Options** to perform the following operations.

- Hold active call/Resume:** To hold or resume the call during a call.
- End call:** To end all calls, the active call, the current call or the on hold call.
- Handsfree/Earpiece:** To switch between the Handsfree and the Earpiece modes during a call.
- Start recording/Stop recording:** to record or stop recording the conversation.
- Other applications:** To access the **Contacts** screen, the **Messaging** screen, the **Calls** screen or the **Calendar** screen.



- **Answer/Reject:** Your phone allows you to handle two calls simultaneously. During a call, if there is a new incoming call, select **Options > Answer** to answer it or select **Options > Reject** to reject it.
- **Swap:** To swap between calls during a 3-party call.
- **Conference call/Private call:** To switch to the conference call during a 3-party call or to talk with a party privately during a conference call.

Operations During a Video Call

Icon Description

Icon	Description
	Press the up or down scroll key to adjust the brightness.
	Press the left or right scroll key to zoom in or zoom out.
	Press the volume keys to adjust the volume.
	Press  to switch between the loud-speaker mode and the earpiece mode.

Operations

During a video call, you can press  to hold the call and send a preset file to the other party. You can press  again to resume the call. Before you use the function, you can preset a file in **Settings/Video call/Send image**.

During a video call, you can select **Options** to perform the following operations.



- **Camera:** To forbid or allow the video from your side.
- **Audio:** To forbid or allow the audio from your side.
- **External view/Internal view:** To switch between the main lens and the assistant lens.
- **Picture mode:** To switch display.
- **Image quality:** To set the image quality to fine quality or more smooth.
- **Play file:** To play a media file.
- **Handsfree/Earpiece:** Switch between the loud-speaker mode and the earpiece mode.
- **Record:** To record a video clip. A recorded video clip is saved to the **My Files/Videos** directory.

■ Calls

- **Other applications:** To access the **Contacts** screen, the **Messaging** screen, the **Calls** screen or the **Calendar** screen.

Calls

The recently dialed calls, received calls and missed calls are saved automatically.

Select **Calls** in the main menu and then press the left/right scroll key to select **All calls** , **Missed** ,

Received  or **Dialed** . Then select **Options** for the following options.

- **Send message:** To send a message or MMS.
- **Save number:** To save the numbers of the selected record.
- **Call:** To make a voice call or a video call. Alternatively, you can edit the number before making a call.
- **Display mode:** You can select **Normal** to display all records or select **Simple** to ignore the duplicated records.
- **Delete:** To delete the selected record.




 

- **Mark/Unmark:** To mark/unmark a record or all records.
- **Calls status:** To display the information on voice calls, video calls and data services. In the voice call, video call and data page, you can select **Reset** to clear all records.

4 Text Input

You can use the keypad to enter alphanumeric characters and symbols. For example, you can add entries to the contacts, write messages or schedule events on the calendar.

Note

While entering text:






- Press  to switch between input methods. Press and hold the  key to enable or disable the T9 input mode.
- Press  to display the symbols list. Press and hold the  key to set the input language.
- Press  to delete the letter before the cursor.

T9[®] Input Method


With the T9 input method, you can easily and quickly enter words. T9 is a predictive text entry mode. It allows you to easily and quickly enter words. Press the relevant key that corresponds to the desired letter and T9 will offer you candidate words. Press each key carrying the desired letter once, and then the predictive text scheme will present the can-

didate words composed by the letters you have entered in the drop-down menu.

For example, to enter the word "good" with the T9 input method, follow these steps.

- 1 Press successively the keys , , , and  which "g", "o", "o", and "d" belong to, and the candidate words "good", "home" etc. composed by these letters will be shown in the drop-down menu.
- 2 Use the up/down scroll key to select "good". Then press  to enter the word.

Note

Press  repeatedly and you will see "T9 Abc", "T9 abc" and "T9 ABC" on the upper left corner of the screen successively. It indicates the words to be entered will be in lower case, first letter capitalized or in upper case.



Traditional Input Method

When T9 input method is off, you can use the traditional input method for entering alphabetic charac-


■ "123" Numeric Input Method

ters. Repeatedly press the key that carries the letter to be entered when it appears on the screen.

For example, to enter the word "hello" with the traditional input method, follow these steps.


- 1 Press  that carries "h" repeatedly and all letters carried by this key will be displayed successively on the screen. You can scroll through this list and select the character you want. Stop when you see an "h" on the screen.
- 2 After entering the first letter, you can directly press another key (except ) to enter the next letter. If the next desired letter is on the same key as the current one, wait until the cursor appears to the right of the current letter and then you can enter the next one.
- 3 Enter "e", "l", "l" and "o" in the same way.

Note


Press  repeatedly and you will see "Abc", "abc" or "ABC" on the upper left corner of the screen successively. It indicates the words to be entered will be in lower case, first letter capitalized or in upper case.


"123" Numeric Input Method

In a text editing screen, press and hold the character/number keys to enter corresponding numeric characters.


You can also press successively the  key to switch to the "123" numeric input method, and enter corresponding numeric characters by pressing the character/number keys.

Symbol Input Method

You can press  to display the symbols list and then select **Recent** to display recent symbols.

You can also press  to input the commonly-used symbols in a text editing screen.

Input Different Languages

In a text editing screen, press and hold the  key to set the language for the text.

5 Contacts

Contacts enables you to save and manage such information as phone numbers and addresses of your contacts. You can save such information in your phone or your SIM card. You can also assign frequently-used numbers to speed dialing keys for your convenience.

Making Calls from the Contacts

You can make a voice/video call with a contact selected from the contacts list.

- 1 In the **Contacts** screen, press the scroll key to select **Contacts**.
- 2 Select a contact and select **Options > Call**. Then, you can select **Voice Call** or **Video Call** to make a call. Alternatively, you can select **Edit before call** to edit the number before making the call.

Searching for a Contact

You can find a contact from the contacts list easily and quickly by using this function on the **Contacts**

screen. Select **Options > Search**, and then enter the contact name you are searching for. The contact is displayed.

You can also use quick search in the contacts list screen. You can find a contact by entering the initials of the first name or the last name of the contact. For example, to find a contact named "Alice Green", enter the initials "a" or "g". This contact is displayed in the candidate list.

Viewing Contacts in Phone/SIM

In the **Contacts** screen, select **Options > View Contacts in Phone/View Contacts in SIM**. You can display the contacts list saved in the phone or that in the SIM card. You can also select **Options > Settings** to set the default contact list displayed in the contact screen.

Other Operations

In the **Contacts** screen, select **Options** for the following options.

■ Groups

- **Details:** To view the detailed information of the contact.
- **Call:** To make a voice call or a video call.
- **Send message:** To send a message or Email to the selected contact.
- **Add new contact:** To create a new contact.
- **Management:** To back up your contacts from your phone to a memory card or from your memory card to your phone.
- **Search:** To find a contact from the contacts list.
- **Send contact:** To send a contact to other devices supporting Message or Bluetooth.
- **Copy to SIM/Copy to phone:** To Copy one or more contacts from your phone to the SIM card or from your SIM card to the phone.
- **Delete:** To delete the selected contact.
- **Mark/Unmark:** To mark/unmark a record or all records in your phone and SIM card.
- **View contacts in Phone/SIM:** To display the contacts list saved in the phone or that in the SIM card.
- **Speed Dial Number:** To assign often-used numbers to speed dialing keys "2" to "9".


- **My business card:** To save your own information to a Business Card.
- **Settings:** To set the default contact list displayed in the contact screen, to sort the contacts on the **Contacts** screen.
- **Memory status:** To view the memory status of both your phone and SIM card.

Groups

You can rename a group, add group members, or delete a group.

Adding/Deleting Group Members

You can add a member to a group in your phone or delete a member from it.

- 1 In the **Contacts** screen, press the left/right scroll key to select **Groups**.
- 2 Select a group and press  to view the details.
- 3 Select **Options > Add new Users**. Select a contact and press **Add**. The member you added is displayed in the group member list.

To delete a group member, select a member from the group member list, and then select **Options > Remove**.

Managing a Group

- 1** In the **Contacts** screen, press the left/right scroll key to select **Groups**.
- 2** Select a group and select **Options** for the following options.
 - **Details:** to view the details of a group.
 - **Rename:** to change the name of a group.
 - **Send message:** to send message or email to all members of a group.
 - **Remove all members:** to delete all members of the group.


6 Messaging


Messages

The maximum content for a single text message is 160 characters. If the characters you enter exceed this limit, the text is divided into two or more continuous messages when it is sent.

Creating a Message

With this option, you can create new SMS, From template, live!Postcard, and Email.

- 1 Select **Messaging > Create message** in the main menu.
 - **Message:** To access the SMS or MMS editing screen.
 - **From template:** To edit the SMS or MMS from template.
 - **live! Postcard:** To access the postcard editing screen.
 - **Email:** To access the email editing screen.
- 2 After editing the message, press  or select **Options > Send to** to add a recipient's number.

- 3 Press  or select **Options > Send** to send the message.







Messages Mailboxes

The phone provides four mailboxes for messages, namely, **Inbox**, **Drafts**, **Outbox** and **Sent**.


◆ Inbox

You can save the received messages in **Inbox**.

Icons in Inbox

Icon	Description
	a read SMS or a read message report
	an unread SMS or an unread message report
	a read MMS
	an unread MMS
	A read Push message
	An unread Push message


Viewing Messages in Inbox

- 1 Select **Messaging > Inbox**.
- 2 Press the up/down scroll key to view the messages and then press  to view the details.
- 3 You can select **Options** for the following operations.
 - **Play:** To play the multimedia message.
 - **Reply:** To reply the message.
 - **Forward:** To forward the message.
 - **Delete:** To delete the message.
 - **Call sender:** To call the message sender by a voice call or a video call.
 - **Info.:** To view the details of the MMS.
 - **Save text:** To save the text of the MMS.
 - **Save as template:** To save this message as a template.

◆ Drafts


The Draft box is used to save the messages you created and saved.

Icons in Drafts

: A text message saved to the phone.

: A multimedia message to the phone.


Viewing and Editing Messages in the Draft

- 1 Select **Messaging > Drafts**.
- 2 Press the up/down scroll key to select a message and press  to edit it.

◆ Sent


Sent is used to save the messages that have been sent successfully.

Icons in Sent

: A text message has been sent.

: A multimedia message has been sent.

Viewing Messages in Sent


- 1 Select **Messaging > Sent**.
- 2 Press the up/down scroll key to select a message and press  to view the details.
- 3 You may select **Options** to do the same operations as those of Inbox.

Email


◆ Outbox

Outbox is used to save the messages that failed to be sent.

Icons in Outbox.

: A message that fails to be sent.

Viewing Messages in the Outbox

- 1 Select **Messaging > Outbox**.
- 2 Press the up/down scroll key to select a message and press  to edit it.

Message Settings

You can change the message settings by performing the following steps.

- 1 Select **Messaging > Settings > SMS & MMS** from the main menu.
- 2 Set the parameters related to messages:
 - **Receiving settings:** To set parameters related to retrieval of messages.
 - **Sending settings:** To set parameters related to sending messages.



- **Signature:** To set whether your signature will be sent along with the message. You can edit the signature while creating a new message.
- **Font size:** To set the size of the character entered in the message.
- **Reply settings:** To set whether to reply to a message with the original text.
- **MMS Account:** To set the MMS account.
- **Voice Mail:** The voice mail number is already preset for you in the phone.
- **Save unknown number:** To prompt whether to save the unknown number.

Email

Before sending an email, please set an email account first. For details, please refer to "Email Settings" on page 24.

Creating an Email

- 1 Select **Messaging > Email** from the main menu. Select **Options > New Email** to access the email editing screen.

- 2 Select **【To】** or **【Cc】** and press .
 - Select **Add from contacts** or **Add from groups** to select an email address.
 - Select **Enter recipient** to directly enter the email address.
- 3 In the email editing screen, select **Subject** and press  to edit the contents.
- 4 In the email editing screen, select the **Message** text box to edit the contents.
- 5 In the email editing screen, select **Options** > **Add attachment** to attach picture, music, video, or eBook.
- 6 In the email editing screen, select **Options** > **send** to send the email.

Mailboxes

Your Vodafone 725 provides five mailboxes for email, namely, Inbox, Drafts, Sent messages, Unsent messages and Blocked messages.

◆ Inbox

All Emails received are saved in the inbox.

Icons in Inbox




: A read email.



: An unread email.

Viewing and Editing Emails in Inbox

- 1 Select an email and press  to view the content.
- 2 In the Details screen, select **Options** for the following operations:
 - **Reply**: To reply to the email sender.
 - **Reply all**: To reply to the email sender and all email receivers except the replier.
 - **Add to contacts**: To save the details of the sender to the contacts.
 - **Forward**: To forward the selected email.
 - **Delete**: To delete the selected email.
 - **Call sender**: To call the email sender by a voice call or a video call.

◆ Drafts

The saved new emails are saved in the drafts.


Icons in Drafts



: Emails to be sent.

Email


Viewing and Editing Emails in Drafts

- 1 Select the desired email in the drafts and press  to access the editing screen.
- 2 Edit the related information. For details, perform the same operations as in creating an email.


◆ Outbox

Those emails which failed to be sent are retained in the **Outbox**.

Icon for Outbox

: Emails failed to send.


Viewing and Editing Emails in Outbox

- 1 Select an email and press  to access the Resend screen.
- 2 Edit the related information. For details, perform the same operations as in creating an email.


◆ Sent

The emails sent to server are saved in the sent box.

Icon for Sent

: A read email.

Viewing and Editing Emails in Sent

- 1 Select an email and press  to access the View screen.
- 2 Edit the related information. For details, perform the same operations as those of the Inbox.

◆ Blocked messages

The blocked emails are saved in this folder. You can select **Messaging > Settings > Email** to set the blocking conditions.

Email Settings

- 1 Select **Messaging > Settings > Email** and select an account.
- 2 The related account information contains: **General, Incoming, Outgoing** and Online help.
- 3 Return to the **Account** screen. Select **Options > Set as default** to activate this account.
After completing all settings, press **Back**.

Note

For the account settings, contact your local Vodafone customer care centre.

Broadcast Inbox

The broadcast messages are saved in the broadcast inbox. You can set the broadcast message.

Select **Messaging > Settings > Broadcast** to set the following items.

- **Service:** to enable or disable this service.
- **Subscription:** to subscribe to broadcast channels or cancel the subscription.
- **Language:** to select the language of the broadcast.
- **Silent alert:** to set whether to use an alert when there is a new broadcast message.
- **Auto delete:** to set whether to auto delete earlier messages when the broadcast inbox memory is full.

Templates

You can save the frequently-used SMS or MMS as template for your convenience.

7 Music

Music enables you to manage your music files easily and conveniently. It also enables you to purchase a wide variety of latest music from Vodafone.

Music Library

You can play various music files, including those supplied with the phone, recorded by using the phone, downloaded from the Internet, and attached to email. You can also enjoy the online audio files.

In music library, select **Options > Add tracks**, you can add the music files in the handset or memory card to the music library. You can also select **Options > Refresh**, and all music files in the music folder of the handset and memory card are automatically added to the music library.

Function Options During Playing



During playing the music file, select **Options** for the following operations.







- **Now playing:** To access the current playlist.
- **Play via bluetooth:** To play the voice files with bluetooth device.
- **Mute/Unmute:** To mute or unmute the music.

- **Playlists:** To access the music playlist.
- **Bookmarks:** To access the bookmark list.
- **Info.:** To view the information of the music files.
- **Video camera:** To enable the video camera function.
- **Shuffle:** To enable/disable the random play.
- **Loop:** To play current music circularly, loop all music or close.
- **Equalizer:** To select the music style.
- **Streaming setting:** To set the streaming setting.
- **Exit:** To exit the music play screen.

Screen Operations During Playing

During playing the music file, you can perform the following operations on the music file.

Operation	Description
	Press the up scroll key to access the current playlist.
	Press the down scroll key to go back to the beginning of the current music file.

Operation	Description
	Press the right scroll key to access the next music file. Press and hold the right scroll key to fast forward the current music file.
	Press the left scroll key to access the last music file. Press and hold the left scroll key to fast backward the current music file.
	Press  to pause the playing. Press  again to resume the playing.
	Press the volume keys to adjust the volume.

Playlists

Selecting this option, you can rename and edit the playlist as well as play the music in the playlist.

Vodafone Radio DJ

Vodafone Radio DJ is a service which provides you a selection of different music channels. If you skip

tracks on a channel you listen to, the service recognises the kind of music you are skipping. Then, it does not offer such music again on that channel. You can also easily mark music tracks that you like, to download them later on.

Music Store

In the Vodafone music store, you can find a great variety of music to download onto your mobile phone.

My Wishlist

On your music wishlist, you can find all the songs which you have marked to download while listening to a Vodafone Radio DJ channel.

Radio DJ Settings

Selecting this option, you can set the payment method of Radio DJ.


8 Organiser & Tools

This function provides you with various helpful tools. You can access the **Organiser & Tools** screen by selecting **Organiser & Tools** from the main menu.

Alarms

You can set several alarm clocks. You can also set alarm time, alarm tones and the cycle period for alarm clocks.

Setting Alarm Clocks

Enter alarm function, you can select one alarm from the list, and then press  to set an alarm clock.

In the screen for editing alarm clock, you can set the following items: alert time, message, the sound function, the vibration function, Alert tone, the snooze function, the alarm cycle.

Alarm Prompt

When it is time for an alarm clock to ring, the selected alarm tone is played and a prompt displayed. You can stop the ringing by pressing any key. The prompt allows you to snooze or stop the alarm prompt.

If your phone is powered off, the alarm clock will still ring. When the alarm rings, you can choose to power on the phone.

Stopping the Alarm Clock

Select an alarm clock from the list, and press the left function key to deactivate it.

Calendar

With this function, you can view the calendar and manage your schedules.

New Schedule

Enter calendar function, you can select **Options > New** to create the schedule events or birthday reminder for the current day.

In the screen for editing schedule events, you can set the following items: schedule subject, start/end time of the schedule, schedule location, schedule category, schedule content, whether the sound is on, the vibration function, alert tone, alert type, alert cycle, and alert image.

In the screen for editing birthday reminder, you can set the following items: name, birthday, content, whether the sound is on, the vibration function, alert tone, alert time, and alert image.

Note

You can create up to 500 schedules in total and 15 for each day. While creating a new schedule, you need to set the alarm on before setting the alarm time, the alarm cycle, the alarm tone and the image.

Calendar Functions

Enter calendar function and select **Options**. You can perform the following operations.

- **New:** To create a new schedule.
- **Go to:** To go to a certain date directly from the Month view screen.
- **Display:** To view all events, specified events, Calendar files and to back up all schedules to a memory card.
- **View mode:** To view the calendar in three different modes: month view, week view, and day view.
- **Delete event:** To delete all past events, specific period events or all events.

- **Management:** To backup all schedules to the memory card or to restore all schedules from the memory card to the phone.
- **Settings:** To set save location, main view, week begin day.
- **Memory status:** To view the memory status, including the used space and the total space.

Schedule Prompt


When it is time to remind you of a schedule, the selected ringtone is played and a prompt displayed. You can stop the ringing by pressing any key. From the prompt, you can snooze or stop the prompt.

Task

You can define and manage tasks to be conducted before a certain time. Your phone can remind you of these tasks and track them automatically. Select **Task** from **Organiser & Tools**. The tasks are classified into three kinds: pending, done, and all tasks. You can define up to 1000 tasks on your phone.

Memo

New Tasks

To define a new task, press  or select **Options > New** on the Tasks screen.

In the screen for editing task, you can set the following items: the subject of the task, the deadline, the priority level, the task status, the task alert, the vibration function, the alert time, the task type.

Tasks Functions

On the Tasks screen, you can also perform the following operations: edit, new, set as done, send by Message, Email or Bluetooth, copy, day view, delete, delete all, and view the memory status.

Task Prompt

When it is time for the phone to remind you of a task, it rings automatically and a prompt interface is displayed. You can stop the ringing by pressing any key. From the prompt, you can snooze or stop the task prompt.

Memo


You can store important events on your phone. You can save up to 100 such memos.

Select **Memo** from **Organiser & Tools**. If there is no memo, you need to create one when you access the **Memo** screen.

On the Memo Pad screen, you can perform the following operations: edit, new, delete, send by Message or Bluetooth, view the memory status and delete all.

Synchronise

You can synchronise contacts with your personal phone book in the Vodafone network. This service might not be available in all Vodafone networks. Contact your local Vodafone customer care centre. Select **Synchronise** from **Organiser & Tools** to create or edit a profile. Select **Options > View log** to view the latest synchronisation log. Before you use the synchronise function, you may need to set a profile.


 


- 1 To create a profile, select **Options > New** to create a profile.
- 2 Press the left/right scroll key to switch between **Synchronise items**, **Server Setting**, and **Network profile**.
- 3 In the **Synchronise items** screen, select the item to be synchronised and press  to confirm it. Then, enter the database name, user name, and password of the synchronisation items.
- 4 In the **Server Setting** screen, enter server address, user name, password.
- 5 In the **Network profile** screen, enter the proxy server address and the port. Then, enter the network access point and select a desired profile.
- 6 Return to the previous menu and select **Options > Synchronise** to start synchronising.

Note

This service is not available in all networks. For details, contact your local Vodafone customer care centre.

Calculator

You can perform addition, subtraction, multiplication, division and extraction operations on your phone.

- Press the number keys to enter the figures.
- Press the scroll key to enter the operators.
- Press the left function key to clear.
- Press the right function key to exit Calculator.
- Press  to enter a radix point.
- Press  to delete the character to the left of the cursor.
- Press  to perform extraction.
- Press  to enter an equal mark.

Unit converter

You can convert units of length and weight between different systems on your phone.

- 1 Press the up/down scroll key to switch between the setup items.
- 2 On the unit type selection bar, press the left/right scroll key to select weight or length.

Currency converter

- 3 On the **From** bar, press the left/right scroll key to select the unit to be converted from.
- 4 On the **To** bar, press the left/right scroll key to select the unit to be converted to.
- 5 Press the number keys to enter a numeric value to be converted in the **Input** bar.

Press **C** or select **CE** to clear the numeric values you entered.

Currency converter

You can convert a value from one currency to another using your phone.

To using this function, access the **Currency converter** screen, and then press the up/down scroll key to switch between the setup items.

- 1 On the **Input** bar, press the number keys to enter a numeric value to be converted.
- 2 On the **From** bar, press the left/right scroll key to select the currency to be converted from.

- 3 On the **To** bar, press the left/right scroll key to select the currency to be converted to.

- 4 On the **Rate** bar, enter the currency rate.
Then you can view the conversion result.

Press **C** to clear the numeric values you entered. Select **Setting** in the currency converter screen, and you can select frequently used currency units. This makes it easy to switch between selected units in the **From** or **To** bar.

Voice recorder

You can record voices or sounds on your phone.

On the standby screen of the voice recorder, you can select **Options** to set the recording duration.

- Record/Pause: During recording, press **⏏** to pause, and press **⏏** again to resume.
- Stop and save: During recording, press the left function key to stop recording. The audio file is saved in **My Files\Music** automatically.

- Play an audio file instantly: After recording is complete, select **Option > Play** to play the audio file instantly.
Alternatively, you can select **Options** for the following operations: send by Message, Email or Bluetooth, set as ringtone and delete.

World Time

You can view the time of important cities around the world. To switch among the time zones, press the left/right scroll key.

If the daylight saving time (DST) is used in your city, you need to set the phone to DST. Then, you can get the right local time. To set the phone to DST, switch to the desired time zone and then select **Options > DST**.

Stopwatch

You can use the stop watch function. On the Stopwatch screen, you can perform the following operations: start, save, pause, continue, reset.

Timer

You can set a timer for up to 99 hours and 59 minutes. After you have set it, the timer is displayed on the home screen.

Service dial number

You can contact your local Vodafone customer care centre by dialing this number.

9 My Files

My Files enables you to manage the Pictures, Videos, Music, Ringtones, Games, Applications, Themes and other files conveniently. You can access **My Files** by selecting **My Files** from the main menu. Select **Pictures, Music, Ringtones** or **Videos** folder. You can perform the following operations on files.

- View: To view the picture file.
- Play: To play a selected file.
- Send: To send the selected file by MMS, Email or Bluetooth.
- Set as: To set the picture as the wallpaper or the image of a contact.
- Set as ringtone: To set a ringtone as voice call tone, video call tone or specific contact tone.
- Cut: To cut the selected file.
- Copy: To copy the selected file.
- Edit: To edit a picture file.
- Rename: To rename the selected file.
- Sort: To sort the selected file by name or by date.
- Delete: To delete the selected files.
- Mark/Unmark: To select one or more files or cancel the selection.

- Info.: To view the properties of one or more files.

Note

Some sound files are protected by Digital Rights Management (DRM), and may not be able to be used as a ringtone.

Select **Games, Applications, Themes, Other** folder.

- Games: To play games and download more games. The downloaded files are saved in this folder. For more details, Please refer to "Entertainment/games" on page 37.
- Applications: Any applications that you download are saved in this folder.
- Themes: All themes that you download are saved in this folder.
- Other: You can save any kind of file. You can also create new folders in this folder to categorise your files.
- Memory status: To view the memory status of your phone.



When the phone detects and recognises the memory card, **Memory card** is displayed as a tab in the **My Files** screen.

10 Vodafone live!

The built-in browser makes it easy to browse the Vodafone live! portal. You can access the Browser screen by selecting **Vodafone live!** from the main menu.

Open homepage

Browsing Pre-set Web Pages

On the homepage, select a link from the page. Then select  to browse the page. When browsing, you can press the scroll keys to select a link you want to access. The selected link is highlighted. Press  to access the link.

Other Operations for the Homepage

After selecting **Options** from the homepage, you can perform the following operations:

- **This link:** To access the selected link in the current page.
- **Bookmarks:** To access the bookmark directory and view the saved bookmarks.
- **Save as bookmark:** To save the current page as a bookmark.

- **Open new page:** To enter a website address and access it.
- **History:** To access the visited webpage.
- **Navigate:** To go forward or go backward when you browse web pages.
- **Object lists:** To access the object lists to save the contents on the page.
- **Advanced:** To access the advanced options.
- **Exit browser:** To exit the current web page.

Open new page

Access the **Open new page** screen, and then you can enter the address of the page to be accessed.

Bookmarks

With this option, you can save and edit the information of the websites that you often access.

Some bookmarks have been preset by Vodafone for you on the phone.

■ Saved pages

Saved pages

With this option, you can save the pages in your phone. Web pages are saved to the **Saved pages**.

History

With this option, you can access the visited webpage.

Resume

To link to the latest visited webpage.

Settings

These are preset for you to use the Vodafone service. If you need to modify them, open the Browser and select **Settings**.

11 Entertainment

You can use the phone to play games, take photos, and listen to online music.


Games

You can play games and download more games. Downloaded games are saved to the **My Files/Games** directory.

Downloading Games

Vodafone offers a great choice of games for your mobile phone. To download one of these to the phone or memory card, select **Download Games**.

Available Options of Games

You can scroll the cursor to a Java game and press  or select **Options > Select** to launch the game. In the **Games** screen, you can select **Options** to perform the following operations:

- **Select**: To launch the game.
- **Update**: To upgrade the game.
- **Security**: To set the security requirements of the game.



- **Delete**: To delete the game.
- **Properties**: To view the property of the game.
- **Internet settings**: To set the Internet settings.
- **Move**: To move games saved in the phone to the memory card and vice versa.

Camera


In the main menu, select **Camera** to start the camera. You can also press the camera key to start the camera.

Operations in the Viewfinder Screen

In the viewfinder screen, you can:


Icon	Operation
	Press the up/down scroll key to adjust the brightness.
	Press the volume keys to adjust the focus of the video camera.

Camera

Icon	Operation
	When the camera is started, press the right scroll key to switch to the video camera function (when the tool bar is closed).

In the viewfinder screen, press the left function key to display the tool bar or press the right function key to close the tool bar. This tool bar is used to set the parameters of the camera.

Operations After Taking a Picture

In the viewfinder screen, you can press  to take a picture. Pictures taken are auto saved to the

My Files/Pictures directory.

After taking a picture, you can select **left function key** for the following operations.




- **Send:** To send the picture through MMS, postcard, email or Bluetooth.
- **Set as:** To set the picture as the wallpaper or the image of a contact.
- **Delete:** To delete the picture.
- **Edit:** To edit the picture.

Video Camera

In the camera viewfinder screen, press the right scroll key to switch to the video camera function. You can use your phone to record a video.


◆ Operations in the Viewfinder Screen

In the viewfinder screen, you can:

Icon	Operation
	Press the up/down scroll key to adjust the brightness.
	Press the volume keys to adjust the focus of the video camera.
	When the video camera is started, press the left scroll key to switch to the camera function (when the tool bar is closed).

In the viewfinder screen, press the left function key to display the tool bar or press the right function key to close the tool bar. This tool bar is used to set the parameters of the video camera.

◆ Operations During Recording

In the viewfinder screen, you can press  to start recording the video.

During the recording, you can perform the following operations.

- **Pause/Continue:** To pause and then to start recording again.
- **Cancel:** To cancel the recording.

Mobile TV

With this option, you can access the preset link. The link has been preset by Vodafone for you on the phone.

12 Connections

Your phone provides you with many data communication functions. You can access the **Connectivity** screen by selecting **Settings** from the main menu.

Note

- You phone supports plug and play function.
- The PC assistant installation programme and USB driver are embedded in the mobile phone.
- The Vodafone PC Options software supplied on your phone will run automatically after you connect your phone to the PC by using the USB cable.

USB

You can synchronise data between your phone and PC, surf the Internet with your phone and read the memory card by USB cable.



- To use USB cable, please strictly obey the following rules. Otherwise, your phone or PC may be damaged. To connect your phone with a PC through USB cable, first connect the USB connector to your

phone, and then connect the other end of the cable to the PC. To disconnect your phone from the PC, first disable the Vodafone PC Assistant, then disconnect the USB connector from the PC, and finally disconnect the USB cable from your phone.

- If the PC cannot recognise your phone when connecting through the USB cable, power off and restart the PC and then retry.
- Do not plug the USB cable in and out of your Vodafone 725 frequently.

USB-Based Synchronisation

Your Vodafone 725 supports the synchronisation requests from a PC to your phone.

With a USB cable and Vodafone PC Assistant, your phone can communicate with a PC. You can back up the contact entries and messages saved on your phone and the SIM card to a PC. You can also synchronise contacts, schedule events and To Do tasks between your phone and Outlook.

To operate the USB-based synchronisation with your phone, do as follows.

- 1 Connect your phone to the PC by using the USB cable. The USB driver is embedded in your phone.
- 2 The Vodafone PC Options software supplied on your phone will run automatically. And then select **Activate Vodafone PC Assistant**.
- 3 Follow the guide to complete the PC assistant installation for the first time.
- 4 Select **Settings > Connectivity > Modem** from the main menu of your phone and set the port to **Modem via USB**.
- 5 Run the Vodafone PC Assistant on the PC.
- 6 Now you can operate the USB-based synchronisation. For details of the operation, refer to the Help of the Vodafone PC Assistant.

Accessing the Internet by USB

Connecting your phone to the PC with the USB cable enables the PC to use the phone as a modem. This

helps to set up a dial-up connection to the Internet. There are two methods to access the internet by using the USB cable: use the Vodafone PC Assistant supplied with your Vodafone 725 to load and run the Vodafone Mobile Connect via the phone internet connectivity software, or use the Windows operating system to set the service.

- 1 Connect your phone to the PC by using the USB cable.
- 2 The Vodafone PC Options software supplied on your phone will run automatically.
- 3 Select one of the following methods to set up the dial-up connection.
 - Select the **Activate Dial-up networking** option from the Vodafone PC Options software, and follow the instructions to set up the Vodafone Mobile Connect software, and connect to the internet.
 - Create Internet access through the built-in Internet wizard of the Windows operating system.

Only Windows 2000 and Windows XP are supported.

■ USB

Note

The Vodafone PC assistant may not synchronise with the phone initially.

Resolution

- 1 Plug cable into Phone.
- 2 Plug other end into PC.
- 3 Wait for up to 30 secs for Dialog box to appear showing buttons with "Activate Vodafone PC Assistant" and "Activate Dial up networking".
- 4 Select "Activate Dial up networking".
- 5 Follow prompts.
- 6 When complete, wait for modem driver to appear in the modem list on the PC (start /control panel / phone and modem options / modems - "Vodafone Mobile Adapter - 3G Modem" should appear) - this may take 30-60 secs to appear.
- 7 Once the modem is there, you may be asked to reset the PC - please do so if this occurs.
- 8 The Vodafone PC assistant should now be ready to use.

Note

If the dialog box does not appear in (3) please disconnect the cable from the PC and then the phone. Then reconnect the cable to the phone and then the PC in this order. The dialog box should appear after this activity - please then follow steps from 4. If the dialog box has still not appeared please disconnect and reconnect the cable as above but use a different USB port on the PC. Again once the dialog box appears please continue from step 4.

micro-SD Card Reader

You can read the files saved in the micro-SD card by using a USB cable.

To use the micro-SD card reader, do as follows.

- 1 Insert the micro-SD card to your phone.
- 2 Connect your phone to the PC by using the USB cable.

3 Found New Hardware is displayed on your PC, and an icon for the mobile memory drive appears.

4 The Vodafone PC Options software supplied on your phone will run automatically. And then select **Switch Phone to Card Reader**. You can read the files saved in the micro-SD card directly.

Note

The function of micro-SD card reader and the other functions using the USB cable are incompatible. If you enable the micro-SD card reader, other functions using the USB cable are unavailable.

Bluetooth®

You may use the built-in Bluetooth function of your phone to synchronise data between a PC and your phone, or use the built-in modem of your phone to access the Internet with a PC, or exchange data with other Bluetooth devices. You can also talk by using the Bluetooth headset or Bluetooth loudspeaker.

Note

The Bluetooth function supported by your Phone meets the requirements of Bluetooth Specification 1.2. It can work successfully only if you use it with compatible Bluetooth devices. For more information, refer to the user manuals of related devices, or consult the manufacturer of related devices.

Bluetooth-Based Synchronisation

Your Vodafone 725 can respond to data synchronisation requests from a computer. To operate the Bluetooth synchronisation with your Vodafone 725 phone, your PC needs to support Bluetooth function.

- 1** Install the Vodafone PC Assistant supplied on your phone.
- 2** Select **Settings > Connectivity > Bluetooth > Switch On/Off > On** to enable the Bluetooth function.
- 3** Run the driver software for Bluetooth on the PC, and pair the Vodafone 725 phone. After the PC detects and recognises the Vodafone 725 serial

Bluetooth®

port service, activate the Bluetooth serial port service on the phone.

- 4 Run the Vodafone PC Assistant on the PC.
- 5 You can now operate the synchronisation. For details of the operation, refer to the Help of the Vodafone PC Assistant.

Bluetooth-Based Data Transfer

You can exchange data between your Bluetooth phone and other Bluetooth devices. If you want to exchange data between your phone and another device, that device must support Bluetooth and the Bluetooth function must be enabled.

- 1 Select **Switch On/Off > On** from the Bluetooth settings list to enable the Bluetooth device.
- 2 Select **Devices** from the Bluetooth settings list. Select **Search** to search a Bluetooth device. When a Bluetooth device is found for the first time, authentication is required.

Now you can exchange data between your phone and the other Bluetooth device.

Bluetooth-Based Internet Access

Connecting your phone to a PC through Bluetooth function enables the PC to use the phone as a modem. This helps to set up a dial-up connection to the Internet. (This is particularly useful for laptop.) You can create Bluetooth-based Internet access through the Vodafone PC Assistant supplied with your Vodafone 725, or the built-in Internet wizard of the Windows operating system, or the Internet wizard supplied with the Bluetooth drive suite of the PC.

Note

Windows 2000 and Windows XP are supported.

◆ Accessing the Internet using the Vodafone Mobile Phone PC Assistant

To access the Internet by Bluetooth using the Vodafone PC Assistant, make sure that your PC supports the Bluetooth function and your SIM card supports the Internet access service.

- 1 Select **Settings > Connectivity > Modem** and set the port to **Modem via Bluetooth**.

- 2** Select **Settings > Connectivity > Bluetooth > Switch On/Off > On**.
- 3** Make sure that **Bluetooth modem** is in **Device Manager/Modem** of your PC. Run the driver program for Bluetooth on your PC, and then pair the Vodafone 725 phone. After the PC has detected the Vodafone dial-up network service, you can activate this service.
- 4** Install the Vodafone PC Assistant supplied with your phone.
- 5** Run the Vodafone Dialup Internet on the PC to access the Internet.

◆ Other Bluetooth Operations

You can perform the basic settings for the Bluetooth functions.

Select **Settings > Connectivity > Bluetooth** for the following operations.

- **Switch On/Off:** To set the Bluetooth device to **On** or **Off**. Bluetooth shall be turned off as default. Turning Bluetooth on shall NOT automatically set the state as being discoverable.
- **Search for devices:** To search for new Bluetooth devices. Bluetooth shall be set to non-discoverable as default.
- **Devices:** To view all detected Bluetooth devices.
- **Visibility:** To set whether your phone can be found by other devices when the Bluetooth function is enabled.
- **Device name:** To rename your phone.
- **My device information:** To view the detailed information of your phone.
- **Blacklist:** When the device is included in the blacklist, this device can not synchronise data with your phone.

13 Settings

You can access the Settings screen by selecting **Settings** from the main menu.

Phone settings

You can change the settings of the phone, including Date and time, Profiles, Phone language, Input language, Sound, Keypad tone, Keypad lock period, Shortcuts, as well as Auto ON and OFF.

Date and time


To set the system time and time format of the phone.

Profiles

You can select different profiles for the phone to suit different environmental situations.

You can select a profile and select **Options > Activate** to activate this profile. You can also select **Options > Edit** to edit the settings for this profile.

Note

In the standby mode, you can press and hold  to switch the current profile to the silent profile. If the current profile is offline, you cannot use this function.

Phone language

Your Vodafone 725 supports several languages.

Select **Settings > Phone settings > Phone language** to select a language. In addition to these languages, you can also select **Auto**. This option is used to set the phone language to be the same as that used in your SIM card.

Input language

The option is used to set the language used to enter text.



Sound

The option is used to change the settings for the normal profile. You can also select **Phone settings > Profiles** to set the sounds for the phone.

Keypad tone

This option is used to set the keypad tone of the phone.

Keypad lock period

After enabling the auto keypad lock function, you can set the keypad lock period. If there is no operation on the phone within a preset period of time, the keypad is locked automatically. You can press  and  to unlock the keypad.

Shortcuts

This option is used to assign the frequently used functions to the scroll keys as shortcut keys.

Auto ON and OFF

This option is used to set your phone to power on or off automatically.

- 1 In the **Auto ON and Auto OFF** screen, set the cycle for **Auto ON** and **Auto OFF** respectively. Then select **Save**.
- 2 Set the time for **Auto ON** and **Auto OFF**, and then select **OK** to save your settings.

Display settings

You can change the settings for the phone display, including Wallpaper, Themes, Brightness, Keypad backlight, Backlight time, Intermittently alert, Greeting message, Goodbye message.

- **Wallpaper:** To set the wallpaper layout for the home screen.
- **Themes:** To set the theme of the phone.
- **Brightness:** To set the brightness of the screen.
- **Keypad backlight:** To turn the keypad backlight on or off.
- **Backlight time:** To set the backlight delay time for the screen.
- **Intermittently alert:** To turn the alert on or off.
- **Greeting message:** To enter a greeting message that appears on the screen when you power on your phone.
- **Goodbye message:** To enter a message that appears on the screen when you power off your phone.

Message settings

Message settings

You can change the message settings including SMS & MMS, Email, Push messages, Broadcast, and Common phrases.


Call settings

You can change the settings for making calls.

Call forwarding

This option is used to forward incoming calls.

- 1 In the main screen, select **Settings > Call settings > Call forwarding**.
- 2 Select the forwarding condition from **All calls**, **If unreachable**, **If busy**, and **If unanswered**.
- 3 Then select the forwarding type from **Voice call**, **Fax call**, **Data and video call** and **All services**.
- 4 Select **Options > Activate/Deactivate** to enable or disable the service. You can also select **Check status** to check the status of call forwarding service.

Alternatively, you can select **Disable all** and then select one from the four items: **Voice call**, **Fax call**, **Data and video call** and **All services**. Then press  to disable all call forwarding services of this type.

Call barring


This option is used to set the call barring mode for the phone.

Select **Call settings > Call barring** for the following options:

◆ Call barring:

- 1 Select the barring condition from **All outgoing calls**, **Intl.calls**, **Intl.calls except home**, **All incoming calls**, and **Incoming calls when abroad**.
- 2 Then select the barring type from **Voice call**, **Fax call**, **Data and video call**, and **All services**.
- 3 Select **Options > Activate/Deactivate** to enable or disable the service. You can also select **Check status** to check the status of call barring service.

◆ Disable All

Select one type from **Voice call**, **Fax call**, **Data and video call** and **All services**, and then enter the call barring password. Press  to cancel all call barring services of each type.

◆ Call barring password

This function is used to change the password for call barring. Select **Call barring password** from the **Call barring** screen. Then you can change the call barring password.

Note

The old call barring password is provided by your network operator if it is the first time for you to change the password.

Call waiting

This option is used to enable or disable the call waiting function. You can also view whether the call waiting function is enabled by checking the status.

The call waiting function is network-dependent. For more information, contact your local Vodafone customer care centre.

Save unknown number

This function is used to prompt whether to save the number after a call ends. You can enable or disable this function.

Auto redial

This function is used to auto redial the dialed number if the dialing failed.

Answer mode

It is used to set the mode for answering an incoming call. Two options are available: **Any key** and **Send key**.

Auto answer

This option is used to select auto answering for incoming calls. Select **Call settings > Auto answer** for the following options.

- **Immediate answer:** To answer an incoming call immediately.

■ Video call

- **Text Message:** To auto send a text message that is preset and chosen from the **Common phrases** to the current caller.
- **Recorded voice:** To answer an incoming call by auto playing a recorded message.
- **Disable:** To disable the auto answer function.

Calling ID

This options allows you to select whether to display your phone number on the phone of the party who called you.

If select **Auto**, whether your phone number will be shown on the called phone depends on the network.

Select line

This option is used to set the call line for your phone. Two options are available: **Line 1** and **Line 2**.

My number

This function can be used to save your own phone numbers on the SIM card. You can select **Options** to edit or delete the records.

Video call

You can change the settings for the Video Call function, including Picture mode, Image quality, Camera off, Audio off, Auto voice call, Send image and Auto answer.

- **Picture mode:** To switch between image windows during a video call.
- **Image quality:** To set the image quality for video.
- **Camera off:** To open or close the video channel during a video call.
- **Audio off:** To open or close the audio channel during a video call.
- **Auto voice call:** To enable the auto voice call function. The phone auto makes a voice call, when the other party's phone does not support the video call service.
- **Send image:** To select a file and send it to the other party when you hold a video call.
- **Auto answer:** To auto answer an incoming video call. You can enable or disable this function.

Contact settings

This option is used to set the default contact list displayed in the contact screen or sort the contacts on the **Contacts** screen.

JAVA settings

This option is used to set the volume and vibration of games.

Connectivity

The data connection function provides several data communication functions. You can synchronise data between your phone and a PC through a USB cable or Bluetooth. Your PC can use the built-in modem of your phone to access the Internet. For detailed information, refer to "Connections" on page 40.

Network

You can change the settings for the network.

Select **Settings > Network** for the following options: Mode, Select Network, Cell information, and Operator list.

Security


You can change the settings related to the phone security.

Orig. phone settings

This option is used to reset your phone to the factory settings.

Password lock

This option is used to enable or disable the "Phone lock" and "PIN lock".

- 1 Select **Phone lock/PIN lock**.
- 2 Press the up/down scroll key to select **On** or **Off**.
- 3 Set password:
 - Phone password: Enter the phone password.
 - PIN password: If the desired status is the same as the current status, just press . Con-

■ DRM Setting

versely, you need to select the desired status and then enter the PIN code.

Change password

You can modify the phone password and PIN code.

- 1 Select **Security > Change password**.
- 2 Select one item from **Phone password**, **PIN code**, and **PIN2 code**.
- 3 Enter the old password (The initial phone password of the Vodafone 725 is 0000).
- 4 Enter a new password.
- 5 Enter the new password again to confirm.

Note

- To modify the PIN code, you must set the "PIN locked" to "On" first.
- If you enter the wrong PIN or PIN2 three times, the SIM card is locked. You need the PUK or PUK2 code to unlock the SIM card. If you enter the wrong PUK or PUK2 code 10 times in total, the SIM card is locked permanently.


- PUK or PUK2 code are delivered with the SIM card. If you have not received one or have forgotten it, contact your local Vodafone customer care centre.

Fixed dialer number

If your SIM card supports the Fixed Dialer Number (FDN) function, you can select **Security > Fixed dialer number** to set the limit for phone numbers.

DRM Setting

Digital Rights Management (DRM) can protect the digital content from piracy and protect the provider's interests. The digital content includes Java applications and multimedia content such as images, audio and video. If the protected content cannot be accessed, it indicates that the corresponding copyright is overdue or used up.

Select **Settings > DRM setting**. Enter the correct phone password and press  to confirm, and you can delete all the rights.

14 Warnings and Precautions

RF Exposure

General Statement on RF energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Body worn operation

Important safety information regarding radiofrequency radiation (RF) exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5 cm (0.6 inch) separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limiting exposure to radio frequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.

Regulatory information

The following approvals and notices apply in specific regions as noted.



EU Declaration of Conformity

RF Exposure

according to the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC

For the following equipment

Product: WCDMA/GPRS/GSM Mobile Phone With Bluetooth

Type Designation/Trademark: U1300/HUAWEI;V725/VODAFONE; Vodafone 725/VODAFONE

Manufacturer's Name: Huawei Technologies Co.,Ltd.

Manufacturer's Address: Bantian, Longgang District, Shenzhen, 518129, Guangdong, P. R. China.

is herewith confirmed to comply with the requirements set out in the Council Directive 1999/5/EC for radio equipment and telecommunications terminal equipment. For the evaluation of the compliance with this Directive, the following standards were applied:

Safety: EN 60950-1:2001 First Edition+A11:2004

Health: EN 50360:2001; EN 50361:2001;

EMC: EN 301 489-1 V1.6.1; EN 301 489-24 V1.3.1; EN 301489-7 1.3.1; EN 301489-17 1.2.1;

Radio: EN 301 511 V9.0.2; EN 301 908-1 V2.2.1; EN 301 908-2 V2.2.1; EN 300 328 V1.7.1;

Responsible for making this declaration is the: Manufacturer.

CETECOM ICT Services GmbH



CERTIFICATE OF CONFORMITY

Registration-No.: **E815288V-CC** Number of annexes: ---

Certificate Holder: **HUAWEI TECHNOLOGIES Co., Ltd.**
Bantian, Longgang District
Shenzhen, 518129
P.R.C.

Product Designation: **V725, Vodafone 725**

Product Description: **WCDMA/GPRS/GSM Mobile Phone With Bluetooth**

Product Manufacturer: **HUAWEI TECHNOLOGIES Co., Ltd.**
Bantian, Longgang District
Shenzhen, 518129
P.R.C.

Specifications and test reports:

Specification	Test report no. & date	Name of test laboratory	Notes
Council Recommendation 1999/519/EC EN 50360:2001 EN 50361:2001	2008EE00512 dated 2008-02-27	Telecommunications Metrology Center of Ministry of Information Industry	conform
EN 60950-1:2001, First Edition+A11:2004	5-5502-01-01-08 dated 2008-03-27	CETECOM ICT Services GmbH	conform
EN 301 489-1 V1.6.1 (2005-09) EN 301 489-7 V1.3.1 (2005-11) EN 301 489-17 V1.2.1 (2002-08) EN 301 489-24 V1.3.1 (2005-11)	5-5502-01-02-08 dated 2008-03-28	CETECOM ICT Services GmbH	conform
EN 301 511 V9.0.2 (2005-03) EN 301 908-1 V2.2.1 (2005-10) EN 301 908-2 V2.2.1 (2005-10) EN 300 328 V1.7.1 (2006-10)	5-5502-01-03-A/08 dated 2008-03-17 5-5502-01-03-B/08 dated 2008-03-17 5-5502-01-03-C/08 dated 2008-03-11	CETECOM ICT Services GmbH	conform

Statement This equipment fulfils the requirements or parts thereof in the above mentioned specifications.

CETECOM ICT Services is authorized to act as Notified Body in accordance with the R&TTE Directive 1999/5/EC of 9. March 1999

Saarbrücken, 2008-03-28
Place, Date of Issue

Signed by Frank Stüblich
Certification Body



CETECOM ICT Services GmbH, Untertürkheimer Straße 6-10, 66117 Saarbrücken, Germany

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this equipment not expressly approved by HUAWEI may void the FCC authorization to operate this equipment.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on handling and use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone whenever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorised personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum - 40 and maximum + 70 degrees Celsius.
- Please check local regulations for disposal of electronic products.

Do not carry your phone in your back pocket as it could break when you sit down.

Small children

Do not leave your phone or its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Demagnetisation

To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.



Normal use position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.



Air bags

Do not place a phone in the area over an air bag or in the air bag deployment area. Store the phone safely before driving your vehicle.

Seizures/Blackouts

The phone is capable of producing bright flashing lights.

Electrical safety

Repetitive Motion Injuries

To minimise the risk of RSI, when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Make use of the special features in the handset which minimise the number of buttons which have to be pressed, such as message templates and predictive text.
- Take lots of breaks to stretch and relax.

Emergency calls

The phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud noise

This phone is capable of producing loud noises which may damage your hearing.

Phone heating

Your phone may become warm during charging and during normal use.

Electrical safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel must service or repair the phone or its accessories.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorised service centre.

Interference

General statement on interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Explosive environments

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

Interference in cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna is included in the installation.

Explosive environments

Petrol stations and explosive atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Turn off your mobile phone or wireless device when in a blasting area or in areas posted turn off 'two-way radios' or 'electronic devices' to avoid interfering with blasting operations.

Environmental Protection

Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling. Do not dispose of an exhausted battery or old phone in municipal waste.



This symbol indicates that the equipment carrying this mark must NOT be thrown into general waste but should be collected separately and properly recycled under local regulations.

15 Acronyms and Abbreviations

DCF	DRM Content Format
DRM	Digital Rights Management
FDN	Fixed Dial Number
GPRS	General Packet Radio Service
GSM	Global System for Mobile communication
OTA	Over-The-Air
PIN	Personal Identification Number
PLMN	Public Land Mobile Network
PUK	PIN Unblocking Key
SD	Secure Digital Card
SAR	Specific Absorption Rate
STK	SIM Tool Kit
URL	Universal Resource Locator
USB	Universal Serial Bus
WAP	Wireless Application Protocol
WCDMA	Wideband Code Division Multiple Access

16 Appendix

The phone supports image files, video files and audio files of many formats. For details, see the following table.

File type	Formats
Image	JPG, PNG, BMP, GIF, BCI, WBMP, SVG, and SVGZ.
Audio	MP3, AAC/AAC+, AMR, MID, WAV (ADPCM), MMF, QCP, and XMF/DLS.
Video	3GP, MP4, 3G2, and PMD.

Note

In some cases, the preceding media formats may not be supported.

Index

"123" Numeric Input Method	16	Call barring	48
Access Codes	9	Call forwarding.....	48
Accessing the Internet by USB	41	Call settings	48
Accessories.....	58	Call waiting	49
Adding/Deleting Group Members.....	18	Calling ID	50
Air bags	57	Calls.....	14
Aircraft.....	60	Camera	37
Alarm Prompt.....	28	Change password.....	52
Alarms.....	28	Charging the Battery.....	7
Answer mode	49	Charging with a Cable Charger	8
Answering or Rejecting Calls	11	Connection to a Car.....	58
Antenna.....	57	Connectivity	51
Available Options of Games	37	Contact settings.....	51
Auto answer	49	Creating a Message	20
Auto ON and OFF	47	Creating an Email	22
Auto redial	49	Currency converter	32
Back View	3	Date and time	46
Blasting Caps and Areas	60	Demagnetisation.....	57
Bluetooth-Based Data Transfer	44	Display settings	47
Bluetooth-Based Internet Access.....	44	Distraction.....	56
Bluetooth-Based Synchronisation	43	Downloading Games	37
Bluetooth®	43	Driving	56
Body worn operation	53	DRM Setting	52
Bookmarks	35	Electrical safety	58
Broadcast Inbox	25	Electrostatic discharge (ESD).....	57
Browsing Pre-set Web Pages	35	Email Settings.....	24
Calculator.....	31	Email.....	22
Calendar Functions	29	Emergency calls	58
Calendar	28	Environmental Protection	60

Explosive environments	60	Making a Voice Call	11
Faulty and Damaged Products	58	Making Calls from the Contacts.....	17
Fixed dialer number	52	Making or Answering Calls	11
Function Options During Playing	26	Making Voice Calls Using SDN	11
Games	37	Managing a Group	19
General Statement on handling and use	56	Medical devices	59
General statement on interference	59	Memo.....	30
General Statement on RF energy	53	Message Settings	22
Groups	18	Message settings.....	48
Hearing Aids	59	Messages Mailboxes	20
History	36	Messages	20
Home Screen	3	micro-SD Card Reader	42
Hospitals	59	Mobile TV	39
JAVA settings.....	51	Music Library	26
Icon Description	12	Music Store.....	27
Icon Description	13	My number.....	50
Input Different Languages.....	16	My Wishlist	27
Input language	46	Network	51
Interference in cars	60	New Schedule	28
Interference	59	New Tasks	30
Introduction to the Menu	4	Normal use position	57
Keypad lock period	47	Open homepage.....	35
Keypad tone.....	46	Open new page	35
Limiting exposure to radio frequency (RF) fields ...	53	Operating machinery	56
Loading the SIM Card.....	6	Operations After Taking a Picture	38
Loading/Removing a Memory Card	8	Operations During a Video Call	13
Loud noise	58	Operations During a Voice Call	12
Mailboxes.....	23	Operations in the Viewfinder Screen	37
Making a Video Call	11	Operations	12

Operations	13	Select line	50
Orig. phone settings	51	Service dial number	33
Other Operations for the Homepage	35	Setting Alarm Clocks	28
Other Operations	17	Settings	36
Pacemakers	59	Shortcuts	47
Packing List	1	Side View	3
Password lock	51	Small children	57
Petrol stations and explosive atmospheres	60	Sound	46
Phone heating	58	Stopping the Alarm Clock	28
Phone language	46	Stopwatch	33
Phone settings	46	Symbol Input Method	16
Playlists	27	Synchronise	30
Powering Off	9	T9® Input Method	15
Powering On	9	Task Prompt	30
Powering On/Off	9	Task	29
Product Handling	56	Tasks Functions	30
Profiles	46	Templates	25
Radio DJ Settings	27	Timer	33
Regulatory information	53	Traditional Input Method	15
Repetitive Motion Injuries	58	Video call	50
Resume	36	Video Camera	38
RF Exposure	53	Viewing Contacts in Phone/SIM	17
Save unknown number	49	Unit converter	31
Saved pages	36	Unloading the SIM Card	7
Schedule Prompt	29	Vodafone Radio DJ	27
Screen Operations During Playing	26	Voice recorder	32
Searching for a Contact	17	World Time	33
Security	51	USB	40
Seizures/Blackouts	57	USB-Based Synchronisation	40

Your Phone..... 2