



## ***User Guide***

***LG LX290***

***[www.sprint.com](http://www.sprint.com)***

© 2009 Sprint. Sprint and the logo are trademarks of Sprint.  
Other marks are the property of their respective owners.

05/28/09

### **Consejo**

Para encontrar esta guía para usuarios en español, por favor visita a [www.sprint.com](http://www.sprint.com) y haz clic en **Support > Phones & Devices**.

To find this user guide in Spanish, please visit [www.sprint.com](http://www.sprint.com) and click **Support > Phones & Devices**.

### **Important**

**Important Privacy Message** – *Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.*

# Table of Contents

---

**Tip**

Looking for something? If you don't see it in the headings listed here, try the Index on page 125.

<b>Introduction</b>	<b>.i</b>
<b>Your Phone's Menu</b>	<b>.i</b>
<b>Section 1: Getting Started</b>	<b>1</b>
<b>1A. Setting Up Service</b>	<b>2</b>
Setting Up Your Phone	2
Activating Your Phone	3
Setting Up Your Voicemail	3
Sprint Account Passwords	4
Getting Help	5
<b>Section 2: Your Phone</b>	<b>7</b>
<b>2A. Phone Basics</b>	<b>8</b>
Your Phone	8
Viewing the Display Screen	11
Turning Your Phone On and Off	14
Battery and Charger	14
Navigating Through the Menus	17

Displaying Your Phone Number	18
Making and Answering Calls	18
Entering Text	26
<b>2B. Settings</b>	<b>30</b>
Sound Settings	30
Display Settings	34
Location Settings	36
Messaging Settings	37
Airplane Mode	39
TTY Use With Sprint Service	39
Phone Setup Options	41
Security Settings	43
<b>2C. History</b>	<b>48</b>
Viewing History	48
History Options	49
Making a Call From History	49
Saving a Number From History	50
Prepending a Number From History	50
Erasing History	51
<b>2D. Contacts</b>	<b>52</b>
Adding a New Contacts Entry	52

Saving a Phone Number .....	53	Updating the PRL .....	67
Contacts Entry Options .....	53	<b>2F. Voice Services .....</b>	<b>68</b>
Editing a Contacts Entry .....	54	Voice Control .....	68
Adding a Number to a Contacts Entry .....	54	Managing Voice Memos .....	69
Editing a Contacts Entry's Numbers .....	55	<b>2G. Camera .....</b>	<b>71</b>
Assigning Speed Dial Numbers .....	55	Taking Pictures .....	71
Selecting a Ringer Type for an Entry .....	56	Storing Pictures .....	74
Assigning a Picture to an Entry .....	57	Sending Pictures .....	75
Finding Contacts Entries .....	57	Printing Pictures From Your Phone .....	77
Secret Contacts Entries .....	58	Other Settings .....	78
Dialing Sprint Services .....	58	<b>2H. Bluetooth .....</b>	<b>79</b>
Wireless Backup .....	59	Turning Bluetooth On and Off .....	79
<b>2E. Calendar and Tools .....</b>	<b>61</b>	Using the Bluetooth Settings Menu .....	80
Calendar .....	61	Pairing Bluetooth Devices .....	81
Alarm Clock .....	64	Sending Items Using Bluetooth .....	81
Notepad .....	65	<b>Section 3: Sprint Service .....</b>	<b>83</b>
EZ Tips .....	66	<b>3A. Sprint Service: The Basics .....</b>	<b>84</b>
Calculator .....	66	Voice mail .....	84
Unit Converter .....	66	Text Messaging (SMS) .....	87
World Clock .....	67	Sending Pictures .....	89
Updating Phone Software .....	67	Sending Voice Memo .....	90

Caller ID .....	91	Using Your Phone With a Hearing Aid Device ..	116
Call Waiting .....	91	Caring for the Battery .....	118
Making a Three-Way Call .....	91	Radio Frequency (RF) Energy .....	119
Call Forwarding .....	92	Owner's Record .....	121
Roaming .....	92	User Guide Proprietary Notice .....	121
<b>3B. Web and Data Services .....</b>	<b>96</b>	<b>4B. Manufacturer's Warranty .....</b>	<b>122</b>
Getting Started With Data Services .....	96	Manufacturer's Warranty .....	123
Messaging .....	100	<b>Index .....</b>	<b>125</b>
Downloading Games, Ringers and More .....	103		
Browser Options Menu .....	107		
Data Services FAQs .....	108		
<b>3C. GPS Navigation .....</b>	<b>110</b>		
GPS Services .....	110		
Sprint Navigation .....	110		
Sprint Family Locator .....	111		
<b>Section 4: Safety and Warranty</b>			
<b>Information .....</b>	<b>113</b>		
<b>4A. Important Safety Information .....</b>	<b>114</b>		
General Precautions .....	114		
Maintaining Safe Use of and Access to			
Your Phone .....	115		



## Introduction

This *User Guide* introduces you to Sprint® service and all the features of your new phone. It's divided into four sections:

- ◆ *Section 1: Getting Started*
- ◆ *Section 2: Your Phone*
- ◆ *Section 3: Sprint Service*
- ◆ *Section 4: Safety and Warranty Information*

### User Guide Note

*Because of updates in phone software, this printed guide may not be the most current version for your phone. Visit [www.sprint.com](http://www.sprint.com) and log on to MySprintWireless to access the most recent version of the user guide.*

### WARNING

*Please refer to the **Important Safety Information** section on page 114 to learn about information that will help you safely use your phone. Failure to read and follow the **Important Safety Information** in this phone guide may result in serious bodily injury, death, or property damage.*

## Your Phone's Menu

The following table outlines your phone's main menu structure (Grid view). For more information about using your phone's menus, see "Navigating Through the Menus" on page 17.

<b>1: Web</b>	
<b>2: Messaging</b>	
<b>1: Voicemail</b>	
1: Call Voicemail 3: Clear Icon	2: Voicemail Details
<b>2: Send Message</b>	
1: Text 3: Email 5: Audio	2: Picture 4: IM
<b>3: Messages</b>	
<b>4: Email</b>	
<b>5: IM</b>	

<b>6: Settings</b>
1: Reset Envelope
<b>2: Notificaton</b>
1: Message & Icon      2: Icon Only
<b>3: Callback Number</b>
1: None                      2: My Phone Number 3: Other
<b>4: Preset Messages</b>
<b>5: Signature</b>
1: None                      2: Custom
<b>3: Maps</b>
1: Sprint Navigation
2: Sprint Family Locator
<b>4: History</b>
<b>5: Missed Alerts</b>
<b>6: Contacts</b>

<b>7: Photos</b>
<b>1: Camera</b>
<i>Press the right softkey for the following options:</i>
<PREVIEW>
1: Color Tone                      2: White Balance
3: Resolution                      4: Quality
5: Fun Frames                      6: Brightness
<OTHERS>
1: Self Timer                      2: Shutter Sound
3: Status Bar                      4: Night Mode
5: Go to Album
<b>2: MyPhotos</b>
<b>3: MyDestinations</b>
<b>4: OtherSettings</b>
1: Status Bar
2: Location

<b>8: My Stuff</b>	
<b>Games</b>	
Get New My Content Manager Block Breaker 2 Deluxe DEMO PAC-MAN Plus DEMO by Namco Tetris Demo	
<b>Ringers</b>	
Get New	My Content Manager
<b>Screen Savers</b>	
Get New	My Content Manager
<b>Applications</b>	
Get New My Content Manager NASCAR Sprint Cup Mobile NFL Mobile Live ScanLife	
<b>Call Tones</b>	
<b>Options</b>	
Memory Status	Get New
My Content Manager	

<b>9: Settings/Tools</b>	
<b>1: Settings</b>	
<b>1: Display</b>	
<b>1: Main Screen</b>	
1: Screen Saver 3: Menu Styles 5: Picture ID	2: Backlight 4: Foregrounds
<b>2: Font Size</b>	
1: Messages 3: Notepad	2: Browser 4: Dial Digits
<b>3: Keypad Light</b>	
<b>4: Language (Idioma)</b>	
1: English	2: Español
<b>5: Status Light</b>	

<b>2: Sounds</b>	
<b>1: Volume</b>	
1: Ringer 3: Speakerphone 5: Messaging 7: Applications 9: Power On/Off	2: Earpiece 4: Keytones 6: Alarm & Calendar 8: Alerts
<b>2: Ringer Type</b>	
1: Incoming Calls 3: Alarm & Calendar	2: Messaging
<b>3: Vibrate Type</b>	
1: Incoming Calls 3: Alarm & Calendar	2: Messaging
<b>4: Alerts</b>	
1: Beep Each Minute 2: Out of Service 3: Connect 4: Signal Fade/Call Drop	
<b>5: Keytones</b>	
1: Tone Length	2: Tone Volume
<b>3: Airplane Mode</b>	

<b>4: Bluetooth</b>	
<b>1: On/Off</b>	
<b>2: Visibility</b>	
<b>3: My Device Name</b>	
<b>4: My Device Info</b>	
<b>5: Voice Priority</b>	
<b>5: Messaging</b>	
<b>1: Reset Envelope</b>	
<b>2: Notification</b>	
1: Message & Icon	2: Icon Only
<b>3: Callback Number</b>	
1: None 3: Other	2: My Phone Number
<b>4: Preset Messages</b>	
<b>5: Signature</b>	
1: None	2: Custom



<b>7: Navigation Keys</b>	
<b>8: Restrict and Lock</b>	
1: Restrict Voice 3: Lock Photos	2: Lock Data 4: Lock My Phone
<b>9: Roaming</b>	
1: Set Mode 3: Data Roaming	2: Call Guard
<b>*: Security</b>	
1: Lock My Phone 3: Special Numbers 5: Delete/Reset	2: Change Lock Code 4: Edit Contacts List
<b>0: Wireless Backup.</b>	
(After subscribing)	
1: Alerts 3: Troubleshooting 5: Unsubscribe	2: View Status 4: Learn More
<b>2: Tools</b>	
1: Alarm Clock	
2: Bluetooth	

<b>3: Calendar</b>	
<b>4: World Clock</b>	
<b>5: USB Mode</b>	
<b>6: Calculator</b>	
1: Calculator	2: EzTip Calculator
<b>7: Voice Control</b>	
<b>8: Memo</b>	
<b>9: Unit Converter</b>	
<b>*: Update Phone</b>	
<b><i>In Call Menu</i></b>	
Mute/Unmute Contact Details/Save 3-Way Call Voice Memo	Speaker Main Menu Contacts Phone Info

*Section 1*

# ***Getting Started***



## 1A. Setting Up Service

- ◆ *Setting Up Your Phone* (page 2)
- ◆ *Activating Your Phone* (page 3)
- ◆ *Setting Up Your Voicemail* (page 3)
- ◆ *Sprint Account Passwords* (page 4)
- ◆ *Getting Help* (page 5)

### Setting Up Your Phone

1. Install the battery.
  - Press down on the top part of the battery cover with your thumb and slide the cover downward to remove it from the back of the phone.
  - Insert the battery into the opening, making sure the connectors align ( 1 ). Gently press down to secure the battery ( 2 ).



- Replace the battery cover and slide it upward until it clicks into place.
2. Press and hold **END** to turn the phone on.
    - If your phone is activated, it will turn on, search for Sprint service, and enter standby mode.
    - If your phone is not yet activated, see “Activating Your Phone” on page 3 for more information.
  3. Make your first call.
    - Slide the phone open and use your keypad to enter a phone number.
    - Press **TALK**.

#### Note

*Your phone's battery should have enough charge to turn on, find a signal, set up your voicemail, and make a call. You should fully charge your battery as soon as possible. See “Charging the Battery” on page 16 for details.*

## Activating Your Phone

- *If you purchased your phone at a Sprint Store*, your phone should be activated and ready to use.
- *If you received your phone in the mail and it is for a new Sprint account or a new line of service*, it is designed to activate automatically. To confirm your activation, make a phone call.
- *If you received your phone in the mail and you are activating a new phone for an existing number on your account*, you will need to go online to activate your new phone.
  - From your computer's Web browser, go to [www.sprint.com/activate](http://www.sprint.com/activate) and complete the onscreen instructions to activate your phone.

When you have finished, make a phone call to confirm your activation. If your phone is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.

**Tip**

*Do not press END while the phone is being activated. Pressing END cancels the activation process.*

**Note**

*If you are having difficulty with activation, contact Sprint Customer Service by dialing 1-888-211-4727 from any other phone.*

## Setting Up Your Voicemail

All unanswered voice calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your phone is activated.

1. From standby mode, press and hold **1 es**.
2. Follow the system prompts to:
  - Create your passcode.
  - Record your name announcement.
  - Record your greeting.

**Note****Voicemail Passcode**

*Sprint strongly recommends that you create a passcode when setting up your voicemail to protect against unauthorized access. Without a passcode, anyone who has access to your phone is able to access your voicemail messages.*

For more information about using your voicemail, see “Setting Up Your Voicemail” on page 84.

## ***Sprint Account Passwords***

---

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your data services account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

### **Account Username and Password**

If you are the account owner, you will create an account username and password when you sign on to [www.sprint.com](http://www.sprint.com). (Click ***Need to register for access?*** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at [www.sprint.com](http://www.sprint.com).

### **Voicemail Password**

You will create your voicemail password (or passcode) when you set up your voicemail.

### **Data Services Password**

With your Sprint phone, you may elect to set up an optional data services password to control access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at 1-888-211-4727.

# Getting Help

## Managing Your Account

### Online: [www.sprint.com](http://www.sprint.com)

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other products like Sprint Picture Mail, games, ringtones, screen savers, and more.

### From Your Sprint Phone

- Press    to check minute usage and account info.
- Press    to make a payment.

- Press    to access a summary of your Sprint service plan or get answers to other questions.

### From Any Other Phone

- Sprint Customer Service: 1-888-211-4727.
- Business Customer Service: 1-800-927-2199.

## Sprint 411

Sprint 411 gives you access to a variety of services and information through your phone, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

### To call Sprint 411:

- ▶ Press    .

## *Sprint Operator Services*

Sprint Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

*To access Sprint Operator Services:*

▶ Press   .

For more information or to see the latest in products and services, visit us online at [www.sprint.com](http://www.sprint.com).

*Section 2*  
**Your Phone**



## 2A. Phone Basics

- ◆ *Your Phone* (page 8)
- ◆ *Viewing the Display Screen* (page 11)
- ◆ *Turning Your Phone On and Off* (page 14)
- ◆ *Battery and Charger* (page 14)
- ◆ *Navigating Through the Menus* (page 17)
- ◆ *Displaying Your Phone Number* (page 18)
- ◆ *Making and Answering Calls* (page 18)
- ◆ *Entering Text* (page 26)

### Tip

Phone Software Upgrades – Updates to your phone's software may become available from time to time. Sprint will automatically upload critical updates to your phone. You can also use the menu to check for and download updates. Press  > Settings/Tools > Tools > Update Phone to search for and download available updates.

## Your Phone





## Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Signal Strength Indicator** represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
3. **Display Screen** displays all the information needed to operate your phone, such as the call status, the Contact list, the date and time, and the signal and battery strength.
4. **Softkeys** let you select softkey actions or menu items corresponding to the bottom left and right lines on the display screen.
5. **TALKKey** allows you to place or receive calls, answer Call Waiting, and use Three-Way Calling.
6. **BACKKey** deletes characters from the display in text entry mode. When in a menu, press this key to return to the previous menu.
7. **Keypad** lets you enter numbers, letters, and characters, and navigate within menus.
8. **Microphone** allows other callers to hear you clearly when you are speaking to them.

9. **Status Light** indicates incoming calls, new messages, or other events by blinking. It is red while charging and turns green when charging is completed.
10. **Battery Strength Indicator** represents the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon, the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged or empty.
11. **Navigation Keys** allow you to scroll through the phone's screen.
12. **END/POWER Key** lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to decline the call and mute the ringer.
13. **MENU/OK Key** lets you access the phone's menus and selects the highlighted choice when navigating through a menu. While in Standby Mode, pressing the key will take you to the Main Menu.
14. **Shortcut Keys** allows you to directly access the following menus.
  -  : Text Message
  -  : Email
  -  : Alarm
  -  : Calendar
15. **Headset Jack** allows you to plug in either a stereo or mono headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
16. **Side Volume Buttons** allows you to adjust the ringer volume in standby mode or adjust the voice volume during a call.
17. **Charger/Accessory Jack** allows you to connect the phone to the phone charger and to optional accessories, such as a USB cable. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone. Keep it clean for optimal photo quality.
18. **Camera Lens**, as part of the built-in camera, lets you take pictures. Keep it clean for optimal photo quality.

19. **Speaker** let you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing **END**, **BACK**, or any of the side keys. The speaker also lets you hear the caller's voice in speakerphone mode.
20. **SpeakerButton** lets you place or conduct calls in speakerphone mode. Holding down this key for 3 seconds activates the Voice Control function.
21. **Camera Button** lets you activate the camera and take pictures.

## Viewing the Display Screen

Your phone's display screen provides information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

**Tip** To view a list of your phone's icons and descriptions, from the main menu select **Settings/Tools > Settings > Phone Information > Icon Glossary**.

<b>Status Bar – Service Icons</b>	
	<b>1X Signal Strength</b> – Shows your current signal strength. (The more lines you have, the stronger your signal.)
	<b>No Service</b> – Means your phone cannot find a signal.
	<b>Roaming</b> – Indicates you are “roaming” off the Nationwide Sprint Network.
	<b>3G Service Activated</b> – Indicates that Sprint 3G data service is available. When active, the icon is animated.
	<b>3G Service Deactivated</b> – Indicates that Sprint 3G data service is deactivated.
	<b>3G Service Unavailable</b> – Indicates that Sprint 3G data service is unavailable.

<b>Status Bar – Messaging Icons</b>	
	<b>New Urgent Message</b> – Indicates you have new urgent messages.
	<b>Multiple Alerts</b> – Indicates that different kinds of alerts exist.
	<b>New Text Message</b> – Indicates you have new text messages.
	<b>New MMS Message</b> – Indicates you have new multimedia messages.
	<b>New Voicemail</b> – Indicates you have voicemail messages. (Press and hold  to call your voicemail box.)
	<b>New Email</b> – Indicates you have new email.

<b>Status Bar – Status Icons</b>	
	<b>Airplane Mode</b> – Indicates that the phone is in Airplane Mode.
	<b>Full Battery</b> – Shows your current battery charge level. (Icon shown is fully charged.)
	<b>Low Battery</b> – Shows the battery is low.
	<b>Location On</b> – Indicates your phone's location feature is on.
	<b>Location Off</b> – Indicates your phone's location feature is off.
	<b>Ringer Only</b> – Indicates ringer only is set for call alert.
	<b>Vibrate Only</b> – Indicates ringer volume is set to vibrate.
	<b>1 Beep</b> – Indicates one beep is set for call alert.
	<b>1 Beep &amp; Vibrate</b> – Indicates one beep and vibration is set for call alert.
	<b>Vibrate All</b> – The ringer is set to vibrate all.

<b>Status Bar – Status Icons</b>	
	<i>Ringer Off</i> – The ringer is set to off.
	<i>Silence All</i> – All sounds are turned off.
	<i>Ringer &amp; Vibrate</i> – Indicates ringer and vibrate mode is set.
	<i>Calendar</i> – Indicates that you have an event scheduled.
	<i>Missed Call Alert</i> – Indicates a missed call.
	<i>TTY</i> – Indicates your phone is operating in TTY mode.
	<i>Speaker</i> – Indicates speaker is activated.
	<i>Bluetooth Enabled (Hidden)</i>
	<i>Bluetooth Enabled (Visible)</i>
	<i>Bluetooth connected</i>
	<i>Bluetooth connected (Headset)</i>
	<i>Alarm Clock</i> – Indicates alarm is activated.

<b>Status Bar – Status Icons</b>	
	<i>Missed Calls</i> – Indicates a missed call.
	<i>Incoming Calls</i> – Indicates call was an incoming call.
	<i>Outgoing Calls</i> – Indicates call was an outgoing call.
	<i>Camera/Picture</i> – Indicates camera mode.
	<i>Camera Resoluton 1.3M</i> – Indicates camera resolution is set to 1.3M.
	<i>Camera Resoluton Med</i> – Indicates camera resolution is set to Med.
	<i>Camera Resoluton Low</i> – Indicates camera resolution is set to Low.
	<i>Night Mode Setting</i> – Indicates Night mode is set.

## Turning Your Phone On and Off

---

### Turning Your Phone On

- ▶ Press and hold  for three seconds.

Once your phone is on, it may display “Looking for Service.” When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint service by pressing any key (when your phone is turned on).

#### Tip

*The Power Save feature conserves your battery power when you are in an area where there is no signal.*

### Turning Your Phone Off

- ▶ Press and hold  for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

## Battery and Charger

---

#### WARNING

*Use only Sprint-approved or LG-approved batteries and chargers with your phone. The failure to use a Sprint-approved or LG-approved battery and charger may increase the risk that your phone will become damaged or even cause the battery to catch fire.*

Sprint-approved or LG-approved batteries and accessories can be found at Sprint Stores or through LG; or call 1-866-866-7509 to order. They’re also available at [www.sprint.com](http://www.sprint.com).

## Battery Capacity

Your phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 6 hours of continuous digital talk time.

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then turns off.

**Note** Long backlight settings, searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.

**Tip** Watch your phone's battery level indicator and charge the battery before it runs out of power.

## Installing the Battery

1. Press down on the top part of the battery cover with your thumb and slide the cover downward to remove it from the back of the phone.
2. To install, insert the battery into the opening on the back of the phone, aligning the battery contacts with the contacts in the compartment ( 1 ) and then gently press the battery down until it clicks into place ( 2 ).



3. Replace the cover and slide it upward until it clicks into place.

## Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers, messages or data.
2. Press down on the top part of the battery cover with your thumb and slide the cover downward to remove it from the back of the phone ( **1** ).
3. Hold the phone in one hand so that the battery is facing you.
4. Hold the top edge of the battery and lift the battery from the battery compartment ( **2** ).



### **WARNING**

*Do not handle a damaged or leaking Li-Ion battery, to prevent possible injury.*

## Charging the Battery

Charge your battery as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off, and you can lose any information you were just working on.

Always use a Sprint-approved or LG-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

- ▶ Plug the flat end of the charger into the phone's charger/accessory jack and the other end into an electrical outlet. Make sure that the end going into the phone has the "B" side facing up when inserting.
  - A **red status light** means the battery is charging.
  - A **green status light** means the battery is at least 90 percent charged.

With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

## Navigating Through the Menu

---

The navigation key on your phone lets you scroll through onscreen items. Many menus feature a scroll bar on the right to help you keep track of your position in the menu.

To navigate through a menu, press the navigation key left, right, up or down. If you are in a first-level menu, such as **Messaging**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

For a diagram of your phone's menu, please see "Your Phone's Menu" on page i.

## Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any option by highlighting it and pressing . If the option is numbered, you can select it by pressing the corresponding number on the phone's keypad.

For example, to view your text messages:

1. From standby mode, press  to access the main menu.
2. Select **Messaging** by highlighting it and pressing .
3. Select **Messages** by highlighting it and pressing . (If you have any messages, they are displayed.)

For the purposes of this guide, the above steps condense into:

- ▶ Press  > **Messaging** > **Messages**.

## Backing Up Within a Menu

*To go to the previous menu:*

- ▶ Press .

*To return to standby mode:*

- ▶ Press .

## Displaying Your Phone Number

- ▶ Press  > **Settings/Tools** > **Settings** > **Phone Information** > **Phone Number**. (Your phone number and other information about your phone and account will be displayed.)

## Making and Answering Calls

### Making Calls

1. Slide the phone open and enter a phone number from standby mode. (If you make a mistake while dialing, press  to erase the numbers.)
2. Press . (To make a call when you are roaming and Call Guard is enabled, select **Roam Call** and press  and select **YES**. See “Call Guard” on page 94.)
3. Press  or close the phone when you are finished.

#### Tip

*To redial your last outgoing call, press TALK twice.*

*To redial other recent calls, press TALK, highlight a number, and press TALK again.*

*When making calls off the Nationwide Sprint Network, always dial using 11 digits (1 + area code + phone number).*

You can also place calls from your phone by using speed dialing numbers from your Contacts (page 25), using your call history listings (page 49), and voice dialing a call with Voice Control (page 68).

## Dialing Options

When you enter numbers in standby mode, press **OPTIONS** (right softkey) and choose from a variety of dialing options.

To initiate an option, highlight it and press .

### Tip

To speed dial a phone number from standby mode, press and hold the speed dial number. If the speed dial number is two digits, enter the first digit, and then press and hold the second digit. (For information on setting up speed dial numbers, see “Assigning Speed Dial Numbers” on page 55) (This feature will not work when you are roaming off the Nationwide Sprint Network; when roaming you must dial using eleven digits [1 + the area code + the seven-digit phone number].)

- **Contact Details** allows you to check Contacts details for numbers that are already saved in the phone.

- **Save** allows you to save the phone number in your Contacts. (See “Saving a Phone Number” on page 23.)
- **Hard Pause** allows you to enter a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 24.)
- **2-sec Pause** allows you to enter a two-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 24.)

### Tip

When you enter numbers in standby mode, press **SEND MSG** (left softkey) to quickly send a text message, picture mail, or voice message to the dialed number.

## Answering Calls

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call. (Depending on your settings, you may also answer incoming calls by pressing any number key or by sliding the phone open. See “Call Answer Mode” on page 41 for more information.)

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, you will see the entry's name. You may also see the caller's phone number, if available.

Depending on your settings, you may also see the following options.

- **Answer** to answer the call.
- **Silence** to mute the ringer.
- **Send to Voicemail** to send the call to voicemail.
- **Ignore with Text** to send a text message. You can send the preset message or edit it.

## Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide Sprint Network. Please see "Roaming " on page 92 for more information about roaming.

- ▶ Select **YES** to answer the call. (See "Call Guard" on page 94 for additional information.)

### Note

*When your phone is off, calls go directly to voicemail.*

## Ending a Call

- ▶ Close the phone or press  .

## Missed Call Notification

When you do not answer an incoming call, your screen displays the missed alerts list.

To display the missed call entry from the notification screen:

- ▶ Highlight the entry and press . (To dial the phone number, press .)

To display a missed call entry from standby mode:

1. Press  > **Missed Alerts**.
2. Select the entry you wish to view and press .

## Calling Emergency Numbers

You can place calls to 911 (dial    ,), even if your phone is locked or your account is restricted.

**Note** When you place an emergency call, your phone automatically enters Emergency mode.

During an emergency call, press  to select your options.

- **Speaker On** or **Speaker Off** to route the phone's audio through the speaker or through the earpiece.
  - Select **Speaker On** to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume keys on the side of the phone.)
  - Select **Speaker Off** to use the phone's earpiece.
- **Phone Number** to display your wireless phone number.

To exit Emergency mode:

1. Press .
2. Press **EXIT** (right softkey).

## Enhanced 911 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

### **IMPORTANT**

Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

## *In-Call Options*

Pressing **OPTIONS** (right softkey) during a call displays a list of available in-call features. To select an option, highlight the option and press . The following options may be available through the options menu:

- **Speaker** to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume keys on the side of the phone.)

### **WARNING**

*Because of higher volume levels, do not place the phone near your ear during speakerphone use.*

- **Save** to save a phone number in your Contacts. (See "Saving a Phone Number" on page 23.)
- **Contact Details** to display the contact details. (If the contact is saved in the Contacts.)
- **Main Menu** to display the phone's main menu.
- **3-Way Call** to set up a three-way conversation.
- **Contacts** to access the Contacts menu.
- **Voice Memo** to record the current conversation.
- **Phone Info** to check the phone number, version, etc.

Press **MUTE** (left softkey) during a call to mute the microphone. Press **UNMUTE** (left softkey) to unmute the microphone.

## End-of-Call Options

When a call ends, press **OPTIONS** (right softkey) to select an available action:

- **New Group** to save the number to a new group listing.
- **Contact Details** to display the number's Contacts entry (if the number is saved in Contacts).
- **Save Contact** to save the number to Contacts (if the number is not already saved).
- **Delete** to delete the entry from recent history.
- **Delete All** to delete all entries from recent history.

**Note** *The End-of-Call options are limited for calls identified as No ID or Restricted.*

## Saving a Phone Number

Your phone can store up to 7 phone numbers in each of 600 Contacts entries. Each entry's name can contain 64 characters. Your phone automatically sorts the Contacts

entries alphabetically. (For more information, see "Contacts" on page 52.)

*To save a number from standby mode:*

1. Enter a phone number.
2. Press **OPTIONS** (right softkey), highlight **Save** and press .
3. Highlight **New Entry** for a new contact or **Existing Entry** to add a number to an existing contact and press .
4. Select **Mobile, Home, Work, Pager, Fax, or Other** for the phone label.
5. Enter the new contact name and press **DONE** (left softkey) to save the new entry.

– or –

Search for an existing contact name and press  to save the new number. Press **DONE** (left softkey) to save the new entry.

## Finding a Phone Number

You can search Contacts for entries by name.

1. While in Standby Mode, press **CONTACTS** (right softkey) and enter the first letter or letters of an entry. (The more letters you enter, the more specific the search.)
2. To display an entry, highlight it and press . To dial a number, highlight it and press .

## Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** sends the next set of numbers when you press **Send Tones** (left softkey).
- **2-Second Pause** automatically sends the next set of numbers after two seconds.

### Note

You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Press **OPTIONS** (right softkey) > **Hard Pause** or **2-sec Pause**.
3. Enter additional numbers.
4. Press  to dial the number.

– Or –

To save the number in your Contacts list, press **OPTIONS** (right softkey), highlight **Save**, and press .

## Abbreviated Dialing

Abbreviated dialing lets you prepend the first five or six digits (for example, the area code and prefix) to any four or five digits you enter. (See “Setting Abbreviated Dialing” on page 42.)

To place a call using abbreviated dialing:

- ▶ Enter the last four or five digits of the number and press .

## Contacts Match Dialing

Retrieve any number saved in your Contacts by entering only three consecutive digits of the number. (See “Setting Contacts Match Dialing” on page 42.)

*To place a call using contacts match dialing:*

1. Enter three consecutive digits of a Contacts entry’s phone number. (The matched numbers are shown at the bottom of the screen.)
2. Highlight a phone number and press  to call the displayed number.

## Dialing From the Contacts List

1. Press  > **Contacts**.

### Shortcut

From standby mode, press **CONTACTS** (right softkey) to list entries.

2. Highlight the entry you want to call and press  to dial the entry’s default phone number.

– or –

To dial another number from the entry, highlight the name and press , and then highlight a number and press .

## Speed Dialing

You can store up to 98 numbers in your phone’s speed dial memory. Dial speed dial entries using one keypress for locations 2–9 or two keypresses for locations 10–99.

*To use One-Touch Dialing for speed dial locations 2–9:*

- ▶ While in Standby Mode, press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows “Connecting...”.

To use Two-Touch Dialing for speed dial locations 10–99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows “Connecting...”.

**Note** Speed dialing is not available when you are roaming; when you are roaming off the Nationwide Sprint Network, you must always dial using eleven digits (1 + area code + number).

## Entering Text

---

### Selecting a Text Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using email and text messaging).

1. From a screen where you can enter text, press **OPTIONS** (right softkey) and select **Text Mode** to change the text input mode.
2. Select one of the following options:
  - **Abc** to use multi-tap entry – press **2 ABC** once for “a,” twice for “b,” three times for “c” (see “ABC Mode” on page 27).
  - **Predictive Text** to enter text using a predictive text-entry system that reduces the number of keypresses required to enter a word (see page 28).
  - **123** to enter numbers by pressing the numbers on the keypad (see page 29).
  - **Symbols** to enter symbols (see page 29).
  - **Emoticon** to enter emoticons (see page 29).
  - **Settings** to enter text entry settings.

**Tip** When entering text, press **\*->T** to change letter capitalization (Abc>ABC>abc).

## ABC Mode

1. Select the Abc mode. (See “Selecting a Text Input Mode” on page 26.)
2. Press the corresponding keys repeatedly until the correct letter appears. (For example, to enter the word “Bill,” press **2 ABC** twice, **4 GH** three times, **5 JKL** three times, and **5 JKL** three times again.) (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to erase an entire word.)

By default, the first letter of a sentence is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
<b>1</b> [SR]	., @ 1'?!*# /	
<b>2</b> [ABC]	<b>A B C 2</b>	<b>a b c 2</b>
<b>3</b> [DEF]	<b>D E F 3</b>	<b>d e f 3</b>
<b>4</b> [GHI]	<b>G H I 4</b>	<b>g h i 4</b>
<b>5</b> [JKL]	<b>J K L 5</b>	<b>j k l 5</b>
<b>6</b> [MNO]	<b>M N O 6</b>	<b>m n o 6</b>
<b>7</b> [PQRS]	<b>P Q R S 7</b>	<b>p q r s 7</b>
<b>8</b> [TUV]	<b>T U V 8</b>	<b>t u v 8</b>
<b>9</b> [WXYZ]	<b>W X Y Z 9</b>	<b>w x y z 9</b>
<b>[SHIFT]</b>	<b>Shift</b>	<b>Caps Lock</b> <b>Unshift</b>
<b>0</b> [ ]	<b>0</b>	
<b>#</b> [SPACE]	<b>Space</b>	

## Predictive Text Input

Predictive Text Input lets you enter text using fewer keypresses per word. (To select the Predictive Text mode when entering text, see “Selecting a Text Input Mode” on page 26.)

Predictive Text Input uses an intuitive word database to analyze the letters you enter and create a suitable word.

**Note** *The word may change as you type.*

1. When entering text, select the **Predictive Text** input mode. (See “Selecting a Text Input Mode” on page 26.)
2. Enter a couple of letters of a word, with one key press per letter. When you enter a letter of a word, a small window will appear and show the words starting with the letters.  
(If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to erase an entire word.)
3. Scroll to the desired word and press **MENU/OK** to select it.

## Adding a Word to the Predictive Text Database

1. If a word you want to enter is not displayed in the list in step 3 above, select **Add Word?** to add a word to the Predictive Text Input database.
2. Enter the word and press **MENU/OK**. The word will appear as an option the next time you scroll through options during Predictive Text Input.

### Tip

*You can also add words directly to the database. From a text entry screen, press **OPTIONS** (right softkey) > **Text Mode** > **Settings** > **Add My Word**. Enter a word and press **SAVE** (left softkey).*

## *Entering Numbers, Symbols and Emoticons*

### *To enter numbers:*

- ▶ Select the **123** mode and press the appropriate key. (See “Selecting a Text Input Mode” on page 26.)

### *To enter symbols:*

- ▶ Select the **Symbols** mode. (See “Selecting a Text Input Mode” on page 26.) To enter a symbol, press the appropriate key indicated on the display.

### *To enter emoticons*

- ▶ Select the **Emoticons** mode and press the appropriate key. (See “Selecting a Text Input Mode” on page 26.)

## 2B. Settings

- ◆ *Sound Settings (page 30)*
- ◆ *Display Settings (page 34)*
- ◆ *Location Settings (page 36)*
- ◆ *Messaging Settings (page 37)*
- ◆ *Airplane Mode (page 39)*
- ◆ *TTY Use With Sprint Service (page 39)*
- ◆ *Phone Setup Options (page 41)*
- ◆ *Security Settings (page 43)*

### Sound Settings

---

#### Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

#### Selecting Ringer Types for Incoming Calls

Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

1. Press  > **Settings/Tools** > **Settings** > **Sounds** > **Ringer Type** > **Incoming Calls**.
2. Select **Contact Entries** or **Unknown #s**. (You can identify incoming calls from the contacts or unknown by setting the different ringer type.)
  - **Contact Entries**
    - **All Contacts**: You can set a ringer type for the calls from all contacts.
    - **One Contact**: You can set a specific ringer type for the calls from one specific contact.
  - **Unknown #s**
    - You can set a ringer type for anonymous calls. (A list of ring type categories will be displayed.)
3. Select a category, and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign a ringer.

## Selecting RingerTypes for Messages

1. Press  > **Settings/Tools** > **Settings** > **Sounds** > **RingerType** > **Messaging**.
2. Select **Voicemail, Messages Email**. (A list of ring type categories will be displayed.)
3. Select a category, and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign a ringer.

## Selecting RingerTypes for Alarm & Calendar

1. Press  > **Settings/Tools** > **Settings** > **Sounds** > **RingerType** > **Alarm & Calendar**.
2. Select a category, and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
3. Press  to assign a ringer.

## Getting New Ringers

A wide variety of new ringers is available from the Sprint Digital Lounge, and you can access them right from your phone. (Additional charges may apply, but some are free.)

1. Press  > **Settings/Tools** > **Settings** > **Sounds** > **RingerType** > **Incoming Calls, Messaging or Alarm & Calendar**.
2. Select a call or message type to display a list of ringer type categories.
3. Select **Downloaded Ringers** > **Get New**. (The browser starts and displays the Ringers menu.)
4. Use your navigation key and keypad to search through available ringers. When you find one you want, highlight it and press .
5. To purchase the ringer, highlight **Buy** and press . (Your phone automatically downloads the ringer.)
6. When the download is finished, select an option to continue:
  - **Listen** to listen to the ringer.

- **SetAs** to assign the ringer to a call or message type or to a specific contact. (It will automatically be assigned to the type or contact you were viewing in step 2.)
- **Shop** to browse for other items to download.

#### Note

You can also assign ringers from the Contacts menu or from My Stuff. See “Selecting a Ringer Type for an Entry” on page 56 or “Downloading Games, Ringers and More” on page 103.

## Volume

Adjust your phone’s volume settings to suit your needs and your environment.

1. Press  > **Settings/Tools** > **Settings** > **Sounds** > **Volume**.
2. Select **Ringer, Earpiece, Speakerphone, Keytones, Messaging, Alarm & Calendar, Applications, Alerts or Power On/Off**.
3. Using the navigation key, choose a volume level and press .

#### Tip

You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume keys on the left side of your phone.

## Vibrate Type

To select a vibrate type for Contacts entries, types of calls, types of messages, or other events:

1. Press  > **Settings/Tools** > **Settings** > **Sounds** > **Vibrate Type**.
2. Select **Incoming Calls, Messaging, or Alarm & Calendar** and, if applicable, select a type.
3. Use your navigation key to scroll through the available vibration types. A sample vibration will be made as you highlight each option.
4. Select a vibrate type and press .

To set your phone to vibrate instead of making any sounds:

- ▶ With the phone open, press the volume button down repeatedly in standby mode until you see “Vibrate All” on the screen.

To set your phone always to vibrate in addition to any ringer settings:

1. With the phone open, press the volume button up or down in standby mode until a volume setting appears on the screen.
2. Press **VIBRATE** (left softkey) to check the **Vibrate On** option. (If you have already checked the option, pressing **VIBRATE** deselects it.)

## Silence All

The Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

- ▶ With the phone open, press and hold the volume button down in standby mode. (The screen will display "Silence All.")

To deactivate Silence All:

- ▶ Press the volume button up repeatedly to select a volume level.

## Alert Notification

Set your phone to alert you with an audible tone when you change service areas, once a minute during a voice call, or when a call has been connected, and/or when the signal fades or a call is dropped.

1. Press  > **Settings/Tools** > **Settings** > **Sounds** > **Alerts**.
2. Select **Beep Each Minute**, **Out of Service**, **Connect**, or **Signal Fade/Call Drop** and press .
3. Press **ON** or **OFF** (left softkey).

## Selecting a Key Tone

Your phone offers a number of options for selecting the audible tones accompanying a keypress.

1. Press  > **Settings/Tools** > **Settings** > **Sounds** > **Keytones**.
2. Highlight an option and press .
  - **Tone Length** to select a key tone length. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)
  - **Tone Volume** to select a keypress volume level.

## Display Settings

---

### Changing the Clock & Calendar Display

Choose whether you want your phone's clock to be displayed in analog mode, digital mode, or with time and date.

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Main Screen** > **Foregrounds** > **Clock & Calendar**.
2. Select an option and press  to view it. (Once you see an image, use your navigation key to scroll left and right and view other available previews.)
3. Press  to apply the setting.

### Changing the Text Greeting

The screen displays a text greeting in standby mode. Choose the phone's default greeting ("Sprint") or enter your own custom greeting.

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Main Screen** > **Foregrounds** > **Greeting**.
2. Select **Custom** or **Off**.

If you select Custom, enter a custom greeting and press . (See "Entering Text" on page 26.) (Use the  key to erase the existing greeting.)

3. Press **SAVE** (left softkey) to save your new greeting.

### Changing the Display Screen

Choose what you see on the display screen while powering on or off and when in standby mode.

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Main Screen** > **Screen Saver**.
2. Select **Preloaded**, **My Photos**, **Assigned Media**, **My Stuff**, **New Picture**, or **Slide Show**.
3. Use the navigation key to select an image and press  to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)
4. Press **ASSIGN** (left softkey) to assign the desired image.

## Changing the Backlight Time Length

Select how long the display screen and keypad remain backlit after you press any key.

1. Press **MENU** **OK** > **Settings/Tools** > **Settings** > **Display** > **Main Screen** > **Backlight**.
2. Highlight a setting and press **MENU** **OK**.

**Note** Long backlight settings reduce the battery's talk and standby times.

## Changing the Display Screen for Incoming Calls

You can set the screen to be shown on the Incoming Calls display.

1. Press **MENU** **OK** > **Settings/Tools** > **Settings** > **Display** > **Main Screen** > **Picture ID**.
2. Select **Contact Entries** or **Unknown #s**, and, if applicable, select a type.
3. Select **None**, **New Picture**, **My Photos**, **Screen Savers**, or **Assigned Media**.

4. Use the navigation key to highlight your selection and press **MENU** **OK** to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)
5. Press **MENU** **OK** or **ASSIGN** (left softkey) to assign an image.

## Changing the Phone's Menu Style

Choose the layout of your phone's menu.

1. Press **MENU** **OK** > **Settings/Tools** > **Settings** > **Display** > **Main Screen** > **Menu Styles**.
2. Highlight an option and press **MENU** **OK**.
  - **GRID VIEW** to view the menu as a grid.
  - **LISTVIEW** to display the menu as a list.

## Changing the Text Input Font

Adjust the font when entering text (for example, when using the notepad).

1. Press **MENU** **OK** > **Settings/Tools** > **Settings** > **Display** > **Font Size**.
2. Select **Messages**, **Browser**, **Notepad**, or **Dial Digits**.

3. Scroll up or down to select a size and press  or **SAVE** (left softkey).

## Changing Keypad Light Mode

The keypad light setting lets you to turn the keypad light on or off.

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Keypad Light**.
2. Press **ON/OFF** (left softkey) and .

## Display Language

You can choose to display your phone's onscreen menus in English or in Spanish.

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Language (Idioma)**.
2. Highlight **English** or **Español** and press .

## Changing the Status Light Mode

This feature uses a blinking light to inform you of your phone's current status.

To change the status light mode:

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Status Light**.
2. Press **ON/OFF** (left softkey) and .

## Location Settings

---

Your phone is equipped with a Location feature for use in connection with location-based services.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

### Note

*Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.*

To enable your phone's Location feature:

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Location**. (The Location disclaimer will be displayed.)
2. Read the disclaimer and press **CONTINUE** (left softkey).
3. Press **ON** or **OFF** (left softkey).

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will be displayed.

## Messaging Settings

---

Your phone's advanced messaging capabilities let you send and receive many different kinds of messages without placing a voice call. (For more information, see "Messaging" on page 100.)

Messaging settings allow you to decide how you would like to be notified of new messages, create a signature with each sent message, and create your own preset messages.

## Resetting Envelope

You can set to remove the envelope icon from the indicator.

1. Press  > **Settings/Tools** > **Settings** > **Messaging** > **Reset Envelope**.
2. Press **REMOVE** (left softkey).

## Setting Message Notification

When you receive a message, your phone notifies you by displaying an icon on your display screen. You can also choose to see the entire message on your display screen.

1. Press  > **Settings/Tools** > **Settings** > **Messaging** > **Notification**.
2. Highlight **Message & Icon** or **Icon Only** and press .

### Tip

You can also set messaging options through the main menu **Messaging** > **Settings** path.

## Callback Number

1. Press  > **Settings/Tools** > **Settings** > **Messaging** > **Callback Number**.

2. Highlight *None*, *MyPhone Number*, or *Other* and press . (If you select *Other*, enter a number and press  or *SAVE* (left softkey)).

## Managing Preset Messages

Your phone is loaded with 20 preset messages to help make sending text messages easier. Customize or delete these messages, such as “Where are you?,” “Let’s get lunch,” and “Meet me at” to suit your needs, or add your own messages to the list.

*To edit a preset message:*

1. Press  > *Settings/Tools* > *Settings* > *Messaging* > *Preset Messages*. (You will see the list of preset messages.)
2. To edit a preset message, highlight it and press .
3. Edit the selected message (see “Entering Text” on page 26), and press .

*To delete a preset message:*

1. From the preset messages list, highlight a message and press *OPTIONS* (right softkey) > *Delete*.

2. Press *DELETE* (left softkey) to delete the message. (Press *CANCEL* [right softkey] to cancel the deletion.)

*To add a new preset message:*

1. Press  > *Settings/Tools* > *Settings* > *Messaging* > *Preset Messages*. (You will see the list of preset messages.)
2. To add a new message, press *ADD* (left softkey).
3. Enter your message (see “Entering Text” on page 26), and press . (Your new message will be added to the beginning of the list.)

## Adding a Customized Signature

Add a customized signature to each message you send.

1. Press  > *Settings/Tools* > *Settings* > *Messaging* > *Signature* > *Custom*. (If you do not wish to attach a signature to your outgoing messages, select *None*.)
2. Enter a signature and press . (See “Entering Text” on page 26.)

## Airplane Mode

---

Airplane Mode allows you to use many of your phone's features, such as Games, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. This feature can be used to extend battery life while playing music. However, when you set your phone to Airplane Mode, it cannot send or receive any calls and messages, or access online information.

1. Press  > **Settings/Tools** > **Settings** > **Airplane Mode**.
2. Read the disclaimer and press **CONTINUE** (left softkey).
3. Highlight **On**, **Off** or **On PowerUp** and press .

While in Airplane Mode, your phone's standby screen will display "Phone off."

## TTY Use With Sprint Service

---

A TTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Sprint service, please call Sprint Customer Service via the state Telecommunications Relay Service (TRS) by first dialing    .

To turn TTY Mode on or off:

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Accessibility** > **TTY**. (An informational message will be displayed.)
2. Press **CONTINUE** (left softkey).
3. Select **Enable TTY** to turn TTY mode on.  
– or –  
Select **Disable TTY** to turn TTY mode off.

**Note** If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

**WARNING**

**911 Emergency Calling**

*Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.*

## Phone Setup Options

---

### Auto Keyguard

Allows you to set the keyguard. Keyguard setting applies to slide closed position only.

1. Press  > **Settings/Tools** > **Settings** > **Keyguard**. (An information window is displayed.)
2. Read the information and press **CONTINUE** (left softkey).
3. Press **ON** or **OFF** (left softkey).

### Call Answer Mode

Select how to answer incoming calls on your phone: whether you want to be required to press , to press any number key, or simply slide the phone open.

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Call Setup** > **Call Answer**.
2. Highlight an option and press  .
  - **Slide Up** to answer a call just by sliding the phone open.

- **AnyKey** to allow you to press any key on the dialpad to answer a call.
- **TALK Only** to require you to press  to answer all calls.

### Auto-Answer Mode

Set your phone to automatically pick up incoming calls when connected to an optional hands-free car kit.

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Call Setup** > **Auto-Answer**.
2. Highlight an option and press  .
  - **Off** to disable Auto-Answer.
  - **Headset** to answer calls automatically when the phone is connected to a headset (sold separately). Remember, your phone will answer calls in Auto-Answer mode even if you are not present.

## Call End Mode

Select how to end calls when you have finished a conversation: whether you want to be required to press , or simply slide the phone close.

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Call Setup** > **Call End**.
2. Highlight an option and press .

**END Key** to require you to press  to end all calls.

**Slide Down/END Key** to end a call either closing the phone or pressing .

## Setting Abbreviated Dialing

To set your abbreviated dialing options:

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Call Setup** > **Abbreviated Dialing**.
2. Select **On** and enter a five- or six-digit number (for example, area code and prefix) and press .

### Tip

To make an abbreviated dial call, see “Abbreviated Dialing” on page 24.

### Note

This setting does not apply to 911 or Sprint 411.

## Setting Contacts Match Dialing

To turn contacts match dialing on or off:

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Call Setup** > **Contacts Match**.
2. Press **ON** or **OFF** (left softkey).

### Tip

To make a call using contacts match, see “Contacts Match Dialing” on page 25.

## Text Entry Settings

1. Press  > **Settings/Tools** > **Settings** > **Text Entry**.
2. Select *Auto-Capital*, *Auto-Space*, *Word Choice List*, *Word Prediction*, *Word Completion*, *Word Scan*, *Dual Language*, *Prediction Length*, *Use My Words*, *MyWords*, or *Help* and press .

## Security Settings

---

### Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

1. Press  > **Settings/Tools** > **Settings** > **More... > Security**.
2. Enter your lock code to display the Security menu.

#### Tip

If you can't recall your lock code, try using the last four digits of your wireless phone number. If this doesn't work, call Sprint Customer Service at 1-888-211-4727.

## Your Phone's Lock Feature

### Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint Customer Service, or special numbers. (See "Special Numbers" on page 45.)

1. Press  > **Settings/Tools** > **Settings** > **More... > Security** and enter your lock code.
2. Select **Lock MyPhone** > **Lock Now**. (To set your phone to lock the next time it is turned on, select **On PowerUp**.)

### Unlocking Your Phone

1. From standby mode, press **UNLOCK** (right softkey).
2. Enter your lock code.

## Locking Data

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Restrict and Lock**.
2. Enter your lock code, highlight **Lock Data** and press .
3. Highlight **Lock** and press .

## Locking Photos

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Restrict and Lock**.
2. Enter your lock code and scroll to **Lock Photos** and press .
3. Highlight **Lock** and press .

## Changing the Lock Code

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Change Lock Code**, and then enter and re-enter your new lock code.

## Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode. (For information on special numbers, see the following “Special Numbers”.)

- ▶ To call an emergency number, special number, or Sprint Customer Service, enter the phone number and press .

## Special Numbers

Special numbers are important numbers that you have designated as being “always available.” You can call and receive calls from special numbers even if your phone is locked.

You can save up to 10 special numbers.

To add or replace a special number:

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Special Numbers**.
3. Select a location for your entry.
4. Enter the number and press .

**Note** There are no speed dial options associated with special numbers.

## Erasing Phone Content

Use the Security menu to erase all content you have created, downloaded, or stored in your phone.

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Delete/Reset**.

3. To select an option, highlight it and press .
  - **Delete Private Browser Data** to delete all the content you have downloaded to your phone.
  - **Delete Contacts** to delete all the contents of your Contacts list.
  - **Delete My Stuff** to delete all the contents in My Stuff.
  - **Delete Photos** to delete all pictures in My Photos.
  - **Delete Messages** to delete all messages.
  - **Delete Voice Memo** to delete all voice memos.
  - **Reset Favorites** to delete all the contents in Favorites.
  - **Reset My Destinations** to clear the cache memory for My Destinations.
  - **Reset All Settings** to restore the user's preferences to factory defaults.
  - **Reset Phone** to set the phone to factory defaults (data in contacts, messaging, pictures, my stuff, tools and settings will be lost).
4. If applicable, check the option that you wish to delete, and press **DONE** (right soft key).
5. Press **DELETE** (left softkey).

## Resetting Default Settings

Resetting the current default settings restores all the factory defaults, including the ringer types and display settings. Contacts, Call History, Calendar, and Messaging are not affected.

*To reset default settings:*

1. Press  >**Settings/Tools**>**Settings**>**More...**>**Security** and enter your lock code.
2. Select **Delete/Reset**>**Reset All Settings**. (A disclaimer appears.)
3. Read the disclaimer and press **CONTINUE** (left softkey).
4. If you are certain that you would like to restore all the factory settings, press **RESET** (left softkey).

## Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. All data from Contacts, Messaging, Pictures, My Contents, Tools, and Settings will be lost, and preference settings will be set to factory defaults.

1. Press  >**Settings/Tools**>**Settings**>**More...**>**Security** and enter your lock code.
2. Select **Delete/Reset**>**Reset Phone**. (A disclaimer is displayed.)
3. Read the disclaimer and press **CONTINUE** (left softkey).
4. If you are certain that you would like to restore all factory settings, press **RESET** (left softkey).

## Security Features for Data Service

### Enabling and Disabling Data Services

You can disable data services without turning off your phone; however, you will not have access to all data services, including Web and messaging. Disabling data services will avoid any charges associated with these services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable data services again at any time.

#### *To disable data services:*

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Data** > **On/Off**. (A message will be displayed.)
2. Press **DISABLE** (right softkey) to confirm that you want to disable data services.

#### *To enable data services:*

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Data** > **On/Off**. (A message will be displayed asking if the user wants to enable the data services.)
2. Press **ENABLE** (right softkey) to enable data service.

## 2C. History

- ◆ *Viewing History (page 48)*
- ◆ *History Options (page 49)*
- ◆ *Making a Call From History (page 49)*
- ◆ *Saving a Number From History (page 50)*
- ◆ *Prepending a Number From History (page 50)*
- ◆ *Erasing History (page 51)*

### Viewing History

History is a list of the last 60 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

1. Press  > **History**.
2. Highlight an entry and press .

#### Shortcut

You can also press **TALK** from standby mode to display your recent history.

#### Note

History only records calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in history.

---

If you return a call from the voicemail menu, it will not be included in your phone's history.

## History Options

Highlight a History entry and press  to display the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts). Press **OPTIONS** (right softkey) to display the following options:

- **New Group** to save the current history entry to a new group.
- **Save Contact** to save the number if it is not already in your Contacts.
- **Contact Details** allows you to view the contact information for numbers that are already stored in Contacts.
- **Delete** to delete the entry.
- **Delete all** to delete all History entries.

## Making a Call From History

1. Press  >**History**.
2. Highlight an entry and press .

### Note

You cannot make calls from History to entries identified as **No ID** or **Restricted**.

## Viewing History Thread

To view the History Thread for a contact, press . Your phone will display all events related to the contact. Press  again to choose from the following options:

- Call
- Send Message
- Contact Details
- Prepend
- Delete

## Saving a Number From History

---

Your phone can store up to 600 Contacts entries. Contacts entries can store up to a total of 7 phone numbers, and each entry's name can contain 64 characters.

1. Highlight a History entry and press .
2. Press **OPTIONS** (right softkey) > **Save Contact**.
3. Select **New Entry** to create a new Contacts entry for the number or **Existing Entry** to save the number to an existing entry.
4. Highlight a number type (**Mobile, Home, Work, Pager, Fax, or Other**) and press .
5. Enter a new entry name and press .  
– or –  
Highlight an existing entry and press .
6. Highlight any information you want to edit, and then press .
7. Press **DONE** (left softkey) to save the entry.

### Note

You cannot save phone numbers already in your Contacts or from calls identified as No ID or Restricted.

## Prepending a Number From History

---

If you need to make a call from History and you are outside your local area code, you can prepend the number by adding the appropriate prefix.

1. Highlight a History entry and press .
2. Press **OPTIONS** (right softkey) > **Prepend**.
3. Enter the prefix and press  to call the number.

## Erasing History

---

To erase individual History entries, see “History Options” on page 49.

1. Press  > *History*.
2. Press *OPTIONS* (right softkey) > *Delete All*.  
(A confirmation dialog will appear.)
3. Press *DELETE* (left softkey) to erase History. (Press *CANCEL* [right softkey] to return to the previous menu without erasing History.)

## 2D. Contacts

- ◆ *Adding a New Contacts Entry (page 52)*
- ◆ *Saving a Phone Number (page 53)*
- ◆ *Contacts Entry Options (page 53)*
- ◆ *Editing a Contacts Entry (page 54)*
- ◆ *Adding a Number to a Contacts Entry (page 54)*
- ◆ *Editing a Contacts Entry's Numbers (page 55)*
- ◆ *Assigning Speed Dial Numbers (page 55)*
- ◆ *Selecting a Ringer Type for an Entry (page 56)*
- ◆ *Assigning a Picture to an Entry (page 57)*
- ◆ *Finding Contacts Entries (page 57)*
- ◆ *Secret Contacts Entries (page 58)*
- ◆ *Dialing Sprint Services (page 58)*
- ◆ *Wireless Backup (page 59)*

## Adding a New Contacts Entry

Your phone can store up to 600 Contacts entries. Contacts entries can store up to a total of 7 phone numbers, and each entry's name can contain 64 characters.

1. Press  > **Contacts** > **Add New**.  
– or –  
Press **CONTACTS** (right softkey) > **Add New**.
2. Highlight **New Contact** and press .
3. Enter a name for the entry and press .
4. Highlight **[Add Number]**, enter the phone number, and then press .
5. Highlight a label field (**Mobile, Home, Work, Pager, Fax, or Other**) and press .
6. Scroll down to additional fields and enter or edit information as desired.
7. Press **DONE** (left softkey).

After you have saved the number, the new Contacts entry is displayed. (See “Contacts Entry Options” on page 53.)

## Saving a Phone Number

To save a number from standby mode:

1. Enter a phone number and press **OPTIONS** (right softkey) > **Save**.
2. Highlight **New Entry** or **Existing Entry** and press .
3. Highlight a label field (**Mobile**, **Home**, **Work**, **Pager**, **Fax**, or **Other**) and press .
4. Enter a new entry name and press .  
– or –  
Highlight an existing entry and press .
5. Add or edit additional information as desired.
6. Press **DONE** (left softkey).

## Contacts Entry Options

To display a Contacts entry:

1. Press **CONTACTS** (right softkey).
2. Highlight an entry and press .

To access an entry's options:

1. Press **CONTACTS** (right softkey).

### Tip

You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

2. Highlight an entry and press **OPTIONS** (right softkey) > **Edit Contact**. Highlight an field (from below) and press .
-  **[Add Name]** to add/edit a name to the entry.
-  **[Add Number]** to add a phone number.
-  **[Add Email]** to add an email address.
-  **[Default Ringer]** to assign a preprogrammed or downloaded ringer.

-  **[Default Vibrate Type]** to assign a vibration type for the incoming calls from the contact.
-  **[Memo]** to add a note, street address, or other information.
-  **[No Secret]** to display Contacts entry's information. Change to **Secret** will not allow the user to see or edit the contact's info unless he enters the phone's lock code.
-  **[URL]** to add a Web address.
-  **[IM]** to add an Instant Messaging address.
-  **[Address]** to add an address.
-  **[Birthday]** to add a birthday.
-  **[Job Title]** to add a job title.
-  **[Company]** to add a company.

## Editing a Contacts Entry

---

1. Press **CONTACTS** (right softkey), highlight a Contact Entry, then press **OPTIONS** (right softkey) > **Edit Contact**.

2. Highlight the part of the entry you wish to edit (**Name**, **Ringer**, etc.) and press .
3. Add or edit the desired information and press .
4. Press **DONE** (left softkey) to save your changes.

## Adding a Number to a Contacts Entry

---

1. Press **CONTACTS** (right softkey), highlight a Contact Entry, then press **OPTIONS** (right softkey) > **Edit Contact**.
2. Highlight **[Add Number]** and press .
3. Enter the new phone number and press .
4. Highlight a number type for the number (**Mobile**, **Home**, **Work**, **Pager**, **Fax**, or **Other**) and press .
5. Press **DONE** (left softkey) to save the new number.
  - or –
  - Press  and press **OPTIONS** (right softkey) > [**Hard Pause**, **2-sec Pause**, **Set # Type**, **Set as Main #**, **Set Speed Dial**], and then press **DONE** (left softkey) to save your new settings.

## Editing a Contacts Entry's Numbers

---

1. Press **CONTACTS** (right softkey), highlight a Contact Entry, then press **OPTIONS** (right softkey) >**Edit Contact**.
2. Highlight a number and press .
3. Press  to clear one digit at a time, or press and hold  to erase the entire number.
4. Re-enter or edit the number.
5. Press **DONE** (left softkey) to save the number.  
– or –  
Press **OPTIONS** (right softkey) for additional options (such as **Set Speed Dial**). When you're finished, press **DONE** (left softkey) to save your new settings.

## Assigning Speed Dial Numbers

---

Your phone can store up to 98 phone numbers in speed dial locations. (For details on how to make calls using speed dial numbers, see “Speed Dialing” on page 25.)

You can assign speed dial numbers when you add an entry or when you add or edit a number.

*To assign a speed dial number to a new phone number:*

1. Add a phone number to a new or to an existing Contacts entry. (See “Adding a New Contacts Entry” on page 52 or “Adding a Number to a Contacts Entry” on page 54.)
2. While entering the phone number, press **OPTIONS** (right softkey) >**Set Speed Dial**.
3. Highlight or enter an available speed dial location and press . (A confirmation will be displayed.)
4. Press  to save the new speed dial number.

To assign a speed dial number to an existing phone number:

1. Press **CONTACTS** (right softkey), highlight a Contacts entry and press **OPTIONS** (right softkey) > **Edit Contact**.
2. Highlight the phone number for which you wish to assign a speed dial number, and press .
3. Press **OPTIONS** (right softkey) > **Set Speed Dial**.
4. Highlight or enter an available speed dial location and press . (A confirmation will be displayed.)
5. Press **DONE** (left softkey) to save the new speed dial number.

**Note**

If you attempt to assign an already in-use speed dial location to a new phone number, a message will appear asking if you wish to replace the existing speed dial assignment. Press **REPLACE** to assign the location to the new phone number and delete the previous speed dial assignment.

## Selecting a Ringer Type for an Entry

Assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 30.)

1. Press **CONTACTS** (right softkey), highlight a Contacts entry and press **OPTIONS** (right softkey) > **Edit Contact**.
2. Select **Default Ringer**, then choose one of the following: **Default Ringer**, **Downloaded Ringers**, **Other Ringers**, **Voice Memo**, or **No Ringer**.
3. Scroll through available ringers. (When you highlight a ringer type, a preview of it will sound, depending on your Ringer volume setting.)
4. Highlight a ringer and press .
5. Press **DONE** (left softkey) to save the new ringer type.

**Tip**

If you select **Downloaded Ringers** > **Get New**, you can purchase and download new ringers. For details, see “Getting New Ringers” on page 31 and “Downloading Games, Ringers and More” on page 103.

## Assigning a Picture to an Entry

---

1. Press **CONTACTS** (right softkey), highlight a Contacts entry (see “Contacts Entry Options” on page 53) and press **OPTIONS** (right softkey) > **Edit Contact**.
2. Scroll up to the current picture and press  to display the Select Photo menu.
3. Highlight an option (*None, New Picture, My Photos, Screen Savers, or Assigned Media*) and press .
4. Highlight a picture and press **ASSIGN** (left softkey).
  - If you selected **New Picture**, the camera will launch and you will use it to take a new picture. (See “Camera” on page 71 for details.)
5. Press **DONE** (left softkey) to save the assigned picture.

## Finding Contacts Entries

---

### Finding Contacts by Name

1. Press **CONTACTS** (right softkey).
2. Scroll through all the entries.
  - or –
  - Enter the first letter or letters of a name (such as “dav” for “Dave”). (The more letters you enter, the more your search narrows.)
3. To display an entry, highlight it and press .
4. To dial the entry’s default phone number, press 
  - or –
  - To display additional Contacts entries, press the navigation key left or right.

## Secret Contacts Entries

---

Making an entry secret hides its phone number(s) and requires your lock code to edit the entry. The name is still displayed, but the phone numbers and other information are replaced with “(SECRET)”.

*To make an entry secret:*

1. Press **CONTACTS** (right softkey) and highlight a Contact.
2. Press **OPTIONS** (right softkey) > **Set as Secret**.
3. Highlight **Secret** and press  to save the new setting.

*To make an entry public:*

1. Press **CONTACTS** (right softkey) and highlight a Contact.
2. Press **OPTIONS** (right softkey) > **Set as Secret**.
3. Highlight **No Secret** and press  to save the new setting.

## Dialing Sprint Services

---

Your Contacts list is preprogrammed with contact numbers for various Sprint services.

*To dial a service from your Contacts:*

1. Press  > **Contacts**.
2. Press **OPTIONS** (right softkey) and select **Settings** > **Services**.
3. Select **Sprint Customer Service, Dir Assistance** (Sprint 411), **PayBill, Account Info, Sprint Operator, Community Information, Non-Emergency Svcs, Traffic Information, Carrier Service Repair, TRS for TTY users** or **Call Before You Dig**.

*To dial a service from standby mode using your keypad:*

1. Dial the appropriate service number:
  - **Sprint Customer Service** –   
  - **Dir Assistance** –   
  - **PayBill** –  
  - **Account Info** –  

- **Sprint Operator** – 0 EXT.
- **Community Information** – 2 ABC 1 ES 1 ES
- **Non-Emergency Svcs** – 3 DEF 1 ES 1 ES
- **Traffic Information** – 5 JKL 1 ES 1 ES
- **Carrier Service Repair** – 6 MNO 1 ES 1 ES
- **TRS for TTY users** – 7 PQRS 1 ES 1 ES
- **Call Before You Dig** – 8 TUV 1 ES 1 ES

2. Press **TALK** to place the call.

## Wireless Backup

This feature allows you to back up all of your contacts to the Sprint website and restore them if your phone is lost, stolen, damaged, or replaced.

**Tip** To use the wireless backup service, you are required to activate the service from your phone.

To subscribe to the wireless backup service, you must purchase a license to use the service through your

phone's browser. The license expires after a set period of time and you must renew it regularly. As part of the initial subscription process, the service generates a random wireless backup password. The service sends the password to your phone as a text message.

## Activating Wireless Backup During Phone Activation

1. When you turn on your phone, you will be prompted to register your phone.
2. Select **Yes**. (When activation is complete, an activation confirmation screen is displayed.)

## Activating and Deactivating Wireless Backup Service

*To activate the wireless backup service:*

1. Press **CONTACTS** (right softkey).
2. Press **OPTIONS** (right softkey) > **Settings** > **Wireless Backup**.
3. Press **SUBSCRIBE** (left softkey) and follow the onscreen instructions to purchase the license.

- Please wait while registering the license. (You will see a confirmation screen once registration is complete.)

#### Note

Wireless Backup can also be activated by pressing  > **Settings/Tools** > **Settings** > **More...** > **Wireless Backup** and following steps 3-4 above.

Once you have completed the registration, you will receive a text message with your password, which is required for the Sprint Wireless Backup website ([www.wirelessbackup.sprint.com](http://www.wirelessbackup.sprint.com)) in order to edit your contacts from your computer.

#### Tip

Each time you edit the contacts on your phone, they are backed up at [www.wirelessbackup.sprint.com](http://www.wirelessbackup.sprint.com).

For information on how to deactivate the wireless backup service:

- Press **CONTACTS** (right softkey).
- Press **OPTIONS** (right softkey) > **Settings** > **Wireless Backup** > **Unsubscribe**.

- Follow the onscreen instructions to unsubscribe from the wireless backup service.

#### Note

You can unsubscribe from the wireless backup service only through the Sprint website.

## Viewing Your Wireless Backup Status

- Press  > **Settings/Tools** > **Settings** > **More...** > **Wireless Backup** > **View Status**.

## Setting the Wireless Backup Alert

This feature turns the pop-up alerts on or off when a wireless backup update has been completed.

- Press  > **Settings/Tools** > **Settings** > **More...** > **Wireless Backup** > **Alerts**.
- Highlight **Alert me** or **No alerts** and press .

## 2E. Calendar and Tools

- ◆ *Calendar* (page 61)
- ◆ *Alarm Clock* (page 64)
- ◆ *Notepad* (page 65)
- ◆ *EZ Tips* (page 66)
- ◆ *Calculator* (page 66)
- ◆ *Unit Converter* (page 66)
- ◆ *World Clock* (page 67)
- ◆ *Updating Phone Software* (page 67)
- ◆ *Updating the PRL* (page 67)

## Calendar

### Adding an Event to the Calendar

Your Calendar helps organize your time and reminds you of important events.

1. Press  > **Settings/Tools** > **Tools** > **Calendar**.  
– or –  
Press .
2. Highlight the day to which you would like to add an event and press **ADD** (left softkey).
3. Select a time for the event by highlighting the time field and pressing .
  - Using your keypad and navigation key, set the start and end times for the event and press .
4. Enter a title for the event by highlighting **[Content]** and pressing .
  - Enter the event title and press **SAVE** (left softkey). (See “Entering Text” on page 26.)
5. Select related persons by highlighting **[Related Person]** and pressing .

- Highlight a related person and press .
  - Press **CONTINUE** (left softkey).
6. Select a Repeat Type for the event by highlighting the repeat field and pressing .
    - Select **None, Daily, Mon – Fri, Select Days, Weekly, Monthly, or Yearly** and press .
  7. Select an alarm time for the event by highlighting the alarm field and pressing .
    - Highlight **None, On time, 5 minutes, 10 minutes, 1 hour, 1 day, or 2 days** and press .
  8. Select a ringer type for the alarm by highlighting the ringer field and pressing .
    - Select a ringer menu (**Downloaded Ringers, Voice Memo, Other Ringers, or No Ringer**), highlight a ringer, and press .
  9. Select a location for the event by highlighting [**Location**] and pressing .
    - Enter a location and press **SAVE** (left softkey). (See “Entering Text” on page 26.)
  10. Press **SAVE** (left softkey) to save the event.

## Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. There are several ways your phone alerts you to scheduled events:

- By playing the assigned ringer type.
- By illuminating the backlight.
- By flashing the LED.

To display the event's details, press .

To take additional actions, press the appropriate softkey:

- **DISMISS** (right softkey) silences the alarm and resets the schedule.
- **SNOOZE** (left softkey) silences the alarm and schedules it to replay again in 9 minutes.

## Viewing Events

1. Press  > **Settings/Tools** > **Tools** > **Calendar**.
  - Or –
  - Press .

2. Select the day for which you would like to view events and press . (If you have events scheduled for the selected day, they will be listed in chronological order.)

### Tip

*In the calendar view, days with events scheduled are highlighted.*

3. To display an event's details, highlight it and press .

## Going to Today's Calendar Menu

*To go to the Calendar menu for today's date:*

- ▶ From Calendar view, press **OPTIONS** (right softkey) > **Go to Today**.  
– or –  
Press .

## Erasing a Day's Events

1. Press  > **Settings/Tools** > **Tools** > **Calendar**.  
– or –  
Press .
2. Select the day for which you would like to erase events and press .

### Tip

*In the calendar view, days with events scheduled are highlighted.*

3. Highlight the event you wish to erase.
4. Press **OPTIONS** (right softkey) > **Delete** or **Delete All**. (An alert will be displayed notifying you that all events will be deleted.)
5. Press **DELETE** (left softkey) or **CANCEL** (right softkey).

### Note

*If the day for which you are erasing events contains a repeating event, you will receive the following prompt: "Delete Recurring Events?" Press **Yes** (left softkey) to erase a single occurrence, or **No** (right softkey) to cancel the deletion of the repeating event.*

## Erasing Past Events

*To delete events scheduled before a specific time and date:*

1. Press  > **Settings/Tools** > **Tools** > **Calendar**.  
– or –  
Press .
2. Press **OPTIONS** (right softkey) > **Delete Old**.

3. Select the option to erase events older than *One day*, *One week*, *One month*, or *One year*. (A dialog will be displayed informing you that all events will be deleted.)

## Erasing All Events

1. Press  > *Settings/Tools* > *Tools* > *Calendar*.  
– or –  
Press .
2. Press *OPTIONS* (right softkey) > *Delete All*.  
(You will see an alert notifying you that all events will be deleted.)
3. Press *DELETE* (left softkey) or *CANCEL* (right softkey).

## Alarm Clock

---

Your phone comes with a built-in alarm clock that has multiple alarm capabilities.

1. Press  > *Settings/Tools* > *Tools* > *Alarm Clock*.  
– or –  
Press .
2. Select *Alarm 1-5*, *Walk the Dog*, or *Quick Alarm*.
3. Turn the alarm on or off by highlighting the On/Off field and pressing .
  - Highlight *On* or *Off* and press .
4. Select a time for the alarm by highlighting the time field and pressing .
  - Using your keypad and/or navigation key, set the alarm time and press .
5. Select a Repetition Type for the alarm by highlighting the repeat field and pressing .
  - Highlight *Once*, *Daily*, *Mon - Fri*, *Weekends*, or *Select Days* and press .

6. Select a snooze interval by highlighting the snooze field and press  .
  - Highlight *5 min later*, *10 min later*, *15 min later*, or *20 min later* and press  .
7. Select a ringer type for the alarm by highlighting the ringer field and pressing  .
  - Highlight a ringer menu, *Downloaded Ringers*, *Voice Memo*, *Other Ringers*, or *No Ringer* and press  .
8. Press **SAVE** (left softkey) to set the alarm.

*To use the Quick Alarm:*

1. Press  > **Settings/Tools** > **Tools** > **Alarm Clock**.  
– or –  
Press  .
2. Select **Quick Alarm**.
3. Select the quick alarm time.  
*Off / 1 min later / 10 min later / 30 min later / 1 hour later.*

## Notepad

---

Your phone comes with a notepad that you can use to compose and store reminders and notes to help keep you organized.

*To compose a note:*

1. Press  > **Settings/Tools** > **Tools** > **Memo** > **Notepad** > **ADD** (left softkey).
2. Type your note using the keypad. (See “Entering Text” on page 26.)
3. Press **SAVE** (left softkey) or  to save your note.

*To read a saved note:*

1. Press  > **Settings/Tools** > **Tools** > **Memo** > **Notepad**.
2. Select a note and press  .

To delete saved notes:

1. Press  > **Settings/Tools** > **Tools** > **Memo** > **Notepad**.
2. Highlight a note and press **OPTIONS** (right softkey) > **Delete**.
3. Press **DELETE** (left softkey).

## EZ Tips

---

1. Press  > **Settings/Tools** > **Tools** > **Calculator** > **EzTip Calculator**.
2. Use your keypad and navigation key to enter the bill amount and tip percentage. (The EZ Tip will be calculated instantly.)
3. If you're splitting the check, select **Split** and enter the number of people in your party. (An equal split of the bill will be calculated and displayed.)

## Calculator

---

Your phone comes with a built-in calculator.

1. Press  > **Settings/Tools** > **Tools** > **Calculator** > **Calculator**.
2. Enter numbers using your keypad.
  - Press  to enter decimal points.
  - Press  to change the numeric value from positive to negative.
  - Press **CLEAR** (left softkey) to clear all numbers.
3. Press  for the total.

## Unit Converter

---

1. Press  > **Settings/Tools** > **Tools** > **Unit Converter**.
2. Select **Length, Area, Mass, Volume, Temperature, or Velocity**.
3. Highlight the known unit type and enter the value. The conversion is displayed automatically.

**Tip**

While converting Temperature, the -/+ sign can be found in the **OPTIONS** menu (right soft key).

## World Clock

---

To view the time in over 50 different locations:

1. Press **OK** > **Settings/Tools** > **Tools** > **World Clock**.
2. Press **CITIES** (right softkey) to choose a city.  
– or –  
Press the navigation key left or right to scroll through different time zones.

## Updating Phone Software

---

The update phone option allows you to download and update the software in your phone automatically. Only the internal software is updated; no Contacts entries or other information saved to your phone will be deleted.

1. Press **OK** > **Settings/Tools** > **Tools** > **Update Phone** > **Update Firmware**.

2. Follow the onscreen instructions.

## Updating the PRL

---

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. Press **OK** > **Settings/Tools** > **Tools** > **Update Phone** > **Update PRL**.
2. Follow the onscreen instructions.

## 2F. Voice Services

- ◆ *Voice Control (page 68)*
- ◆ *Managing Voice Memos (page 69)*

### Voice Control

---

You can use your phone's built-in Voice Control automatic speech recognition (ASR) software to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone, and Voice Control will recognize your voice and complete tasks by itself.

To access Voice Control:

1. Press  > *Settings/Tools* > *Tools* > *Voice Control*.  
– or –  
Press and hold the Speaker button on the right side of the phone.
2. After hearing the message “Call: please say a command,” simply say, in a natural voice, “*Call*” and the name of the person you'd like to call. (For example, you can say, “*Call Jane Smith work*,” “*Call John Baker mobile*,” or “*Call Bob Miller*.”)
3. Your request will be repeated and you will be asked to verify. Say “*Yes*” to call the number or person. (The number will automatically be dialed.) Say “*No*” if you wish to cancel.

You have 8 voice control options.

1. *Call* [Name] [Type]/ [Number]
2. *Send Msg to* [Name] [Type]/ [Number]
3. *Find* [Name] [Type]
4. *Missed Alerts*
5. *Voice Guide*

## 6. Set Speaker

## 7. More...

1. Phone Status
2. Training
3. Bookmark
4. Help

## 8. Exit Voice Control

# Managing Voice Memos

Use your phone's voice services to record brief memos to remind you of important events, phone numbers, or grocery list items.

## Recording Voice Memos

1. Press  > **Settings/Tools** > **Tools** > **Memo** > **Voice Memo** > **RECORD** (left softkey). (The phone prompts you to start recording after the tone.)
2. Wait for the tone and then start speaking. (As it is recording, the phone displays a countdown timer that shows how many seconds are left for recording.)

To end the recording of your memo:

- ▶ Press **STOP** (left softkey).

To record a conversation during a phone call:

- ▶ During a call, press **OPTIONS** (right softkey) > **Voice Memo**. (A counter is displayed on the screen to indicate the amount of time during the recording.)

To end the recording of your conversation:

- ▶ Press **OPTIONS** (right softkey) > **Stop Voice Memo** to end the recording prior to the countdown completion.

**Note**

Your phone can store a total of 10 minutes of memos in up to 30 memos.

## Playing Voice Memos

To play the voice memos you have recorded:

1. Press  > **Settings/Tools** > **Tools** > **Memo** > **Voice Memo**.
2. Highlight a voice memo and press .

## Voice Memo Options

To choose voice memo options:

1. Press  > **Settings/Tools** > **Tools** > **Memo** > **Voice Memo**.
2. Highlight a voice memo and press **OPTIONS** (right softkey) to choose from the voice memo options:
  - **Send Message** to send the selected voice memo.
  - **SetAs** to assign the recording as a ringer or alert.
  - **View Details** to view the selected voice memo information.
  - **Edit Title** to edit the selected voice memo title.
  - **Delete This** to erase the selected voice memo.
  - **Delete Multiple** to delete multiple voice memos at once.

- **Delete All** to delete all voice memos.
- **Memory Info** to view the memory status for voice memo. The total memory for voice memo is 10 minutes.

## Erasing Voice Memos

To erase all voice memos:

1. Press  > **Settings/Tools** > **Tools** > **Memo** > **Voice Memo**.
2. Press **OPTIONS** (right softkey) > **Delete All**.
3. Press **DELETE** (left softkey) to erase all voice memos. (Press **CANCEL** [right softkey] to cancel the deletion.)

## 2G. Camera

- ◆ *Taking Pictures (page 71)*
- ◆ *Storing Pictures (page 74)*
- ◆ *Sending Pictures (page 75)*
- ◆ *Printing Pictures From Your Phone (page 77)*
- ◆ *Other Settings (page 78)*

### Taking Pictures

---

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.

To take a picture with the phone open:

1. Press  >**Photos**>**Camera** to activate camera mode.

#### Shortcut

Press the side camera button twice to activate camera mode.

2. Using the phone's main display screen as a viewfinder, aim the camera lens at your subject.
3. Press **CAPTURE** (left softkey), , or the side camera button until the shutter sounds. (The picture will automatically be saved in phone album.)
  - To return to camera mode to take another picture, press **CAMERA** (left softkey) or the side camera button.
4. Press **OPTIONS** (right softkey) for more options:
  - **Send** to send your picture.

- **Assign** to assign the picture to a phone task. Select an option:
    - **Screen Saver** to use the picture as a screen saver.
    - **Picture ID** to assign the picture to a contact or for all calls.
  - **Delete** to delete the picture you just took.
  - **Go to Album** to view the pictures stored in My Photos.
  - **Print** to print the pictures. You can choose a PictBridge-enabled printer (see page 77), or use a Bluetooth-enabled printer (for more information on Bluetooth, see page 80).
  - **Take New Picture** to return to camera mode to take another picture.
- **White Balance** to adjust the White Balance based on changing conditions. Select from **Auto**, **Tungsten**, **Fluorescent**, **Sunny**, **Cloudy**, or **Manual** (press the navigation key left or right to select one of the options from -5 to 5).
  - **Resolution** to select a picture's file size [1.3M(960x1280), Med(480x640), or Low(240x320).]
  - **Quality** to select the picture quality setting (Fine, Normal, or Economy).
  - **Fun Frames** to take a picture in a fun frame.
  - **Brightness** to select **Auto** or **Manual** brightness control. If you select Manual, press the navigation key right (increase) or left (decrease) to select a setting, and press  or **DONE** (left softkey) to apply the selected setting.

## Camera Mode Options

When the phone is in camera mode, press **OPTIONS** (right softkey) to display additional camera options:

### <PREVIEW TAB>

- **ColorTone** to adjust the ColorTone by pressing the navigation key up or down to select **Normal**, **Black & White**, **Negative**, or **Sepia**. (The default setting is **Normal**.)

### <OTHERS TAB>

- **SelfTimer** to activate the camera's timer. (See "Self-timer" on the next page.)
- **ShutterSound** to select a shutter sound (Shutter, Say Cheese, Ready 123, Smile or Off).
- **Status Bar** to select a status bar (On or Off).
- **Night Mode** to activate the night mode (On or Off).

- *Go to Album* to view the pictures stored in My Photos.

## Self-timer

1. From camera mode, press **OPTIONS** (right softkey).
2. Press the navigation key right to select **OTHERS > Self Timer**.
3. Highlight the length of delay you want the timer to use (**Off**, **5 seconds**, or **10 seconds**) and press .
4. Press **START** (left softkey) when you are ready to start the timer. (A countdown is displayed in the middle of the screen.)
5. Get ready for the picture. (When the timer is down to three seconds, the countdown numbers will turn red.)

*To cancel the Self-timer after it has started:*

- ▶ Press **CANCEL** (right softkey).

**Note** While the Self-timer is active, all keys are disabled except **BACK**, **END**, and the right softkey (**CANCEL**).

## Zoom

This feature allows you to zoom in on an object when you take a picture. Depending on your resolution settings, you can adjust the zoom from 1 step to 15 steps.

1. From camera mode, press the navigation key up to display the quick menu, and then select the Zoom icon. (The options bar is displayed.)
2. Press the navigation key up or down to adjust the zoom.
3. Press **CAPTURE** (left softkey), , or the side camera button to take the picture. (The picture will automatically be saved in your phone.)

**Note** The Zoom option is not available when the Resolution setting is 1.3M(960x1280).

## Storing Pictures

---

Your phone's picture storage area is called **MyPhotos**. You can view all the pictures you have stored, delete files, and access additional options.

To review your stored pictures:

1. Press  >Photos>MyPhotos.
2. Use your navigation key to view and scroll through the pictures.

### MyPhotos

When you are viewing pictures, press **OPTIONS** (right softkey) to display the following options:

- **Select Multiple** to select multiple images to delete or print them at a time.
- **Expand/Thumbnail** to switch the display to expanded view or thumbnail view (up to nine pictures per screen).
- **Slide Show** to view the images as a slide show.

- **Assign** to assign the highlighted picture as a Picture ID for All Contacts, One Contact, or Unknown #s, or it also can be assigned as a Screen Saver.
- **Delete** to delete pictures from the In Phone folder. Select **Delete selection** or **Delete all**.
- **Print** to print directly to a printer using Bluetooth® or PictBridge.
- **Details/Edit** to display the following options:
  - **Text Caption** to edit the selected item's caption.
  - **Rotate** to rotate and save the picture.
  - **Media Info** to display a file's details.
- **Camera Mode** to activate Camera mode.
- **Other Options**
  - **Image Effects** to apply picture effects (Antique, Emboss, Fog, Gray Sketch, Posterize, Paint, Glow, Stamp, Cartoon, Mirror).
  - **Face Warp** to apply picture warping effects (Up Nose, Twister, Small Nose, Wide Smile, Grit, Big Face, Professor, Alien, Big Nose, Alien Hybrid, Gobbler, Square, Sharp Chin, Long Faced, Happy Fool, Insect).

- **Flip** to reverse the image horizontally left to right (Flip Horizontal) or to flip the image vertically top to bottom (Flip Vertical) or both (Flip Both).
- **Zoom** to zoom in.
- **Advanced** to apply additional options including *Enhancement, Brightening, White Balancing,* and *Local Intensity Boost.*

## Sending Pictures

Once you have taken a picture, you can use the messaging capabilities of your phone to instantly share it with family and friends. You can send a picture to up to 25 people at a time using their email addresses or their phone numbers.

### Sending Pictures From My Photos

1. Press **OK** >Photos>MyPhotos.
2. Highlight a picture to send and press **SEND** (left softkey).
3. Select **Contact**.
4. Select **Go to Contacts** or **NEWADDR** to enter the recipients.

- **Go to Contacts** to select recipients from your Contacts. Select a recipient and press **OK**.
  - **NEWADDR** to enter a mobile phone number or an email address directly.
5. Select a contact or enter the new mobile number or email address using the keypad, and press **OK**.

**Note** Select **MULTIPLE** (left softkey) to send it to multiple recipients. After pressing **OK** to select the recipients, select **CONTINUE**.

6. To include a subject, select **[Insert Subject]**. Enter your subject using the keypad and press **SAVE** (left softkey) to save and exit.
7. To include a text message, select **[Insert Text]**. Enter your message using the phone's keypad and press **SAVE** (left softkey) to save and exit.
8. To include a voice memo message with the picture, select **[Insert Voice]**. Select a voice memo from the list or record a new voice memo by pressing **RECORD** (left softkey). Press **STOP** (left softkey) to stop recording. (The maximum recording time is 1 minute.)

9. To configure the priority level, select **Normal**, then press left/right to toggle between **Normal** and **Urgent**.
10. Confirm the recipients, subject, message, attached picture and/or audio.
12. Press **SEND** (left softkey) to send the picture. (You will see “Message Sent” once the delivery is complete.)

## Sending Pictures From Messaging

You can also send pictures from your phone’s Messaging menu.

1. Press  > **Messaging** > **Send Message** > **Picture**.
2. Select **Go to Contacts** or **NEWADDR** (right softkey) to enter the recipients.
  - **Go to Contacts** to select recipients from your Contacts. Select a recipient and press .
  - **NEWADDR** to enter a mobile phone number or an email address directly.
3. Select a contact or enter a mobile number or an email address using the keypad, and press .

### Note

Press **MULTIPLE** (left softkey) to send it to multiple recipients. After selecting the recipients, press **CONTINUE**.

4. Highlight **[Insert Picture]** and press . Select from:
  - **MyPhotos**
  - **New Picture**
5. Display the picture you wish to send and press **SELECT** (left softkey).
 

– or –

 Press **CAPTURE** (left softkey) to take a new picture and press **CONTINUE** (left softkey).
6. To complete and send the picture message, follow steps 5-10 in “Sending Pictures” on page 75.

## MyDestinations

You can also send your pictures using email or upload, share, and store them with applications such as Photobucket, Facebook or MySpace.

1. Press  > **Photos** > **MyDestinations**.
2. Highlight **Add New Destination** and press .

3. Select **MyPC/Email, Photobucket, Facebook**, or **MySpace** and follow the onscreen instructions to set up your account. To send your pictures, follow the instructions on page 75 for 'Sending Pictures From My Photos'. Then during Step 3, select a Destination and follow the prompts.

## Printing Pictures From Your Phone

Your phone is PictBridge compatible, allowing you to print directly from your phone without connecting to a computer. Simply connect your phone to a PictBridge-enabled printer and enjoy printing your photos.

**Note** Make sure your battery is fully charged before using the PictBridge.

To print pictures directly from your phone:

1. Connect your phone to the PictBridge-enabled printer by using a USB cable (not included). (Wait until the connection is completed.)
2. Press  >Photos>MyPhotos.

3. Highlight a picture to print and press **OPTIONS** (right softkey) > **Print** > **PictBridge**.
4. Set the printer settings using your navigation key.
  - **Picture to Print:** You can select the picture from the In Phone folder. (You can select up to 10 pictures; however you can only select from one folder.)

**Note** You may not be able to print pictures that you cannot display on your phone.

- **Size:** You can set the print size from Default, 4x6 in, letter, or Card. (Print sizes may vary according to the type of printer you have.)
  - **Date:** You can imprint the date on your pictures. Select **On** or **Off**. (Date stamping may not be available depending on the type of printer you have.)
  - **Border:** You can imprint the border on your pictures. Select **On** or **Off**. (Border stamping may not be available depending on the type of printer you have.)
  - **Copies:** You can set the number of copies (1-20).
4. When you have finished selecting the printer settings, select **Print**.

**Note** While you are connected to the printer, you cannot make or receive calls.

5. When printing is finished, press .
6. Select **Yes**. Follow the instructions on the display to unplug the USB cable from the phone.

**PictBridge Error Messages** From time to time you may encounter printing problems. Any printer error messages will be displayed on your phone, informing you of the specific problems encountered. Please refer to the user's guide that came with your printer for descriptions, explanations, and possible resolutions for any error messages.

- **Location** to choose whether to insert location info when you take a picture.

## Other Settings

---

To access the settings menu:

1. Press  > **Photos** > **Other Settings**.
2. Select one of the following options and press .
  - **Status Bar** to choose whether to display the status bar in preview mode.

## 2H. Bluetooth

- ◆ *Turning Bluetooth On and Off (page 79)*
- ◆ *Using the Bluetooth Settings Menu (page 80)*
- ◆ *Pairing Bluetooth Devices (page 81)*
- ◆ *Sending Items Using Bluetooth (page 81)*

### About Bluetooth

Bluetooth® is a short-range communications technology that allows you to connect wirelessly to other Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth® communication range is usually up to approximately 30 feet.

## Turning Bluetooth On and Off

By default, your device's Bluetooth® feature is turned off. Please note that also by default, your phone is "Hidden" to other in-range Bluetooth® devices when Bluetooth® is set to "On".

*To turn Bluetooth on:*

1. Press  > **Settings/Tools** > **Tools** > **Bluetooth** > **More...** > **Settings** > **On/Off**. (A confirmation will be displayed.)
2. Press **ON** (left softkey) and then to enable Bluetooth.

*To turn Bluetooth off:*

1. Press  > **Settings/Tools** > **Tools** > **Bluetooth** > **More...** > **Settings** > **On/Off**. (A confirmation will be displayed.)
2. Press **OFF** (left softkey) and then to disable Bluetooth.

## Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:

-  indicates Bluetooth enabled (hidden).
-  indicates Bluetooth enabled (visible).
-  indicates Bluetooth connected.
-  indicates Bluetooth headset connected.

## Using the Bluetooth Settings Menu

---

The *Bluetooth Settings* menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Setting your phone's visibility (or "discoverability") for other Bluetooth devices
- Entering or changing the name your phone uses for Bluetooth communication
- Displaying your phone's Bluetooth address

To access the *Bluetooth Settings* menu:

1. Press  > *Settings/Tools* > *Tools* > *Bluetooth* > *More...* > *Settings*.
2. Set your Bluetooth options.
  - Select *Visibility* > *Hidden*, *Visible for 3 min*, or *Always Visible* to set your Bluetooth visibility.
  - Select *My Device Name* to rename your phone for Bluetooth.
  - Select *My Device Info* to display your phone's Bluetooth profiles and address.
  - Select *Voice Priority* to set your phone's Bluetooth communication priority (*Hands-free*, *Phone*, or *Device Answered*).

To access the *Trusted Devices* list:

- ▶ Press  > *Settings/Tools* > *Tools* > *Bluetooth* > *Trusted Devices*.
  - This displays your phone's current list of external trusted Bluetooth devices.

## Pairing Bluetooth Devices

### Paired Devices

The *Bluetooth* pairing process allows you to establish trusted connections between your phone and another *Bluetooth* device. When devices are paired, a passkey is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

*To pair your phone with another Bluetooth device:*

1. Press  > **Settings/Tools** > **Tools** > **Bluetooth** > **Add a New...** > **Headset/Car Kits, All, Phone, PDA, PC, or Printer**. (When you select *All*, your phone will display a list of discovered in-range Bluetooth devices.)
2. Select a device and press .
3. Enter the passkey (if necessary) and press .

#### Note

Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology.

## Sending Items Using Bluetooth

### Sending Contacts

This allows you to send all Contacts information in your phone to another party via Bluetooth.

1. If Bluetooth is not set to on, set to *On*.
2. Press  > **Contacts**, select a contact and press **OPTIONS** (right softkey) > **Send Contact**.
  - **This**: Sends the selected contact.
  - **Select**: Select desired contacts and send.
  - **All**: Send all contacts.
3. Highlight a device to send the Contacts information to and press  to send.

## *Sending Other Files*

1. Press  > *Settings/Tools* > *Tools* > *Bluetooth* > *Send Files*.
2. Select a device from the list.
3. Select a file from the available folders and press **SEND** (left softkey) twice. (If the device is not paired, you need to proceed pairing process first. Enter the passkey and press .)

*Section 3*  
***Sprint Service***



## 3A. Sprint Service: The Basics

- ◆ *Voicemail (page 84)*
- ◆ *Text Messaging (SMS) (page 87)*
- ◆ *Sending Pictures (page 89)*
- ◆ *Sending Voice Memo (page 90)*
- ◆ *CallerID (page 91)*
- ◆ *Call Waiting (page 91)*
- ◆ *Making a Three-Way Call (page 91)*
- ◆ *Call Forwarding (page 92)*
- ◆ *Roaming (page 92)*

## Voicemail

---

### Setting Up Your Voicemail

All unanswered voice calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint Voicemail and personal greeting as soon as your phone is activated.

1. Press and hold **1**.
2. Follow the system prompts to:
  - Create your passcode.
  - Record your name announcement.
  - Record your greeting.

#### Note

##### Voicemail Passcode

*Sprint strongly recommends that you create a passcode when setting up your voicemail to protect against unauthorized access. Without a passcode, anyone who has access to your phone is able to access your voicemail messages.*

## ***Voicemail Notification***

There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying  at the top of your screen.

## ***New Voicemail Message Alerts***

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

*To call your voicemail:*

- ▶ Press and hold **1** .

*To display your Missed Log:*

- ▶ Press  > **Missed Alerts**.

### **Note**

*When you are roaming off the Nationwide Sprint Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, press (\*) and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the Nationwide Sprint Network.*

*Your phone accepts messages even when it is turned off. However, you are notified of new messages only when your phone is turned on and you are in a Sprint service area.*

## Using the Menu Keys on Your Phone to Access Your Messages

1. Press  >Messaging>Voicemail>Call Voicemail.

**Note** You are charged for airtime minutes when you are accessing your voicemail from your wireless phone.

## Using Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press .
3. Enter your passcode.

**Note** When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press 4 during the header.

## Voicemail Key Guide

Here's a quick guide to your keypad functions while listening to voicemail messages.

 1 ES	 2 ABC	 3 DEF
Date/Time	Send Reply	Advance
 4 GHI	 5 JKL	 6 MNO
Replay	Rewind	Forward
 7 PQRS	 8 TUV	 9 WXYZ
Erase	Return Call	Save
 * 0 123	 0 + NEXT	 # PAUSE
Cancel	Help	Skip

## Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

1. Press and hold **1** to access your voicemail. (If your voicemail box contains any new messages, press **\*67** to access the main voicemail menu.)
2. Press **3** to change your Personal Options, following the system prompts.
3. Press **3** for Expert Mode.
4. Press **1** to turn Expert Mode on or off.

## Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

1. Press **NEW OK** > *Messaging* > *Voicemail* > *Clear Icon*.
2. Press **CLEAR** (left softkey), then press **DONE** **NEW OK**.

## Text Messaging (SMS)

With text messaging (SMS), you can send and receive text messages between your wireless phone and another messaging-ready phone. When you receive a new message, it will automatically display on your phone's screen.

In addition, text messaging includes a variety of preset messages, such as "What time does it start?" that make composing messages fast and easy. Use your phone to customize your own preset messages (up to 100 characters).

## Composing Text Messages

1. Press **NEW OK** > *Messaging* > *Send Message* > *Text* and select the entry method you prefer.

– or –

Press **TEXT**.

Select from the options (below):

- **Go to Contacts** to select a recipient from your Contacts. (Qualifying Contacts entries must contain a wireless phone number or an email address.)

- **NEWADDR** (right softkey) to use the keypad to enter the wireless phone number or email address of the person to whom you wish to send a message.

2. Press .

**Note** Enter a phone number from standby mode or highlight a *Contacts* or *History* entry and press **SEND MSG** [left softkey] > **Text** to begin a message.

3. Compose a message.

- To type a message, use your keypad to enter your message. Use the right softkey to select a character input mode. (See “Entering Text” on page 26.)
- To use a preset message or a smiley, press **OPTIONS** (right softkey), select **Add Preset Message**, or **Text Mode** > **Emoticon** and then highlight your desired message or emoticon and press .

4. Review your message and press **SEND** (left softkey). You may select additional messaging options by pressing **OPTIONS** (right softkey) and select one of the following options: **Add/Change Recipients**, **Mark as Urgent**, **Set Callback #**, or **Save as Draft**.

**Note** For more information about using and managing preset messages, see “Managing Preset Messages” on page 38.

## Accessing Text Messages

*To read a text message:*

- ▶ When you receive a text message, it will be displayed automatically on your phone’s screen. Use your navigation key to scroll down to, select and view the entire message.

*To reply to a text message:*

1. From the text message display, press **REPLY** (left softkey).  
– or –  
Press  > **Messaging** > **Messages**, open a message, and press **REPLY** (left softkey).

2. Follow steps 3-4 under “Composing Text Messages” on page 87 to complete and send your reply.

**Note** Text messages can be sent only to 10-digit phone numbers or email addresses.

## Sending Pictures

You can also send pictures from your phone's Messaging menu.

1. Press  > **Messaging** > **Send Message** > **Picture**.
2. Select **Go to Contacts** or **NEWADDR** (right softkey) to enter the recipients.
  - **Go to Contacts** to select recipients from your Contacts. Select a recipient and press .
  - **NEWADDR** to enter a mobile phone number or an email address directly.
3. Select a contact or enter a mobile number or an email address using the keypad, and press .

**Note** Press **MULTIPLE** (left softkey) to send it to multiple recipients. After selecting the recipients, press **CONTINUE**.

4. Highlight [**Insert Picture**] and press 
  - **My Photos**
  - **New Picture**
5. Display the picture you wish to send and press **SELECT** (left softkey).  
– or –  
Press **CAPTURE** (left softkey) to take a new picture and press **CONTINUE** (left softkey).
6. To include a text message, select [**Insert Text**]. Enter your message using the phone's keypad and press **SAVE** (left softkey) to save and exit.
7. To include a voice memo message with the picture, select [**Insert Voice**]. Select a voice memo from the list or record a new voice memo by pressing **RECORD** (left softkey). Press **STOP** (left softkey) to stop recording. (The maximum recording time is 10 minutes.)

8. Press the navigation key down and set the priority of the message between **Normal** and **Urgent**.
9. Confirm the recipients, subject, message, attached picture and/or audio.
10. Press **SEND** (left softkey) to send the picture. (You will see “Message sent” once the delivery is complete.)

## ***Sending Voice Memo***

---

You can also send a voice memo from your phone's Messaging menu.

1. Press  > **Messaging** > **Send Message** > **Audio**.
2. Select **Go to Contacts** or **NEWADDR** (right softkey) to enter the recipients.
  - **Go to Contacts** to select recipients from your Contacts. Select a recipient and press .
  - **NEWADDR** to enter a mobile phone number or an email address directly.
3. Select a contact or enter a mobile number or an email address using the keypad, and press .

### **Note**

Press **MULTIPLE** (left softkey) to send it to multiple recipients. After selecting the recipients, press **CONTINUE**.

4. Start recording after the tone. (You can record up to 1 minute.)
5. To finish recording, press **STOP** (left softkey).
6. To include a subject, select **[Insert Subject]**. Enter the subject using the phone's keypad and press **SAVE** (left softkey) to save and exit.
7. To include a text message, select **[Insert Text]**. Enter your message using the phone's keypad and press **SAVE** (left softkey) to save and exit.
8. Press the navigation key down and set the priority of the message between **Normal** and **Urgent**.
9. Confirm the recipients, voice memo and message.
10. Press **SEND** (left softkey) to send the voice memo. (You will see “Message sent” once the delivery is complete.)

## Caller ID

---

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Press **\*SPT**, **6**, **7**.
2. Enter the number you want to call.
3. Press **TALK**.

To permanently block your number, call Sprint Customer Service.

## Call Waiting

---

When you're on a call, Call Waiting alerts you to incoming calls by sounding one beep. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- ▶ Press **TALK**. (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Press **TALK** again.

### Tip

For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing **\*70** before placing your call. Call Waiting is automatically reactivated once you end the call.

## Making a Three-Way Call

---

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press **TALK**.
2. Once you have established the connection, press **OPTIONS** (right softkey) > **3-Way Call**.

3. Enter or select a number and press .
4. When you're connected to the second party, press **JOIN** (right softkey) to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

## Call Forwarding

---

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

*To activate Call Forwarding:*

1. Press   .
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press . (You will hear a tone to confirm the activation of Call Forwarding.)

*To deactivate Call Forwarding:*

1. Press    .
2. Press . (You hear a tone to confirm the deactivation.)

**Note** *You are charged a higher rate for calls you have forwarded.*

## Roaming

---

### Roaming Icon

Your display screen always lets you know when you're off the Nationwide Sprint Network. Any time you are roaming, the phone displays the roaming icon ().

**Tip** *Remember, when you are using your phone off the Nationwide Sprint Network, always dial numbers using 11 digits (1 + area code + number).*

## Roaming on Other Digital Networks

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the Nationwide Sprint Network. However, you may not be able to access certain features, such as Web, depending on the available network.

### Note

*If you're on a call when you leave the Nationwide Sprint Network, your call is dropped. If your call is dropped in an area where you think Sprint service is available, turn your phone off and on again to reconnect to the network.*

## Checking for Voicemail Messages While Roaming

When you are roaming off the Nationwide Sprint Network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

1. Dial 1 + area code + your phone number.

2. When you hear your voicemail greeting, press .
3. Enter your passcode when prompted and follow the voice prompts.

When you return to the Nationwide Sprint Network, voicemail notification will resume as normal.

## Setting Roam Mode

Your phone allows you to control your roaming capabilities. By using the Roaming menu option, you can determine which signals your phone accepts.

Choose from two different settings to control your roaming experience.

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Roaming** > **Set Mode**.
2. Highlight an option and press .
  - **Automatic** to seek service on the Nationwide Sprint Network. When Sprint service is unavailable, the phone searches for an alternate system.
  - **Sprint Only** to access only the Sprint network and prevent roaming on other networks.

## Call Guard

Your phone has two ways of alerting you when you are roaming off the Nationwide Sprint Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Nationwide Sprint Network.)

*To turn Call Guard on or off:*

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Roaming** > **Call Guard**.
2. Press **ON** or **OFF** (left softkey).

### Note

*Call Guard is turned on by default on your phone.*

*Voice dialing and speed dialing are not available when you are roaming with Call Guard enabled.*

*To place roaming calls with Call Guard on:*

1. From standby mode, dial 1 + area code + the seven-digit number and press  .
2. Select **YES**.

*To answer incoming roaming calls with Call Guard on:*

1. Press  . (A message will be displayed notifying you that roaming charges will apply.)
2. Select **YES**.

## Data Roam Guard

Depending on service availability and roaming agreements, your phone may be able to access data services while roaming on certain digital systems. You can set your phone to alert you when you are roaming off the Nationwide Sprint Network and try to use data services such as messaging.

**Note** *Data Roam Guard is turned on by default on your phone.*

*To set your Data Roam Guard notification:*

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Roaming** > **Data Roaming**.
2. Highlight an option and press  .
  - **Default:** Data Roam Guard may appear when roaming internationally.
  - **Always Ask** sets your phone's Data Roam Guard feature on. You will see a prompt and will be required to respond anytime you access data services while roaming.
  - **Never Ask** turns your phone's Data Roam Guard feature off. You will not be notified of your roaming status when accessing data services.

*To use data services when Data Roam Guard is active:*

- ▶ When a pop-up notification appears informing you that data roam charges may apply, press **ROAM** (left softkey) to connect.

## 3B. Web and Data Services

- ◆ *Getting Started With Data Services (page 96)*
- ◆ *Messaging (page 100)*
- ◆ *Downloading Games, Ringers and More (page 103)*
- ◆ *Browser Options Menu (page 107)*
- ◆ *Data Services FAQs (page 108)*

### Getting Started With Data Services

With your Sprint service, you are ready to start enjoying the advantages of data services. This section will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your phone.

### YourUserName

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com." (For example, the third John Smith to sign up for Sprint services might have *jsmith003@sprintpcs.com* as his user name.)

When you use data services, your user name is submitted to identify you to the Nationwide Sprint Network.

Your user name will be automatically programmed into your phone. You don't have to enter it.

### Finding Your User Name

If you aren't sure what your user name is, you can easily find it on your phone.

- ▶ Press  > **Settings/Tools** > **Settings** > **Phone Information** > **Version**.

## Updating Your User Name

If you choose to change your user name and select a new one online, you must then update the user name on your phone.

- ▶ Press  > **Settings/Tools** > **Settings** > **More...** > **Data** > **Update Profile**. (To cancel, press  before completing the update.)

## Launching a Web Connection

- ▶ Press  > **Web**. (Your data connection starts and the home page is displayed.)

**Note** If Net Guard is enabled and displayed (see the following section), press **OK** (right softkey) to continue and launch the Web.

While connecting, an animation and a “Connecting” message may be displayed.

### Tip

To change the default launch page to the last page you viewed, press **TOOLBAR** (right softkey) > **OPTIONS**  > **Advanced** > **Startup page** and select **Last page viewed**.

## Net Guard

When you first connect to the Web, the Net Guard will be displayed to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

To change your Net Guard settings:

- ▶ Press  > **Settings/Tools** > **Settings** > **More...** > **Data** > **Net Guard**.
  - Select **ON** to activate the Net Guard.
  - Select **OFF** to deactivate the Net Guard.

## Data Connection Status and Indicators

Your phone displays the current status of your data connection through indicator icons at the top of the screen. The following symbols are used:



Your phone is on and is connected to the Sprint 3G data network. When the arrows are animated, data is being transferred (for example, when you are opening a Web page) and you cannot receive calls. When the arrows are white, you are connected to the network but data is not currently being transferred (for example, when you are viewing a Web page that is completely open), and you can receive calls.

If no indicator is displayed, your phone does not have a current data connection. To launch a connection, see “Launching a Web Connection” on page 97.

## Navigating the Web

Navigating through menus and websites during a data session is easy once you’ve learned a few basics. Here are some tips for getting around:

### Softkeys

During a data session, the bottom line of your phone’s display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkeys directly below the phone’s display screen.

#### Tip

*Depending on which websites you visit, the labels on the softkeys may change to indicate their function.*

*To use softkeys:*

- ▶ Press a softkey. (If an additional pop-up menu is displayed when you press the softkey, select the menu items using your keypad [if they're numbered], or by highlighting the option and pressing .)

## Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some websites.

*To scroll line by line through websites:*

- ▶ Press the navigation key up and down.

*To scroll page by page through websites:*

- ▶ Press the volume buttons on the side of the phone.

## Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

*To select onscreen items:*

- ▶ Use the navigation key to highlight an item, and then press the left softkey (or press .

### Tip

*You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "GO"*

*If the items on a page are numbered, you can use your keypad (number keys) to select an item.*

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

*To select links:*

- ▶ Highlight the link and press the appropriate softkey.

## Going Back

To go back one page:

▶ Press the  key on your phone.

– or –

Press **TOOLBAR** (right softkey) > **BACK**.

### Note

The **BACK** key is also used for deleting text (like a **BACKSPACE** key) when you are entering text.

## Going Home

To return to the home page from any other page:

▶ Press and hold .

– or –

Press **TOOLBAR** (right softkey) > **MYHOMEPAGE**.

## Messaging

---

You can send and receive email messages, instant messages, and text messages and participate in Web-based chat rooms right from your phone. Messaging allows you to stay connected 24 hours a day anywhere on the Nationwide Sprint Network.

## Email

Your phone's email application lets you access and manage multiple email accounts simultaneously in one convenient location.

## Getting Started With Email

1. Press  > **Messaging** > **Email**.  
(The email setup wizard will start.)  
– or –  
Press .
2. Press **CONTINUE** (right softkey).
3. Select an email provider (such as AOL® Mail, AIM® Mail, Hotmail, Yahoo!®, or Gmail®) and press the **CONTINUE** (right softkey).

– or –

Select **Work** to set up a corporate email account using either Outlook Web Access from a Microsoft Exchange Server or the Sprint Mobile Email connector for direct access.

– or –

Select **More** to choose from additional options. There are many available email options listed, or you may add your own POP or IMAP email accounts.

**Note** Consult your company's IT department for required information and permissions for any Work email accounts. Read the onscreen setup information for additional information about using Work email options on your LX290.

5. Follow the setup wizard instructions to enter the required sign-up information. Press **Accept** (right softkey) if you are prompted to accept any license agreements, terms of use, or disclaimers.

**Note** The information required to sign in will vary depending on the email provider you are accessing.

6. If applicable, read the notice regarding Mail Push. If you would like to enable Mail Push, press **Menu** (right softkey) > **Settings** > **Preferences** and check on **Tell me I have mail**.

**Note** Mail Push allows your phone to automatically retrieve new email messages without having to select the **Check Mail** option. When Mail Push is enabled, you will receive an onscreen notice of new email messages. These notices may be charged as SMS Text Messages. Please consult your service plan for details.

## Accessing Email

Using email on your phone is even easier than using multiple email accounts on your computer. Launch the application for instant access to all your accounts.

1. Once you have set up your email, press  > **Messaging** > **Email** to launch the application. (Your default account inbox will be displayed.)  
– or –  
Press . (Your default account inbox will be displayed.)  
– or –

From an email new message notice (if Mail Push is enabled), select **GO** to go to your inbox.

**Note** *The first time you access your Email, you will have the option of completing a Help program. This series of screens demonstrates the application's navigation and available tools.*

2. Use your keypad and navigation keys to read, manage, and reply to your email messages.
  - Press **Menu** (right softkey) to select messaging options, such as **Delete**, **Compose**, **Reply**, **Send/Receive**, or **Settings**.
  - Press **Menu** (right softkey) > **Send/Receive** to manually check for new messages.
  - To view a different email account, use your navigation key to select the drop-down menu next to the Inbox tab at the top of the screen, and then select an account. You can also navigate to the Home tab at the top of the screen and select an available account from there.

- To add a new account, use your navigation key to select the **Home** tab at the top of the screen, and then select **Add Account**. Follow the instructions in "Getting Started With Email" on page 100 to set up a new account.

**Note** *You can also access certain email accounts, including your Sprint Mail account, through the home page. Press  > **Web** and then select **Messaging** > **Email** > [AOL & AIM Mail, MSN Hotmail, or Yahoo! Mail]. Follow the onscreen instructions to enter your account information and access your email messages.*

## Sprint Instant Messaging

Data service also provides you with access to popular instant messaging (IM) clients, including AOL® Instant Messenger™, Windows Live Messenger, and Yahoo!® Messenger.

1. Press  **Messaging** > **IM**.
2. Select an IM provider, such as **AOL Instant Messenger**, **Windows Live Messenger**, or **Yahoo! Messenger**.

3. Use your keypad to enter the required sign-in information for the selected provider, such as user name or password, and select **Sign In**. (Your IM screen for the selected provider will be displayed.)

**Note** The information required to sign in will vary depending on the instant messaging provider you are accessing.

4. Follow the onscreen instructions to read, reply to, compose, and send messages and manage your IM account.

## Downloading Games, Ringers and More

---

You have access to a dynamic variety of downloadable content, such as Games, Ringers, Screen Savers, and other applications. (Additional charges may apply.) The basic steps required to access and download these items are outlined below.

## Accessing the Download Menu

1. Press  > **My Stuff**.
2. Select a download category (**Games, Ringers, Screen Savers, Applications, and Call Tones**), and then select **Get New**. (The browser will start and take you to the corresponding download menu.)

*To access the download menus from the Web browser:*

1. From the home page, select **Downloads**.
2. Select **Call Tones, Games, Ringers, Screen Savers, Applications, Messaging**, etc. to go to the corresponding download menu. (For more information on navigating the Web, see “Navigating the Web” on page 98.)

## Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search.
- **Featured** displays a rotating selection of featured items.

- **Categories** allows you to narrow your search to a general category.

## Downloading an Item

Once you've selected an item you wish to download, highlight it and press , or press **GO** (left softkey). You will see an information page for the item including links for a Preview or a Description. Links allow you to view the **License Info** page, which outlines the price, license type, and length of license for the download, and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

*To download a selected item:*

1. From the information page, select **Buy** or **Download**. (The item will download automatically. When the **Download** screen is displayed, the item has been successfully downloaded to your phone.)

### Note

*If you have not previously purchased an item, you will be prompted to create your purchasing profile.*

2. Select an option to continue:

- Select **Use/Run/View** to assign the downloaded item (or to start, in the case of a game or an application). Your data session will end, and you will be redirected to the appropriate phone menu screen.
- Select **Set as** to assign a ringer or screen saver to a phone function.
- Select **Shop** to browse for other items to download.
- Press  to quit the browser and return to standby mode.

## Using My Content Manager

Whether you purchase your Premium Services content from your phone or from your online account management page at [www.sprint.com](http://www.sprint.com), all of your purchases are stored in **My Content Manager** and may be downloaded to your phone from there.

**My Content Manager** is a storage area on the Nationwide Sprint Network that allows you to store all your Premium Services downloadable files. The files remain in My Content Manager until their license terms have expired – even after you have downloaded the content to your phone. This provides you with a convenient place to access information about your downloaded files without having to store the information in your phone’s memory.

*To access My Content Manager:*

- ▶ From the home page, select **Downloads > My Content Manager**. (A list of your purchased items will be displayed.)

*To download purchased content from My Content Manager:*

1. From the **My Content Manager** display (see above), highlight the item type you wish to download, and press **OK**. (The available items will be displayed.) Highlight the item you wish to download, and press **OK**.
2. Select **Download** and press **MENU OK**. (The item will download automatically. When the **New Download** screen is displayed, the item has been successfully downloaded to your phone.)

**Tip**

You can also access My Content Manager through the phone’s main menu. Press **MENU OK > My Stuff > [Games, Ringers, Screen Savers, or Applications] > My Content Manager**. The browser will open and take you to the corresponding content.

For complete information and instructions on downloading **Games, Ringers, Screen Savers**, and **Applications**, visit the Digital Lounge at [www.sprint.com](http://www.sprint.com).

## NASCAR

Now you have the ability to get every bit of NASCAR coverage, news, and stats right on your phone.

1. Press **MENU OK > My Stuff > Applications > NASCAR Sprint Cup Mobile**.
2. Read the permission disclaimer, select **Continue**, and follow the instructions select a driver, and then press **Menu** (right sofkey) to explore your options.

## NFL Mobile Live

Get the NFL live on your phone. It lets you be right in the middle of your favorite game by being a part of previews, blogs, discussions groups, fantasy football, etc.

1. Press  > **My Stuff** > **Applications** > **NFL Mobile Live**. (The application will download automatically.)
2. Highlight **Continue** and then press **Menu** (right softkey) to follow the instructions to customize your NFL experience such as choosing your favorite team.

## ScanLife

With ScanLife, you scan a 2D barcode (EZcode) with your camera phone and you're instantly connected to any information related to the scanned product, article, or image.

1. Press  > **My Stuff** > **Applications** > **ScanLife**.
2. Read the terms of use disclaimer, make a selection and press **AGREE** (right softkey).
3. With the camera feature now activated, position the camera so the EZcode is both centered in the viewfinder and takes up at least half the screen area.

4. Take the photo by pressing **Snap** (right softkey). If the scan was successful, you will hear a short chime and your browser will then launch to reveal more information associated with the selected EZcode. This can be either a specific Web page or downloadable content.
5. Press **Menu** (left softkey) for other options.

### IMPORTANT

**Important Privacy Message** – *Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.*

## Browser Options Menu

Although the home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific websites, are not available. For these and other functions, you will need to use the browser options menu. The browser options menu offers additional options to expand your use of the Web on your phone.

### Opening the Browser Toolbar Menu

The browser toolbar menu may be opened anytime you have an active data session, from any page you are viewing.

*To open the browser toolbar menu:*

- ▶ Press **TOOLBAR** (right softkey).

Options available in the Toolbar menu include:

- **BACK** to go back to the most recent Web page.
- **FORWARD** to move to a previously viewed page (after having used **BACK** option).
- **MYHOMEPAGE** to go back to the home page.

- **MYPAGES** to view your favorites and recently viewed pages.
- **SPRINTSEARCH** to search the Internet.
- **OPTIONS** to choose font size, privacy settings, etc.

### Creating a Bookmark

Bookmarks allow you to store the address of your favorite websites for easy access at a later time.

1. Go to the Web page you want to mark.
2. Press **TOOLBAR** (right softkey) to open the browser options menu.
3. Select **MYPAGES**.
4. Select **Add this page to favorites > ADD** (left softkey).

#### Note

*Bookmarking a page does not store the page contents, just its address.*

*Some pages cannot be bookmarked. Whether a particular Web page may be bookmarked is controlled by its creator.*

## Accessing a Bookmark

1. Press **TOOLBAR** (right softkey) to open the browser options menu.
2. Select **MYPAGES**.
3. Highlight a bookmark and press .

## Going to a Specific Website

To go to a particular website by entering a Web address (URL):

1. Highlight the **URL** field and press .
2. Use your keypad to enter a website address and press .

## Reset the Web Browser

If the browser seems to be malfunctioning or stops responding, you can usually fix the problem by simply resetting the browser.

1. Press **TOOLBAR** (right softkey) to open the browser options menu.
2. Select **OPTIONS > Advanced > Reset browser**.
3. Please read the warning; then press **RESET** (left softkey) if you still wish to continue."

## Data Services FAQs

---

*How will I know when my phone is ready for data service?*

Your user name (for example, [bsmith01@sprintpcs.com](mailto:bsmith01@sprintpcs.com)) will be displayed when you access  **>Settings/Tools >Settings>Phone Information >Version**.

*How do I sign in for the first time?*

You are automatically signed in to access data services when you turn on your phone.

*How do I know when my phone is connected to data services?*

Your phone automatically connects when data service is used or an incoming message arrives. Your phone will also display the  indicator.

### ***Can I make calls and use data services at the same time?***

You cannot use voice and data services simultaneously. If you receive a call while data service is active, the call will be forwarded to voicemail. You can place an outgoing call anytime, but it will interrupt any in-progress data session.

### ***When is my data connection active?***

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When active, the  indicator animates on your phone's display screen.

### ***When is my data connection dormant?***

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period of time, the connection will terminate.

### ***Can I sign out of data services?***

You can sign out without turning off your phone; however, you will not be able to browse the Web or use other data services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to  > **Settings/Tools** > **Settings** > **More... > Data > On/Off** in your phone's menu, then press **DISABLE** (right softkey).

## 3C. GPS Navigation

- ◆ *GPS Services* (page 110)
- ◆ *Sprint Navigation* (page 110)
- ◆ *Sprint Family Locator* (page 111)

### GPS Services

Your phone's built-in GPS capability gives you access to a number of location-based services, including *Sprint Navigation* and *Sprint Family Locator*.

#### Activating Location Mode

Before using any of the location-based services, you must turn on your phone's location mode. By default, Location is set to ON. To turn OFF (or ON), follow the steps below:

1. Press  > **Settings/Tools** > **Settings** > **More...** > **Location**. (You will see the Location disclaimer.)

2. Read the disclaimer and press **CONTINUE** (left softkey).
3. Press **ON** or **OFF** (left softkey).

### Sprint Navigation

Sprint Navigation gives you turn-by-turn directions onscreen and over speakerphone.

#### Note

Depending on your service plan, *Sprint Navigation* may require a monthly subscription. Contact *Sprint* for information and pricing.

#### Registering Sprint Navigation

Before you can use *Sprint Navigation*, your phone and service must be registered.

1. Press  > **Maps** > **Sprint Navigation**.
2. Follow the onscreen instructions to enter and submit the required information.

## Using Sprint Navigation

1. Press  > **Maps** > **Sprint Navigation**.
2. Select an option and follow the onscreen instructions to get directions or view maps.
  - **DRIVETO** lets you enter an address (vocally or using the keypad) or select from categories such as **My Favorites**, **Recent Places**, **Address**, **Intersection**, **City**, **Businesses**, or **Airports** to search for turn-by-turn directions.
  - **SEARCH** allows you to search by category, such as **Gas Stations**, **Grocery Stores**, and **Hospitals** to help find local businesses and services.
  - **MAPS & TRAFFIC** lets you view maps and get traffic information for your current location or for any other location (same categories as **Drive To**).
  - **SHARE & MORE** provides access to additional services such as **Record Location**, **Preferences**, and more.

**Note** For more information about Sprint Navigation, visit [www.sprint.com/navigation](http://www.sprint.com/navigation).

## Sprint Family Locator

Sprint Family Locator uses GPS technology to locate your child's phone and display the location on an interactive map.

**Note** Sprint Family Locator service requires an additional monthly fee. Visit [www.sprint.com/familylocator](http://www.sprint.com/familylocator) for complete details.

### Signing Up for Sprint Family Locator

1. Press  > **Maps** > **Sprint Family Locator**.
2. Follow the onscreen instructions to enter and submit the required information.

**Note** You can also sign up for Sprint Family Locator online at [www.sprint.com/familylocator](http://www.sprint.com/familylocator).

## Using Sprint Family Locator

1. Press  > *Maps* > *Sprint Family Locator*.
2. Enter the parent phone number and password to sign in to your account.
3. Select a phone to locate from the available child phone list.
4. When you are finished, select *Sign Out*.

### Note

*Sprint Family Locator may also be used with any computer with an Internet connection. Visit [www.sprint.com/familylocator](http://www.sprint.com/familylocator) for complete details.*

*Section 4*  
***Safety and Warranty  
Information***



## 4A. Important Safety Information

- ◆ *General Precautions (page 114)*
- ◆ *Maintaining Safe Use of and Access to Your Phone (page 115)*
- ◆ *Using Your Phone With a Hearing Aid Device (page 116)*
- ◆ *Caring for the Battery (page 118)*
- ◆ *Radio Frequency (RF) Energy (page 119)*
- ◆ *Owner's Record (page 121)*
- ◆ *User Guide Proprietary Notice (page 121)*

*This phone guide contains important operational and safety information that will help you safely use your phone.* Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

## General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

### Note

*For the best care of your phone, only Sprint-authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.*

## Maintaining Safe Use of and Access to Your Phone

### **Do Not Rely on Your Phone for Emergency Calls**

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

### **Using Your Phone While Driving**

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

**Tip**

*Purchase an optional hands-free accessory at your local Sprint Store, or call Sprint at 1-866-866-7509.*

### **Following Safety Guidelines**

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

### **Using Your Phone Near Other Electronic Devices**

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment. RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

**Note**

*Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.*

### **Turning Off Your Phone Before Flying**

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

### **Turning Off Your Phone in Dangerous Areas**

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

#### **Note**

*Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.*

### **Restricting Children's Access to Your Phone**

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint invoice.

## **Using Your Phone With a Hearing Aid Device**

---

A number of Sprint phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your LG LX290 has an M4 and a T4 rating.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "excellent use." This is synonymous for T ratings.

Sprint further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store within 30 days of purchase. With the Sprint 30-day Risk-Free Guarantee, you may return the phone within 30 days of purchase for a full refund. More information about hearing aid compatibility may be found at: [www.fcc.gov](http://www.fcc.gov), [www.fda.gov](http://www.fda.gov), and [www.accesswireless.org](http://www.accesswireless.org).

## Getting the Best Hearing Device Experience With Your Phone

To further minimize interference:

- Set the phone's Display and Keypad backlight settings to ensure the minimum time interval:
  1. Press  > **Settings&Tools** > **Settings** > **Display** > **Main Screen** > **Backlight**, or  > **Settings&Tools** > **Settings** > **Display** > **Keypad Light**.
  2. Select the minimum time interval setting and press .

- Position the phone so the internal antenna is farthest from your hearing aid.
- Move the phone around to find the point with least interference.

## Caring for the Battery

---

### Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Sprint is not aware of similar problems with Sprint phones resulting from the proper use of batteries and accessories approved by Sprint or the manufacturer of your phone. Use only Sprint-approved or manufacturer-approved batteries and accessories found at Sprint Stores or through your phone's manufacturer, or call 1-866-866-7509 to order. They're also available at [www.sprint.com](http://www.sprint.com) — click **Accessories**. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).

- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

### Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest Sprint authorized service center.

**Special Note:** Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

# Radio Frequency (RF) Energy

## *Understanding How Your Phone Operates*

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

## *Knowing Radio Frequency Safety*

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

## *Body-Worn Operation*

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint supplied or

approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least **25/32 inch (2 centimeters)** from your body when transmitting. Use of non-Sprint-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

## Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations

in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the LX290 are:

**Cellular CDMA mode (Part 22):**

Head: 1.30 W/kg; Body-worn: 0.637 W/kg

**PCS mode (Part 24):**

Head: 1.04 W/kg; Body-worn: 0.569 W/kg

## FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: BEJLX295.

More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/ea/>.

**Note**

*Bluetooth QD ID (Qualified Design Id) is mandatory marking by Bluetooth SIG (Bluetooth Special Interest Group) for all models supporting Bluetooth.*

**Bluetooth QD ID B014875**

## FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note**

*This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.*

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

## User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797  
 5,506,865 5,544,196 5,657,420 5,101,501  
 5,267,261 5,414,796 5,504,773 5,535,239  
 5,600,754 5,778,338 5,228,054 5,337,338  
 5,710,784 5,056,109 5,568,483 5,659,569  
 5,490,165 5,511,073

T9 Text Input is licensed by Nuance Communications, Inc. and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

User Guide template version 8A (August 2008)

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Owner's Record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: *LG LX290*

Serial No.:

## 4B. Manufacturer's Warranty

### ◆ Manufacturer's Warranty (page 123)

*Your phone has been designed to provide you with reliable, worry-free service.* If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at 1-888-211-4727.

### Note

*In addition to the warranty provided by your phone's manufacturer, which is detailed on the following pages, Sprint offers a number of optional plans to cover your equipment for non-warranty claims. **Sprint Total Equipment Protection** provides the combined coverage of the **Sprint Equipment Replacement Program** and the **Sprint Equipment Service and Repair Program**, both of which are available separately. Each of these programs may be signed up for within 30 days of activating your phone. For more details, please visit your nearest Sprint Store or call Sprint at 1-800-584-3666.*

# Manufacturer's Warranty

---

## 1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the unit and enclosed accessories shall be a period of one (1) year from the date of original purchase. The remaining warranty period for the unit being repaired or replaced shall be determined by presentation of the original sales receipt for the purchase of the unit.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser / end user.
- (3) The limited warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories, and all Canadian Provinces.
- (4) The external housing and cosmetic parts shall be free of major defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information satisfactory to LG to prove the date of purchase or exchange.

- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

## 2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the product in other than its normal and customary manner.
- (2) Defect or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, or spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) Alleged defects or malfunctions of the product if the Customer Service Department at LG was not notified by the consumer during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including but not limited to any

implied warranty of marketability merchantability or fitness for a particular use.

- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### 3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

### 4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE

IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusion of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

### 5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in the continental United States:

LG Electronics Service

201 James Record Road

Huntsville, AL 35824

Tel. 1-800-793-8896      Email: <http://us.lgservice.com>

Please call or write for the location of the LGE authorized service center nearest you and the procedures for obtaining warranty claims.

# Index

## Numerics

3-Way Call 22

## A

Abbreviated Dialing 24, 42

Activating Your Phone 3

Airplane Mode 39

Alarm Clock 64

Answering Calls 19

## B

Backlight 35

Battery 14–16

Capacity 15

Charging 16

Installing 15

Battery and Charger 14

Bluetooth 79–82

Pairing 81

Sending Items 81

Settings 80

Turning On/Off 79

Browser Options Menu 107

## C

Calculator 66

Calendar 61–64

Adding Events 61

Erasing Events 63–64

Event Alert Menu 62

Call Forwarding 92

Call Guard 94

Call Waiting 91

Caller ID 91

Camera 71–78 - See also

Pictures

Options 72

Self-timer 73

Settings 78

Taking Pictures 71

Zoom 73

Caring for the Battery 118

Clock & Calendar Display 34

Contacts 52–60

Adding a Number 54

Adding an Entry 52

Assigning a Picture 57

Dialing From 25

Editing 54

Editing a Number 55

Entry Options 53

Finding Contacts 57

Saving a Phone Number 53

Secret Contacts 58

Selecting a Ringer Type 56

Sending Via Bluetooth 81

## D

Data Roam Guard 94

Data Services 96–109 - See  
also Web

Enabling and Disabling 47

FAQs 108

Launching the Web 97

Password 4  
Security 47  
UserName 96  
Dialing Options 19  
Display Screen 11, 34–36  
Language 36

**E**

Email 100  
Emergency Numbers 21  
End-of-Call Options 23  
Enhanced 911 (E911) 22  
Entering Text 26–29  
ABC Mode 27  
Emoticons 29  
Numbers 29  
Predictive Text Input 28  
Symbols 29  
Erasing Phone Content 45  
Events Alert Menu 62  
EZ Tips 66

**F**

Family Locator 111  
FCC Notice 120

**G**

Games, Buying and  
Downloading 103  
General Precautions 114  
Getting Help 5  
GPS Navigation 110  
GPS Services 110

**H**

History 48–51  
Erasing 51  
Making a Call From 49  
Options 49  
Saving a Number 50

**I**

In-Call Options 22  
Instant Messaging 102  
Internet - See Web

**K**

Key Functions 9  
Key Tone 33

**L**

Language 36  
Location Settings 36  
Lock Code 44  
Locking Your Phone 43

**M**

Making Calls 18  
Menu *i*  
Menu Navigation 17  
Menu Style 35  
Messaging  
Callback Number 37  
Email 100  
Instant Messenger 102  
Notification 37  
Picture Messaging 89–90  
Preset Messages 38

*Signature* 38  
*Text Messaging* 87–89  
*Voicemail* 84–87  
*Missed Call* 21  
*My Content Manager* 104

## **N**

*NASCAR* 105  
*Navigating the Menus* 17  
*Navigating the Web* 98  
*Navigation, GPS* 110  
*Net Guard* 97  
*NFL Mobile Live* 106  
*Notepad* 65

## **O**

*Owner's Record* 121

## **P**

*Pairing Bluetooth Devices* 81  
*Pauses* 24  
*Phone (Illus.)* 8  
*Phone Book - See Contacts*

*Phone Number*  
*Displaying* 18  
*Finding* 24  
*Saving* 23  
*With Pauses* 24

## *Phone Settings*

*Airplane Mode* 39  
*Auto-Answer Mode* 41  
*Call Answer Mode* 41  
*Display Settings* 34–36  
*Location Settings* 36  
*Messaging Settings* 37  
*Sound Settings* 30–33  
*TTY Use* 39

## *Phone Setup Options* 41

## *Phone Updates* 67

## *PictBridge* 77

## *Pictures Sending*

*My Destinations* 76  
*Sending Pictures From  
    Messaging* 76

*Sending Pictures From My  
  Photos* 75  
*Pictures - See also Camera*  
*Assigning as Screen Saver* 74  
*Assigning to Contacts* 57, 74  
*My Destinations* 76  
*Picture Messaging* 75–76  
*Printing* 77  
*Sending* 75–76  
*Sending Via Bluetooth* 82  
*Storing* 74  
*Taking* 71  
*Preset Messages* 38

## **R**

*Resetting Your Phone* 46  
*Ringer* 30

*Assigning to Contacts* 31, 56  
*Getting New Ringers* 31, 103  
*Settings for Ringer* 31  
*Settings for Voice Calls* 30  
*Silence All* 33

Types 30  
Vibrate 32  
Volume 32  
Roaming 92–95  
    Call Guard 94  
    Data Roam Guard 94  
    Roam Mode 93

## **S**

Safety Information 114–121  
Saving a Phone Number 23, 53  
ScanLife 106  
Screen Saver  
    Assigning 34, 72, 74  
    Downloading 103  
Security 43–47  
    Data Service 47  
    Menu 43  
Setting Up Your Phone 2  
Settings 30–47  
Silence All 33  
Slide Show 34

SMS Text Messaging 87  
Softkeys 9  
Software Updates  
    Downloading 67  
Sound Settings 30–33  
Special Numbers 44  
Speed Dial 25  
    Assigning Numbers 55  
Sprint Service  
    Account Passwords 4  
    Activation 3  
    Dialing Sprint Services 58  
    Operator Services 6  
    Sprint 411 5  
Storing Pictures 74

## **T**

Taking Pictures 71  
Text Entry - See Entering Text  
Text Greeting 34  
Text Messaging (SMS) 87–89  
Three-Way Call 91  
TTY Use 39  
Turning Bluetooth  
    On and Off 79  
Turning Your Phone  
    On and Off 14

## **U**

Unit Converter 66  
Unlocking Your Phone 43  
Update Phone Software 67  
Updating the PRL 67

## **V**

- Vibrate* 32
- Voice Control* 68
- Voice Memos* 69–70
- Voicemail* 84–87
  - ClearIcon* 87
  - Expert Mode* 87
  - Key Guide* 86
  - Notification* 85
- Volume* 32

## **W**

- Warranty* 123
- Web - See also Data Services*
  - Browser Options Menu* 107
  - Downloading Content* 103
  - Email* 100
  - FAQs* 108
  - Instant Messenger* 102
  - Launching* 97
  - My Content Manager* 104
  - NASCAR* 105

- Navigating* 98
- Net Guard* 97
- NFL Mobile Live* 106
- Password* 4
- ScanLife* 106
- UserName* 96
- Wireless Backup* 59
- World Clock* 67

## **Z**

- Zoom* 73