



LG-MX4170
1xRTT Tri-Mode CDMA Phone

6. Operating Manual

LG-MX4170
User Guide

CDMA PHONE



Contents

Chapter 1. Getting Started

Cautions
Phone Overview
On screen Icons

Chapter 2. Basic Functions

Turning the phone On and Off
Making a Call
Correcting Dialing Mistakes
Receiving Calls
Dialing Call from Phonebook
One Touch Dialing
Two Touch Dialing

Chapter 3. Menu Features

General Guidelines to MENU Access and Settings
Menu Structures

Chapter 1. Getting Started

Cautions

- ⚠ Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference.
- ⚠ Keep your phone in a safe place when not in use.
- ⚠ Only use the batteries, antennas, and chargers provided by LG. Using the wrong accessories could void your warranty.
- ⚠ Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- ⚠ Do not hold the antenna while the phone is in use.
- ⚠ Do not use the phone in designated “no cellular phone use” areas.
- ⚠ Do not expose the phone to high temperature or humidity.
- ⚠ Avoid getting your phone wet. If the phone gets wet, turn the power off immediately and remove the battery pack. If the phone is mal-functional, return it to the dealer for service.
- ⚠ Avoid shock or impact on the phone.

Phone Overview

Function	Key Descriptions
LCD screen	Displays messages & indicator icons.
END/PWR	Used to turn power on/off. This key disconnects a call. Using this key, you can also exit out of a menu back to the phone's standby display without changing the setting.
SEND	Allows user to place or answer calls.
Mouse Key (Navigation Key)	Allows quick and easy scrolling through the menus.
Cellcase	Close the active cellcase to terminate a call in progress. Open the active cellcase to answer an incoming call.
Soft Keys	The current operation of a soft key is defined by the word at the bottom of the display.
Side Keys	These keys enable you to adjust keybeep volume (in standby mode) and earpiece volume (in a call status).
[#],[*] key	- In the standby status, set the manner mode by pressing the button[*]. (for 2 seconds) - In the standby status, set the lock function by pressing the button[#]. (for 2 seconds)
Alphanumeric Keypad	These keys enable you to enter numbers and characters and choose menu items.
Clear Key	Lets you clear an entry or back-up in the menu.

On screen Icons

The phone screen displays several onscreen icons and onscreen icons appear when the phone is power on.

Icons	Descriptions
	Displays the strength of the signal received by the phone and current signal strength is indicated as the number of bars displayed on the screen.
	No service The phone is not receiving a system signal.
	In use A call is in progress. No icon indicates the phone is in standby mode.
	Digital indicator Digital service is available.
	Analog indicator Analog service is available
	Indicates that a new text & voice message has been received
	Roaming The phone is outside of its home service area.
	Charge level Indicates battery charge level.

Chapter 2. Basic Functions

Turning the Phone On and Off

<Turning the Phone On>

1. Install a charged battery pack or connect the phone to an external power source such as the cigarette lighter adapter or car kit.
2. Press [END/PWR] for a few seconds until the VIVO LOGO appears on the main LCD panel.
 - ☞ Fully extend the antenna for the best performance.

<Note> Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

<Turning the Phone Off>

1. Press and hold until display screen will be turned off, and then release the key.
2. Protect the antenna by pushing it back into the phone, if extended.

Making a Call

When you make a call, follow these simple steps:

1. Make sure the phone is turned on.
 - ☞ If not, press [END/PWR].
2. Enter the phone number with area code, if needed.
3. Press [SEND].
 - ☞ If the phone is locked, enter the lock code.
 - ☞ "Call Failed" indicates that the call did not go through.
4. Press [END/PWR] to disconnect the call.

Correcting Dialing Mistakes

If you make mistakes in dialing a number, press [CLR] key once to erase the last entered digit or hold down [CLR] for at least two second to delete all digits.

Receiving Calls

1. When the phone rings, open cellcase or If cellcase is open, press any key (except [END/PWR]) to answer.
2. Press [END/PWR] to disconnect the call.

In call waiting mode, the present call is on hold as you answer another incoming call.

This service is provided by your service provider.

When the call waiting function is activated, your phone will beep to let you know if you have an incoming call. Your phone may also display the incoming caller's identification.

Dialing a call from Phone Book

You can place a call from any memory location either by speed dialing or by pressing [SEND] while looking up the memory location.

- For One/Two touch dialing, phone number in personal phone book should be registered on Speed Dial ([Menu] +[8]+[5])



One-Touch Dialing : One-touch dialing is a convenient feature which enables you to dial frequently used numbers in your personal phone book by pressing a key (for Speed Dial memory location 1 through 9).

✍✍ For locations 1 to 9, you can use one-touch dialing by pressing and holding down the key corresponding to the memory location.

OR

✍✍ Press digit, then press [SEND].

Two-Touch Dialing (Speed Dialing) : This dialing feature enables you to dial numbers in your phone book through two keys (for locations 10 to 99).

- 1) Press the first digit.
- 2) Press and hold the key of the second digit.

OR

- 1) Press the first and second digits, then press [SEND].

Chapter 3. Menu Features


General Guidelines to MENU Access and Settings

1. Press Soft Key [Menu]. The animation of menu category will appear on the display screen.
2. Press [] to go through the list of menu features, or use the side keys.
4. Press the corresponding number or [OK] key to the menu item that you want to select. Then the sub-menu list will appear on the screen.
5. Press the appropriate key to select the sub-menu you want to access.
6. Select preferred settings, using the [] keys. Press CLR key to go one step backward while accessing menu or selecting settings.

Menu Structures

Downloads ([Menu]+[1])

- ☞ Get Apps([Menu] +[1]+[1])
- ☞ Get Info([Menu] +[1]+[2])

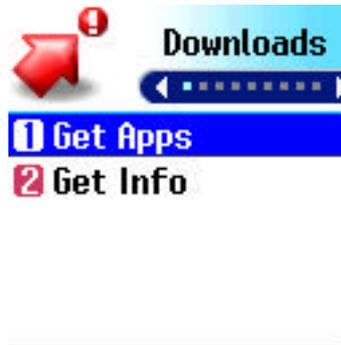

WAP([Menu]+[2]) : (This feature is not available)

- ☞ Start Browser ([Menu] +[2]+[1])
- ☞ Web Messages ([Menu] +[2]+[2])
- ☞ Web Settings ([Menu] +[2]+[3])




Voice Mail ([Menu]+[3])

- ~~☞~~ Connect Voice Mail ([Menu] +[3]+[1])
- ~~☞~~ Edit Voice MailBox# ([Menu] +[3]+[2])
- ~~☞~~ Voice Mail Alert ([Menu] +[3]+[3])



Voice Portal ([Menu]+[4])

- ~~☞~~ Connect Voice Portal ([Menu] +[4]+[1])
- ~~☞~~ Edit Voice Portal# ([Menu] +[4]+[2])

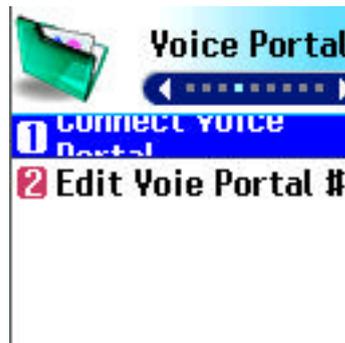

My Media ([Menu]+[5])

- ~~☞~~ Tones ([Menu] +[5]+[1])
- ~~☞~~ Images ([Menu] +[5]+[2])



Messages ([Menu]+[6])

- ☞☞ Messenger ([Menu] +[6]+[1])
- ☞☞ Chat ([Menu] +[6]+[2])
- ☞☞ Torpedo SMS ([Menu] +[6]+[3])
- ☞☞ E-mail ([Menu] +[6]+[4])



Recent Calls ([Menu]+[7])

- ☞☞ Dialed Calls ([Menu] +[7]+[1])
- ☞☞ Received Calls ([Menu] +[7]+[2])
- ☞☞ Missed Calls ([Menu] +[7]+[3])
- ☞☞ Erase Calls ([Menu] +[7]+[4])
- ☞☞ Call Timer ([Menu] +[7]+[5])



Contacts ([Menu]+[8])

- ☞☞ List Contacts ([Menu] +[8]+[1])
- ☞☞ New Number ([Menu] +[8]+[2])
- ☞☞ New Email([Menu] +[8]+[3])
- ☞☞ Groups ([Menu] +[8]+[4])
- ☞☞ Speed Dials ([Menu] +[8]+[5])
- ☞☞ My Contact Info ([Menu] +[8]+[6])
- ☞☞ Lista de Contactos ([Menu] +[8]+[7])



Tools ([Menu]+[9])

- ~~~~Games ([Menu] +[9]+[1])~~~~
- ~~~~Schedule ([Menu] +[9]+[2])~~~~
- ~~~~Reminder ([Menu] +[9]+[3])~~~~
- ~~~~Alarm Clock ([Menu] +[9]+[4])~~~~
- ~~~~Voice Memo ([Menu] +[9]+[5])~~~~
- ~~~~My Shortcut ([Menu] +[9]+[6])~~~~
- ~~~~Ez Tip Calc ([Menu] +[9]+[7])~~~~
- ~~~~Calculator ([Menu] +[9]+[8])~~~~
- ~~~~World Clock ([Menu] +[9]+[9])~~~~
- ~~~~Settings ([Menu] +[9]+[0])~~~~

