

TABLE OF CONTENTS

WELCOME	4
---------------	---

ABOUT THIS USER GUIDE	5
-----------------------------	---

CHAPTER 1 BEFORE USING YOUR PHONE

Package Includes	8
------------------------	---

Handset Description	9
---------------------------	---

Main Display	10
--------------------	----

Icons	10
-------------	----

Function keys	11
---------------------	----

Use of sim card	12
-----------------------	----

Navigation key	13
----------------------	----

Using the battery	14
-------------------------	----

Installing The Battery	14
------------------------------	----

Removing The Battery	14
----------------------------	----

Charging The Battery	15
----------------------------	----

Power Connection	15
------------------------	----

Charging Status	15
-----------------------	----

Removing The Charger	16
----------------------------	----

Important Battery Information	17
-------------------------------	----

CHAPTER 2 BASIC OPERATION

Turning The Phone On and Off

Turning The Phone On	20
----------------------------	----

Turning The Phone Off	20
-----------------------------	----

Installing SIM Card

Basic Functions

Making a Call	23
---------------------	----

Receiving Calls	24
-----------------------	----

International Call, Call to an Extension,	
---	--

Emergency Call	25
----------------------	----

Entering Letters and Numbers

Key features	28
--------------------	----

CHAPTER 3 Menu

Messages

SMS	30
-----------	----

MMS	38
-----------	----

CB	43
----------	----

 


TABLE OF CONTENTS

Internet	46	Settings	76
Home	46	Auto key lock	76
Bookmarks.....	47	Time & Date	76
Push Inbox & Push Settings.....	48	Language.....	78
Wap Profiles.....	49	Data	79
Empty Cache	54	Security	80
Organizer.....	55	Network.....	83
Calendar	55	Call Settings	85
Tasks	59	Reset Setting	90
Alarm	60	Camera	91
Calculator	61	Photo	91
GAMES.....	62	Motion.....	94
Mini golf.....	62	Image Manager	96
Mirror in action.....	63	Setting	98
Parking war	64	Memory Status.....	100
MyPhone	65		
Image.....	65		
Audio	66		
Wallpaper.....	69		
Greeting	70		
Caller groups.....	72		
Light & LCD	74		
2 My menu key	75		

TABLE OF CONTENTS

CHAPTER 4 PHONEBOOK

Look Up	103
New.....	104
Settings.....	106
Voice Mail no	109

CHAPTER 5 MISCELLANEOUS

Menu Summary	112
Cellular Phone in Brief	117
Abbreviations and Acronyms....	118
Questions and Answers	121
Technical Data	124

CHAPTER 6 SAFETY

Safety Information for Wireless Hand held Phone	126
Cell Phone Care.....	128
Driving Safety	130
Electronic Devices	131
Other Safety Guidelines	133
Cautions.....	134
Warning.....	135
FCC RF Exposure.....	136

INDEX	
INDEX.....	138

WELCOME

Thank you for choosing a cellular phone from Maxon Telecom, Korea's second-largest IT company and a manufacturer with more than two decades of experience in the electronic communication industry.

Your new communication device represents the cutting edge technology of the 21st century, featuring 64k brilliant color display, enhanced messaging service (EMS), polyphonic ring tones and stunning games along with extensive Organizer and Phonebook properties.

Uplink to the Mobile Internet facilitated with WAP 1.2.1 and GPRS data connection.

The phone size has always been a Maxon focus point, and the MX-C90-series have very modest exterior dimensions and will fit into any shirt pocket or purse.

40 different ring signals, SMS alert signals, and wallpapers along with renamed profiles and caller groups facilitates a high degree of personalization.

You have acquired a phone and a communications companion that will enable you to stay tuned wherever you go.

ABOUT THIS USER GUIDE

This user guide is written only for the MX-C90-series cellular handsets. The contents of the user guide follow the same order as the phone menu system goes. Please note that some optional functions may not be shared by all models.

Inquiries regarding the user guide or phone handling can be addressed to:

Maxon Technical Marketing

maxontelecom@maxontelecom.com

CHAPTER 1

Before using your mobile

 
- Package contents
- Handset description
 - Main display
 - Function keys
- Use of your SIM card
 - Navigation key
- Using the battery
- Charging the battery
- Important battery information

PACKAGE INCLUDES

Thank you for purchasing this product.
Please check the product contents to see if you have all the available items as below.




HANDSET DESCRIPTION

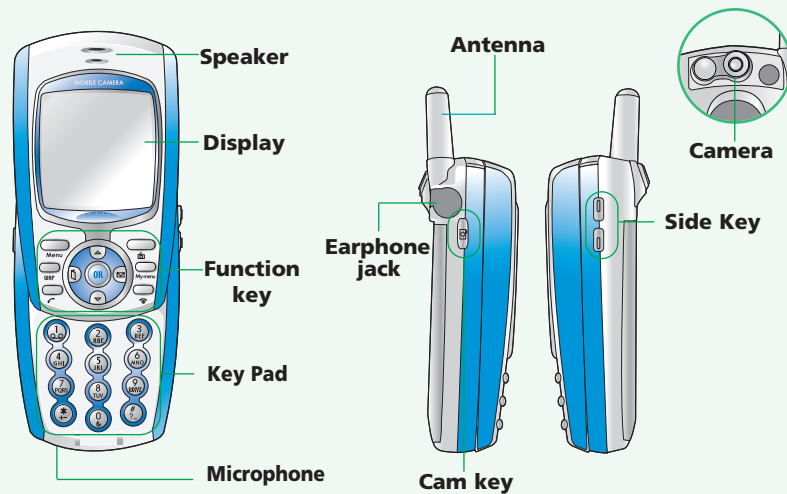

MAIN DISPLAY

 Main Display

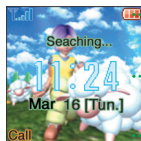

Icon display – Shows the current status of phone.

Graphic display – Shows phone numbers, text lines, animations, pictures.

Function display – Shows each function of [soft1] and [soft2] to help browse through main menu.

Icons



Signal Strength – The number of bars shows signal strength.



Battery – Current battery charging level.



Alarm – Appears when an alarm is set.



Call forwarding – Appears when call forwarding is set.



Manner mode – Appears when manner is set as a ring mode.



GPRS Signal – The phone enters a GPRS service area.



Tasks – Appears when an task is set.



Vibration Only – Appears when an vibration only is selected.

FUNCTION KEYS



[Soft1] – To place a call or redial a number. Send/Redial Key.



[Soft2] – To turn on and off the phone. To end of call.



Menu Key – To browse the main menu and view options.



Camera Key – To move directly to camera menu. Back and Clear key



WAP Key – To move directly to WAP menu.



My Menu Key – To move directly to one of menu.



4-Direction navigation key
– To browse the Messages, Phonebook menu, Dial list, and Look up menu.



OK Key – To select an option.



Keypad Keys – To enter letters and numbers



*Key –To place an international call (+).
–To turn the silent mode (Vibration) on or off.



Key – Special character key. Turns T9 text dictionary on or off.



Side key – Volume and Keypad level control key.



Side cam key – To move directly to camera menu.(Refer to p.91)

USE OF SIM CARD

SIM card is always needed to use the phone. **"Please insert SIM card"** appears when the SIM card is not installed since it contains information about phone and network. Messages and phone numbers stored in the phone can be transferred to other GSM terminal if both SIM cards are the same size.

Please take note that you don't lose SIM card and that you don't keep it near magnetic and electronic devices to prevent loss of information and hitch in networking.

When you take SIM card and battery apart, you should always turn off the phone. The insertion of SIM card while charger is in use can be a contributing factor to the damage of SIM card.

NAVIGATION KEY

The navigation key is used to search through the menu.

UP

To scroll up and access the look up directly from the idle mode.

DOWN

To scroll down and access the dial list from the idle mode.

LEFT

To access the phonebook directly from idle mode.

RIGHT

 
To access the messages menu directly from idle mode.



USING THE BATTERY


INSTALLING THE BATTERY

① Insert the bottom of battery into the groove at the bottom of the handset. Then ② push down the battery until it locks into place.

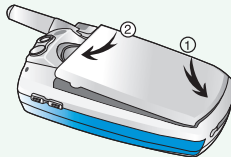

REMOVING THE BATTERY

 Pull down the tab ① with one hand and lift the top of the battery ② to separate from handset.

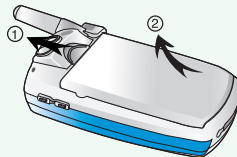


The battery must be securely placed in the battery compartment. If battery is improperly inserted, the handset will not turn on or the battery may slip off during use.

CHARGING THE BATTERY

POWER CONNECTION


Insert the contactor of charger into slot and plug the charger into the outlet.

 * Please note that the contactor should be placed into slot, a certain side up.

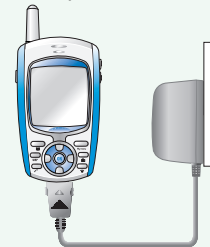

CHARGING STATUS

 When its battery is charged in power off mode, the phone shows an animation in LCD.

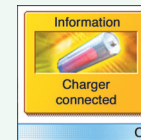

Be sure to charge the battery for at least four hours prior to the first time use. For extended battery life time, charge the battery fully for a long time rather than frequently for a short time period.

 
CHARGING THE BATTERY

REMOVING THE CHARGER

Press down the release latch and pull out the contactor of charger.



Don't remove the charger by pulling its cable.

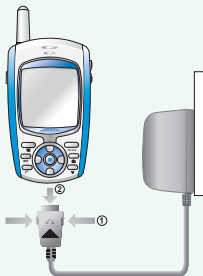

IMPORTANT BATTERY INFORMATION

- Don't keep a battery near a fire and attempt to disassemble it.
Use only the battery approved by manufacturer.
- Never touch battery contactors with any metallic object, which lead to battery short circuiting especially when carrying a battery in a pocket.
 - Possible to cause burns due to blasting and hot temperature.
- Don't drop a battery and apply any physical shock to the battery.
 - Malfunction and fire are feasible.
- Please keep a battery out of children's reach and in a dry and cool area.
- Charge a battery and keep it in a room temperature.
 - Extreme temperature prevents full charging and affects battery capacity in a negative way.
- Since a battery is an expendable product, the battery operating time decreases through frequently repeated charge and discharge.
 - A new battery to be purchased when the operating time is reduced halfway.
- Keep the contactors of battery clean and dry.
- Plug out a charger in order to protect the phone when a lightning strikes.

CHAPTER 2

Basic operation

- Package contents
- Turning The Phone On and Off
(With SIM Card Installed.)
 - Installing SIM Card
 - Basic Functions
- Entering Letters and Numbers

TURNING THE PHONE ON AND OFF

TURNING THE PHONE ON

When SIM CARD is installed.

Press and hold  until LCD on.

- When The phone is locked “PIN code” is displayed on the screen.
Then, enter the 4-digit password to unlock the phone.
- Your default pin code is 1234.

TURNING THE PHONE OFF

Press and hold  until LCD off.




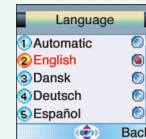 
- If “LOW BATTERY WARNING POWER OFF” is displayed and the power goes off.
- Change or charge the battery immediately.
- If the battery is removed while the phone is on, any unsaved messages or features could be lost and a dam age might be caused to memory.

INSTALLING SIM CARD

1.To connect to your network operator your phone must have a SIM CARD installed.



2.You are prompted to press  to display a list of available phone languages.

 


3.The SIM CARD slot is located beneath the battery.

Install the SIM CARD, gold-plated side down and the cut corner fit in the slot.

Never use force.

Avoid touching the gold-plated side of the SIM.




INSTALLING SIM CARD

4. Turn on the phone by pressing and holding the endkey for a few seconds.

Press and hold  until LCD on.

 5. You are prompted to enter the PIN code.

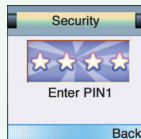


6. Enter the network-supplied PIN code and press .

 
 


BASIC FUNCTIONS


MAKING A CALL

1. Slide up the phone cover and enter a phone number.

To erase the last number you entered, press .

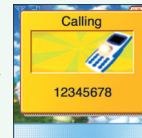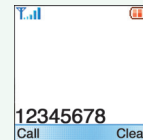

2. Press .

- “NETWORK BUSY” or “CALL FAILED” message is displayed when the call does not connect.
- If you select the REDIAL in setting menu (Refer to p.87) function, the call will be retried automatically for the time you have selected.
- Press  to end the call.

BASIC FUNCTIONS

RECEIVING CALLS

1.The phone rings

To reject or terminate a call press the .

Caller ID Function

You can view caller ID.

 
 
2.Slide up the phone cover and answer the phone.

- **Slide open Set:** To answer the phone, slide the phone up. (Refer to page 87)

With ear-microphone in use, press and hold [send/end] on the ear-microphone to receive or end a call.



If you send a call, the called number will be stored in the **Dial list**.

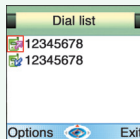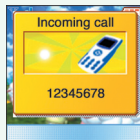
To retrieve a number, press  to open the list, scroll to an appropriate number and press  to place a call.



BASIC FUNCTIONS

INTERNATIONAL CALLS, CALL TO AN EXTENSION, EMERGENCY CALL

To make a domestic call, simply enter the desired number and press  or  key.

A calling or busy tone will sound. To end the call, press .

Some countries (e.g. USA) use area codes. In this case you must enter an area code before the a phone number (no space between them).

1.To make an international call, press until + is displayed.

Then enter country code, area code if necessary and finally phone number.
(no spaces allowed)



 
2.To make a call to an extension line you may have to go through an automated switchboard.

To do so: - Enter a phone number.

- Press  once.

- Enter the extension number. Press .


- The call will automatically be routed to the extension line.

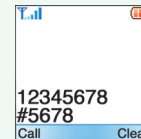

3.You are able to make emergency calls at all times, even without a SIM card installed.

 You will be prompted to confirm your call. (To avoid faulty calls)

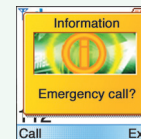

Emergency call number : 112







ENTERING LETTERS AND NUMBERS

An input mode is activated when necessary to enter letters and numbers, especially when you add a new phonebook entry, write a new message and set a certain feature. In input mode, you are to enter letters, numbers and symbols through keypad. T9 language has its built-in dictionary that helps the phone come out with an appropriate word by referring to key inputs. The dictionary predicts what word you are to enter as you press each key. The phone supports the following languages.

T9 Language

Press , move to 'T9 language' then, press .


Press  to go back to the input window. press a key once at a time to enter a word.

 
Press  or  to view a list of words and press  to select it and add a space when a word appears.

Ex) To enter Boy : Press  to select a letter case.

Press , , .

Use  or  to find a word.

Press  to select it and add a space.

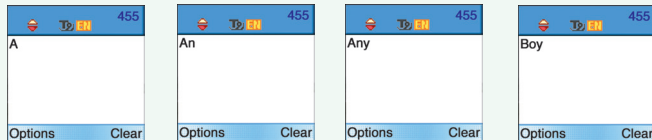



ENTERING LETTERS AND NUMBERS

ABC

Press , move to 'ABC' then, press .



Press a key to see its assigned alphabets and keep pressing the key until an alphabet appears in the display.



123

Press , move to '123' then, press .

 
Enter numbers through keypad.

SYMBOLS

Press , move to 'Symbols' then, press .

Press  or  to view a different set of symbols assigned to each key.



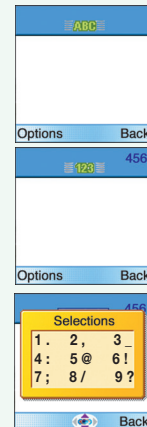




Press a key, and you will return to the previous mode.



ENTERING LETTERS AND NUMBERS

KEY FEATURES


In English input mode, the following keys help enter letters, numbers and symbols.

	Press [Soft1] to select an options : ABC, 123, Symbols, T9 language.
	Press [Soft2] to clear a digit.
	Press [Navigation key] to move a cursor.
	Press [*] to select letter case (English mode only), or Press and hold it to change to symbol mode.
	Space
	Press and hold it to change to mode : ABC, 123, T9 language.
	Press [#] to enter # . , ; : ” ’ ? !

CHAPTER 3

Menu

- Message
- Internet
- Organizer
 - Games
- My phone
 - Settings
 - Camera

MESSAGE To move directly to message menu, press  in idle mode.

SMS

 
Press , , .

WRITE NEW SMS

1. Press  to select “Write new SMS”.

Write your message using a maximum of 456 Latin characters.


While you type, the remaining free space is stated by a counter in the top right corner.

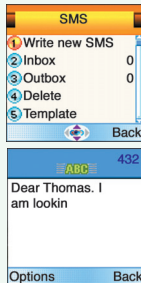


To include a picture or a sound in your SMS, select **Attach** on **left softkey**. The picture & sound **Import** manager opens.

Select Animation or Melody and scroll to select the desired item-Press .

 
The item is inserted in the text. Press  to back the edit screen.

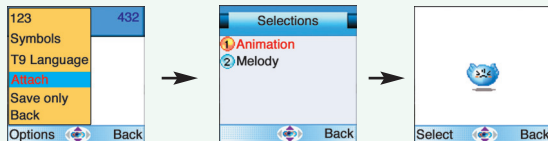

MESSAGE

 
2. Input a message, press  and you will see the preview of message.

3. Press  again, enter a phone number then, press .

Press  to select “Option”.


Group send : To send a message to a group.

Phonebook : To lookup a number from phonebook.

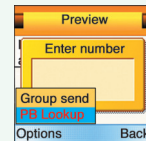

4. Choose Send only or Save & send.

 Press .

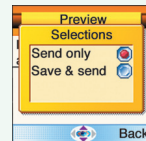

5. Press  to confirm it.



That using more than 153 characters will require an extra SMS message to be sent, more than 306 will require three messages some languages may have characters that will result in up to seven messages.

MESSAGE

 
 
READ MESSAGES

An incoming message alert will be shown in the start screen.
(and with a tone or vibration if so selected)

1. Press  . (Open the Message)

Press  to select "Option".

- Forward : Forwards a message to another.
- Reply : Reply a message.
- Delete : Deletes a message.

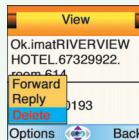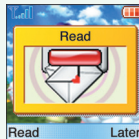

To postpone reading of a new SMS, press **Later**.

The message is stored and the  icon will appear in the start screen.



MESSAGE


INBOX


1. Press , , ,  .

To read a SMS received earlier, go to the Messages menu:

 
-In the SMS menu, scroll to SMS Inbox.

 indicates a read message, while  an unread message.

-Select the desired message and press  to read.

Press  to select one of the following options.

- Forward : Forwards a message to another.
- Reply : Reply a message.
- Call: Places a call to a sender.
- Delete : Deletes a message.
- Read : Reads a message.

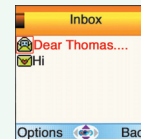




OUTBOX

1. Press , , ,  .

 
To edit a sent or Save Only message:

- Scroll to Outbox. Select a message.

 indicates a save only message,  indicates a sent and save message.

Press  to select one of the following options.

- Forward : Forwards a message to another.
- Edit : Edits a message.
- Send : Sends a message.
- Delete : Deletes a message.
- Read : Reads a message.

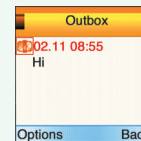

MESSAGE

DELETE

1. Press , , , .
2. You are to select one of the following options and press to delete messages.
3. Press to confirm it or to return to the previous page.



Delete messages regularly to avoid unnecessary usage of memory.

TEMPLATE

 
 
 
1. Press , , , .

Write a text template and, press to save it.
You can enable the use of the template in the 'Selections' menu in 'SMS settings'.

MEMORY STATUS

1. Press , , , .

Displays the used and free memory available in the respective message.

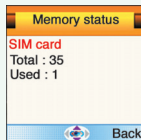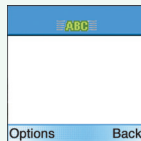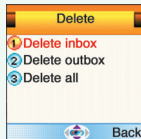

MESSAGE

To set SMS features.

SETTINGS

1. Press , , , .

Format Text format is default.

 
 
 
1. Press to select "Format".
2. Select one of the available formats and press to save it.



You are to select one from four alternative data formats if made available by network service provider.

Service Centre Number

1. Press to select "Service Center No.".
2. Enter your operator Service Center number.

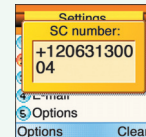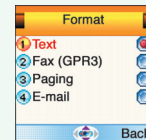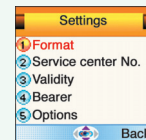

MESSAGE

 
Validity This allows you to select a period a sent message will be kept by network.

1. Press **3 DEF** to select “Validity”.
2. Select one of the available options and press **OK** to save it.



Bearer Your network subscription must include GPRS services for you to use this.


1. Press **4 GHI** to select “Bearer”.
2. Select GSM or GPRS connection and press **OK** to save it.

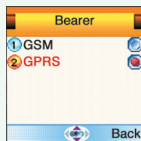

MESSAGE

Options

 1. Press **5 JRL** to select “Options”.
2. Move to one of the available options and press **OK** to enable or disable each option.

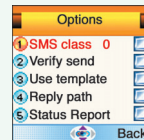

SMS Class 0 . ☒

Incoming class 0 messages will not be stored, but only shown in the display. New messages will thus overwrite previous.

Verify send . ☒

Initiates confirmation request before sending.

Use template . ☒

Input mode starts with template text.

Reply path . ☒

Allows a recipient to use a sender's service center.

Status report . ☒

In this function, check the checkbox and send the SMS, and the receiver reports the receipt of SMS.


MESSAGE

MMS

Multi Media Messaging changes the way you message, allowing you to send text, photo, pictures and sound all in one message to other mobile users.


Press , , .

CREATE MSG

1. Press  to select "Create Msg".


To

Enter a receiver's phone number.

- If you want to select a number in Phonebook when you enter it, press the  to select "PB Look up".
- If you want to send the message to several persons, insert "," between the telephone numbers.
Maximum allowable number of persons is 4.


Cc

 
 
Enter a phone number or E-mail address.

- If you want to select a number in Phonebook when you enter it, press the  to select "PB Look up".
- If you want to send the message to several persons, insert "," between the telephone numbers.
Maximum allowable number of persons is 4.

Subject

Enter a message title.

2. Select "OK" and press .

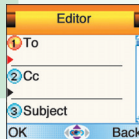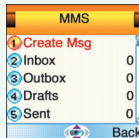

MESSAGE

3. Enter VGA, Add TEXT, and Add SOUND in the Editor function.

VGA

Select the data folder that you want and select an image frame within it.
Use this feature to send photo messages.

 
- **When "photo" is selected:**
Select a photo, which the user have taken by using Camera Menu.
- **When "User" is selected:**
Select the image that you have downloaded through MMS or Java.
(For details of image see page 65.)


Add Text

Enter any text that you want to have in the message.

Add Sound

Select the data folder that you want and select a sound from within it.
The sound will play when the message is opened or played.

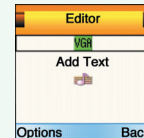

4. Use  and  to select region press  button to add object.

5. Prepare a message and press the  to select Send, Save, and Delete.



If you are upgrading your phone, and your previous phone did not support Multi Media Messaging, to use Multi Media Messaging you must insert your new SIM Card.

MESSAGE

 
INBOX

1. Press **2** to select "Inbox".

Stored incoming message and notification.

Press **Menu** to select "Option".

View
Forward
Reply

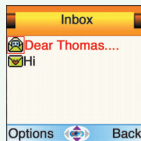


OUTBOX

1. Press **3** to select "Outbox".

Your sent message will be stored in your outbox.

Press **Menu** to select "Option".

 Send
Delete All
Delete
View

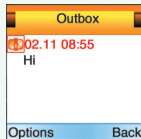

MESSAGE

 
DRAFT

1. Press **4** to select "Drafts".

Composed messages that have not been sent.

Press **Menu** to select "Option".


Send
Delete All
Delete
View

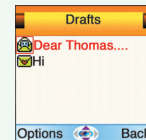

SENT

1. Press **5** to select "Sent".

 Previously sent messages.

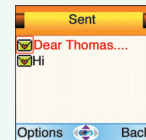




MESSAGE

CONFIG


Set configuration value.

 
 
 
1. Press , , , .

General

1. Press  to select “General”.
2. Select address type by press  in each item, then press  to save it.

Connection

1. Press  to select “Connection”.
- 5 different settings can be stored.
Connection setting has two sub menu.
select an active set out of 5 settings.
And edit connection setting.

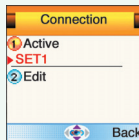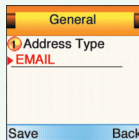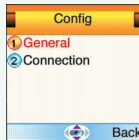


MESSAGE

CELL BROADCAST

Cell Broadcast (CB) is a network provided service. Check with your operator about the details.
When you receive a CB, it will appear automatically in the display.

 
Press , , .

READ CB

1. Press  to select “Read CB”.

Messages will be stored in the memory, but new messages will overwrite old ones received on the same channel.


To read the last messages stored, enter the Messages menu and select CB message and select read cb, then select the channel you want to read.

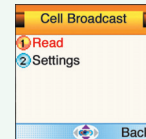

MESSAGE


SETTINGS

 1. Press **2 ABC** to select “Settings”.

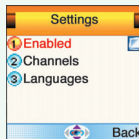

Enabled

 1. Press **1 OK** to select “Enabled”.
2. To enable CB, mark up the checkbox with **OK**.

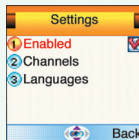

MESSAGE

Channels

1. Press **2 ABC** to select “Channels”.
2. You can now view existing channels and add new ones.
3. To add, edit or delete, press **Menu**.



Language

1. Press **3 DEF** to select “Language”.
2. Move to the desired language using the **OK**, and then press the **OK**.
3. Press **Menu** to save it.




German, English, Italian, French, Spanish, Dutch, Swedish, Danish, Portuguese, Finnish, Norwegian, Greek, Turkish, Chinese

INTERNET




The phone has a WAP browser, which enables you to access mobile internet services.


HOME

To move directly to WAP menu, press  in idle mode.

 
 
WAP is a technology that enables you to access the Mobile Internet via your phone.

Depending on your place of purchase, and provided that your network operator supports WAP, your phone is most likely set with the necessary information. to access the mobile internet for the first time, please follow the instructions.

Press , , . The display shows
“Connecting to server – Requesting data”

When connection is established, the “Home” URL will be displayed.
Follow on-screen instructions to browse the homepage or enter another homepage via the Options softkey  menu.

The first two submenus will be Home and Bookmarks.
Home will most likely be the homepage of your network operator and as no other WAP-sites are bookmarked yet, you are able to add any homepage to bookmarks.

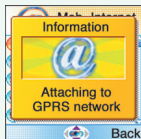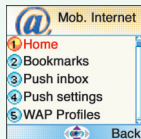






INTERNET

BOOKMARKS

 
You can access any WAP homepage by entering the relevant URL in the editor. The input must start with the text string http:// to access the page. Accept the input with OK. Up to 50 URL's can be stored and later accessed from the Bookmarks menu, using the commands:

Press , , .

-  **Select.** Opens the list of WAP bookmarks.
-  **Edit.** Edits the list of WAP-sites.
-  **Add.** Opens an editor to add a homepage to Bookmarks.
-  **Delete.** Opens the list of WAP-sites. Delete a homepage from bookmarks and press .



- Some WAP pages may be password protected and prompt you to enter a user name and password. However, on many WAP sites you can enter as a guest, but you may not be eligible to browse the entire site.
- Some network operators enables you to receive and read your E-mail via WAP. In most cases this service requires you to give the operator your Internet account details and password. The operator will then retrieve your mail and send it to you as a WAP page. Contact your operator for details.

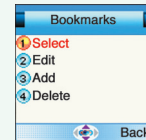


INTERNET

PUSH INBOX


1. Press , , .

 If your network operator supports Push technology, you can receive messages from WAP service providers. The messages will be announced by a pop-up alert and stored in the Push Inbox. To personalize Push, go to:

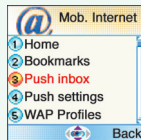


PUSH SETTINGS

1. Press , , .

2. Press  to enable or disable it.

Press  and select one of the following options.

 
- 1. Allow PUSH : ☒
- 2. SL settings
 - Always ask.**
WAP-site will open upon your confirmation.
 - Always open.**
WAP-site will open automatically.
 - Open when WAP.**
WAP-site will open if you are in a WAP session.

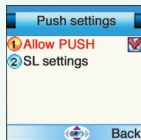


INTERNET

WAP PROFILES

 
1. Press , , ,  ~ .

2. Select one of the following items and press .

If you get a “Wap settings incomplete” message, your phone is not set up for WAP.

You will need set-up information from your network (marked with  in this manual).

Check the sales package or contact your network operator. With the information at hand:

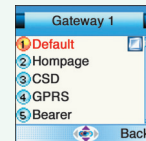


INTERNET

DEFAULT

1. Press **1** to select “Default”.

 Make up ‘Default **V**’ to make this your Home.
You can configure five different gateways, but only one of them can be “Home”.

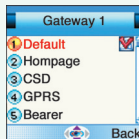


HOMEPAGE

1. Press **2** to select “Homepage”.

-Enter a url and press [**OK**] to save it.

 Homepage (e.g.:http://wap.aol.com)

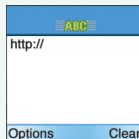


INTERNET

CSD

1. Press **3** to select “CSD”.

 In each item, you are to enter data or select an option.

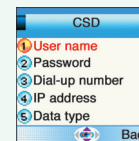


- User name
- Password
- Dial-up number
- IP address
- Data type (Analog / ISDN)
- Data speed (9600 / 14400)
- Idle Timeout (1minute / 2 / 3 / 4 / 5)

GPRS

1. Press **4** to select “GPRS”.

In each item, you are to enter data.

 
- User name
- Password
- APN (Access Point Name)
- IP address
(The IP Address is a 12 digit code. When typing it, enter 0 for “blank” spaces.)

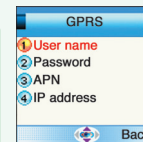

INTERNET


BEARER

 1. Press **5** to select "Bearer".
2. Select one from the bearer list and press **OK** to save it.

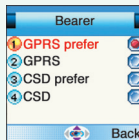

CONNECT MODE

 1. Press **6** to select "Connect mode".
2. Select temporary or continuously.
Press **OK** to save it.

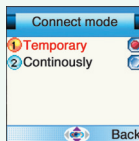

INTERNET

SECURITY

1. Press **7** to select "Security".

Use the security features to enable the use of encrypted transmission which some URLs may require.

SHOW GRAPHICS

1. Press **8** to select "Show Graphics".

 
 
Choose this option to include graphic elements in the display.

RENAME

1. Press **9** to select "Rename".
2. Edit the name of the gateway



Repeat the setup procedure for the remaining four gateways to create alternative "Homes."

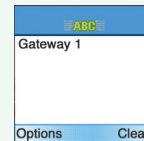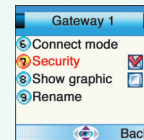


INTERNET

EMPTY CACHE

1. Press , , .

 To provide quick access to your favorite web sites, information is stored in the phones cache memory. It is recommended that you empty your cache memory regularly to avoid congestion.

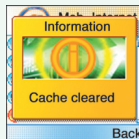

ORGANIZER


The Organizer is a practical tool that will help you to keep track of your appointments and alert you of meetings, celebrations, events etc.




CALENDAR

To set and view appointments.



1. Press , , .


DAY VIEW

1. Press  to select "Day View".

2. Use  and  to select a schedule and press  to view it.

In Day view, you can check appointments for the day.

You can scroll through the entries and use [] to view an appointment. Press [] to add an appointment and edit or delete it.

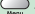Press  to select "Option".

Month : To move to 'Month view'.

 
 
New : To add an appointment.

You are to select one of the following categories.

(Meeting/ Birthday / Memo)

Delete : To delete a selected appointment.

View : To display a selected appointment.

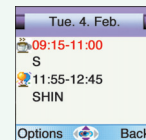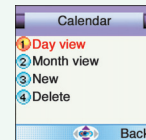



ORGANIZER


MONTH VIEW

1. Press  to select “Month View”.

- A calendar is displayed with appointments. the date with an appointment is shown in green color, while a selected date is in violet.
- The wallpaper for calendar changes as a new season is selected.




2. Use  to select a date and press  to view appointments on the particular date.

Press  to select “Option”.

Day view : To move to ‘Day view’

New : To add a new appointment.

3. Select an appointment and press  to do the following options.

Press  to select “Option”.

New : To add an appointment.


You are to select one of the following categories. (Meeting/ Birthday / Memo).

Delete : To delete a selected appointment


View : To display a selected appointment.

 
ORGANIZER

NEW

1. Press  to select “New”.

In ‘New’ you can enter a new appointment. Define it as a Meeting, Birthday or a Memo. Select one and enter the relevant information in the text editor.

Use [] to scroll through the entry fields:

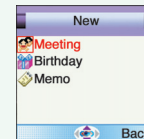

①. Subject

To enter a title for an appointment.

 
②. Start and End date,

③. Start and End time.

To set a date and a time to start or end an appointment


④. Reminder time

To set a reminder to give you an alert to appointment.

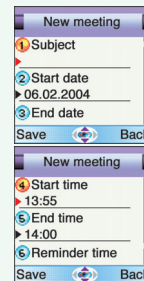

ORGANIZER

 
 
DELETE

1. Press  to select "Delete".

2. Select one of the following items and press .

1. All : Delete all appointments.
2. Week Old : Delete the appointments that is a week old.
3. Month Old : Delete the appointments that is a month old.

3. Press  to confirm it.

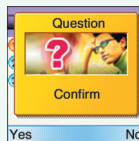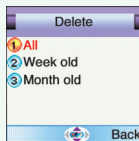

ORGANIZER

TASKS

To put down things to remember.


1. Press , , .


The Tasks list is an electronic notepad that will help you to remember things to do. The list is accessed in the Organizer folder.



If no tasks are entered in the list, the screen will display "No entries".

NEW

1. Press  to select "Options".

2. Select a "New" item and press  to create a new task.

 
 
3. Move to each field to enter data.

1. Subject : Enter a title for a task.
2. Due Date : Enter a due date for a task.
3. Reminder : Mark it up and you are prompted to enter its date and time.
4. Reminder Date
5. Reminder Time

If one or more tasks are entered, you can choose among the following options: Delete all, Delete, New



You can enter up to 10 different tasks, each with a maximum 20 characters, and set an alarm to remind you.

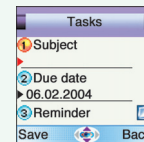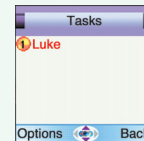

ORGANIZER

ALARM

1. Press , , .

ALARM 1,2,3

1. Press , , to select “Alarm 1, 2, 3”.

2. Press to mark up ‘Alarm on’ to enable the alarm.

3. Enter a time, select alarm type and sound.

Time - Set a alarm time.

Alarm type - Everyday, Workday, Defineself.

Sound - Alarm1~5.

SELECT ALL

1. Press to select “Select All”.

 
 
 
 
Select a alarm 1~3.

CANCEL ALL

1. Press to select “Cancel All”.

Press to select “Option”.

Delete all
Delete

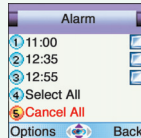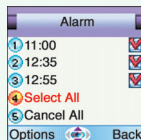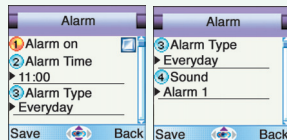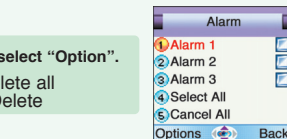

ORGANIZER

CALCULATOR

To use the calculator.

1. Press , , .



Press [] to clear a digit or press and hold [] to clear all inputs.

Enter a figure and press a +, -, *, / as a assigned in navigation keys.

Enter another figure, then press .

The result will be show on the bottom line.

Example

Enter 200 and press .

 
 
Enter 25 then press .

The result 225 will be show in bottom line.

If you want to continue the calculation, do not select =,

but press then repeat the above procedure.

To finish the calculation, select .

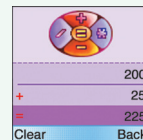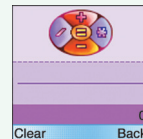

GAMES

MINI GOLF

1.Press , , .

Let 's play the simplified golf game using your handset.

This is a miniature golf.

Only putter is used.

Put the ball in the hole by avoiding walls and barriers.

There are holes with pars 3 to 5.A player with the least number of hits,minus even par numbers in each hole,becomes a winner. Regardless of total score,each hole has its winner for the hole and gains 1 point.

Stroke(1P,2P),Match Play(2P)are available.



GAMES

MIRROR IN ACTION

1.Press , , .

The objective is to shoot down enemy ships using reflecting mirrors to aim the lasers.

Be careful because when you use a laser you need to recharge it.

During this time your enemy has a chance to regroup and attack you when you are not in a position to defend yourself.

As you move onto subsequent levels the mirrors are positioned at different angles making your task harder.



GAMES

PARKING WAR

1. Press  ,  ,  .

The objective is to unlock the traffic grid by carefully maneuvering the cars and trucks around each other towards the exit.
The game is time based so there is no time to lose as you test your wits moving the vehicles back and forth to smooth out the jam as quickly as possible.




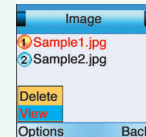 
MYPHONE




The default settings with regard to the sounds and display are easily changed.

IMAGE

 
1. Press  ,  ,  .

Press  to select "Option".
Delete
View



2. Use  and  to select a image and press  to view it.

This function manages the downloaded images.
You may save up to 10 images.

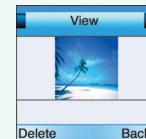






MYPHONE

 
AUDIO

1.Press  ,  , .

INCOMING CALL

1.Press  to select “Incoming Call”.



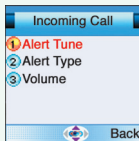



-  **Alert Tune** - Select one among 10bells, 30melodies and some downloaded melodies.
-  **Alert Type** - Select one of the available options .
(1.Tone only / 2.Tone+Vib / 3.Tone after Vib / 4.Vibration Only)
-  **Volume** - Volume can be controlled in 7 levels through [] and []

 


MYPHONE


SMS ATTENTION


1.Press  to select “SMS Attention”.


-  **Alert Tune** - 10 different SMS alert tunes.
-  **Alert Type** - Select one of the available options. (1.Tone only / 2. Tone +Vib / 3.Vibration Only)
-  **Volume** - Volume can be controlled in 7 levels through [] and [].
-  **Duration** - A function to set the alarm that notices unread messages.(1.Once / 2.Periodic)

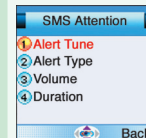

KEYPAD TYPE

1.Press  to select “Keypad Type”.

 
2.Select one of the available keypad tone type and press  to save it.

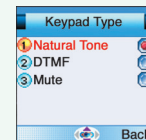

MYPHONE


INFO TONES

 1. Press **4** GHJ to select “Info tones”.
2. Select On or Off and press **OK** to save it.

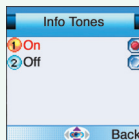

CONNECT TONE

 1. Press **5** JKL to select “Connect Tone”.
2. Select On or Off to set call connection tone.
Press **OK** to save it.

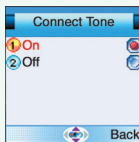

SLIDE TUNE

 
1. Press **6** MNO to select “Slide Tune”.
2. Select One of the available Slide Tune and press **OK** to save it.



MYPHONE

WALLPAPER

1. Press **Menu**, **5** JKL, **3** DEF.
2. Select the desired Wallpaper using the **Left** and **Right** key.
3. Press the **Menu** or **OK**, then the Idle screen is changed.

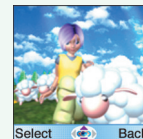


MYPHONE


REETING


You can enter a greeting, set an animation for start-up or shutdown and set a greeting time.

 
1.Press , , .

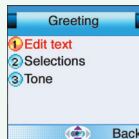

TEXT EDIT


1.Press  to select "Text Edit".

 2.Enter a greeting of your own and press  to save it.

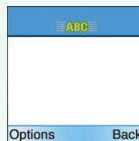


MYPHONE

SELECTIONS


1.Press  to select "Selections".

2.You are to set one of the following options for either start-up or shutdown.

 
1.Start-up : Greeting / Animation / None
2.Shutdown : Animation / None

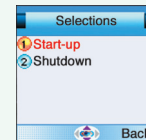

TONE

1.Press  to select "Tone".

 2.On or Off to set a greeting tone when the phone is turned on.

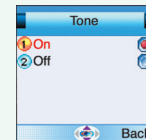


MYPHONE

 
 
CALLER GROUPS

You can create Caller Groups from the contacts in your phone book to identify a caller by sound alone.

1. Press , , .


2. Use  to moved to a caller group.


3. Press  to select it.

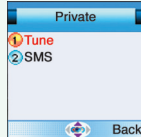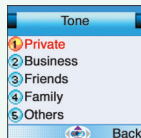


MYPHONE

TUNE


1. Press  to select “Tune”.


2. Select one of the available tunes and press  to save it.

 You can designate a tune for a group.

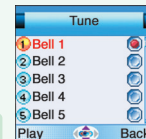


SMS

1. Press  to select “SMS”.

2. Select one of the available alerts and press  to save it.

 You can designate a type of alert for a group.

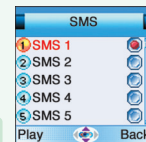

MYPHONE

LIGHT & LCD

Your phone has a backlight LCD display with full graphic capability. You can set LCD power save, backlight time.

1. Press , , .

BACKLIGHT TIME

1. Press  to select "Backlight time".

2. Select one of the following backlight time and press  to save it.

You can adjust how long the Backlight stays on. (20/40/60 seconds)

 
 
 
LCD POWER SAVE

1. Press  to select "LCD Power Save".

2. Select one of the following LCD power save and press  to save it.




On set: Turn off the display while standby status.

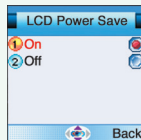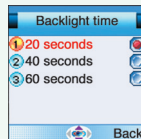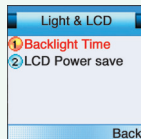Off set: Turn on the display while standby status.




MYPHONE

MY MENU KEY

1. Press , ,  to select "My Menu key".

2. Select the menu you wish to use.

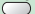Set frequently using menus to move immediately by pressing  on the standby status.

 


SETTINGS The Settings menu is used to set basic parameters for the phone such as language, time & date, data transfer, security, network and call settings.

AUTO KEY LOCK

1. Press , , to select “Auto key lock”.

When set Auto Key Lock, all the keys lock after 30 seconds. This function is for preventing unintended key pressings while not using the phone. To release the functions, press .


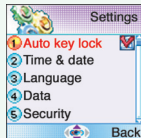


TIME & DATE

1. Press , , .

SET TIME / DATE

  1. Press to select “Set time / Date”.
2. You are to set the present time & date.

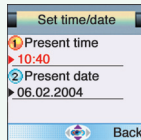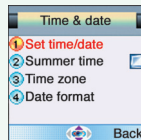

SETTINGS

SUMMER TIME

1. Press to select “Summer Time”.
2. Mark up ‘Summer time’ through to apply daylight saving time.

 
 
Box If you wish to apply daylight saving time

TIME ZONE

1. Press to select “Time zone”.
2. Use and to select a timezone and press to save it.
3. You are to select your current location.

DATE FORMAT



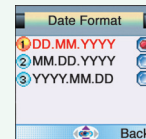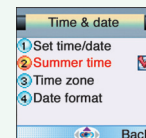


1. Press to select “Date Format”.
2. Select one of the date formats and press to save it.

 


SETTINGS

LANGUAGE

The display will change to the selected language.

1. Press , , .
2. Use  to select a language.
3. Select one of the available languages and press  to save it.
4. The display will change to the selected language.

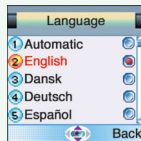



SETTINGS

DATA

 
 
You are set parameters for data transmission from your laptop or PC.

1. Press , , .



DATA CABLE

1. Press  to select "Data Cable".
2. Set each parameter and press  to save it.

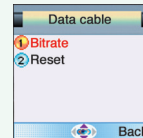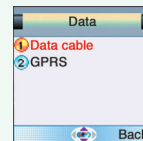
- Bit rate : (300 / 1200~ / 115200)
- Reset : You are to reset it.



GPRS

1. Press  to select "GPRS".
2. Set each parameter and press  to save it.

 1. Attach on
2. Accept calls : You are to mark this up to enable it.

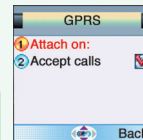


SETTINGS

 
 
SECURITY

1. Press , , .

PIN CODE 1

1. Press  to select “PIN code 1”.

2. Mark it up to enable PIN code 1 and press  to save it.

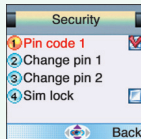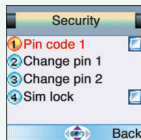




SETTINGS

CHANGE PIN1

1. Press  to select “Change PIN 1”.

2. Enter your old pin code followed by the new code.

   3. Confirm it when prompted. Press .

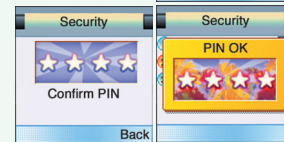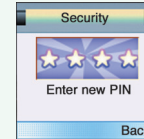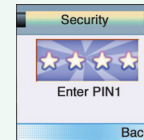


That if you enter an incorrect PIN code three times in succession, your SIM card will lock and you must enter the PUK code to unlock. PIN and PUK codes are either supplied with your phone or must be obtained from your network provider or place of purchase.

SETTINGS

CHANGE PIN2

 1. Press **3 DEF** to select “Change PIN 2”.
2. Enter your old pin code followed by the new code.
3. Confirm it when prompted. Press **OK**.

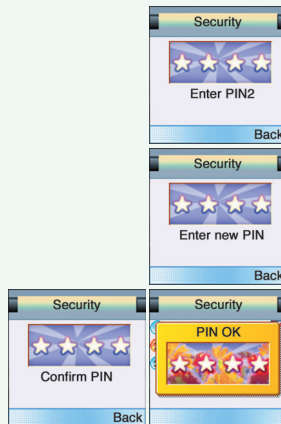


SETTINGS

SIM LOCK

1. Press **4 GHI** to select “Sim lock”.
2. Mark it up to lock SIM card.

As a unique identification, your phone is furnished with a code number known as IMEI. You must retain this number in case you need to block your account, e.i. if your phone is lost or stolen. We recommend that you write it down here:

 The IMEI number is printed on the label under the battery.


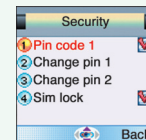


NETWORK

1. Press **Menu**, **6 MNO**, **6 MNO**.

SELECT NETWORK

  1. Press **1 OO** to select “Select network”.
2. Select Automatic or Manual.

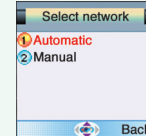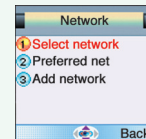


SETTINGS

PREFERRED NET

1. Press **2** to select “Preferred net”.

 The phone will search this list from the top. Left softkey options roll-up enables you to Add or Insert a new network. If you use Add, the new network will be added to the end of the list (having the lowest priority). Insert will insert the network in the list where the cursor is placed.

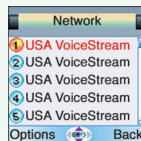

ADD NETWORK

1. Press **3** to select “Add network”.

To add a new network, start by selecting an empty network entry from the Add network menu. Press OK. A text editor will appear. Enter the name(input english) of the network followed by the Mobile Country Code (MCC) and the Mobile Network Code (MNC). This information is supplied by your network operator.



SETTINGS

CALL SETTINGS

 
 
1. Press **Menu**, **6**, **7**.

CALL FORWARD

1. Press **1** to select “Call forward”.

- ①. **Unconditional:**
To forward all incoming calls to a specified number.
- ②. **All unanswered:**
To forward all calls that you do not answer within a specified period of time.
- ③. **No reply:**
To forward calls those are not replied.
- ④. **Not reachable:**
To forward calls when you are out of network range.
- ⑤. **Busy:**
To forward calls when your phone is busy.
- ⑥. **Status all:**
To summarize the status of call forward options.
- ⑦. **Cancel all:**
To cancel all call forward settings

A specific number can be designated for each option, and you can activate, view or cancel the present status. Follow the on screen instructions.

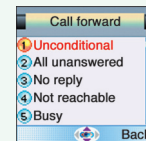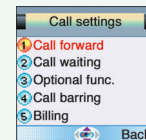

SETTINGS

CALL WAITING

 
1. Press **2 ABC** to select “Call waiting”.

This function notifies you of another call during a telephone conversation. Enter the menu to Activate or Cancel Call waiting or to see the Status. If Call waiting is active, and you are called during a conversation, you will hear a faint ringing tone in the background. To answer the new caller without losing contact with the original party:

-Enter Options roll-up menu.

Select Switch calls.


-conduct the conversation with the new party and select Switch calls to return to the first caller. Select Join calls to conduct a three-party conversation.

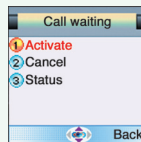

OPTIONAL FUNCTION

1. Press **3 DEF** to select “Optional func.”.

 This menu contains various settings to facilitate daily use.

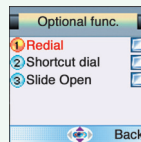

SETTINGS

 
Redial

1. Press **Menu**, **6 MNO**, **7 PQRS**, **3 DEF**, **1 QLO** to select “Redial”.

Activates automatically redialing of your last unsuccessful call. The number will be redialed after 5 seconds (1 time), after 1 minute (3 times) and after 3 minutes (10 times). If this sequence is completed without connection established, the number must be manually dialed for a new attempt.

To manually abort the redial sequence, press [**End Call**].


To manually redial last number called, press [**OK**] twice in a row.

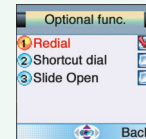

Shortcut dial

1. Press **Menu**, **6 MNO**, **7 PQRS**, **3 DEF**, **2 ABC** to select “Shortcut dial”.

 
If you activate Shortcut dial, you can dial phone numbers from the Shortcut list by pressing just one or two digits.

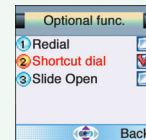

Slide open

1. Press **Menu**, **6 MNO**, **7 PQRS**, **3 DEF**, **3 DEF** to select “Slide Open”.

 Set the phone to answer a call with slide up.

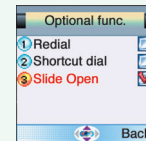


SETTINGS

CALL BARRING

1. Press **4** **GH** to select “Call barring”.

You can lock the telephone to reject incoming calls or bar outgoing calls, domestic or international. Call barring is a password protected network service, and details should be acquired from your network.

 - ①. **Cancel all** - To cancel all call barring settings.
- ②. **Outgoing calls** - To cancel all call barring features of outgoing calls, or decide what type of outgoing calls is to be barred.
(1. Cancel all / 2. All calls / 3. All internat. / 4. Except to home)
- ③. **Incoming calls** - To cancel all call barring features of incoming calls or decide what type of incoming calls is to be barred.
(1. Cancel all / 2. All incoming / 3. When abroad)
- ④. **Password** - To set a password.

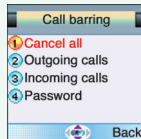


SETTINGS

BILLING

1. Press **5** **JRL** to select “Billing”.

You can keep track of your calling expenses by setting the “Billing” feature. Scroll to Billing. Press [**OK**]. Enter the submenus:

 - ①. **Total calls** - To view the total amount of time and units used.
- ②. **Last call** - To view the duration of the last call.
- ③. **Set max units** - To set a maximum of units available for a call.
- ④. **Units left** - To view the number of units left on your account.
- ⑤. **Price/unit** - To enter a network price for the units.
- ⑥. **Currency** - Displayed if supported by your network.

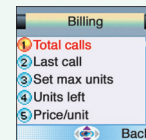


SETTINGS



RESET SETTINGS

 1. Press , , .

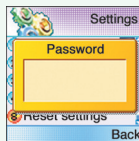Return all settings to factory defaults.
The power goes off automatically.
if you want to delete photo image can use to camera menu.



CAMERA

PHOTO To move directly to camera menu, press  or  in idle mode.


1. Press , ,  to select "Photo".

 
 
 
2. Press  or  to take a photo.

- Press it once on the idle mode, you can move to Camera Menu.
- Press on Photo at Camera menu and Motion Shot menu to take a picture.
- Easy to take self pictures or motion shot.


3. Press the  to select **Save or Send Photo**.

Select Send Photo, and you reach MMS Menu.
For details of MMS, see Page 38.


4. Enter name and press  to save it.

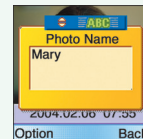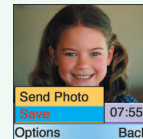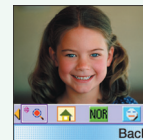

CAMERA

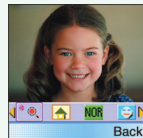 


Zoom
(0,+1,+2,+3)

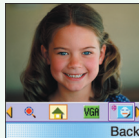 


4 Graphic qualities,
Normal, Better, Good
& Best.



 
5 Types of
sticker.

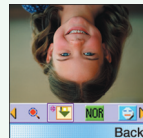


Normal or
Reverse picture.

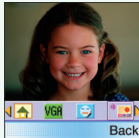 

7 Levels of contrast,
-3 to +3.

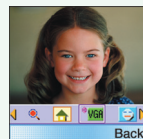 

VGA(Video
Graphic
Array), QCIF

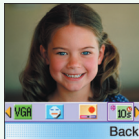 


Shutter speed,
0 or 10sec.

CAMERA


When connecting charger while taking phone.(Photo shot, Motion shot)

 1.The screen on LCD of MX-C90 will stop displaying in camera mode when connecting a charger.

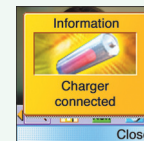

2.After that , " Continuous " is displayed on it.

 When this phenomenon is happened, push the button to operate camera mode continuously.

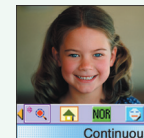


During normal use with charger connected to MX-C90, charger may be subjected to voltage interruption causing the same phenomenon as above.
If it happens, just follow the above procedure.


CAMERA


MOTION

 1. Press , ,  to select "Motion".

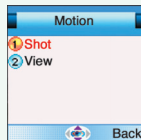


SHOT

  1. Press  to select "Shot".

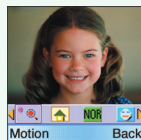


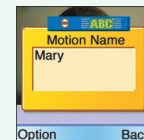 
2. Press ,  or  to take a motion.

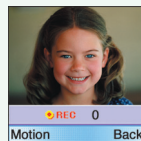


Motion frame : 100frame (Time : about 15sec)

CAMERA

3. Press  to enter name and press  to save it.

 


VIEW

1. Press  to select "View".


Press [] to display the following items.

Information : To display a time and date in motion.
Rename : To rename a motion.
Delete all : To delete all.
Delete one : To delete one.

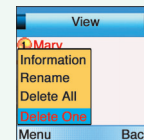

2. Select one from the view list and press  to play.

  : BACK  : STOP
 : PAUSE  : PLAY

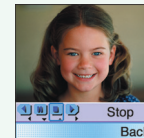

CAMERA

IMAGE MANAGER






1. Press , ,  to select "IMAGE Manager".



PHOTO LIST

1. Press  to select "Photo List".

Press [] to display the following items.

Send Photo : It makes you reach MMS Menu.

Wallpaper : To set for idle mode.

Rename : To rename a picture.

Information : To display a time and date in picture.

Delete All : To delete all.


Delete One : To delete one.

Delete Multi : To delete several ones.



CAMERA

PHOTO NAME LIST

1. Press  to select "Photo Name List".

Press [] to display the following items.

Send Photo : It makes you reach MMS Menu.

Wallpaper : To set for idle mode.

Rename : To rename a picture.

Information : To display a time and date in picture.

Delete All : To delete all.

Delete One : To delete one.

 
Delete Multi : To delete several ones.



CAMERA

SETTING


1. Press , ,  to select “Setting”.

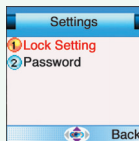

LOCK SETTING

1. Press  to select “Lock Setting”.

 The default password is the “1234”.

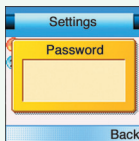


2. Enter password and press  to enable lock setting.

Camera Lock.

Set the phone to camera lock.


Photo Lock.

 Set the phone to photo lock.

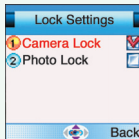



CAMERA


PASSWORD

1. Press  to select “Password”.

  The default password is the “1234”.

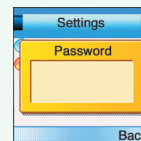

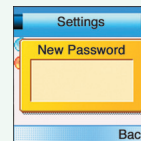


2. Enter new password and press  .

 


CAMERA

MEMORY STATUS

1. Press , ,  to select “Memory status”.

Displays the used and free memory available in the respective camera.

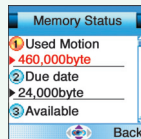

CHAPTER 4

PHONEBOOK

- Look up
- New
- PB Settings
- Voice mail no.

PHONEBOOK

You can use either the SIM card or the built-in Contacts database as your Phonebook.

The database can store up to 250 contacts, with three phone numbers per contact along with the contact's complete postal address and email address. Number of contacts on the SIM card depends on your network.





Choice of phonebook is the Options soft key menu in look up menu.


(Select use SIM/Use Phone)

PHONEBOOK

 
LOOK UP

When you select "SIM" in Select PB of options. (Press )





1. Press ,  to select "SIM: Look up".
2. Scroll to find the desired contact and press .
3. Press  to make a call.

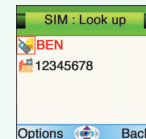
Press [] and you will see the following items displayed.

New
Delete all
Select PB
Delete
Edit
Call
Search
View




When you select "Phone" in Select PB of options (Press )

1. Press ,  to select "Look up".
2. Scroll to find the desired contact and press .
3. Press  to make a call.

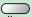Press [] and you will see the following items displayed.

 New
Delete all
Select PB
Sorting
Delete
Edit
Call
Search
View

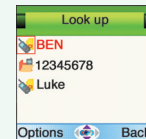

This is selected as ALL when you purchase the phone.

PHONEBOOK

NEW

To add a contact to the SIM phonebook:

1. Press , .

When “To SIM” is selected.

 
 
1. Move to each field and press to enter its information accordingly.

- A text editor appears.
- Enter a name and press [].
- Scroll [].
- Enter a phone number and press [].

2. Press to save it after entering information.



If you have chosen Phone as your phonebook, up to three numbers can be entered along with address information for each contact.

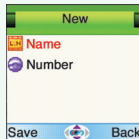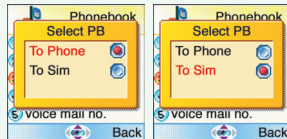


PHONEBOOK

When “Use Phone” is selected.

1. Move to each field and press to enter its information accordingly.

All the above data can be entered.

 1. First name 2. Last name 3. Home 4. Mobile
5. Work 6. Calling group 7. Address 8. Zip code
9. City 10. Province 11. Country 12. E-mail

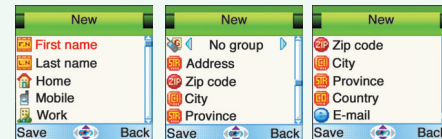

2. Press to save it after entering information.

If a different SIM card is inserted in the phone, you will be alerted of the option to copy data from this. You may also copy data to SIM cards, thus enabling you to share contact information with friends and colleagues. Copy features are located in the PB Settings submenu. (Optional)

PHONEBOOK

SETTINGS

To alter settings in the Phonebook:

1. Press  ,  .


SHORTCUT DIAL

1. Press  to select “Shortcut dial”.

Make calls using only one or two keys. Define a key combination (2-21) for your most accessed contacts. To include or remove a contact in the shortcut dial list, select a position and:

-Select New or Delete in the Options softkey menu.

 
 
-Choose the appropriate contact from the phone book.

Press [].

-Any previous contact on the selected position will be overwritten.




If you select SIM as your Phonebook, you will not be able to use Contacts database features (three phone numbers, address information), but still allowed to use caller groups or shortcut dial.

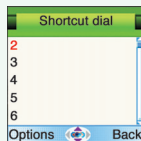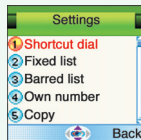

PHONEBOOK

FIXED LIST

1. Press  to select “Fixed list”.

Use this to create a list of allowed numbers. When Active ☒ is ticked, the user can only access the listed numbers. Requires PIN 2 (see p. 82).


BARRED LIST

 
 
 
1. Press  to select “Barred list”.

Use this to create a list of barred numbers (if supported by network). If activated, the user can not access barred numbers. Requires PIN 2.

OWN NUMBER


1. Press  to select “Own number”.

Store your own number for future reference. Some SIM cards will install your phone number automatically. If yours is not, simply enter it in the editor and press [].

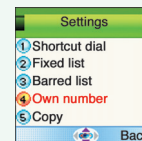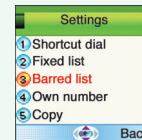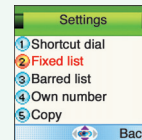


PHONEBOOK

COPY

1. Press  to select "Copy".

 
This function stores saved data in phonebook to sim card or sim to phone book.

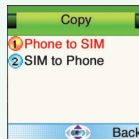

MEMORY STATUS

1. Press  to select "Memory status".

 Displays the used and free memory available in the respective phonebooks. Reset Phone memory or SIM memory on left softkey. Be advised that this will erase all entries in the Phonebook that is reset.

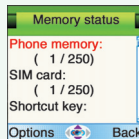


PHONEBOOK

VOICE MAIL NO.

1. Press , .

2. Enter a Voice mail number.

 - The options softkey allows you to do the following items.
(Lookup / Back / Save)

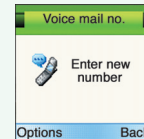

Service numbers.

This is a network service and the menu will only appear if your network operator supports this service. The menu may contain various services, depending on the network.

CHAPTER 5

MISCELLANEOUS

- Menu summary
- Cellular phone in brief
- Abbreviations and acronyms
- Questions and answers
- Technical data

MENU SUMMARY

Messages

SMS

Write new SMS

Inbox

Outbox

Delete

Inbox

Outbox

Delete all

Template

Memory status

Settings

Format

SC number

Validity

Bearer

Options

SMS class 0

Verify send

Use template

Reply path

Status Report

MMS

Create Msg

Inbox

Outbox

Drafts

Sent

Config

Cell Broadcast

Read

Settings

Enabled

Channels

Languages

Internet

Home

Bookmarks

Select

Edit

Add

Delete

Push inbox

Push settings

Allow push

SL. Settings

WAP Profiles

Gateway 1~5

MENU SUMMARY

Default

Homepage

CSD

UserName

Password

Dial-up number

IP Address

Data Type

Data speed

Idle timeout

GPRS

User name

Password

APN

IP address

Bearer

Connect Mode

Security

Show graphics

Rename

Empty cache

Organizer

Calendar

Day view

Month view

New

Meeting

Birthday

Memo

Delete

All

Week old

Month old

Tasks

Alarm

Alarm 1~3

Select all

Cancel all

Calculator

Games

Mini Golf

Mirror in action

Parking war

Myphone

Image

Audio

Incoming call

MENU SUMMARY

Alert tune	Greeting
Alert type	Text edit
Volume	Selections
SMS Attention	Greeting tone
Alert tune	Caller groups
Alert type	Private
Volume	Business
Duration	Friends
Keypad Type	Family
Natural Tone	Others
DTMF	Light & LCD
Mute	Backlight time
Info Tones	LCD Power Save
On	My Menu key
Off	Settings
Connect Tone	Auto key lock
On	Time & Date
Off	Set time/Date
Slide Tune	Summer Time
Slide Tune 1	Time zone
Slide Tune 2	Date format
Slide Tune 3	Language
Off	Data
Wallpaper	Data cable
	Bitrate
	Reset
	GPRS
	Attach on

MENU SUMMARY

GPRS	No Reply
Attach on	Activate
Accept calls	Cancel
Security	Status
PIN Code 1	Not Reachable
Change PIN 1	Activate
Change PIN 2	Cancel
SIM Lock	Status
Network	Busy
Select Network	Activate
Automatic	Cancel
Manual	Status
Preferred net	Status All
Add network	Cancel All
Call settings	Call waiting
Call Forward	Activate
Unconditional	Cancel
Activate	Status
Cancel	Optional func.
Status	Redial
All Unanswered	Shortcut Dial
Activate	Slide Open
Cancel	
Status	

MENU SUMMARY

- Call Barring
 - Cancel All
 - Outgoing Calls
 - Cancel All
 - All Calls
 - All Internat.
 - Except to Home
 - Incoming Calls
 - Cancel All
 - All Incoming calls when abroad
 - Password
- Billing
 - Total calls
 - Last call
 - Set max units
 - Units left
 - Price/Unit
 - Currency
- Reset settings

Camera

- Photo
- Motion
 - Shot view
- Image manager
 - Photo list
 - Photo name list
- Settings
 - Lock setting
 - Password
- Memory status

Phone Book

- Look Up
- New
- Settings
 - Shortcut dial
 - Fixed list
 - Barred list
 - Own Number
 - Copy
 - Memory status
- Voice Mail no

MISCELLANEOUS

CELLULAR PHONE IN BRIEF

Your cellular phone is essentially a highly sophisticated radio, basically no different from any other two-way radio system.

The ingenuity of the cellular system lies in the splitting of the broadcasting environment into a multitude of relatively small cells with low-power transmitters.

This "Cellular approach" to radio communication allows for extensive frequency reuse so that millions of people can use their mobile phones simultaneously although the number of frequencies are limited. The broadcasting cells are commonly illustrated as hexagons, typically 10 square miles in area with the base station in the center. This arrangement allows for non-adjacent cells to use the same frequencies without risk of interference.

Your cellular phone is in constant contact with the nearest base station. As you move from cell to cell, e.g. while driving in your car, the base station you are approaching takes over when you are within reach. This happens within split seconds without your noticing it. All you experience is a stable and clear connection.

However, not all network operators provide the same coverage in all areas. Hence, if you travel near the limit of your network's coverage, you may experience difficulties in maintaining the connection. The same may happen if the radio signal is blocked by obstacles such as high trees, hills or buildings, or if you are inside a heavily reinforced concrete building.

MISCELLANEOUS

ABBREVIATIONS AND ACRONYMS

To remedy the situation move closer to the nearest mast if possible or seek higher ground. If you are inside a building, try moving towards a window.

What is roaming? Roaming is the technique that allows subscribers to move from one cell to another or from one network to another without affecting the call.

What is digital? Early cellular phones relied on analogue systems.

Analogue radio systems transmit the voice signal in its original form, whereas digital technology transforms the microphone signal into number sequences (digits) and transmit these.

When received, the digital signal is decoded so that you can hear the sender's voice.

Digital signals do not degrade in quality as long as the data is received, and they can be compressed to take up less memory.

What is Dual Band? A dual band cell phone has the capability to automatically switch between frequencies and can thus operate on two or more frequency bands, e.g. 900 Mhz and 1800 Mhz.

What is GSM? Global System for Mobile communications is the most widespread standard for digital communication in Europe, Australia and in large parts of Asia and Africa. GSM uses frequencies in the 900 and 1800 Mhz bands.

What is APN? APN stands for Access Point Name and is basically an URL address on the Mobile Internet.

What is GPRS? General Packet Radio System is a service protocol built on GSM technology. GPRS allows several mobile phone users to share the same connection. Charges may thus be based on the amount of transferred data rather than on airtime.

MISCELLANEOUS

What is CSD? A wireless service protocol used for WAP. CSD stands for Circuit Switched Data and will enable continuous connection and payment by the amount of data transferred.

What is SIM? Subscriber Identity Module or SIM is the little gold-plated plastic card that you get from your network operator and which holds the unique data the network needs to identify your phone.

What is PIN and what is PUK? Access to use a cell phone is most often protected by a code known as "PIN" - Personal Identification Number. Your SIM card comes with a default PIN that you can change to any code you prefer. See p. 80 for details. If you forget your code, or by mistake enter a faulty code three times in a row, the SIM card will lock. To unlock, you must enter the Personal Unblocking Key or "PUK" code that came with your SIM card.

What is IMEI? IMEI stands for International Mobile Equipment Identifier and is an identification system that can recognize every mobile phone by a specific number. If a phone is stolen, the IMEI system is capable of blocking it on all network operators that support the system.

What are MCC and MNC? Mobile Country Code is a code that identifies the country in which the subscriber lives. Mobile Network Code identifies the network operator.

What is DTMF? Dual Tone Multi Frequency or DTMF is a paging and remote control protocol that allows you to control certain functions via your phone, e.g. listening to your answering machine.

MISCELLANEOUS

What is Cell Broadcast?

Cell Broadcast is a service from your network provider. With CB, you will be alerted when entering a “cheap zone” or you can obtain traffic information, weather reports and other important information sent to you as text messages. Some providers also offer sports results, news bulletins or even commercials. If offering CB services, your network will forward a list of services and the relevant channels to enter.

What is WAP?

Wireless Application Protocol or WAP is a standard that allows you to access parts of the Internet, known as “Mobile Internet” via your cell phone. Using WAP will open many services to you, i.e. news and weather forecasts, ordering services and goods, accessing databases and more.

What is an URL?

Uniform Resource Locator or URL is an address system used on the Internet. All WAP homepages have a unique address, allowing browsers to distinguish one from the other. An URL always start with the text string: <http://wap> followed by the address.

What is ISP?

ISP stands for Internet Service Provider.

MISCELLANEOUS

QUESTIONS AND ANSWERS

Q:My phone does not switch on when I press the key ?

A:The keypress has been too short or the phone has shut down because the battery power level is too low to make calls. Recharge the battery fully.

Q:Stand-by time seems too short ?

A:You have made excessive use of the games or the Organizer or display light has been on continuously due to unintentional key activation. Apply Keypad lock in left softkey menu.

Q:My phone displays: ‘PLEASE INSERT SIM’?

A:You must insert the SIM before you can use the phone. If it is already installed, remove and clean the blank area with a dry cloth, then reinsert.

Q:My phone displays: ‘INVALID SIM’?

A:The phone is SIM-locked and will not accept the inserted SIM. Insert the correct SIM or contact your dealer.

Q:My phone displays: “EMERGENCY CALLS ONLY”?

A:Your SIM card is not properly installed or configured, or you are out of network range.

Q:My phone displays: “NO NETWORK” ?

A:You are outside network range or there is no clear path to the transmitter.
If you are inside a building, try moving towards a window.

MISCELLANEOUS

Q:Some calls are not processed. What is wrong?

A:A call bar has been set to restrict phone usage. Check call barring and cancel as necessary.

Q:Someone else is receiving my calls. What is wrong?

A:The phone has been set to forward your calls to another number.
Cancel call forwarding as necessary.

Q:Can I send and receive emails and surf the Mobile Internet on my phone?

A:Yes. Your phone has WAP capability, which means that you can access the Mobile Internet from your phone.
For sending and receiving emails, please contact your network operator.

Q:What is T9?

A:T9 text input is a predictive text editor that allows you to type using just one click per letter, thus saving time when writing SMS, text entries, etc.

Q:What type of networks are supported?

A:Check the technical specifications on p. 124.

MISCELLANEOUS

Q:Can I use my phone inside a car?

A:Road safety comes first. Always keep your eyes on the road if you are driving.
You can install a “Hands free” set (see. p. 8) if you need to drive and talk at the same time.
Always comply with local legislation.
If your car is equipped with airbags, check safety precautions with your car dealer.
See also “Warnings” .

Q:How do I clean my phone if it becomes soiled?

A:See “Cell phone care” on p. 128.

Q:Are cellular phones dangerous to my health?

A:No unambiguous scientific evidence exists at this point of time. We recommend that you keep abreast with the advice given by your domestic health authorities. See also “Warnings” .

Q:My phone has been lost or stolen. What do I do?

A:Contact your network operator immediately to close your account and prevent misuse.
Report your phone stolen to local police.

Q:How do I reset my phone to factory defaults?

A:Enter the Settings menu and scroll to “Reset all”.

MISCELLANEOUS

TECHNICAL DATA

Physical properties

Size : W-47 H-83 D-22 (mm)
Weight : 90g
Display : 65K Color (128X128 pixels)

Performance

EGSM : 900 DCS :1800
GPRS : Class 10
Standby : Standard-72h, Extend-96h
Talk time : Standard-5h, Extend-8h
Charging time : Standard-100min,
Extend-150min
Radiation (SAR) : 2 w/kg averaged over a
10g cube

Communication features

Long SMS (456 latin chr.)
EMS (Sound & Picture attachment)
Call wait & Call hold
Conference call (Up to 5 participants)
Call forwarding & Call barring
Billing (AoC)
WAP

Personalizing features

Greeting
Wallpaper
40 Polyphonic ring tones
5 Caller groups

Organizing features

Calendar
Tasks
Alarm
Calculator

Leisure

3 games

Accessories

Contact local retailer

CHAPTER 6

SAFETY

- Safety Information for Wireless Handheld Phones
 - Cell Phone Care
 - Driving Safety
 - Electronic Devices
- Other Safety Guidelines
 - Cautions
 - Warning
 - FCC RF exposure

SAFETY

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

Read This Information Before Using Your Handheld Portable Cellular Telephone.

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. when it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986) *

ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature.

For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

SAFETY

The design of your phone complies with the FCC guidelines (and those standards).

*;

American National Standards Institute;

National Council on Radiation protection and measurements; International Commission on Nonionizing Radiation Protection.

ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

SAFETY

CELL PHONE CARE

Your phone is a state-of-the-art electronic device that will serve you well for many years provided it gets a minimum of attention and care from you. You should never attempt to open the phone casing. There are no user-serviceable parts inside, and you might damage sensitive electronic circuits and components. Unauthorized disassembly will void the warranty. You should never leave your phone in the window of your car or otherwise expose it to strong sunlight or excessive heat for a prolonged period of time as this may damage it. You should never handle your phone with wet hands or expose it to moisture or liquids of any kind. Continuous changes from a cold to a warm environment may lead to condensation inside the phone, resulting in corrosion and possible damage. If you pack your cell phone in your suitcase during travel, beware not to damage it. Cramming a suitcase may crack the LCD display. Remember to switch off your phone during air travel. Like with all other radio devices, touching the built-in antenna area during telephone conversation may impair the quality and lead to shorter stand-by time due to increased power consumption.

The battery. Your phone is equipped with a high-performance Li-Ion battery. Optional battery types may be available, check with your local retailer. Observe the maintenance guidelines and your battery should give you a long service life.

- At the beginning of the battery's life, fully charge and discharge (let it go flat) three times.
- Avoid repeated short charging. It is preferable to let the battery go flat and then recharge it completely.
- Avoid charging in strong heat or extreme cold. Ambient room temperature is preferable.
- Don't keep a battery near a fire and attempt to disassemble it.
- Use only the battery approved by manufacturer
- Never replace battery by an incorrect type.

SAFETY

- Never try to open the battery as it contains substances that might be harmful if swallowed or allowed to contact unprotected skin.
- Never short-circuit the battery, as it may overheat and cause a fire. Keep away from jewelry and other metal objects.
- Never dispose of the battery by burning it. It could explode and release harmful substances into the environment.
- Never dispose of the battery with your regular household waste. Take it to a hazardous material collection point.

The charger. Use only the charger supplied with the phone. Never pull charger cord to release it from mains, pull the charge itself.

Cleaning & storing. Your phone should always be handled with care, protected from dirt, dust and damp. To avoid scratches, never place the phone face down.

If cleaning is necessary, switch the phone off and wipe carefully with a soft, slightly damp (not wet) cloth. Allow the phone to dry completely before switching it on. Never use solvents for cleaning.

If you won't use your phone for some time, fully charge the battery and store the phone in a dry place away from direct sunlight. The phone should be switched off during storage.

Point store member:

- Never disassemble the phone or battery.
- Never expose the phone to heat or strong sunlight.
- Never expose the phone to moisture or liquids of any kind.
- Do not paint the phone or otherwise block keypad, microphone or earpiece function, i.e. with stickers
- The battery has its optimum performance in an ambient temperature of +5 °C to +50 °C

SAFETY

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area.

If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

WARNING:

Failure to follow these instructions may lead to serious personal injury and possible property damage.

SAFETY

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy.

However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker:

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

SAFETY

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF where posted notices so require.

SAFETY

OTHER SAFETY GUIDELINES

Aircraft

FCC Regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

Potentially Explosive Atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle’s engine.

SAFETY

CAUTION

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating the equipment, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

1. DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
2. DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using the unit, lay down the unit to avoid possible damage due to instability.
3. DO NOT expose this equipment to rain or spilled beverages.
4. DO NOT use unauthorized accessories.
5. DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
6. DO NOT short -circuit the battery terminals with metal items etc.
7. Use only the battery approved by manufacturer
8. DO NOT replace battery by an incorrect type.

SAFETY

WARNING

The following offenses are punishable by fine, imprisonment, or both:

- Using obscene, indecent, or profane language.
- Using the unit to give off false distress calls.
- Wiretapping or otherwise intercepting a telephone call, unless that person has first obtained the consent of the parties participating in the call.
- Making anonymous calls to annoy, harass, or molest other people.
- Charging to an account without authorization to avoid payment for service.
- Refusing to yield a party line when informed that it is needed for an emergency call (It is also unlawful to take over a party line by stating falsely that it is needed for an emergency).

SAFETY

FCC RF EXPOSURE



WARNING! Read this Information before using your phone.

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

SAFETY

Body-worn Operation

This device was tested for typical body-worn operation with the back of the phone kept 0.5 inches (1.27cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5 inches (1.27cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. All belt-clips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna(optional, if available)

A minimum separation distance of 7.9 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

Note: For more information about RF exposure, please visit the FCC website at www.fcc.gov

INDEX

A	Page	Calculator	61
Advice of Charge	15~17	Calendar	55~58
Aircraft	133	Call, make a	23
Alarm	60	Call barring	88
Alert	66	Call forwarding	85
Any key answer	87	Call, answer a	24
Antenna care	127	Call, emergency	25
Audio	66	Call, incoming	24
Auto key Lock	76	Call, optional functions	86
		Call waiting	86
B	Page	Caller group, include in	72
Backlight time, display	74	Camera	91
Battery, charge	15~17	Car safety	130
Bearer, WAP	52	Cell Broadcast	43
Billing	89	Cell phone care	128
Bookmarks, WAP	47	Charger	15~16
		Config, MMS	42
C	Page	Contact, look up	103
Cache, WAP	54	Contact, new	104
		Create, MSG	38

INDEX

D	Page	Hearing aides, caution	131
Data	79	Homepage, WAP	46
Default, reset to	90		
Dial-up number, WAP	51	I	Page
Display	10	Image manager, Camera	96
Draft, MMS	41	Inbox, PUSH (WAP)	48
Driving, caution	130	Inbox, MMS	40
		Inbox, SMS	33
E	Page	Incoming call, audio	66
Emergency call	25	International calls	25
Entertainment (Games)	62		
		K	Page
G	Page	Keypad	11
Games	62		
GPRS	51	L	Page
Greeting	70	Language	78
		LCD power save	74
H	Page	List, Camera	96
Handset description	9	Lock, Camera	98
Hands-free set	8		

INDEX

M	Page	Password, WAP	51
Memory status, phonebook	108	Password, Camera	99
Memory status, Camera	100	Phonebook	102
Message	30~37	Photo, Camera	91
MMS	38		
Motion, Camera	94	Q	Page
My menu key	75	Questions & Answers	121
N	Page	R	Page
Navigation key	13	Read SMS	32
Network	83	Redial call	87
		Reset to default	90
O	Page	S	Page
One key dialing(shortcut dial)	87	Safety	126
Organizer	55~61	Security	80
Outbox, MMS	40	Sent, MMS	41
Outbox, SMS	33	Service numbers	109
		Silent (Mute)	9, 11
P	Page	SIM, install	21~22
Pacemaker, caution	131		

INDEX

SIM lock	83	Volume, earpiece	9
Shot, Camera	94	W	Page
Slide Tune	68	WAP, homepage	46
SMS	30	WAP, sites	46
Softkeys	11	WAP, profiles	49
Stand-by time	124	WAP, set connection	46
		Warnings	135
		Welcome	4
T	Page		
T9 text editor, entering letter	26		
Talk time	124		
Technical data	124		
Time, set	76		
U	Page		
Unlock SIM	80		
V	Page		
Validity, SMS	36		
View, camera motion	95		
Voice mail	109		