Motorola V600 GSM R3.6 Cingular Wireless Phone User's Guide


Second Final Draft December 15, 2003

Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V600 GSM wireless phone.



Check It Out!

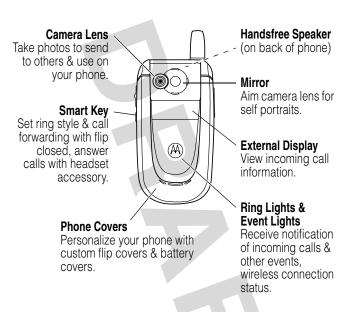

Feature	Description
Take Photo	Press CAMERA (\bigcirc) to activate the camera, point lens at subject, press CAPTURE (\bigcirc) to take a photo.
Send Photo	Send the photo to a phone number or email address: Press \$10RE () > \$end in Message.

Feature	Description	
Set Photo as Picture Caller ID	Assign a photo to a phonebook entry to enable picture caller ID: > Multimedia > Pictures > photo > Apply As > Phonebook Entry	
Send Multimedia Message	Send a multimedia message with pictures, animations, sounds, and videos: > Message > Create Message > New Multimedia Msg	
Read Multimedia Message	Read a new multimedia message that you have received: Press READ (①).	
Play Video Clip	Play a video clip: \tilde{\ti	
Wireless Connection	Set up a Bluetooth™ wireless connection to a headset accessory, car kit, or external device: ▼▼ > Settings > Connection > Bluetooth Link > Handsfree > [Look For Devices]	
Ring Lights	Choose ring lights for incoming calls: \(\overline{L} > \overline{S} > Ring \overline{S} > Ring \overline{L} Ring \overlin	
Event Lights	Activate event lights for incoming text and voicemail messages, alarms, and other events: > Settings > Ring Styles > Event Lights	

Motorola, Inc. Consumer Advocacy Office 1307 East Algonquin Road Schaumburg, IL 60196

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States)

1-800-461-4575 (Canada)

www.motorola.com (United States) www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2003.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number: 6809476A22-O Cover number: 8988485L61-O

Contents

Safety and General Information	. 8
Getting Started	14
About This Guide	14
Installing the SIM Card	15
Battery Use	15
Installing the Battery	17
Charging the Battery	18
Turning Your Phone On	19
Adjusting Volume	20
Making a Call	20
Answering a Call	21
Viewing Your Phone Number	21
Highlight Features	22
Taking and Sending a Photo	22
Sending a Multimedia Message	24
Receiving a Multimedia Message	26
Playing Video Clips	27
Using a Bluetooth Wireless Connection	28
Using Ring Lights	29
Using Event Lights	30
Changing Phone Covers	30
Learning to Use Your Phone	33
Using the Display	33
Using the 5-Way Navigation Key	37
Using Menus	38
Entering Text	41
Using the Smart Key	51
Using the External Display	51

Using the Handsfree Speaker	52
Changing a Code, PIN, or Password	53
Locking and Unlocking Your Phone	54
If You Forget a Code, PIN, or Password	55
Using the Phonebook	56
Setting Up Your Phone	58
Storing Your Name and Phone Number	
Setting the Time and Date	
Setting a Ring Style	
Setting Answer Options	59
Setting a Wallpaper Image	
Setting a Screen Saver Image	
Setting Display Brightness	
Setting Display Color	62
Adjusting the Backlight	
Setting Display Timeout	62
Calling Features	63
Changing the Active Line	63
Redialing a Number	63
Using Automatic Redial	
Using Caller ID	64
Turning Off a Call Alert	65
Calling an Emergency Number	65
Dialing International Numbers	
Viewing Recent Calls	
Returning an Unanswered Call	68
Using the Notepad	69
Attaching a Number	
Calling With Speed Dial	
Calling With 1-Touch Dial	
Using Voicemail	
Using Call Waiting	73

Putting a Call On Hold	73
Phone Features	74
	74
Settings Menu	75
Feature Quick Reference	76
Specific Absorption Rate Data	93
Consumer Information on	
Wireless Phones from the FDA	95
Warranty 1	00
Product Registration	05
RF Energy Interference 1	05
Export Law Assurances	05
Wireless: The New Recyclable 1	06
Index 1	07
Wireless Phone Safety Tins	17

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user's guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antennas, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- · Give full attention to driving and to the road.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found in the "Wireless Phone Safety Tips" at the end of this manual and at the Motorola website:

www.Motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
\triangle	Important safety information will follow.
Your battery or phone should not be disposed of in a fire.	
(3	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
X	Your battery or phone should not be thrown in the trash.
⊖ Lilon BATT ⊕	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- · Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

Getting Started



About This Guide

This guide describes the basic features of your Motorola wireless phone.

Note: A *More Here* reference guide for your phone is also available that describes your phone's features in more detail.

To obtain the *More Here* guide for your phone, or another copy of this guide, see the Motorola Web site at:

http://motorola.com/consumer/manuals (U.S.A.) http://motorola.ca/consumer (Canada)

or contact the Motorola Customer Call Center at 1-800-331-6456 (U.S.A.) or 1-800-461-4575 (Canada).

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service

provider for more information.

Optional Accessories




This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the SIM Card

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/ message memory.


Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

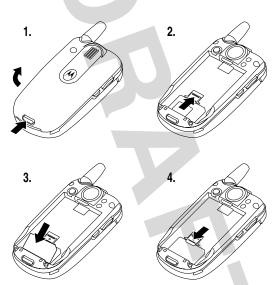

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use;

 items attached to the phone's accessory connector port; and your voice, data, and other application usage patterns.



To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for


battery type. Contact your local recycling center for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode.

Installing the Battery



Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

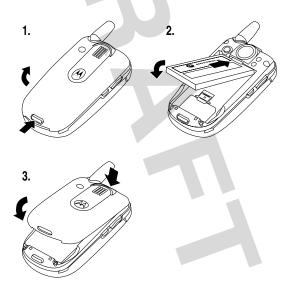

Charging the Battery



New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

Action 1 Plug the travel charger into your phone with the release tab facing up.

 
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.

 
Tip: You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.

Turning Your Phone On

Action

- 1 Open your phone.
- 2 Press and hold for 2 seconds to turn on the phone.






Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

4 If necessary, enter your 4-digit unlock code and press **OK** (♥) to unlock the phone.



 Adjusting Volume



Press the up or down volume keys to:

- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible (flip must be open)

Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.

· turn off an incoming call alert

Making a Call

	Press	То
1	keypad keys	dial the phone number
2	[6]	make the call
3	୕ୄ	end the call and "hang up" the phone when you are finished

Tip: You can also close the phone flip to end the call.

Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

When the phone flip is active, open the phone to answer the call. (To activate, press \nearrow > Settings > In-Call Setup > Answer Options > Open to Answer.)



	Press	То
1	or or	answer the call
	ANSWER (♡)	
2	<u></u>	end the call and "hang up" the phone when you are finished

Viewing Your Phone Number

To view your phone number from the home screen, press .

While you are on a call, press > My Tel. Numbers.

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 58. If you do not know your phone number, contact your service provider.



Highlight Features



You can do much more with your phone than make and receive calls! This section describes some of your phone's highlight features.


Taking and Sending a Photo

Shortcut: From the home screen, press **CAMERA** (\bigcirc) to activate the camera.

To activate your phone's camera:

Find the Feature > Multimedia > Camera

The active viewfinder image appears on your display.

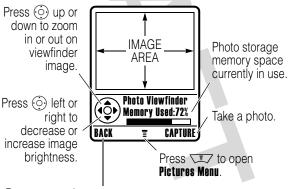

Return to previous screen.

Point the camera lens at the photo subject, then:

	Press	То
1	CAPTURE (▽)	take a photo
2	STORE (∕○)	view storage options
	or	
	DISCARD (📀)	delete the photo and return to active viewfinder
		If you choose to store the photo, continue to step 3.
3	③	scroll to Send in Message, Store Only, Apply as Wallpaper, Apply as Screen Saver, Apply as Phonebook Entry, or Send to Blog*
4	SELECT (ⓒ)	perform the storage option of your choice

^{*} Optional network/subscription dependent feature. Not all features may be available on your phone.

Press to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:

Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Delete All	Delete all pictures.



Option	Description
Pictures Setup	Open the setup menu to adjust picture settings.
View Free Space	See how much memory remains for storing pictures.

Sending a Multimedia Message



A Multimedia Messaging Service (MMS) multimedia message contains one or more slides with text and embedded media objects (including photos, pictures, animations, sounds, and or video clips). You can cond the

voice records, and/or video clips). You can send the multimedia message to other wireless phone users, and to email addresses.

Find the Feature



	Press	То
1	keypad keys	enter slide text
2	Ţ	open the MMS Menu
3	(scroll to insert
4	SELECT (🕥)	display a list of items you can insert
5	(i)	scroll to Picture, Voice Record, Sound, Soundtrack, Video, New Page, Quick Note, or Contact Info
6	SELECT (▽)	select the file type
7	(i)	highlight the file you want

	_	
	Press	To
8	INSERT (ౕ)	insert the file
		To add another slide to the
		message, continue to step 9.
		To send the message, go to
		step 14.
9		open the MMS Menu to insert a new slide
10	<u></u>	scroll to Insert
11	SELECT (√)	display a list of items you can insert
12	<u></u>	scroll to New Page
13	SELECT (▽)	insert a new slide after the
		current slide
		Repeat steps 1 to 8 to enter
		contents for the new slide.
	OK (⊘)	store the message
15	\odot	scroll to a Send To option:
		Highlight (One Time Entry) to enter one or more phone numbers and/or email addresses.
		Highlight (New Phonebook Entry) to enter a number/address and add it to the phonebook.
		Or highlight an existing phonebook entry.





Press	То
16 SELECT (♥)	select (One Time Entry) or (New Phonebook Entry)
or	
ADD (ᢒ)	add a phonebook entry to the list of recipients
17 DONE (🗘)	store the numbers/addresses
18 💮	scroll to Subject
19 CHANGE (🕑)	select Subject
20 keypad keys	enter the subject
21 OK (🔾)	store the subject
22 SEND (🕤)	send the message

Receiving a Multimedia Message



When you receive a multimedia message, your phone displays the ☐ (message waiting) indicator and a New Message notification, and sounds an alert.

Press	То
READ (⋘)	open the message

Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file or video clip begins playing when its slide is displayed. Use the volume keys to adjust the volume as the sound file or video clip plays.

Note: You cannot play a sound file when the phone's ring style is set to vibrate or silent. To set the ring style, see page 58.

Attached files are added to the end of the message.
 To open the attachment, highlight the file indicator/filename and press VIEW (♥) (image file type),
 PLAY (♥) (sound file or video clip), or OPEN (♥)
 (vObject such as phonebook or datebook entry, or unknown file type).

Playing Video Clips

You can download video clips with the micro-browser, and send and receive video clips in multimedia messages.

To play a video clip stored on your phone:


Find the Feature

▼ > Multimedia > Videos

Press	То
1 💮	scroll to the video clip
2 PLAY (√)	start video clip playback

The video clip displays in the video clip playback screen:



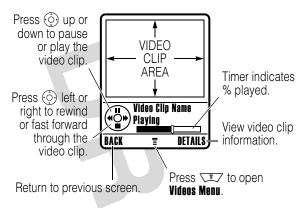

Using a Bluetooth Wireless Connection

Your phone supports Bluetooth™ wireless connections. You can set up a wireless link with a Bluetooth-enabled headset accessory, speakerphone, or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronize data.

To connect your phone to a headset accessory or handsfree device:

Find the Feature

> Settings > Connection > Bluetooth Link > Handsfree > (Look For Devices) Your phone displays a list of device(s) located within range of the phone. If your phone is already connected to a device, your phone lists the connected device and identifies it with a

✓ (in use) indicator.

To connect to a device, highlight the device name and press **SELECT** (\bigcirc) .

The device may request permission to bond with your phone. Select YES ((\bigcirc) and enter the correct PIN code to create a secure connection with the device. When the connection is made, the (Bluetooth) indicator or a **Bluetooth Connected** message displays in the home screen.

Using Ring Lights

Set up your phone to display a light pattern (in addition to or instead of a ring/vibrate alert) when you receive an incoming call. To select a light pattern:


Find the Feature

> Settings > Ring Styles > Ring Lights

	Press	То
1	(scroll to the light pattern
2	SELECT (▽)	select the light pattern

The same light pattern displays for all incoming calls. You can use the light ID feature to display a distinctive light pattern when you receive calls from phonebook entries in a specific category. To set a light ID for a phonebook category, see page 80.

 Using Event Lights



To turn event lights on or off:

Find the Feature	> Settings > Ring Styles
	> Event Lights

	Press	То
1		scroll to On or Off
2	SELECT (▽)	select the option

Changing Phone Covers



You can change the flip cover and battery cover on your phone to personalize its appearance.

Matching front and back cover sets are available in a variety of colors and designs.

Your phone is designed to be used only with Motorola Original™ accessories. See your Motorola retailer for these replaceable covers.

Removing a Flip Cover

Action

- 1 Close the phone flip.
- 2 Pull down on both sides of the flip cover to slide it off the phone.






Notes:

- Do not use tools to remove a flip cover. Using tools to remove a flip cover will damage the cosmetic appearance of the phone.
- The flip cover is attached tightly to the phone, and considerable force is required to remove it.

Attaching a Flip Cover

Action

- Close the phone flip.
- 2 Line up the ridges on each side of the cover so that they align with the slots on the phone.

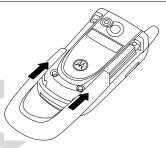

3 Slide the cover onto the phone until it snaps into place.


Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display

The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.



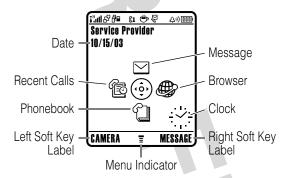

Press the 5-way navigation key (③) left, right, up, or down to select one of the menu feature icons. If you select a menu icon by mistake, press to return to the home screen.

Note: Your home screen may look different than the display shown above. For example, your service provider may hide the menu feature icons to allow a better view of


the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide the menu icons, see page 82.

The \blacksquare (menu) indicator indicates that you can press the menu key (\bigcirc) to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key () or right soft key () to perform the function indicated by the left or right soft key label.

Your phone can display an analog or digital clock in the home screen (see page 82).

The following status indicators can display:

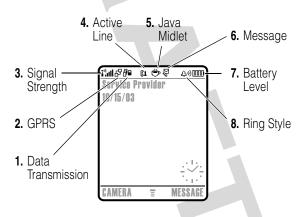

1. Data Transmission Indicator Shows connection and data transmission status. Indicators can include:

= secure packet data transfer

= secure application connection

□ = secure Circuit
Switch Data
(CSD) call

B = Bluetooth connection

= unsecure application connection





2. GPRS Indicator Shows that your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. GPRS allows faster data transfer speeds. Other

indicators can include:

■ = GPRS PDP context active data available

3. Signal Strength Indicator Vertical bars show the strength of the network connection. You cannot make or receive calls when the i³ (no signal) indicator or i³X (no transmit) indicator is displayed.



4. Active Line Indicator Shows **1** or **1** to indicate the current active phone line. Other indicators can include:

 = alarm activated



5. Java Midlet Indicator Shows when a Java application is active.



6. Message Indicator Displays when you receive a new message. Indicators can include:

■ = voicemail
 message

∀ = voicemail and text message

= answering machine

When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size in bytes/kilobytes (multimedia message).

7. Battery Level Indicator Vertical bars show the battery charge level. Recharge the battery when Low Battery displays and the battery alert sounds.

8. Ring Style Indicator Shows the ring style setting.

△୬) = loud ring

△» = soft ring

3問 = vibrate

∌
△ = vibrate and ring

ರ್ಷ = silent

Using the 5-Way Navigation Key






Use the 5-way navigation key (③) to scroll up, down, left, or right through the menu system, highlight menu items, change feature settings, and play games. Press the *center select* button to select a highlighted menu item. The center select button usually performs the same function as the right soft key (⑤).

Using Menus

From the home screen, press \nearrow to enter the main menu.

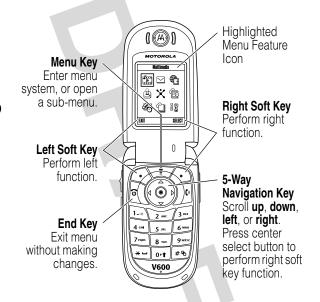

Press (to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that

may appear in the main menu, depending on your service provider and service subscription options.

Menu Icon	Feature	Menu Icon	Feature
	Multimedia	\subseteq	Message
	Web Access	<u> </u>	Games & Apps
*	Cingular Mall	Ē	Recent Calls
2	Office Tools		Phonebook
	Settings	E	Ring Styles



Selecting a Menu Feature

This guide shows you how to select a menu feature, starting from the home screen.


Find the Feature



This example shows that from the home screen, you must press T, scroll to and select Recent Calls from the main menu, then scroll to and select Dialed Calls. Press to scroll, and the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

Selecting a Feature Option


Some features require you to select an option from a list:

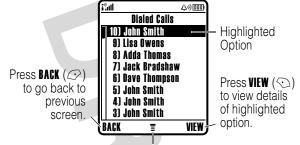

- Press to open sub-menu.
- Press to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

Entering Text


Some features require you to enter information.

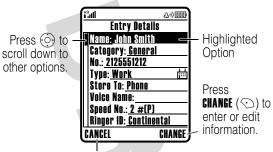

(i)

Press CANCEL () to exit without making changes. DONE () displays when you enter or edit information.

The message center lets you compose and send text messages.

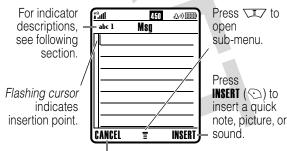

Press **CANCEL** () to exit without making changes.

Choosing a Text Entry Method

Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Press in any text entry screen to select one of the following entry methods:

Primary	The primary text entry method (see below to set).
Numeric	Enter numbers only (see page 49).
Symbol	Enter symbols only (see page 49).
Secondary	The secondary text entry method
1	(see below to set).

Alternatively, you can select a text entry method in any text entry screen by pressing > Entry Mode.

Setting Up a Text Entry Method

ITAD

Press > Entry Setup from any text entry screen. Select Primary Setup or Secondary Setup, and choose:

IIAP	you press keys (see page 47).
Тар	Enter letters and numbers by pressing a key one or more times.
Tap Extended	Enter letters, numbers, and symbols by pressing a key one or more times.
None	Hide the Secondary setting (only available for Secondary Setup).

Lat the phone predict each word ac

Using Capitalization

Press ••• in any text entry screen to change text case. The following indicators show capitalization status:

abε = no capital letters	яь с = capitalize next
ABC = all capital letters	letter only

Text Entry Method Indicators

When you select the **Primary** or **Secondary** text entry method, the following indicators identify the text entry setting:

Primary	Secondary	
1	2	Tap, no capital letters
lî	2 û	Tap, capitalize next letter
		only
1 †	2†	Tap, all capital letters
釦	20	iTAP, no capital letters
迎	迎	iTAP, capitalize next
		letter only
11	21	iTAP, all capital letters

The following indicators identify ${\it Numeric}$ or ${\it Symbol}$ entry method:

123 = numeric method @ = symbol method



Using Tap Method

This is the standard method for entering text on your phone.

Regular Tap method cycles through the letters and number of the key you press. Tap Extended method also cycles through additional symbols as shown in the "Character Chart" on page 46.



	Press	То
1	A keypad key one or more times	select a letter, number, or symbol
2	Keypad keys	enter remaining characters
		Tip: Press 📀 right to accept
		a word completion, or 🖭 to
	\	insert a space.
3	OK (ౕ)	store the text


In a text entry screen, you can press to switch entry methods. An indicator shows which method is active (see page 43). If Tap or Tap Extended is not available as the **Primary** or **Secondary** entry method, see page 42.

When you enter text with Tap or Tap Extended method, the soft key functions change.





When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter you might see:

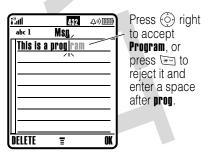

If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

Character Chart

Use this chart as a guide for entering characters with Tap Extended method.

1.0	. 1 ? ! , @ _ & ~ : ; " - () '	
	¿; % £ \$ ¥ ¤ € + x * / \ []	
	= > < # §	
2 ABC	abc2áàâãç	
3 041	d e f 3 é è ê ë	
4 см	ghi4íîï	
5 JKL	j k 1 5	
6 MNO	m n o 6 ñ ö ø ó ò ô õ	
7 PQES	pqrs7	
8 тич	tuv8úùü	
9 wiz	w x y z 9	
0+1	change text case, for capital letters	
*-	enter a space (hold to enter a return)	
#%	change text entry method (hold for default)	

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor, first shows common characters for that editor.

Tap Method Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.
- Press left or right to move the flashing cursor to the left or right in a text message.


- The first character of every sentence is capitalized. If necessary, press odwn to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press to exit without saving.

Using iTAP™ Method

iTAP™ software provides a predictive text entry method that lets you enter a word using one keypress per letter. This can be faster than Tap method, because your phone combines the keypresses into common words.

(P)

For example, if you press [w] [w] [w], letter combinations that match your keypresses display:

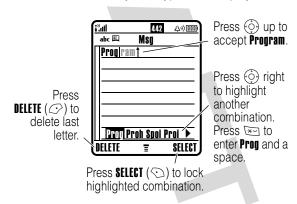

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Words

In a text entry screen, you can press to switch entry methods. An indicator tells you which method is active (see page 43). If **ITAP** method is not available as the **Primary** or **Secondary** entry method, see page 42.

	Press	То
1	Keypad keys (one press per letter)	show possible letter combinations at the bottom of the display
2	ieft or right	highlight the combination you want
3	SELECT (①)	lock a highlighted combination
		You can press keypad keys to add more letters to the end of the combination.
	or	
	*~	enter the highlighted combination when it spells a word
		A space is automatically inserted after the word.

If you enter a word your phone does not recognize, the phone stores it to use as one of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.



Using Numeric Method

In a text entry screen, press 🗊 to switch entry methods until the 123 (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press to switch to another entry method.

Using Symbol Method

In a text entry screen, press to switch entry methods until the (symbol) indicator displays.

	Press	То
1	Keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display
2	ieft or right	highlight the combination you want
3	SELECT (©)	lock a highlighted combination
		You can press keypad keys to add more symbols to the end of the combination.
	or	
	**	enter the highlighted combination



Symbol Chart

Use this chart as a guide for entering characters with symbol method.

1	. ? ! , @ _ & ~ : ; " - () ' ¿
7	; % £ \$ ¥ ¤ €
2 AMC	@ _ \
3 DEF	1:;
4 см	" & '
5 JKL	()[]{}
6 MNO	¿ i ~
7 PORS	< > =
8 тич	\$ £ ¥ ¤ €
9 маха	# % *
0+1	+ - x * / = > < # §
*-	enter a space (hold to enter a return)
#%	change text entry method (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor, first shows common characters for that editor.

Deleting Letters and Words

 
Place the cursor to the right of the text you want to delete, and then:

Action
Press DELETE (\bigcirc) to delete one letter at a time.
Hold DELETE (\bigcirc) to delete the entire message.



Using the Smart Key

The *smart key* gives you another way to perform many basic phone



functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key (<).



Using the External Display

When the flip is closed, the external display shows time, date, and phone status information. It also displays messages to notify you of incoming calls and other events. You can perform the following functions in the external display.

Setting Phone Ring Style

	Press	То
1	volume keys	scroll to Style
2	smart key	select a ring style
3	volume keys	return to the home screen

Adjusting Voice Call Forwarding



Tip: You must store a forwarding number to use this feature (see page 76).

	Press	То
1	volume keys	scroll to Forward
2	smart key	select All Calls or Off
3	volume keys	return to the home screen



Return an Unanswered Call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.

Action

- Press the smart key to view the received calls list.
- 2 Press the volume keys to select a call to return.
- 3 Press and hold the smart key to make the call.

Note: Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other handsfree device with this feature.

Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** (\bigcirc) to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** (\bigcirc) again or turn the phone off.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

Find the Feature

> Settings > Security > New Passwords



Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer**.



You can make emergency calls on your phone even when it is locked (see page 65).

Locking Your Phone Manually

Find the Feature	> > Settings > Security
	> Phone Lock > Lock Now

	Press	То
1	keypad keys	enter your unlock code
2	OK (①)	lock the phone

Unlocking Your Phone

Tip: Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

At the Enter Unlock Code prompt:

	Press	То
1	keypad keys	enter your unlock code
2	OK (◇)	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature	> Settings > Security
	> Phone Lock
	> Automatic Lock > On

	Press	То
1	keypad keys	enter your unlock code
2	OK (ౕ)	activate automatic lock

(i)

If You Forget a Code, PIN, or Password

Note: Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

	Press	То
1	I	display the unlock code
		bypass screen
2	keypad keys	enter your security code
3	OK (ౕ)	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

Using the Phonebook

This section briefly describes basic phonebook operations. For more information about using the phonebook, see page 79 and the *More Here* guide (described on page 14).

Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** (©) to create a phonebook entry with that number. Fill in the other fields to complete the entry.

Select MORE to store another number (for example, a work number) under the same Name.

Recording a Voice Name

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (\bigcirc). Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name. Press **DONE** (\bigcirc) to store the voice name.

Note: This option is not available for entries stored on the SIM card.

Dialing a Number

Press > Phonebook > entry to call.

Voice Dialing a Number

Press and release the voice key, and say the entry's name (within 2 seconds).

Sorting Phonebook Entries

Press \nearrow > Phonebook, press \nearrow > Setup > Sort by, then select whether you want to sort the phonebook list by Name, Speed No., Voice Name, or Email.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 81.

Viewing Entries By Category

Press > Phonebook, press > Categories, then select whether you want to view All entries, entries in a predefined category (Business, Personal, General, VIPs), or entries in a category you created.

To set the category for a phonebook entry, see page 80.

Setting Picture Caller ID View

Press $\searrow >$ Phonebook, press $\searrow >$ Setup > View by > Picture.

To assign a photo to a phonebook entry, see pages 3 and 22.

Setting Up Your Phone

Storing Your Name and Phone Number



To store or edit your name and phone number information on your SIM card:

Find the Feature

> Settings > Phone Status > My Tel. Numbers

Shortcut: Press from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider.

Setting the Time and Date

You must set the time and date to use the datebook.

Find the Feature

> Settings > Initial Setup > Time and Date

Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

You can select one of 5 different ring styles. The ring style indicator in the display shows the current alert style (see pages 34 and 37).

To set a ring style:

	Press	То
1	(scroll to the ring style
2	SELECT (⋾)	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press > Settings > Ring Styles > Style Detail.

Setting Answer Options

You can use additional, alternative methods to answer an incoming call.

Multi-Key answer by pressing any key

Open to Answer

answer by opening the flip

To activate or deactivate an answer option:

Find the Feature Setup > Settings > In-Call Setup > Answer Options

Press	То
1 💮	scroll to Multi-Key or
	Open to Answer
2 CHANGE (√)	select the option
3 💮	scroll to On or Off
4 SELECT (♥)	confirm the setting



Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

Find the Feature

> Settings > Personalize > Wallpaper

	Press	То
1		scroll to Picture
2	CHANGE (√)	open the picture viewer
3	(i) up or down	scroll to a picture/animation
		Scroll to (None) to turn off the wallpaper image.
4	SELECT (▽)	select the image
5	(scroll to Layout
6	CHANGE (√)	adjust the image layout
7	(i)	scroll to Center , Tile , or Fit-to-screen
		Conter places the image in the center of the display.
		Ille fills the display with adjacent copies of the image.
		Fit-to-screen resizes the image, if necessary, to fit the display.
8	SELECT (▽)	confirm the layout setting
9	BACK (♂)	save wallpaper settings



Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the flip is open and no activity is detected for a specified time period. The image shrinks to fill the display, if necessary. An animation repeats for 1 minute, then the first frame of the animation displays.

Tip: Turn off the screen saver to extend battery life.

Find the Feature	> Settings > Personalize
	> Screen Saver

	Press	То
1		scroll to Picture
2	CHANGE (√)	open the picture viewer
3	ip or down	scroll to a picture/animation
		Scroll to [None] to turn off the screen saver image.
4	SELECT (▽)	select the image
5	<u></u>	scroll to Delay
6	CHANGE (√)	set the delay interval
7		scroll to the inactivity interval that triggers the screen saver
8	SELECT (▽)	confirm the delay setting
9	BACK (🔡)	save screen saver settings
		·



Setting Display Brightness

Find the Feature

> Settings > Initial Setup > Brightness

Setting Display Color

Select the color palette that your phone uses to display indicators, highlights, and soft key labels.

Find the Feature

> Settings > Personalize > Color Style

Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Find the Feature

> Settings > Initial Setup > Backlight

Setting Display Timeout

Set the display to turn off when no activity is detected for a specified time.

Find the Feature

> Settings > Initial Setup > Display Timeout

Calling Features

For basic instructions on how to make and answer calls, see page 20.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature

> Settings > Phone Status > Active Line

The active line indicator in the display shows the current active phone line (see page 34).

Redialing a Number

ŀ	ress	То
1 [0	view the dialed calls list
2 (<u></u>	scroll to the entry you want to call
3	0	redial the number



Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed**, **Number Busy**.

To redial the phone number:

Press	То
or RETRY (🕤)	activate automatic redial

Your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays Redial Successful, and then connects the call.

Using Caller ID

Incoming Calls



Calling line identification (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.

The phone displays the caller's name (and picture, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID and/or light ID for specific entries stored in your phonebook. For more information, see page 79.

Outgoing Calls



You can show or hide your phone number as an ID for the calls that you make.

Find the Feature



You can override the default caller ID setting when you make a call. While dialing (with digits visible in the display):

Press	То
> Hide ID/Show ID	hide or show your caller ID for
	the next call

Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

Press	То
either volume key	turn off the alert

Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

	Press	То
1	keypad keys	dial the emergency number
2	[6]	call the emergency number

Dialing International Numbers

Press and hold ••• to insert the local international access code (+) for the country from which you are calling.

Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press of from the home screen to view the dialed calls list

Find the Feature > Recent Calls

	Press	То
1	(i)	scroll to Received Calls or
		Dialed Calls
2	SELECT (🕥)	select the list

(g
	Feature
	es

	Press	То
3	(scroll to an entry
		Note: ✓ means the call connected.
4	[6]	call the entry's number
	or	
	VIEW (①)	view entry details
	or	
		open the Last Calls Menu to
		perform various operations on the entry

The Last Calls Menu can include the following options:

Option	Description
Store	Create a phonebook entry with
	the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the Io field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.



Option	Description
Send Tones	Send the number to the network as DTMF tones.
	Note: This option displays only during a call.
Talk then Fax	Talk and then send a fax in the same call (see page 86).

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the
 \(\sigma \) (missed call) indicator
- X Missed Calls, where X is the number of missed calls

Press	То
1 VIEW (⊙)	see the received calls list
2 💮	select a call to return
3 6	make the call



Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's *notepad* memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature	> Recent	Calls	> Notepad
------------------	----------	-------	-----------

Press	То
0	call the number
or	
Ī	open the Dialing Menu to attach a number or insert a special character
or	
STORE (⊙)	create a phonebook entry with the number in the No. field

Attaching a Number

While dialing (with digits visible in the display):

Press	То
▼ > Attach Number	attach a number from the phonebook or recent calls
	lists



Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number.

Tip: To see an entry's speed dial number, press \nearrow > **Phonebook**, scroll to the entry, press **VIEW** (\bigcirc) .

To speed dial a phonebook entry:

	Press	То
1	keypad keys	enter the speed dial number
		for the entry you want to call
2	#%	submit the number
3	[6]	call the entry

Calling With 1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for 1 second.

Note: Your service provider may store your voicemail phone number as phonebook entry 1 (speed dial number 1).

Tip: You must specify which phone number list you want to use with this feature: phone memory phonebook, or SIM card phonebook (see page 81).

Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Note: Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

Find the Feature > Message > VoiceMail

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Shortcut: Your service provider may store your voicemail phone number as phonebook entry 1. If so, you can press and hold to listen to your voicemail message(s).

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the (voicemail message) indicator and a New VoiceMail notification.

Press	То
CALL (√)	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.



Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature	▼ > Message
	> VoiceMail Setup

	Press	То
1	keypad keys	enter your voicemail number
2	OK (①)	store the number

Note: You cannot store a p (pause), w (wait), or n (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. For more about these characters, see the *More Here* guide.



Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.


	Press	То
1	0	answer the new call
2	SWITCH (▽)	switch between calls
	or	
	LINK (②)	connect the 2 calls
	or	
	> End Call On Hold	end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature



 Putting a Call On Hold






Phone Features

Main Menu

This is the standard main menu layout. **Menu** organization and feature names may vary on your **phone.** Not all features may be available on your phone.

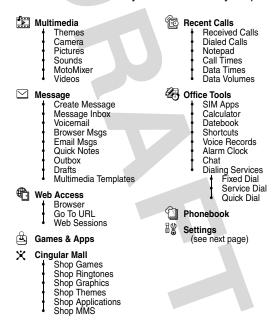



Settings Menu

Personalize

Home Screen Main Menu Color Style Greeting Wallpaper Screen Saver Quick Dial

Ring Styles Style Style Detail Rina Liahts **Event Lights**

Connection Bluetooth Link Svnc

G⇔ Call Forward Voice Calls Fax Calls Data Calls Cancel All

ß In-Call Setup In-Call Timer My Caller ID Talk and Fax Answer Options Call Waiting

Forward Status

A Initial Setup Time and Date 1-Touch Dial Display Timeout Backlight TTY Setup Scroll

> Battery Save Brightness DTMF Master Reset Master Clear

Language

Phone Status

My Tel. Numbers Active Line Battery Meter Other Information

Car Settings

M Network

Security

Phone Lock Lock Application Fixed Dial Call Barring SIM PIN New Passwords

Java Settings

Java System Delete All Apps App Vibration App Volume App Backlight

Shortcuts

Change ringer alert:

Open flip, press down volume key to decrease volume, then switch to vibrate alert, then silent alert. Press up volume key to reset ring alert and increase volume.

Display my phone number: Press (from home screen).

Go to dialed calls list: Press) (from home

Exit menu system:

screen). Press (.



Feature Quick Reference

This section helps you locate features on your phone that are not described in this guide. For more detailed information, see the *More Here* guide (described on page 14).

Calling Features

Feature	Description	
Conference	During a call:	MOTK I Subsc
Call	> Hold, dial next	
	number, press [6], press	Sondent Felting
	LINK (②).	
Call	Set up or cancel call	MOTK I Subsc
Forwarding	forwarding:	
	> Settings > Call Forward	Sondent Feet
Call Barring	Restrict outgoing or	MOTK Subsc
	incoming calls:	
	> Settings > Security	Sondent Felili
	> Call Barring	
TTY Calls	Set up your phone for use	
	with an optional TTY device:	
	> Settings > Initial Setup	Optional Accessory
	> TTY Setup	



Messages

Feature	Description
Send Text Message	Send a text message: > Message > Create Message > New Short Message
Send Multimedia Message	Send a multimedia message: > Message > Create Message > New Multimedia Msg
Use Multimedia Template	Open a multimedia template with preloaded media: > Message > Create Message > Multimedia Templates
Read Message	Read a new text message or multimedia message that you have received: Press READ ().
Store Message Objects	Go to a text message or multimedia message slide, then: > \$tore



Chat

Feature	Description
Start Chat	Start a new chat session: > Office Tools > Chat > New Chat
Receive Chat Request	When you receive a chat request: Press ACCEPT (♠) or IGNORE (♠).
End Chat	During a chat session: > End Chat

Email

Feature	Description	
Send	Send an email message:	NOTK Subscript
Email	▼ > Message > Create Message	
Message	> New Email	Spendent Felili
Read	Read a new email message	MOTK Subscall
Email	that you have received:	
Message	Press READ (♥).	Sondent February



Phonebook

Feature	Description
Create Entry	Create a new phonebook entry: \(\textstyle \textstyle > \textstyle > \textstyle > \textstyle > \textstyle > \textstyle = \textstyle > \textstyle = \textstyle > \textstyle =
Create Group Mailing List	Create a group mailing list as a phonebook entry: Phonebook New > Mailing List
Dial Number	Call a number stored in the phonebook: > Phonebook, highlight the phonebook entry, press to call
Voice Dial Number	Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (within 2 seconds).
Set Ringer ID for Entry	Assign a distinctive ringer alert to a phonebook entry: Phonebook > entry Phonebo



Footure	Description
Feature	Description
Set	Set the category for a phonebook
Category for	entry:
Entry	> Phonebook > entry
	> Edit > Category
	> category name
	Note: The Category option is not
	available for entries stored on the
	SIM card.
	Citi Cana
Set	Set a phonebook category view:
Category	> Phonebook
View	> Categories > category view
Set	Set a distinctive light pattern to be
Category	displayed when you receive calls
Light ID	from phonebook entries in a specific
	category:
	> Phonebook
	> Categories, scroll to entry, press
	> Edit > Light ID.
	Note: The Light ID option is not
	available for entries stored on the
	SIM card.
Set Picture	View phonebook entries as text list,
Caller ID	or with picture caller ID photos:
View	> Phonebook
	Setup > View by > list view
Sort	Set the order in which phonebook
Phonebook	entries are listed:
List	> Phonebook
List	Setup > Sort by > sort order
	> > > ootup > out uy > Suit uluel



Feature	Description
Set Primary Number	Set the primary number for a phonebook entry with multiple
	numbers:
	> Phonebook, scroll to entry, press > Set Primary > phone number.
Сору	Copy a phonebook entry to another
Phonebook	phone, computer, or device:
Entry to	> Phonebook, highlight the entry,
Another	press 💷 > Send > Bluetooth
Device	
1-Touch Dial	Set 1-touch dial to call entries stored
	in your phone memory phonebook or
	the SIM card phonebook:
	▼ > Settings > Initial Setup
	> 1-Touch Dial

Personalizing Features

Feature	Description
Ring Style	Change the ring alert for an event: > Settings > Ring Styles > Style Detail > event name
Ringer IDs	Activate distinctive ringer alerts assigned to phonebook entries: > Settings > Ring Styles > Style Detail > Ringer IDs
Ring Volume	Set ringer volume: \(\tilde{



Description
Set keypad keypress volume:
▼ > Settings > Ring Styles
> Style Detail > Key Volume
Display an analog clock or digital
time readout in the home screen:
> Settings > Personalize
> Home Screen > Clock
Display the main menu as graphic
icons or as a text-based list:
> Settings > Personalize > Main Menu
> View
Reorder your phone's main menu:
> Settings > Personalize > Main Menu
> Reorder
Show or hide menu feature icons in
the home screen:
▼▼ > Settings > Personalize
> Home Screen > Home Keys >Icons
Change soft key labels and menu
feature icons in the home screen:
▼▼ > Settings > Personalize
> Home Screen > Home Keys
Create a shortcut to a menu item:
Highlight the menu item, then press
and hold 🗐.
Select a shortcut:
▼ > Office Tools > Shortcuts
> shortcut name



Menu Features

Feature	Description
Language	Set menu language:
	▼▼ > Settings > Initial Setup > Language
Master	Reset all options <i>except</i> unlock code,
Reset	security code, and lifetime timer:
	> Settings > Initial Setup
	> Master Reset
Master	Reset all options except unlock code,
Clear	security code, and lifetime timer, and
	clear all user settings and entries
	except SIM card information:
	> Settings > Initial Setup
	> Master Clear

Dialing Features

Feature	Description
Fixed Dial	Turn fixed dialing on or off: \(\tilde{\text{L}} > \text{Settings} > \text{Security} \) > Fixed Dial
	Note: You will be prompted to enter your SIM PIN2 code.
	Use the fixed dial list: \tilde{\text{\tin}\text{\texi{\text{\texi}\text{\text{\texicr{\text{\texi}\text{\texict{\texit{\text{\text{\text{\text{\texi}\texit{\text{\text{\tet
Service Dial	Dial service phone numbers: > Office Tools > Dialing Services > Service Dial



Feature	Description
Quick Dial	Dial preprogrammed phone
	numbers:
	> Office Tools
	> Dialing Services > Quick Dial
DTMF	Activate DTMF tones:
Tones	> Settings > Initial Setup > DTMF
	Send DTMF tones during a call: Press number keys.
1	Send stored numbers as DTMF tones during a call:
	Highlight a number in the phonebook or recent calls lists, then press
	> Send Tones.

Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

Feature	Description	
Call Times	View call timers: > Recent Calls > Call Times	Subscription of the state of th

Feature	Description
In-Call Timer	Display time or cost information during a call: > Settings > In-Call Setup > In-Call Timer
Call Cost	View call cost trackers: > Recent Calls > Call Cost

Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description
Speaker- phone	Activate a connected external speakerphone during a call: Press SPEAKER ()
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset: > Settings > Car Settings or Headset > Auto Answer
Voice Dial (headset)	Enable voice dial with headset send/end key: > Settings > Headset > Voice Dial



Feature	Description	
Auto	Automatically route calls to a	4
Handsfree	car kit when connected:	
(car kit)	> Settings > Car Settings	Optional Accessory
	> Auto Handsfree	
Power-Off	Set the phone to stay on for	4
Delay	a period of time after the	
(car kit)	ignition is switched off:	Optional Accessory
	> Settings > Car Settings	
	> Power-Off Delay	
Charger	Charge the phone for a	
Time	period of time after the	
(car kit)	ignition is switched off:	Optional Accessory
	> Settings > Car Settings	
	> Charger Time	

Data and Fax Calls

Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application.
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application.
Talk Then Fax	Connect your phone to the device, enter the number, press > Dialing Menu > Talk Then Fax, then press to make the call.



Bluetooth™ Wireless Connections

Feature	Description
Make Phone Visible to Other Device	Allow an unknown Bluetooth device to discover your phone: > Settings > Connection > Bluetooth Link > Setup > Find Me
Connect to Recognized Device	Connect to a recognized handsfree device: I > Settings > Connection
Disconnect From Device	Disconnect from a device: Highlight the device name and press DROP (○). Optional Accessory
Switch to Device During Call	Switch to a headset or car kit during a call: VI > Use Bluetooth Optional Accessory Note: Please allow setup time to activate the device.
Edit Device Properties	Edit the properties of a recognized device: Highlight the device name and press > Edit.
Set Bluetooth Options	Set your phone's Bluetooth options: \(\textstyle \tex



Phone Features

Feature Description **Network** View network information and **Settings** adjust network settings: √II > Settings > Network

Personal Organizer Features

Network Features

Feature	Description
Add Datebook Event	Add an event to the datebook: \tilde{1} > Office Tools > Datebook, highlight the day, press the center select button, press \tilde{1} > New
View Datebook Event	View or edit event details: > Office Tools > Datebook, highlight the day, press the center select button, highlight the event, press VIEW ()
Event Reminder	View event reminder: VIEW (♥) Dismiss event reminder: EXIT (♥)
Copy Datebook Event to Another Device	Copy a datebook event to another phone, computer, or device: > Office Tools > Datebook, highlight the day, press the center select button, highlight the event, press > Send > Bluetooth
Set Alarm	Set an alarm: \(\tilde{\ti}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}



Feature	Description
Turn Off Alarm	Turn off alarm: Press DISABLE (<i>></i>) or •
	Set 8-minute delay: Press \$N00ZE (☉)
Create Voice Record	Create a voice record: Press and hold voice key, speak into the phone, release voice key.
	Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.
Play Voice Record	Play back a voice record: > Office Tools > Voice Records > voice record
Calculator	Calculate numbers: Z > Office Tools > Calculator
Currency Converter	Convert currency: > Office Tools > Calculator > Exchange Rate
	Enter exchange rate, press OK (©), enter amount, press CET > CONVERT CUPPORCY .



Feature	Description
SIM PIN	Lock or unlock the SIM card: > Settings > Security > SIM PIN
	Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked.
Lock Application	Lock phone applications: > Settings > Security > Lock Application

News and Entertainment

Security

Feature	Description
Launch Micro- Browser	Start a micro-browser session: > Web Access > Browser
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press SELECT (①), press STORE (①).
Web Sessions	Select or create a Web session:



Feature	Description
Apply Phone Theme	Apply a grouped set of image and sound files to your phone: > Multimedia > Themes > theme
Download Game or Application (Micro- Browser)	Download a Java game or application with the micro-browser: > Web Access > Browser, highlight the application, press SELECT (()), press DOWNLOAD (()).
Launch Game or Application	Launch a Java game or application: > Sames & Apps, highlight the application, press SELECT (\(\infty\)).
Manage Pictures	Manage pictures and animations:
Manage Sounds	Manage ring tones, sounds that you have composed or downloaded: > Multimedia > Sounds
Manage Video Clips	Manage video clips: \text{\text{\$\ext{\$\ext{\$\ext{\$\text{\$\text{\$\ext{\$\ext{\$\ext{\$\ext{\$\ext{\$\ext{\$\ext{\$\ext{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\ext{\$\exitt{\$\ext{\$\exitt{\$\exitt{\$\exitt{\$\exititt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitititt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{\$\exitt{
Edit Sounds With MotoMixer	Edit MIDI-based sound files that you can use with your phone:



Feature	Description	
Create Ring	Create ring tones that you can use	
Tones	with your phone: >>>> Sounds	
	> [New iMelody]	
Camera	Adjust light level and other settings	
	for the integrated camera:	
	> Multimedia > Camera	
	▼ > Pictures Setup	



Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg. ¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.40 W/kg, and when worn on the body, as

described in this user guide, is 0.54 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 1.07 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

http://www.phonefacts.net

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

http://www.cwta.ca

- In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- 2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Consumer Information on Wireless Phones from the FDA



The U.S. Food and Drug Administration (FDA) provides consumer information on wireless phones at:

http://www.fda.gov/cellphones/qa.html

Following are safety-related questions and answers discussed at this web site.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a

case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data <u>do not</u> demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly

precautionary; it was not based on scientific evidence that any health hazard exists.

Do handsfree kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that handsfree kits reduce risks. Handsfree kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "handsfree" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) *charged two companies* that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g., CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456
	Pagers 1-800-548-9954
	Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software, please call the telephone number	

For **Accessories** and **Software**, please call the telephone number designated above for the product with which they are used.

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF

THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, IN NO EVENT SHALL MOTOROLA BE LIABLE. WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA. SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY I AW

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Product Registration

Online Product Registration:

http://www.motorola.com/warranty

Product registration is an important step toward enjoying your new Motorola phone. Registering helps us facilitate warranty service, and permits us to contact you should your phone require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

RF Energy Interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Wireless: The New Recyclable

Your wireless phone can be recycled. Recycling your wireless phone reduces the amount of waste disposed in landfills and allows recycled materials to be incorporated into new products.

The Cellular Telecommunications Industry Association (CTIA) and its members encourage consumers to recycle their phones and have taken steps to promote the collection and environmentally sound recycling of end-of-life wireless devices.

As a wireless phone user, you have an important role in ensuring that this phone is recycled properly. When it comes time to give this phone up or trade it in for a new one, please remember that the phone, the charger, and many of its accessories can be recycled. It's easy. To learn more about CTIA's Recycling Program for Used Wireless Devices in the United States, including information on where to recycle wireless devices near you, please visit www.recyclewirelessphones.com.

Index

A		installing 17
accessories 14, 30, 52, accessory connector por active line indicator 34, active line, changing 63	rt 1 Bi 36 bi	level indicator 34, 36 luetooth 3, 28, 81, 87, 88 rightness, setting 62 rowser. <i>See</i> micro-browser
alarm clock 88	C	
alert	C	alculator 89
defined 58	Ca	
setting 20, 51, 58, 81 turning off 20, 65		adding digits after phone
animation		number 67
downloading 77, 90		alert, turning off 20, 65
screen saver 61		answer options 59
viewing 91		answering 21
wallpaper 60		barring 76
answering a call 21, 59		barring password,
application, locking and		changing 53
unlocking 90		call waiting 73
automatic redial 64		costs 85
_		deleting 66
В		dialed calls list 66
backlight 62		dialing 20
barring calls 76	7	emergency number 65
battery		ending 20, 21
charging 18		forwarding 52, 76
extending battery life	15,	handsfree speaker 52 hold 73
61, 62		noid /3

call (continued)	codes
international access code	changing 53
66	default 53, 54, 55
making 20	forgetting 55
received calls list 66	color, setting 62
receiving 21	conference call 76
recent calls 66	convertible covers 30
ring style 20, 51, 58, 81	cursor 41
speakerphone 85	customizing the menu 82
storing 66	
talk then fax 68	D
timers 84, 85	data call 86
unanswered call 52, 68	date, setting 58
Call Failed, Number Busy	datebook 88
message 64	deleting a call 66
call waiting 73	dialed calls list 66
caller ID 3, 23, 57, 64, 67,	dialing a number 20, 83, 84
80	display
calling line identification.	backlight 62
See caller ID	brightness 62
camera	color 62
settings 92	description 33
taking a photo 2, 22	home screen 33
car kit 85	language 83
center select button 37	personalizing 82
character chart 46	timeout 62
chat 78	distinctive ringer alert 81
clock	DTMF tones
illustration 33	activating 84
selecting analog or digital 82	sending 68, 84
setting 58	

E	Н
earpiece volume 20 email 78 emergency number 65 end key 1, 20, 21, 38 ending a call 20, 21 Enter Unlock Code message 54, 55 event lights 3, 30 external display 51	handsfree speaker 52 handsfree use 85 headset accessory, using 85 using with external display 52 headset jack 1 Hide ID feature 67 hold a call 73 home keys, personalizing 82
fax call 68, 86 5-way navigation key 1, 37, 38 fixed dial 83 flashing cursor 41 flip external display 51 open to answer 21, 59 replacing flip cover 30 screen saver 61	home screen defined 33 selecting clock view 82 I in use indicator 34 incoming call answering 21 forwarding 52, 76 Incoming Call message 64
forwarding calls 52, 76 G games 91 GPRS indicator 34, 35 groove tunes 91	indicators active line 34, 36 battery level 34, 36 GPRS 34, 35 in use 34 Java midlet 34, 36 loud ring style 37 menu 33 message 34, 36

indicators (continued) message waiting 26 missed call 68 ring style 34, 37 signal strength 34, 35 silent style 37 soft ring style 37 text case 43 text entry method 36, 43 transmission 35 vibrate and ring style 37 vibrate style 37 voicemail message 36, 71 international access code 66 iTAP software 47	right soft key 1, 34, 38, 82 send 1, 20, 21, 66 smart 1, 51, 52 voice 1 volume control 1, 20 keypad answering calls 59 volume, setting 82 L language, setting 83 left soft key functions 1, 34, 38 personalizing 82 light ID, setting 80 line, changing 63 lock application 90
Java applications 91 Java midlet indicator 34, 36 joystick 1, 38	phone 54 SIM card 90 Low Battery message 36
key center select button 37 end 1, 20, 21, 38 5-way navigation 1, 37, 38 left soft key 1, 34, 38, 82 menu 1, 38, 39 power 1, 19	making a call 20 master clear 83 master reset 83 menu entering text 41 icons, changing in home screen 82

icons, converting to text	using 90
82	Web sessions 90
icons, described 33	missed call indicator 68
icons, showing or hiding 82	Missed Calls message 52, 68
language, setting 83 lists 40 navigating 38 personalizing 82 rearranging features 82 using features 40	MMS. See message More Here guide 14 MotoMixer 91 multimedia message receiving 3, 26
	sending 3, 24, 77
view, changing 82 menu indicator 33	multimedia messaging service. See
menu key 1, 38, 39	message
message	multimedia template 77
chat 78 menu feature icon 33 MMS, defined 24	my telephone number 21, 58, 75
multimedia message 77	N
multimedia template 77 reading 77 text 77	network settings 88 notepad 69 number
message indicator 34, 36 message menu feature icon 33	storing your number 58 viewing your number 21, 75
message waiting indicator 26	numbers, entering 49
micro-browser	0
browser setup 90 Java applications 91 menu feature icon 33	1-touch dial setting preference 81 using 70

open to answer 59


optional accessory, defined 14	attaching 2 numbers 67, 69
optional feature, defined 14	international access code 66
P	redialing 63
chasswords. See codes chone active line indicator 36 active line, changing 63 alert, turning off 20, 65 answer options 59 clear stored information 83 codes 53 date, setting 58 flip 21, 30 keypad, answering calls 59 language, setting 83 locking 54 network settings 88 reset all options 83 ring style 20, 51, 58, 81 security code 53 time, setting 58 turning on/off 19 unlock code 53 unlocking 19, 54, 55 chone number	redialing 63 storing in phonebook 79 storing your number 58 viewing your number 21, 75 phone theme 91 phonebook attaching 2 numbers 67, 69 category views 57, 80 copying entries 81 dialing a number 79 entry category 80 group mailing list 79 light ID 80 menu feature icon 33 1-touch dial 70 picture caller ID 3, 23, 57 80 primary number, setting 81 ringer ID 79, 81 sorting entries 57, 80 speed dial number 70 storing an entry 79 voice dialing 79
active line indicator 36	voice dialing 70
active line, changing 63	
adding digits after 67	

photo	redial
downloading 77, 90	automatic redial 64
picture caller ID 3, 23, 57,	busy number 63
80	reference guide 14
sending 2, 22	right soft key
taking 2, 22	functions 1, 34, 38
picture	personalizing 82
downloading 77, 90	ring lights 3, 29
screen saver 61	ring style indicators 34, 37
viewing 91	ring style, setting 20, 51,
wallpaper 60	58, 81
picture caller ID 3, 23, 57,	ring tone
80	creating 92
PIN code	downloading 77, 90
changing 53	editing with MotoMixer 91
entering 90	managing 91
PIN2 code, changing 53	ringer ID
power key 1, 19	setting 79
predictive text entry 47	turning on/off 81
primary text entry method	ringer volume, setting 20,
42	81
Q	S
quick dial 84	screen saver 61
	secondary text entry
R	method 42
received calls list 66	security code
recent calls 66	changing 53
recent calls menu feature	default 53
icon 33	forgetting 56
	send key 1, 20, 21, 66
	service dial 83

shortcuts 75, 82	sound
Show ID feature 67	creating 92
signal strength indicator 34,	downloading 77, 90
35	managing 91
silent alert, setting 20, 51,	Speaker On message 53
58, 81	speakerphone
SIM Blocked message 19,	activating 85
90	automatic answer 85
SIM card	speed dial 70
defined 15	standby time, increasing
installing 15	61, 62
locking 90	storing a call 66
PIN code entry 19	symbol chart 50
PIN code, changing 53	symbols, entering 49
PIN2 code, changing 53	_
precautions 15	T
SIM Blocked message	talk then fax call 68
19, 90	tap method text entry 44
SIM PIN code	telephone number
changing 53	storing your number 58
entering 90	viewing your number 21,
SIM PIN2 code, changing	75
53	text
smart key 51, 52	capitalization, changing
illustration 1	43
soft keys	character chart 46
functions 34, 38	entering 41
illustration 1	entry method, selecting
labels 33	42
personalizing 82	entry method, setup 42
	flashing cursor 41

TIAL SOLWAIS PLEGICLIVE	V
text entry 47 numeric method 49 symbol chart 50 symbol method 49 tap method 44 ext case indicator 43 ext entry method selecting 42 setup 42 ext entry method indicator 36, 43 heme 91 ime, setting 58 imers 84, 85 ransmission indicator 35 ravel charger 18 ITY device 76	vibrate alert setting 20, 51, 58, 81 turning off 20, 65 video clip downloading 77, 90 managing 91 playing 3, 27 vObject, defined 27 voice dial 79, 85 voice key dialing a number 79 illustration 1 voice record 89 voicemail 71 voicemail message indicator 36, 71 volume
J	earpiece 20 keypad 82
unlock	ringer 20, 81
application 90 phone 54	volume keys 1, 20
unlock code	W
bypassing 55 changing 53 default 53, 54, 55 entering 19, 54, 55 forgetting 55	wallpaper 60 warranty 100 Web pages 90 Web sessions 90

U.S. patent Re. 34,976

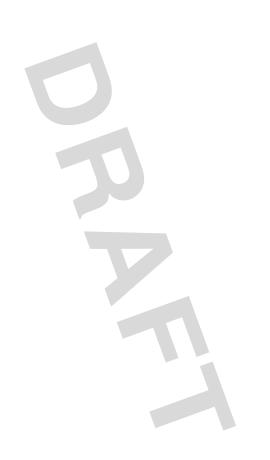

Wireless Phone Safety Tips

"Safety is your most important call!"

 
Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
- When available, use a handsfree device. If possible, add an additional layer of convenience to your wireless

- phone with one of the many Motorola Original™ handsfree accessories available today.
- 3 Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving. Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.
- 8 Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.*

- 9 Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.*
- 10 Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*



Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

For more information, please call 1-888-901-SAFE or visit the CTIA Web site at www.wow-com.com™

