


Preparing your phone

Inserting the SIM card


- ! • Scratches can easily damage the metal contacts of the SIM card. Pay special attention to the SIM card as you handle and insert.
- Locate the SIM card slot in the battery compartment of your phone.

Slide the entire SIM card into the slot with the metal contacts of the SIM card facing down and its cut corner on the bottom left, then draw back the SIM card stator.

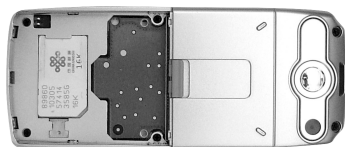

Fitting the battery

- Place the bottom end of the battery against the base of the battery compartment.
- Press the top of the battery downwards until it clicks into the compartment.

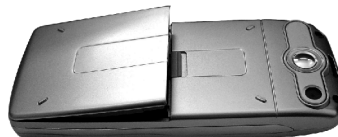

Removing the battery

- ! • You may lose all your personal settings stored either in your SIM card or phone memory by removing the battery.
- Pull the battery latch which is in the battery.
- Lift the battery off the compartment.

Preparing your phone 9 **WIRD**

Charging the battery

- ! • During charging, the icon on the LCD will roll until the battery is fully charged.
- When the battery is low, you will hear a warning tone. Your phone will power off automatically.
- Use only approved batteries, charger and accessories to ensure proper function of your phone and battery life. Any malfunction or damage caused by the use of any third-party accessories will result in warranty being void.

- Insert the travel charger connector into the charger port at the bottom the phone.
- Pull out the charger connector when charging is done.

Access Codes

-PIN code

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the

SIM card. When PIN Code is set Activate, your phone will request the PIN code every time when it is switched on. On the contrary, when PIN code is set Deactivate, your phone can connect to the network directly without PIN code.

-PIN2 code

The PIN2 code, supplied with some SIM cards is required to access some functions such as Advice of call charge, Fixed Dial number. These functions are only available if supported by your SIM card.

-PUK code

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your local service provider for the code. If you lose the code, also contact your service provider.

-Phone code

The security code protests the unauthorized use of your phone. The default number is "0000".