

Some of the contents in this manual may differ from your phone depending on the software of your phone or your service provider.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-20242A
English. 09/2008. Rev. 1.0

SCH-F309
user manual



using this manual

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to “introducing your mobile phone,” “assembling and preparing your mobile phone,” and “using basic functions.”

Instructional icons

Before you start, familiarize yourself with the icons you will see in this manual:



WARNING

Warning—situations that could cause injury to yourself or others



CAUTION

Caution—situations that could cause damage to your phone or other equipment



Note—notes, usage tips, or additional information



Refer to—pages with related information; for example: ► p.12 (represents “see page 12”)

- **Followed by**—the order of options or menus you must select to perform a step; for example: Press <Menu> → **Messages** → **Text message** → **New message** (represents **Menu**, followed by **Messages**, followed by **New message**)
- [] **Square brackets**—phone keys; for example: [] (represents the Power/Menu exit key)
- < > **Angled brackets**—softkeys that control different functions at each screen; for example: <Menu> (represents the **Menu** softkey)

Copyright information

Rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide—Bluetooth QD ID: B014280.

Licensed by QUALCOMM Incorporated under one or more of the following Patents.

U.S Patent No. 4,901,307 5,056,109 5,099,204
5,101,501 5,103,459 5,107,225
5,109,390

contents

safety and usage information	2
Safety warnings	2
Safety precautions	4
Important usage information	7
introducing your mobile phone	9
Unpack	9
Phone layout	10
Keys	11
Display	12
Icons	12
assembling and preparing your mobile phone	14
Install the battery	14
Charge the battery	16
Insert a memory card (optional)	17
using basic functions	18
Turn your phone on and off	18

Access menus	19	Edit images	34
Customise your phone	19	Play a game	36
Use basic call functions	20	View world clocks	37
Send and view messages	21	Set and use alarms	37
Add and find contacts	23	Use the calculator	38
Use basic camera functions	24	Convert measurements	38
Listen to music	25	Set a countdown timer	38
Browse the web	26	Use the stopwatch	38
using advanced functions	27	Create a new task	39
Use advanced call functions	27	Create a text memo	39
Use advanced Contacts functions	29	Manage your calendar	39
Use advanced messaging functions	30	Activate the mobile tracker	40
Use advanced music functions	30		
using tools and applications	32	troubleshooting	a
Use the Bluetooth wireless feature	32		
Activate and send an SOS message	34		

safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries in a fire. Follow all local regulations when disposing used batteries.

- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the buttons lightly, use special features that reduce the number of buttons you have to press (such as templates and predictive text), and take frequent breaks.



CAUTION

Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.

CAUTION

- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Avoid using the phone's camera flash or light close to the eyes of children or animals.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

CAUTION



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle UIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your phone conforms to U.S. Federal Communications Commission (FCC) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 1.6 watts per kilogram of body tissue.

In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.

The FCC has granted an Equipment Authorisation for this model phone based on the compliance of all reported SAR levels with the FCC RF exposure guidelines. The authorization can be found on the FCC Office of Engineering and Technology website at <http://www.fcc.gov/oet/ea>.

introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, display, and icons.

Unpack

Check your product box for the following items:

- Mobile phone
- Battery
- Travel adapter (charger)
- User manual

 


The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider.


You can obtain additional accessories from your local Samsung dealer.

Phone layout

The front of your phone includes the following keys and features:

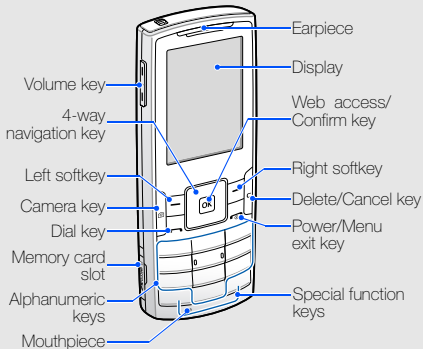

 The rear of your phone includes the following keys and features:

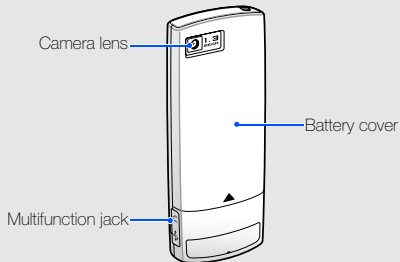

You can lock the keys to prevent any unwanted phone operations. To lock, press and hold [*****]. To unlock these keys, press <Unlock> → [*****].

Keys


Key	Function
 Camera	In Idle mode, access Camera ; Turn on the camera (press and hold); In Camera mode, take a photo or record a video
 Softkeys	Perform actions indicated at the bottom of the display
 4-way navigation	In Idle mode, access default menus: right to Text message or New message (press and hold) left to Calendar , up to MP3 , or down to FM radio ; Press and hold the navigation key up to activate SSR (Simple Smart Ringtone) mode; In Menu mode, scroll through menu options

Key	Function
 Web access/Confirm	In Idle mode, launch the web browser; In Menu mode, select the highlighted menu option or confirm an input
 Dial	Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers
 Power/Menu exit	Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
 Delete/Cancel	Delete characters; In Menu mode, return to the previous level
 Alpha-numeric	Enter numbers, letters and special characters

Key	Function
	Special function Enter special characters or perform special functions; In Idle mode, press and hold [#] for Silent mode; Press and hold [*] to lock the keys
	Volume Adjust the phone's volume

Display

 Your phone's display consists of three areas:

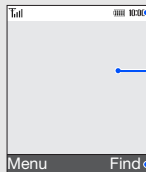

Icon line

Displays various icons

Text and graphic area

Displays messages, instructions, and information you enter

Softkey line

Displays the current actions assigned to each softkey

Icons

Learn about the icons that appear on your display.

Icon	Definition
	Signal strength
	Roaming (outside of normal service area)

Icon	Definition
	Call in progress
	No service available or phone in Flight mode
	Phone locked
	SOS message feature activated
	Restriction activated
	Transferring data via 1X network
	Bluetooth activated
	New text message (SMS)
	New urgent message
	New push message
	Alarm activated
	SSR mode activated
	Memory card inserted


Icon	Definition
	Connected to secured web page
	Ringer mode: ringer only
	Ringer mode: silent
	Ringer mode: vibration
	Ringer mode: vib. & ringer
	Ringer mode: vib. then ringer
	Ringer mode: ringer then vib.
	Silent mode activated
	Battery power level
	Current time

assembling and preparing your mobile phone

Get started by assembling and setting up
your mobile phone for its first use.


Install the battery

 1. Remove the battery cover.

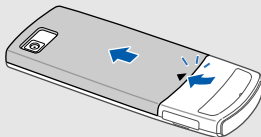


If the phone is on, press and hold [⏻] to turn it off.

 2. Insert the UIM card.

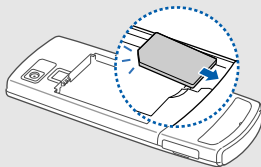


Place the card in the phone with the gold-coloured contacts facing down.

 3. Insert the battery.

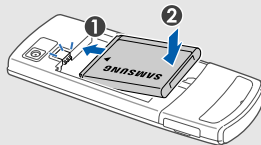

 
4. Replace the battery cover.

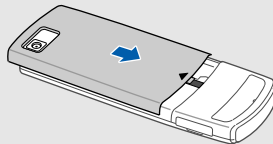

Charge the battery

Before using the phone for the first time, you must charge the battery.

 1. Open the cover to the multifunction jack and plug the small end of the travel adapter.

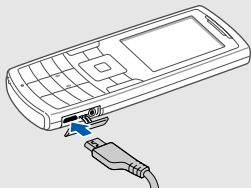

Improperly connecting the travel adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

2. Plug the large end of the travel adapter into a power outlet.
3. When the battery is fully charged (the  icon is no longer moving), unplug the travel adapter from the power outlet.
4. Unplug the travel adapter from the phone.
5. Close the cover to the multifunction jack.



 
About the low battery indicator

When your battery is low, the phone will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.

Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ memory cards up to 2 GB (depending on memory card manufacturer and type).

1. Open the cover to the memory card slot on the side of the phone.
2. Insert a memory card with the label side facing up.

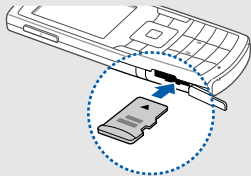

3. Push the memory card in the memory card slot until it locks in place (according to the picture above).



using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

Turn your phone on and off

To turn your phone on, press and hold [📞].

To turn your phone off, press and hold [📞].

Switch to Flight mode

By switching to **Flight mode**, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals.

To switch to **Flight mode**, press <Menu> → **Calls** → **Call settings** → **Flight mode** → **On**.



Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

Access menus

To access your phone's menus,

1. Press a softkey for the menu you want.
2. Use the navigation key to scroll to a menu or option.
3. Press [OK] to confirm the highlighted option.
4. Press [C] to move up one level; Press [] to return to Idle mode.

Customise your phone

Get more from your phone by customising it to match your preferences.

Adjust the volume of the key tones

In Idle mode, press the Volume key up or down to adjust the key tone volume.

Select a key tone

In Idle mode, press <Menu> → **Sounds** → **Key tone** → a key tone.

Switch to or from Silent mode

In Idle mode, press and hold [#] to silence or unsilence your phone.

Change your ringtone

1. In Idle mode, press <Menu> → **Sounds** → **Ringer**.
2. Scroll down, and select a ringtone category → a ringtone.

Activate SSR mode

In Idle mode, press and hold the navigation key up. Your phone will alert you to incoming calls by vibrating itself and ringing at the highest volume in noisy places.

Select a wallpaper (Idle mode)

1. In Idle mode, press <Menu> → **Display** → **Screen saver** → **Image**.
2. Select an image category → an image.

Lock your phone

1. In Idle mode, press <Menu> → **Settings** → **Security**.
2. Enter a new 4-digit password and press [OK].
3. Enter the new password again and press [OK].
4. Select **Lock mode** → **Once** or **On**.

Use basic call functions

Learn to make or answer calls and use basic call functions.

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [>] to dial the number.
3. To end the call, press [].

Answer a call

1. When a call comes in, press [].
2. To end the call, press [].

Adjust the volume

To adjust the volume during a call, press the Volume key up or down.

Use the headset

By plugging the supplied headset into the multifunction jack, you can make and answer calls:

- To redial the last call, press and hold the headset button.
- To answer a call, press the headset button.
- To end a call, press the headset button.

Send and view messages

Learn to send and view text (SMS) and multimedia (MMS) messages.

Send a text message

1. In Idle mode, press **<Menu>** → **Messages** → **Text message** → **New message**.
2. Enter your message text and press **[OK]**.
 - ▶ Enter text

3. Press **[OK]**.
4. Enter a destination number.
5. Press **[OK]** to send the message.

Send a multimedia message

1. In Idle mode, press **<Menu>** → **Messages** → **Multimedia message** → **New message**.
2. Press **<Edit>**.
3. Enter a subject and press **[OK]**.
4. Scroll down to **Message** and press **<Edit>**.
5. Enter your message text and press **[OK]**.
6. Scroll down to **Picture**.
7. Press **<Options>** and select an image.
8. Scroll down to **Sound**.
9. Press **<Options>** and select a sound.
10. Press **[OK]**.

11. Enter a destination number or an email address and press [OK].

12. Press [OK] to send the message.

Enter text

- When entering text, press <Mode> and select a text input mode.
- Press [*] to change case in T9 English or ABC modes.

Enter text in one of the following modes:

Mode	Function
T9 English	1. Press the appropriate alphanumeric keys to enter an entire word. 2. When the word displays correctly, press [#] to insert a space. If the correct word does not display, press [0] to select an alternate word.
ABC	Press the appropriate alphanumeric key until the character you want appears on the display.
Hinglish	Press the appropriate alphanumeric key to enter a Hinglish word, which is made by combining of Hindi and English according to Hindi grammar.
123	Press the appropriate alphanumeric key to enter a number.
Symbol	Press the appropriate alphanumeric key to select a symbol.

View text or multimedia messages

1. In Idle mode, press <Menu> → **Messages** → **Text message** or **Multimedia message** → **Inbox**.
2. Select a text or multimedia message.

Add and find contacts

Learn the basics of using the **Contacts** feature.

Add a new contact

1. In Idle mode, enter a phone number and press [OK].
2. Press <Edit>, and enter the contact's name and press [OK].
3. To save the contact to the phone memory, scroll right and select a number type.
4. Enter contact information.

5. Press [OK] to add the contact to memory.

Find a contact

1. In Idle mode, press <Menu> → **Contacts** → **Find**.
You can also press <Find> in Idle mode.
2. Enter the first few letters of the name you want to find.
3. Select the contact's name from the search list.



Once you have found a contact, you can:

- call the contact by pressing [↵]
- edit the contact's information by pressing [OK]

Use basic camera functions

Learn the basics to capture and view photos and videos.

Capture photos

1. In Idle mode, press and hold [] → **Capture**.
The phone turns on the camera automatically.
2. Aim the lens at the subject and make any adjustments.
3. Press [**OK**] to take a photo.
4. Press <**Save**> to save the photo.

View photos

In Idle mode, press [] → **My album** → **gallery** → a photo file.

Capture videos

1. In Idle mode, press and hold [] → **Capture**.
The phone turns on the camera automatically.
2. Press [**1**] → **Video cam** to switch to Recording mode.
3. Aim the lens at the subject and make any adjustments.
4. Press </> to start recording.
5. When you are finished recording, </>.
6. Press <**Save**> to save the video.

View videos

In Idle mode, press [] → **My album** → **gallery** → a video file.

Listen to music

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio

1. Plug the supplied headset into the phone's multifunction jack.
2. In Idle mode, press <Menu> → **Entertainment** → **FM radio**.
3. Press <On> to start the radio.
4. Scroll left or right to select a radio station.
5. To turn the FM radio off, press <Off>.

Listen to music files

Start by transferring files to your memory card: Copy to your memory card. ► p. 30

After transferring music files to your memory card,

1. In Idle mode, press <Menu> → **Entertainment** → **MP3** → **MP3 files**.
2. Press <Options> → **Add to play list**.
3. Press [OK] to select the files you want and press <Add>.
4. Press <Play> to begin playback.

5. Control playback using the following keys:

Key	Function
OK	Pause or resume playback
Volume	Adjust the volume up or down
Navigation	• Left: Skip backward; Scan backward in a file (press and hold) • Right: Skip forward; Scan forward in a file (press and hold) • Up: Change Repeat mode • Down: Open the playlist
<A-B>	Mark the beginning and end of a section you want to repeat

Browse the web

Learn to access and bookmark your favourite web pages.

Browse web pages

1. In Idle mode, press [OK] to launch your service provider's homepage.
2. Navigate web pages using the following keys:

Key	Function
Navigation	Scroll up or down on a web page
OK	Select an item
C	Return to the previous page
<Menu>	Access a list of browser options

Bookmark your favourite web pages

1. In Idle mode, press [OK].
2. Press <Menu> → **Bookmarks** → <Menu> → **New Bookmark**.
3. Enter a page title and a web address (URL).
4. Scroll down to **Save** and press [OK].

using advanced functions

Learn how to perform advanced operations and use additional features of your mobile phone.

Use advanced call functions

Learn about your phone's additional calling capabilities.

View and dial missed calls

Your phone will display calls you have missed on the display. To dial the number of a missed call,

1. Press [OK].
2. Scroll to the missed call you want to dial.
3. Press [] to dial.

Call a recently dialed number

1. In Idle mode, press [] to display a list of recent numbers.
2. Scroll to the number you want and press [] to dial.

Answer a second call

If your network supports this function, you can answer a second call during a call:

Press [>] to answer the second call. The first call is automatically placed on hold.

Call an international number

1. In Idle mode, press and hold [0] to insert the international call code.
2. Enter the complete number you want to dial (country code, area code, and phone number), and then press [>] to dial.

Call a contact from Contacts

You can call numbers directly from **Contacts** using stored contacts. ► p. 23

1. In Idle mode, press <Menu> → **Contacts** → **Find**.

You can also press <Find> in Idle mode.

2. Scroll to the number you want to dial and press [>] to dial.

Call an emergency number

You can save emergency numbers, and then call the numbers even if your phone is locked or the UIM card is not inserted.

1. In Idle mode, press <Menu> → **Settings** → **Security**.
2. Enter the password and press [OK].
3. Select **Emergency #**.
4. Scroll to a number and press [OK].
5. Enter a new number and press [OK].



The default emergency numbers will still be available even if you replace them with other numbers.

Use advanced Contacts functions

Learn to set speed dial numbers and create groups of contacts.

Set speed dial numbers

1. In Idle mode, press <Menu> → **Contacts** → **Speed dial**.
2. Scroll to a number you want to set (1-99) and press [OK].
3. Select a contact → a number (if necessary) to assign to the number.



You can now call this contact from Idle mode by pressing and holding the assigned speed dial number.

Create a group of contacts

1. In Idle mode, press <Menu> → **Contacts** → **Group settings**.
2. Scroll to an empty location and press [OK].
3. Enter a group name and press [OK].
4. To set the caller ID image, scroll to the image field and press <Edit> → an image category → an image.
5. To set a group ringtone, scroll to the ringtone field and press <Edit> → a ringtone category → a ringtone.
6. Press [OK].

Use advanced messaging functions

Learn to create templates and use templates to create new messages.

Create a text template

1. In Idle mode, press **<Menu>** → **Messages** → **Text message** → **Msg. settings** → **Canned msg.**
2. Scroll to an empty location and press **[OK]**.
3. Enter your text and press **[OK]** to save the template.

Insert text templates in new messages

1. To start a new message, press **<Menu>** → **Messages** → a message type → **New message**.
2. From the text field, press **<Options>** → **Canned msg.** → a template.

Create a message from a multimedia template

1. In Idle mode, press **<Menu>** → **Messages** → **Multimedia message** → **Templates** → a template.
2. Press **<Send>**.
Your template opens as a new multimedia message.

Use advanced music functions

Learn to prepare music files and store radio stations.

Copy music files to a memory card

1. Insert a memory card.
2. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.

3. In Idle mode, press <Menu> → **Utilities** → **User memory** → **Memory card** → **Connect to PC**.
A pop-up window will appear on the PC.
4. Enter your phone password and press [OK].
5. Select **Open folder to view files** in the pop-up window on the PC.
6. Copy files from the PC to the memory card.

Customise your music player settings

1. In Idle mode, press <Menu> → **Entertainment** → **MP3** → **MP3 settings**.
2. Adjust the settings to customise your music player.

Store radio stations automatically

1. Plug the supplied headset into the phone's multifunction jack.
2. In Idle mode, press <Menu> → **Entertainment** → **FM radio**.
3. Press <On> to start the radio.
4. Press <Options> → **Self tuning**.
5. Press <Yes> to confirm.
The radio scans and saves available stations automatically.

using tools and applications

Learn how to work with your mobile phone's tools and additional applications.

Use the Bluetooth wireless feature

Learn about your phone's ability to connect to other wireless devices for exchanging data and using hands-free features.

Turn on the Bluetooth wireless feature

1. In Idle mode, press <Menu> → **Entertainment** → **Bluetooth** → **Activation** → **On**.
2. To allow other devices to locate your phone, select **Visibility** → **Always visible**.

Find and pair with other Bluetooth-enabled devices

1. In Idle mode, press <Menu> → **Entertainment** → **Bluetooth** → **Trusted Devices**.
2. Press <Add> → **Search**.
3. Scroll to a device and press <Add>.

4. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press **[OK]**.
When the owner of the other device enters the same code or accepts the connection, pairing is complete.
5. Edit the device name (if necessary) and press **[OK]**.

Wait a Bluetooth connection for pairing

1. In Idle mode, press **<Menu> → Entertainment → Bluetooth → Trusted Devices**.
2. Press **<Add> → Wait for request**.
3. Enter a PIN for the Bluetooth wireless feature and press **[OK]**. Your phone becomes prepared to receive a Bluetooth connection.



The owner of the other device must send the request for pairing and enter the same code to complete the pairing.

Send data using the Bluetooth wireless feature

1. In Idle mode, press **<Menu> → Entertainment → Bluetooth → Trusted Devices**.
2. Scroll to a device and press **<Options> → Send Files**.

Get data using the Bluetooth wireless feature

1. In Idle mode, press **<Menu> → Entertainment → Bluetooth → Trusted Devices**.
2. Scroll to a device and press **<Options> → Get Files**.
3. Select the files or items you want to get and press **<Get file>**.

Activate and send an SOS message

When you have an emergency, you can send an SOS message asking for help.

1. In Idle mode, press **<Menu>** → **Messages** → **SOS message** → **SOS on/off** → **On**.
2. Select **SOS on/off** → **On**.
3. Press **<Find>** and search for contacts.
4. Select a contact.
5. When you are finished selecting contacts, press **[OK]** to save the recipients.
6. Press **<Yes>**.

To send an SOS message, press the Volume key four times with the keys locked.



Once you send an SOS message, all phone functions will be suspended until you press **[⏏]**.

Edit images

Learn to edit images and apply various effects.

Apply effects to images

1. In Idle mode, press **<Menu>** → **Entertainment** → **Camera** → **Photo studio** → **Effects** or **Color/Texture**.
2. Select an image.
3. Scroll left or right to an effect option.
4. When done with effects, press **[OK]**.
5. Enter a new file name for the image and press **[OK]**.

Adjust an image

1. In Idle mode, press **<Menu>** → **Entertainment** → **Camera** → **Photo studio** → **Adjustments**.
2. Select an image.

3. Scroll to an adjustment option (sharpness, brightness, saturation, or blur) and press [OK].
4. Scroll left or right to adjust the image as desired and press [OK].
5. When you are finished with adjustment, press <Save>.
6. Enter a new file name for the image and press [OK].

Transform an image

1. In Idle mode, press <Menu> → **Entertainment** → **Camera** → **Photo studio** → **Rotate/Flip**.
2. Select an image.
3. To rotate or flip the image, scroll to a transforming option and scroll up or down.
4. When you are finished with transforming options, press [OK].

5. Enter a new file name for the image and press [OK].

Insert a visual feature

1. In Idle mode, press <Menu> → **Entertainment** → **Camera** → **Photo studio** → **Decoration**.
2. Select an image.
3. Scroll left or right to a visual feature (frame, clip art, sticker, or text) and press <Select>.
To insert a sticker to the image, first create stickers. ► Create a photo sticker
4. Select a visual feature to add and press [OK].
5. Move the added image and press [OK] (if necessary).
6. When you are finished adding visual features, press [OK].
7. Enter a new file name for the image and press [OK].

Create a photo sticker

1. In Idle mode, press <Menu> → **Entertainment** → **Camera** → **Photo studio** → **Create photo sticker**.
2. Select an image.
3. Select a sticker shape and press [OK].
4. Select a size and press [OK].
5. Using the navigation key, move the sticker over the area you want to crop and press [OK].

Capture an image from a video

1. In Idle mode, press <Menu> → **Entertainment** → **Camera** → **Photo studio** → **Capture movie screen**.
2. Select a video.
3. Press <Capture> to capture an image at the moment you want.

4. Press [OK].
5. Enter a new file name for the image and press [OK].

Play a game

1. In Idle mode, press <Menu> → **Entertainment** → **Games**.
2. Select a game from the list and follow the onscreen instructions.



Available games may vary, depending on your service provider or region. Game controls and options may vary.

View world clocks

Learn to view the time in another country or city.

1. In Idle mode, press **<Menu>** → **Utilities** → **Clock** → **World time**.
2. Scroll left or right to a time zone.
3. To set daylight saving time, press **<DST>** → **[OK]**.

Set and use alarms

Learn to set and control alarms for important events.

Set a new alarm

1. In Idle mode, press **<Menu>** → **Utilities** → **Alarm**.
2. Scroll to an empty alarm location and press **[OK]**.
3. Set alarm details.

4. Press **[OK]**.

Stop an alarm

When the alarm sounds,

- Press any key to stop an alarm without snooze.
- Press **<End>** → **[OK]** to stop an alarm with snooze, or press **<Snooze>** to silence the alarm for the snooze period.

Deactivate an alarm

1. In Idle mode, press **<Menu>** → **Utilities** → **Alarm**.
2. Scroll to the alarm you want to deactivate and press **[OK]**.
3. Scroll left or right to **Off**.
4. Press **[OK]**.

Use the calculator

1. In Idle mode, press **<Menu>** → **Utilities** → **Calculator** → **Calculator**.
2. Use the keys that correspond to the calculator display to perform basic mathematical operations.

Convert measurements

1. In Idle mode, press **<Menu>** → **Utilities** → **Calculator** → **Unit converter**.
2. Enter the measurements and scroll left or right to an original conversion unit.
3. Scroll down and scroll left or right to a target conversion unit.

Set a countdown timer

1. In Idle mode, press **<Menu>** → **Utilities** → **Countdown**.
2. Press **<New>**.
3. Enter details to count the number of remaining days to the target date.
4. Press **[OK]**.

Use the stopwatch

1. In Idle mode, press **<Menu>** → **Utilities** → **Clock** → **Stop watch**.
2. Press **[OK]** to begin the stopwatch.
3. Press **<Lap>** to record lap times.
4. When you are finished, press **[OK]**.
5. Press **<Clear>** to clear recorded times.

To use a timer,

1. From the stopwatch screen, press **<Timer>** → **<Settings>**.
2. Enter hours or minutes to count down and press **[OK]**.
3. Press **[OK]** to start the timer.

Create a new task

1. In Idle mode, press **<Menu>** → **Utilities** → **Task list**.
2. Press **<New>**.
3. Enter the details of the task and press **[OK]**.

Create a text memo

1. In Idle mode, press **<Menu>** → **Utilities** → **Memo pad**.
2. Press **<New>**.

3. Enter your memo text and press **[OK]**.

Manage your calendar

Learn to create events and view your today events.

Create an event

1. In Idle mode, press **<Menu>** → **Utilities** → **Calendar** → **Indian Calendar**.
2. Press **<New>**.
3. Enter the details of the event as required.
4. Press **[OK]**.

View your today events

1. In Idle mode, press **<Menu>** → **Utilities** → **Today**.
2. Scroll to an event and press **[OK]**.

Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other UIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

1. In Idle mode, press <Menu> → **Settings** → **Security** → **Mobile Tracker 2.0**.
2. Select **Settings**.
3. Enter a new 8-digit password for the mobile tracker and press [OK].
4. Enter the new password again and press [OK].
5. Scroll left or right to **On**.
6. Scroll down and press <Select> to enter the recipient list.
7. Press <Find> to open your contact list.

8. Scroll to a contact and press [OK] → <Done>.
9. When you are finished selecting contacts, press <Save> to save recipients.
10. Scroll down and enter the sender's name.
11. Press <Save>.



By setting the options in **Access remote phone**, you can delete data on your lost phone, or receive calls to the phone or the phone's location information from the specified phone.

troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

Your phone displays “No service” or “Not done.”

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

You enter a number, but the call is not dialled.

- Ensure that you have pressed the Dial key: [↵].
- Ensure that you have accessed the right cellular network.

- Ensure that you have not set call barring for the phone number.

Another caller cannot reach you.

- Ensure that your phone is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot hear you speaking.

- Ensure that you are not covering the built-in microphone.

- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

The phone beeps and the battery icon flashes.

Your battery is low. Recharge or replace the battery to continue using the phone.

The audio quality of the call is poor.

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

You select a contact to call, but the call is not dialled.

- Ensure that the correct number is stored in the contact list.

- Re-enter and save the number, if necessary.

The battery does not charge properly or sometimes the phone turns itself off.

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery.

Your phone is hot to the touch.

When you use several applications at once, your phone requires more power and may heat up.

This is normal and should not affect your phone's lifespan or performance.