

PORTABLE QUAD-BAND MOBILE PHONE

User Manual
Please read this manual before operating your
phone, and keep it for future reference.



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters: Customer Care Center:

1301 E. Lookout Drive 1000 Klein Rd.
Richardson, TX 75082 Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: http://www.samsung.com

©2011 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsung.com/us/support

Nuance[®], VSuiteTM, T9[®] Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

ACCESS® and NetFront™ are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth® word mark, figure mark (stylized "B Design"), and combination mark (Bluetooth word mark and "B Design") are registered trademarks and are wholly owned by the Bluetooth SIG.

 $\mathsf{microSD^{TM}}$ and the microSD logo are Trademarks of the SD Card Association.

 $\mbox{\rm Openwave}^{(\!g\!)}$ is a registered Trademark of Openwave, Inc.

Google, the Google logo, Android, the Android logo, Android Market, Gmail, Google Mail, Google Maps, Google Talk, Picasa, and YouTube are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype and the Swype logos are trademarks of Swype, Inc. © 2010 Swype, Inc. All rights reserved.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

http://opensource.samsung.com.

Dynamic Noise Suppression from Audience

Your phone is equipped with an advanced voice processing chip that delivers clear mobile calls by suppressing background noise, intermittent sounds (like a siren or nearby conversation), and echoes, allowing you to hear and be heard nearly anywhere.

How Does It Work?

Based on the intelligence of the human hearing system, the technology:

- · Captures, evaluates and distinguishes all the sound signals surrounding your phone, and the person you're speaking with.
- Then isolates the primary voice in conversation and filters out the background noise so the person you're calling hears only your voice, without
 disturbing background noise.
- Dynamically equalizes and adjusts voice volume to optimize your calling experience, so you can hear clearly and don't need to speak louder to overcome surrounding noise.

The noise suppression technology is built-in and already enabled in your new mobile phone. So it's ready to provide unsurpassed voice clarity with every call.

Disclaimer of Warranties; Exclusion of Liability,

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES. OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.



Table of Contents

Section 1: Getting Started	4
Understanding this User Manual	4
Battery Cover	5
Activating Your Phone	6
Battery	8
Accessing the QWERTY Keyboard	10
Switching the Phone On or Off	11
Setting Up Your Voice Mail	11
Visual Voicemail	12
Section 2: Understanding Your Phone	13
Features of Your Phone	13
Open View of Your Phone	13
Keys	14
Camera View of Your Phone	15
Side Views of Phone	16
Display Layout	17
Missed Messages Tab	17
Menu Navigation	20
Help	21
Section 3: Call Functions	22
Making a Call	22
Adjusting the Call Volume	23
Answering a Call	24
Call history	24

Vibration Profile	27
Selecting Functions and Options	27
In Call Options	28
Section 4: Menu Navigation	33
Menu Navigation	
Menu Design	
Section 5: Entering Text	
Using the QWERTY Keyboard	
Changing the Text Input Mode	
Using T9 Mode	
Using ABC Mode	
Using the Numeric Mode	
Using Symbol Mode	
Section 6: Messaging	
Types of Messages	
Display Icons for Messages	
View Tab	
Text Messages	
Picture Messages	
Message Inbox	48
Drafts	51
Templates	51
My folders	53
Voicemail	53

Email	. 54
Exchange Email	. 54
Social Buzz	. 55
Instant Messaging (IM)	. 55
Settings	
Messages settings	
Delete by folder	. 58
Section 7: People	.60
Mobile Backup	
Using the Contacts List	
Finding a Contact Entry	
Dialing a Number from Contacts	
Caller Groups	
Editing a Caller Group	
Speed Dialing	
Management	. 65
My Profile	
My number	
Service Dialing Numbers	
Section 8: Media and Web	
T-Mobile Mall	
web2go	
Games and Apps	
Photos	
Images	
Music	
Music Player	
Muolo I luyoi	. / (

	Sounds	8
	Videos	82
	Other Files	83
e	ction 9: Organizer	85
	Organizer	85
	Calendar	85
	Alarm	90
	Voice Recognition	9
	Tasks	97
	Memo	97
	Calculator	98
	Tip calculator	98
	World clock	99
	Converter	99
	Timer	100
	Stopwatch	100
	RSS reader	100
e	ction 10: Camera1	02
	Using the Camera	102
	Take and Send	102
	Photo Gallery Options	105
	Using the Camcorder	106
	Recording and Sending a Video	106
	Configuring the Camcorder Settings	107
	Video Options	108
	My Album	109

Section 11: Changing Your Settings110
My Account
Personalize your Phone
Sound profiles
Display settings
Phone settings
Messaging Key
4-way Shortcuts
Keyboard Shortcuts
Memory Settings
Language
Greeting message
Time and Date
Help
Bluetooth
Manage Online Album
Call settings
Advanced
Reset settings
Section 12: Health and Safety Information133
Exposure to Radio Frequency (RF) Signals
Specific Absorption Rate (SAR) Certification Information 137
Smart Practices While Driving
Battery Use and Safety
Samsung Mobile Products and Recycling
UL Certified Travel Charger
Display / Touch-Screen

GPS & AGPS	143
Emergency Calls	14
Care and Maintenance	145
Responsible Listening	146
Operating Environment	148
FCC Hearing Aid Compatibility (HAC) Regulations for	
Wireless Devices	150
Restricting Children's Access to Your Mobile Device	15
FCC Notice and Cautions	15
Other Important Safety Information	152
Section 13: Warranty Information	153
Standard Limited Warranty	153
End User License Agreement for Software	157
Index	162

Section 1: Getting Started

This section explains how to start using your phone. Start by configuring your hardware, activating your service, and then setting up your voice mail.

Understanding this User Manual

The sections of this manual generally follow the features of your phone. A robust index for features begins on page 162.

Also included is important safety information that you should know before using your phone. This information is available near the back of the guide, beginning on page 133.

This manual provides navigation instructions according to the default display settings. If you select other settings, navigation may be different.

Unless otherwise specified, all instructions in this manual assume you are starting from the Home screen and using the available keys.

Note: Instructions in this manual are based on default settings, and may vary from your phone, depending on the software version on your phone, and any changes to the phone's Settings.

Unless stated otherwise, instructions in this User Manual start with the phone unlocked, at the Home screen.

All screen images in this manual are simulated. Actual displays may vary, depending on the software version of your phone and any changes to the phone's Settings.

Special Text

Throughout this manual, you'll find text that is set apart from the rest. These are intended to point out important information, share quick methods for activating features, to define terms, and more. The definitions for these methods are as follows:

- Notes: Presents alternative options for the current feature, menu, or sub-menu.
- Tips: Provides quick or innovative methods, or useful shortcuts.
- Important: Points out important information about the current feature that could affect performance.
- Warning: Brings to your attention important information to prevent loss of data or functionality, or even prevent damage to your phone.

Text Conventions

This manual provides condensed information about how to use your phone. To make this possible, the following text conventions are used to represent often-used steps:

→ Arrows are used to represent the sequence of selecting successive options in longer, or repetitive, procedures.

LSK Left Softkey (indicates the feature is available by pressing the left softkey).

RSK Right Softkey (indicates the feature is available by

pressing the right softkey).

Example: "From the Home screen, press Menu Key (LSK) → Settings → Bluetooth → Turn Bluetooth on."

Battery Cover

The battery, SIM card and SD card are installed under the battery cover.

Important!: Before removing or replacing the battery cover, make sure the phone is switched off. To turn the phone off, hold down

To remove the battery cover:

- Hold the device firmly and locate the cover release latch.
- Place your fingernail in the opening and firmly "pop" the cover off the device (similar to a soda can).



To replace the battery cover:

- 1. Position the battery cover over the battery compartment and press down until you hear a click.
- Press down along the edges of the cover to verify it is secured.

Activating Your Phone

When you subscribe to a cellular network, you are provided with a plug-in SIM card containing subscription details, such as your PIN, available optional services, and many other service features.

SIM Card Overview

Important!: Before removing or replacing the battery cover, make sure the phone is switched off. To turn the phone off, hold down

The SIM card is loaded with your subscription details such as your telephone number, PIN, available optional services, and many other features.

Important!: The SIM card and its information can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children

Installing and Removing the SIM card

To install the SIM card:

 Confirm the battery is not currently installed within the battery compartment. The battery blocks the proper installation of the SIM card into the slot.



Carefully slide the SIM card into the SIM card socket until the card is secured into place. Make sure that the card's gold contacts face down and that the upper-left angled corner of the card is positioned as shown.

To remove the SIM card:

- If installed, remove the battery from its compartment (1 and 2). The battery will block the proper removal of the SIM card from the slot.
- 2. Carefully slide the SIM card out of the SIM card socket.

Note: If the card is not inserted correctly, the phone will not detect it and no service will be available. If this happens, turn off the phone, remove the card, and reinstall the card in the correct orientation.

Installing the microSD Memory Card

Your phone supports an optional (external) microSD[™] or microSDHC[™] memory card for storage of media such as music, pictures, video and other files. The SD card is designed for use with this mobile phone and other devices.

Note: microSD memory cards include capacities of up to 2GB.

The microSDHC™ memory card types can range from 4GB to up to 32GB.

Note: This device supports up to a 32GB microSDHC memory card.

- 1. Remove the battery cover.
- Orient the card with the gold strips facing down.



Firmly press the card into the slot and make sure that it catches with the push-click insertion.

Important!: Be sure to align the gold contact pins on the card with the phone's contacts.

Removing the microSD Memory Card

- 1. Remove the battery cover.
- Firmly press the card into the slot and release it. The card should pop partially out of the slot.
- Remove the card from the slot.


Battery

Before its initial use, install the battery and charge it fully.

Important!: Before removing or replacing the battery cover, make sure the phone is switched off. To turn the phone off, hold down

Installing the Battery

- Slide the battery into the compartment (1) so that the tabs on the end align with the slots at the bottom of the phone, making sure the connectors align.
- Gently press down to secure the battery (2).

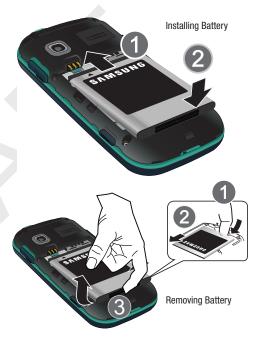

Removing the Battery

- 1. Place your finger into the battery groove (1).
- Grip the battery at the top end (2) and lift it up and out of the battery compartment (3).

Charging the Battery

Your phone is powered by a rechargeable Li-ion battery. A wall charger, which is used for charging the battery, is included with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details. Before using your phone for the first time, you must fully charge the battery. A discharged battery recharges fully in approximately 4 hours.

Note: Verify that the battery is installed prior to connecting the wall charger. If both the wall charger is connected and the battery is not installed, the handset will power cycle continuously and prevent proper operation. Failure to unplug the wall charger before you remove the battery, can cause the phone to become damaged.

Important!: Although the battery comes partially charged, it is recommended that you fully charge the battery before its initial use.

- 1. Slide open the Charger/Accessory jack cover (1).
- Insert the USB cable into the device's Charger/Accessory jack.

Plug the charger into a standard AC power outlet. The device turns on with the screen locked and indicates both its charge state and percent of charge.



Note: This illustration displays both the correct and incorrect orientation for connecting the charger. If the charger is incorrectly connected, damage to the accessory port will occur therefore voiding the phone's warranty. 4. When charging is finished, first unplug the charger's power plug from the AC wall outlet, then disconnect the charger's connector from the phone.

Important: If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty. For more information, refer to "Standard Limited Warranty" on page 153.

Low Battery Indicator

When the battery level is low and only a few minutes of talk time remain, a warning tone sounds and the "Low battery" message repeats at regular intervals on the display. In this condition, your phone conserves its remaining battery power, by dimming the backlight. When the battery level becomes too low, the phone automatically turns off.

Note: Some applications which serve the purpose of showing battery life may not display an accurate battery percentage.

Accessing the QWERTY Keyboard

Your phone has a full, slide-out QWERTY keyboard. The keyboard is located beneath the display screen and is accessed by sliding it open. This orients the phone's display to Landscape

(widescreen) mode. With the QWERTY keyboard, you can type letters, numbers, punctuation, and other special characters into both text entry fields or other applications as easily as you can on your computer.

- Rotate the phone 90 degrees counter-clockwise.
- Slide the top section of the phone up to open, as shown in the illustration. When you slide it open, the display rotates from a vertical viewing mode (Portrait) to a horizontal viewing mode (Landscape).



Switching the Phone On or Off

- or -

- Press and hold until the phone switches on.
- If prompted to enter the phone password, use the keypad to enter your password and press **Confirm** (LSK) or



If prompted to unlock the keypad, use the keypad to press Unlock (LSK) → OK (RSK).

The phone searches for your network and after finding it, the term "T-Mobile" displays on the upper left half of your screen. Now you can make or receive calls.

3. When you wish to switch off the phone, press and hold until the power-off image displays.

Dialing Options Without a SIM card installed

At this point you can only make an emergency calls with the phone but normal cell phone service is not available.

- to return to the Idle mode (Home screen).
- Enter the phone number and then press

- If you enter a non-emergency number, you are notified there is not network available.
 - or -

If you enter an emergency number, your call is passed along to emergency services.

Dialing Options With a SIM card installed

- Press and hold until the phone switches on. The phone searches for your network and after finding it, you can make or receive calls.
- Enter the phone number and then press



Setting Up Your Voice Mail

For new users, follow the instructions below to set up voice mail:

- From Home screen, press and hold 13 on the keypad. You may be prompted to enter a password.
- Follow the tutorial to create a password, a greeting, and vour name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

You can access your voice mail by either pressing and holding on the keypad or by using the phone's menu.

- When connected, follow the voice prompts from the voicemail center.

Visual Voicemail

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This new feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails.

Setting Up Your Visual Voicemail

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your voicemail and personal greeting as soon as your device is activated.

Enabling Your Visual Voicemail

From Home screen, press Menu → Messaging → Voicemail.

- Press Yes (LSK) to setup your visual voicemail for the first time.
- When connected to the online visual voicemail, select Enable Visual Voicemail and follow the onscreen prompts.

Accessing Your Visual Voicemail

From Home screen, press Menu → Messaging → Voicemail.

Section 2: Understanding Your Phone

This section outlines some key features of your phone. It also displays the screen and the icons that are displayed when the phone is in use.


Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- 2.0 Megapixel Camera with Camcorder
- 2.0 Bluetooth® Wireless Technology
- . Expandable memory up to 32GB
- MP3 Music Player
- Visual Voicemail
- · Pre-loaded games
- Picture and Text Messaging
- Web-enabled via web2go
- Horizontal slider with full QWERTY keyboard with soft keys & messaging shortcut key
- Social Networking Service (SNS)
- Assisted GPS (Telenav GPS Navigator™)

Open View of Your Phone

The following illustrations show the main elements of your phone:

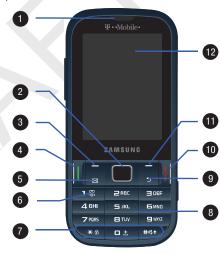

Keys

The following list correlates to the illustrations.

- Speaker allows you to hear the other caller and the different ring tones or sounds offered by your phone.
- OK key/Optical Joystick pressing down allows you to accept the choices offered when navigating through a menu. The optical joystick lets you navigate around your on-screen selections and items.
- Left Soft key allows you to select soft key actions or menu items corresponding to the bottom left line on the display screen.
- Send key allows you to make or answer a call. From Home screen, recalls the last number dialed or received when held down.
- Messaging key customizable key that can be programmed to launch your favorite application. By default, this key can be used to access your Messaging menu.

- Voice Mail key allows you to quickly access your voice mail. Press and hold this key for two seconds to automatically dial your voice mail's phone number.
- 7. Special function keys allow you activate unique features while in Home screen. In Home screen, if you press and hold #5. , you can turn on the Vibration Mode. Press and hold the 5 to enter an international prefix.

 Press and hold 6 to insert a Pause (P) to a phone number or lock the keypad.
- **8. Alphanumeric keys** allow you to enter numbers, letters, and some special characters.
- 9. Back key redisplays the previous screen or clears entries.
- 10. Power On/Off (Exit) key ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the Menu mode, it returns the phone to Home screen and then cancels your input.
- 11. Right Soft key allows you to select soft key actions or menu items corresponding to the bottom right line on the display screen. It also provides quick access to your phonebook.


12. Display shows all the information needed to operate your phone, such as the received signal strength, phone battery level, and time.

This phone also offers the convenience of a slide out QWERTY keyboard. To access the keyboard, rotate the phone 90 degrees and slide the top section of the phone up. For more information, refer to "Accessing the QWERTY Keyboard" on page 10.



Camera View of Your Phone

The following illustrations show the back of your phone:

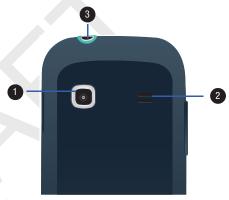

- 1. Camera lens is used to take photos.
- External speaker allows you to hear ringers, music, and other sounds offered by your phone.
- Headset jack allows you to connect a hands-free headset so you can listen to music.

Side Views of Phone

The following illustrations show the side elements of your phone:



- Volume keys allow you to adjust the Ring volume in standby mode (with the phone open) or adjust the Speaker volume during a call. When receiving an incoming call, if you press the volume key, you can mute the ring tone. If you press and hold the volume key, you can reject the call.
- microSD Card Slot (internal) lets you use a microSD card to expand the memory of your phone.
- Microphone is used during phone calls and allows other callers to hear you clearly when you are speaking to them.
 It is also used in making voice note recordings.
- Camera key lets you to take pictures when you are in camera mode.
- USB Power/Accessory connector allows you to connect a power cable or optional accessories such as a USB/data cable.

CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

Display Layout

Your phone's display screen provides a wealth of information about your phone's status and options. The display has 3 areas:



Missed Messages Tab

When you receive new messages, icons display in two locations, on the phone's screen, Missed Messages tab (shown below), and in the icon bar at the top of the screen.



Icons

This list identifies the symbols you'll see on your phone's display screen:



Shows the received signal strength. The greater the number of bars, the stronger the signal.



Displays when connected to the GPRS network.



Displays when your phone is communicating with the GPRS network.



Displays when connected to the EDGE network.



Displays when your phone is communicating with the EDGE network.



Displays that 3G data service is active.



Displays that 3G data service is now active and communicating.



Shows the level of your battery. The more bars you see, the more power remains.



Displays when a call is in progress.



Displays when the phone is not receiving a signal.



Displays when the phone is in Airplane mode.



Displays when Bluetooth wireless technology is active.



Displays when your phone is searching for external Bluetooth devices



Indicates the current call is Muted.



Indicates the current call is Unmuted.



Displays when USB communication is active.



Displays when a microSD is detected and was properly installed.



Displays when Silent Mode is active. All incoming sounds are turned off.



Displays when Vibration Mode is active. The ringer is set to vibrate only.



Displays when sound profile is set to Driving.



Displays when sound profile is set to Outdoor.



Displays when you set an alarm to ring at a specified time.



Displays in the View Tab when you missed a call.



Displays in the View Tab when you missed a message.



Displays in the View Tab when you missed a voicemail message.



Displays when a new text message is received.



Displays when a new visual voicemail is received.



Displays when a new voicemail is received.



Displays when a new picture or multimedia message is received.



Displays when the Call Forwarding feature is active. For more details, see "Call Forwarding" on page 128.

Backlight

A backlight illuminates the internal display and the keypad. When you press any key, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting within the **Backlight time** menu. The display turns off after one minute to conserve battery power.

The **On** setting is how long the keypad backlight is on. The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit.

To specify the length of time the backlight is active, access the **Backlight time** menu:

From Home screen, press Menu (LSK) → Settings →
Personalize → Display settings → Backlight time and
press Select (LSK) or

- Select the On option. Choose from 5 seconds, 15 seconds, or 30 seconds and press
- Select the Dim option. Choose from Off, 5 seconds,
 15 seconds, or 30 seconds and press
- Press Save (LSK) to retain your new settings.

Menu Navigation

Menus, sub-menus, and features are accessed by scrolling through the available on-screen menus.

There are two ways to navigate through a menu:

- Using the Volume Keys (for Up and down navigation through the onscreen list)
- Using the Optical Joystick

Scrolling through Menu Items Using the Volume Keys

- Within an active on-screen menu list, press the Volume keys Up or Down to scroll through the current list.
- Press (OK key) to select the currently highlighted onscreen item

Scrolling through Menu Items Using the Optical Joystick

The Optical Joystick acts as a dual touch-sensitive mouse and OK/Enter key. As you navigate through a menu, options are highlighted. Select any option by highlighting it and pressing (Optical Joystick).

The direction of your onscreen movements while using the Optical Joystick is determined by the current orientation of your device.

- When your QWERTY keyboard is visible, your device is placed into Landscape mode.
- When the keyboard is hidden, your device is placed into Portrait mode.



Help

Help is designed to work with the browser to show you some of the unique features of your phone. You can search help files on the fly while traveling, at home or anywhere.

- From Home screen, press Menu (LSK) → My Account.
- The browser displays general help information such as Web, Downloads, and My Account.

For more information on browser options, see "web2go" on page 69.

Section 3: Call Functions

This section describes how to make or answer a call. It also explains the features and functionality associated with making or answering a call. For more information on ringtones see "Sound profiles" on page 110. For more information, refer to "Call Forwarding" on page 128.

Making a Call

From the Home screen, enter the desired number and press

Note: When you activate the Auto redial option (within the Call settings menu), the phone automatically redials up to 10 times when the recipient does not answer your call or is already on the phone, provided your call is not sent to voicemail. For more information, see "Auto redial" on page 127.

Making an International Call

- From the Home screen, press and hold the + character displays on-screen to indicate an international prefix.
- 2. Enter the country code, area code, and phone number.
- Press to make the call.

Correcting the Number

- Press to clear the last digit displayed.
 - To clear any other digit in the number, scroll across the optical joystick Left or Right until the cursor is immediately to the right of the digit to clear and then press
 You can also enter a missing digit.
- 2. Press and hold 5 to clear the entire display.

Ending a Call

When you want to finish your call, briefly press



Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the caller is identified.

To recall any previously dialed numbers:

- If you entered characters on the display, press
 return to Home screen
- Press to display the Call history screen (calls are displayed in the order you dialed or received them).

- 3. Use the optical joystick to scroll through the numbers and highlight the number you want. With the entry highlighted from the Call history screen press **Options** (LSK) to display the following options:
 - Call: Places a call back to the number.
 - Send message: Allows you to send a Message.
 - Save to contacts: Allows you to save the selected phone number to the Contacts list.
 - **Delete**: Allows you to delete the selected number or all call records.
 - View contact details: Allows you to view the details of a call log entry that is already in your current Contacts list.
- 4. To view details of the highlighted number, press View (). Before you dial the number, you may also press Options (LSK) to display the following options:
 - Send message: Allows you to send a Message.
 - Save to contacts: Allows you to save the selected phone number to the Contacts list.
 - **Delete**: Allows you to delete the selected number or all call records.
 - View contact details: Allows you to view the details of a call log entry that is already in your current Contacts list.
- Press to dial the number.

Making a Call from the Phonebook

You can store regularly used phone numbers into the phone's memory or onto your SIM card. These entries are collectively called the Phonebook.

Once you have stored a number in Contacts, you can dial it by pressing only a few keys. You can also assign your most frequently-used numbers to number keys using the Speed Dial feature.

Adjusting the Call Volume

During a call, use the Volume keys on the left side of the phone, to adjust the speaker volume.

Press the Up volume key to increase the volume level and Down volume key to decrease the level.

Tip: From Home screen, you can also adjust the ring volume using these keys.

Answering a Call

When somebody calls you, the phone rings and displays the incoming call image. The caller's phone number, or name if stored in Contacts, is then displayed.

- Press or Accept (LSK) to answer the incoming call.
 - If the Any Key answer option is enabled within the Answer options
 menu (Menu → Settings → Call settings → Answering mode)
 you can press any key to answer a call except
 and
 Reject (RSK).

Note: To reject an incoming call, press Reject (RSK) or _______. This send the caller to your voicemail.

2. Press to end the call.

Note: You can answer a call while using the Contacts or menu features. After ending the call, the phone returns to the function screen you were previously using.

Call history

All missed, dialed and answered calls are listed in the Call history screen. This list of your call history is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

From Home screen, press Menu (LSK) → Call history.

Note: While on the Home screen, press then scroll left or right between the following Call history tabs: All calls, Missed calls, Dialed calls, Answered calls, and Voicemail.

All calls

This menu lets you view the 90 most recent calls you received, dialed, missed, or voicemail. The name or number, if already stored in your Contacts, displays with the number of occurrences for each number.

When you view the numbers in this list, the phone icon to the left of the number indicates the call type:

- Answered: Indicates any received calls that were answered.
- Missed: Indicates any missed calls.
- Dialed: Indicates all outgoing calls made from your phone.



Answered Call: Indicates any received calls that were answered.



Missed Call: Indicates any missed calls. These are routed to your voicemail.



Dialed Call: Indicates all outgoing calls made from your device.



Voicemail: Indicates any received calls that were not answered and sent directly to your voicemail.

Note: At any time while you are in Call history, you may use the optical joystick to scroll left or right between All calls, Missed calls, Dialed calls, Answered calls, and Voice mail.

Note: Recent Calls records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in the phone's call history. If you return a call from the voicemail menu, it will not be included in your phone's history.

Missed calls

This menu lets you view the 30 most recent calls you received, but did not answer. The name and number, if already stored in your Contacts, displays with the number of occurrences for each number.

When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.

The number of missed calls displays on the Home screen on the Missed Call/Messages tab, immediately after a call is missed.

To view a missed call immediately:

- If the display is off, press the Volume key to activate the display.
- Press View (LSK) or press . The number corresponding to the most recently missed call is displayed, if available. If only one missed call has occurred, the LSK reads Call.
 - or -

Use the optical joystick to scroll through the missed calls.

- Press to call the displayed number.
 - or -

Press View () to display the call details.

- 4. Press **Options** (LSK) to access the following options:
 - Call: Places a call back to the number.
 - Send message: Allows you to send a Message.
 - Save to contacts: Allows you to save the selected phone number to the Contacts list.
 - Delete: Allows you to delete the selected number or delete all call records.
 - View contact details: Allows you to view the details of a call log entry that is already in your current Contacts list.

Tip: You can press at any time to exit the Missed calls feature.

Dialed calls

This menu lets you view the most recent calls you dialed. The name and number, if already stored to Contacts, displays with the number of occurrences for each number.

Answered calls

This menu lets you view the 30 most recent calls you received. The name and number, time and date, displays with the number of occurrences for each number.

Voicemail

This menu lets you view the 30 most recent voicemail calls you received.

Delete all Call history entries

This menu allows you to delete all of the records in each call record separately, or you can delete all of your call records at one time.

- From the Home screen, press to display Call history.
- 2. Press Options (LSK) → Delete → All.
- 3. Press Yes (LSK) to delete all files.

Vibration Profile

The Vibration audio profile is convenient when you wish to stop the phone from making any noise, in a theater for example.

From Home screen, press and hold #st until the "Vibration profile on" message and () displays. In this Vibration profile, instead of sounds, your phone vibrates. For more information, refer to "Sound profiles" on page 110.

To exit and reactivate the previous sound settings, press and hold again until the "Normal profile on" message displays.

The Vibration profile icon () no longer displays.


Selecting Functions and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

Soft Keys

The roles of the soft keys vary depending on the function you are currently using. The labels on the bottom line of the display just above each key indicate their current role.

The two available keys are Left Softkey (LSK) and Right Softkey (RSK).

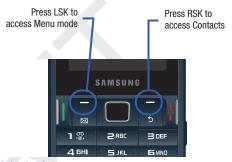

Selecting Options

To view the various functions and options available, you must press an available softkey and select an option by:

- 1. Press the appropriate soft key.
- Press Select (LSK) to select the function or the highlighted option.
 - or -

Press the **Back** (RSK) to move back up one level in the menu structure

- Press the Up or Down Volume keys to view the next function or highlight the next option on a list.
 - or -

Use the optical joystick to move back to the previous function or option on a list.

- **4.** Press to exit the menu structure without changing the settings.
- In some functions, you may be asked for a password or PIN. Enter the correct code and press the **Confirm** (LSK) or

When you access a list of options, your phone highlights the currently active option. If there are only two options, such as **On/ Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so you can select it.

In Call Options

Your phone provides a number of features that are available for use during a call.

Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to a person in the room but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

Press Mute ()

The other person can no longer hear you. The Mute icon () at the left of the screen.

To switch the microphone back on:

Press Unmute (). The other person can hear you again. The Unmute icon () displays atop the current call information.

Placing a Call on Hold

You can place the current call on hold whenever you want. If your network supports this service, you can also make another call while a call is in progress.

To place a call on hold:

- Press Options (LSK) → Hold.
- Press Resume (RSK) to reactivate the call whenever you want.

To make a new call while you have a call in progress:

- While in a call, press Options (LSK) → New Call to dial the second call. The first call is automatically placed on hold.
 - or -

Press the **Options** (LSK) → **Hold**. This places the currently active call on hold and allows you to make a new call.

- Enter the new phone number that you wish to dial or look it up in the Contact list.
- 3. Make the second call in the normal way.

When you have both an active call and a call on hold, you may switch between the two calls by placing the current held call to active and then placing the other on hold.

To switch between the two calls:

- Press the Options (LSK) → Swap. The current active call is placed on hold and the call on hold is reactivated so you can continue talking.
- 2. Press to finish and end each call normally.

Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

- 1. Press Spkr on (RSK).
- 2. Press Spkr off (RSK) to turn the Speakerphone off.

Important!: For safety information related to speakerphone use, see "Responsible Listening" on page 146.

Searching for a Number in Contacts

You can search for a number in Contacts during a call.

During an active call, press Options (LSK) → Contacts.

- With the Contacts entries displayed, enter the name to locate in the field above the entries. If you enter the first few letters of the name, the Contact entries list starting with the first entry matching your input.
 - or -

Use the optical joystick to highlight a contact.

Press View (LSK) to display contact information for the highlighted entry.

For further details about the Contact feature, see "Finding a Contact Entry" on page 62.

Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you must have previously set the Call waiting option to **Activate**. For more information, refer to "Call Waiting" on page 129.

You are notified of an incoming call by a call waiting tone.

To answer a new call while you have a call in progress:

- Press either Accept (LSK) or _____ to answer the incoming call. The first call is automatically placed on hold.
- Press Options (LSK) → Swap to switch between the two calls.
- Press Options (LSK) → End → Held call option to end a call on hold (Active call. Held call. or All calls).
- 4. Press to end the current or remaining call.

Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact T-Mobile customer service.

Setting up a Multi-Party Call

Note: A maximum of two callers can be joined to a single multi-party line. You cannot create two multi-party calls.

To set up a multi-party call:

- From the Home screen, enter the desired number and press
- Wait for the caller to answer, then press Options (LSK) and select New call to place the current caller on hold and dial the second call
- 3. Enter the new phone number and press Call (LSK).
- 4. Wait for the second caller to answer the incoming call and then press Options (LSK) and select Join. The two calls are now joined into a multi-party call and display in the order in which they were called.

Importantl: A maximum of two callers can be joined to a single multi-party line at a time. Additional callers will participate in a new Multiparty session and held in conjunction with the previous multiparty call. You can swap or place each multi-party call on hold.

Note: These first two calls are then grouped together on screen and displayed in the order in which the calls were made.

Having a Private Conversation With One Participant

When you have two participants in a multi-party session, you might be necessary to place one of those participants on hold so that a private conversation can be held with a single caller. While you are in a multi-party call:

To split Callers Within a Multi-Party Line:

When you have two participants in a multi-party session, it might be necessary to place one of those participants on hold so that a private conversation can be held with a single caller. While you are in a multi-party call:

- From within the active multi-party call, press Options (LSK) and select Split.
- Select the participant you would like to split from the
 current multi-party call. The list displays the callers in the
 order they were dialed. You can now talk privately to that
 person while the other participants can continue to
 converse with each other. If there is only one other
 participant, that person is placed on hold.
- To return to the multi-party call, press Options (LSK) and select Join. All of the multi-party call participants can now hear each other.

Dropping One Participant

While in a multi-party call, press Options (LSK) → End →
Select participant.

Highlight the desired participant to drop and press to place a checkmark alongside their entry.



- 3. Press Drop (LSK) to drop the participant.
- 4. Press to end the multi-party call.

Section 4: Menu Navigation

This section explains the menu navigation for your phone.

Menu Navigation

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Optical joystick or by using shortcuts.

Menu Design

The main menu displays as a Grid menu with three rows and three columns.



Accessing a Menu Function by Scrolling

- 1. In Home screen, press Menu (LSK).
- Use the optical joystick to highlight a Main menu (for example: Settings). To activate an onscreen option, press either Select (LSK) or
- If the menu contains sub-menus, (for example: Personalize). Press either Select (LSK) or to enter the menu. If the menu you selected contains further options, repeat this step.
- Scroll through the menus and press either Select (LSK) or to confirm the chosen setting.
- 5. Press **Back** (RSK) or to return to the previous menu level.
- Press to exit the menu without changing the settings.

Using Shortcuts

The menu items, such as sub-menus, and options, are numbered and can be accessed quickly by using their shortcut numbers. Within the main menu's Grid view, you can access any one of menus or sub-menus by pressing the number keys (1 to 0) corresponding to their location on the screen.

Example: Accessing the Security menu.

- 1. In Home screen, press Menu (LSK).
- 2. Press 7 PORS Settings.
- Press 1 \$\mathbb{3}\$. Personalize.
- 4. Press Phone settings.
- 5. Press 4 GHI Security.

Section 5: Entering Text

This section outlines how to select the desired text input mode when entering characters. This section also describes how to use the T9 predictive text system to reduce the number of key strokes associated with entering text.

Using the QWERTY Keyboard

The following keys perform special functions when entering text:



Using the QWERTY keyboard, you can type letters, numbers, punctuation, and other special characters into text entry fields or other applications simpler and faster than using the telephone keypad.

The QWERTY Navigation keys can be used to both navigate around an on-screen menu and make selections as easily as they can be done using the optical joystick.

- Alt key allows you to use the alternate characters displayed at the top of the QWERTY keys.
 Examples are: \$, #, &, 1, etc..
- Messaging key allows you to program this key as a shortcut to your favorite messaging application. You can reprogram the key at any time.
- web2go key launches the built-in browser and takes you to your homepage.
- 4. Social Buzz key launches social networking applications (Twitter, Facebook, or MySpace), where you can automatically view updates of these applications. For more information, refer to "Social Buzz" on page 55.

- Shift key converts the alphabetic character into uppercase.Changes the text input mode to Upper/Lower case mode.
- Sym key allows you to enter symbols, such as punctuation marks.
- Left Softkey (LSK) allows you to select soft key actions or menu items corresponding to the bottom left line on the display screen. In Idle mode, the Left softkey also provides quick access to the Menu.
- 8. Space key inserts an empty space.
- Right Softkey (RSK) allows you to select soft key actions or menu items corresponding to the bottom right line on the display screen. In Idle mode the right softkey also provides quick access to Contacts.
- 10. Navigation key scrolls through the phone's menu options and acts as a shortcut key from Idle mode. In Idle mode:
 - Up key: allows you to directly access the Media shortcut. This can be changed to launch other applications such as: Media, Photos, Camera, Camcorder, or Music Player)
 - **Down key**: allows you to directly access the Web shortcut. This can be changed to launch either the web2go or bookmarks.

- Left key: allows you to directly access the Messaging shortcut screen. This can be changed to launch social applications such as: Create message, Conversations, Voicemail, Email, Exchange email, Socail Buzz, or IM.
- Right key: allows you to directly access the Social shortcut. This
 can be changed to launch social applications such as: Social Buzz,
 Facebook, Twitter, My Space, My Stream, Upload pic, or Facebook
 chat.
- Emoticons key provides access to available emoticons that can be inserted into text fields.
- **12. Enter key** moves the insertion point to the next line in a message, similar to a carriage return.
- Back key redisplays the previous screen or clears text field entries.

The keyboard provides dual-use keys labeled with alphabetic characters on the lower half and numbers and symbols on the upper half. Press the key corresponding to the character you want to enter.

Changing the Text Input Mode

When using your phone, you often need to enter text, such as when storing a name in Contacts, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes accessible via the right softkey (RSK) on the keypad:

- ABC mode: this mode allows you to enter letters by pressing the key labeled with the letter you want.
- **T9 (English)**: this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing a Gamerian of the can enter G, H, or I. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional ABC mode.
- Numeric: this mode allows you to enter numbers.
- Symbol: this mode allows you to enter symbols, such as punctuation marks

When you are in a field that allows characters to be entered, the text input mode indicator displays on the bottom right of the screen.

Example: Writing a text message.



- 1. Press (RSK) to change the text input mode.
 - Scroll to the mode you prefer and press Select (LSK) or . The text input mode indicator displays the new selection in the lower right corner of your display. The following options are available:
 - ABC
 - T9 (English)

- Numeric
- Symbol
- When the Text input mode indicator displays your selected mode, enter text within the text message.

Using T9 Mode

T9 is a predictive text input mode that allows you to enter any character using single keystrokes. This text input mode is based on a built-in dictionary.

Entering a word in T9 mode

 While in T9 mode (T9 Eng), enter a word by pressing the 2 to 9 keys. Press each key only once for each letter.

Note: Pressing the 1 key enters additional characters.

Example: To enter "Hello" in T9 mode, press the 4, 3, 5, 5, and 6 keys.

The word that you type displays on the screen and may change with each consecutive key press due to the internal linguistic dictionary.

2. Enter the whole word before editing or deleting the keystrokes.

3. When the word correctly displays, go to step 4.

If the word doesn't display correctly, press to display alternative letter choices for the current key you pressed.

Example: Both the words "Of" and "Me" use the 6 and 3 keys. The phone displays the most commonly used choice first.

4. Press to accept the currently displayed word, insert a space, and start entering the next word.

Deleting characters in T9 mode

Press once to delete a previous character.

Press and hold

d to clear the display.

Adding a new word into the T9 dictionary

- After pressing the keys corresponding to the word you want to add, press to display alternative words.
 If the last alternative word is not recognized by the dictionary, the screen displays Spell on the bottom left line.
- 2. Press Spell (LSK).
- Enter the word you want to add using ABC mode. For more information, refer to "Changing the Text Input Mode" on page 37.
- Press Add (LSK) or after you finish entering the new word.

The word is added to the T9 dictionary and becomes a word for the associated keypress series.

Note: This feature may not be available for some languages. The 1 key has some emoticons associated with it. To enter other special characters within the T9 mode, press and hold to cycle through these characters.

Entering additional T9 characters

To enter periods, hyphens, apostrophes, and other special characters:

Press → ★ a to cycle through these available characters (see "Keys" on page 41.) T9 mode applies grammar rules to ensure that correct punctuation is used.

To shift case in T9 mode:

- Press #5. There are 3 cases: Initial capital (Abc), Capital lock (ABC), and Lower case (abc). The case displays in the upper, right corner of the screen.
- Enter the next character using the new case. You can move the cursor by using the Navigation keys.

To delete letters:

- Press once to delete a previous character.
 - or –

Press and hold 5 to clear the display.

Using ABC Mode

To enter text in ABC mode:

- Press (RSK) to change the text input mode.
- Scroll to the ABC mode and press Select (LSK) or Use the 2 to 9 keys to enter your text.
- Press the key labeled with the letter you want. Once for the first letter, twice for the second letter, and so on.

To enter periods, hyphens, apostrophes, and other special characters:

Repeatedly press to cycle through periods, hyphens, apostrophes, and other special characters. ABC mode applies grammar rules to ensure correct punctuation.

To shift case in ABC mode:

Press to shift case in ABC mode. There are 3 cases: Initial capital (Abc), Capital lock (ABC), and Lower case (abc). The case displays in the upper, right corner of the screen. You can move the cursor by using the Navigation keys.

To delete letters:

- Press once to delete a previous character.
 - or —



Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Keys

By default, the first letter of an entry is capitalized and all consecutive letters are kept in lowercase (unless the Shift key is used). After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key. In ABC mode, characters scroll in the following order (lowercase characters shown in parentheses):

D O D C 7 (p a r c 7)

1.0,	. @ , : ? -! / 1	PURS	Puns/(purs/)
2 ABC	A B C 2 (a b c 2)	8 TUV	T U V 8 (t u v 8)
∃DEF	D E F 3 (d e f 3)	9 wxyz	W X Y Z 9 (w x y z 9)
4 6HI	G H I 4 (g h i 4)	o ±	0 (press and hold) (Adds a space)
5 JKL	J K L 5 (j k l 5)	* @	Symbol (press and hold)
E MN0	M N O 6 (m n o 6)	# \$ +	Shift (Toggles Lower/Uppercase)

Using the Numeric Mode

The Numeric mode enables you to enter numbers into a text message.

To enter text in Numeric mode:

- 1. Press (RSK) to change the text input mode.
- Scroll to the Numeric mode and press Select (LSK) or . Use the 2 to 9 keys to enter your text.
- Press the keys corresponding to the digits you want to enter.

Using Symbol Mode

Symbol mode enables you to insert symbols and punctuation marks into text. To display a list of symbols press and hold

To enter text in Symbol mode:

- 1. Press (RSK) to change the text input mode.
- Use the Navigation key to select an onscreen symbol set and press the corresponding number key.

- Press **OK** (LSK). The new symbol is inserted into your message. Each onscreen symbol set offers different symbols for each key.
- To clear the symbol(s), pressWhen the input field is empty, this key returns the display to the previous mode.

Section 6: Messaging

This section describes how to send or receive different types of messages. It also explains the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- Email Messages
- Text Messages
- Picture Messages
- Voicemail

Display Icons for Messages

When your handset receives new messages, icons display on the screen in two locations: on the View Tab that displays on the lower portion of the screen, and on the top of the screen. The following table outlines the lcons that appear within the lcon area and View Tabs:

Icon area:



A new text message was received.



A new voice message was received.



A new Picture or Video message was received.

View Tab area:



A call was missed.



A new message was missed.



A new voicemail message was missed.

View Tab

The View Tab is an area that displays on the screen when a missed call, message, or voicemail is sent to the phone.

The three View tabs that display icons are:

- New messages
- Missed calls
- New Voice mail messages



You can search through missed calls or unviewed messages by using the optical joystick (or **Right** and **Left** navigation keys) to

select the associated message tab, then pressing the associated left softkey (View, Call, or Dial).

Text Messages

Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones.

The Message icon () displays in the icon area when you have received a new text message. When the memory is full, the message icon flashes on your phone and you cannot receive any new messages. You must delete a message before you can receive additional messages. This type of message must first be retrieved from T-Mobile's before it can be viewed.

► Use the Options (LSK) → Delete function in each message box to erase obsolete messages.

Creating a Simple Text Message

- From Home screen, press Menu (LSK) → Messaging → Create message.
- 2. Highlight the **To** field and enter a phone number.
 - or –

Highlight the **To** field and press **Add** () to add a recipient and choose from one of the following:

- Recent recipients: allows you to select from recipients of your previous messages.
- Contacts: allows you to enter the phone number you want from Contacts.
- Groups: allows you to select a group.
 - Highlight an option and press **Select** (LSK) or



Highlight and entry and press Add (LSK) or to plant to plant checkmark alonoside it.

- Press **Done** (LSK) to complete the selection.

- or -

Press the **Options** (LSK) and select one of the following:

- Add recipients: allows you to add Recent recipients, Contacts, or a Group.
- View recipients: allows you to view and add a recipient from the Recipient list.
- Exit composer: exits the composer and displays the Create new screen.

Note: Your recipient must reside in Contacts before you can add the recipient to this message.

3. Highlight the text field and create your message.

Note: For further details about entering characters, see "Changing the Text Input Mode" on page 37.

- 4. Highlight the recipient area, and press Options (LSK) when you finish entering your message. The following options are available:
 - Add recipients: allows you to add Recent recipients, Contacts, or a Group.
 - Send: allows you to deliver the current message.
 - View recipients: displays a list of the current message recipients.
 - Save to: saves this message to either the Drafts or Templates folder.
 - Exit composer: exits the composer and displays the Create new screen.
- Press the Options (LSK) and select Send () to send the current message.

Picture Messages

This menu allows you to use the Multimedia Message Service (MMS) to create a Picture messages.

Picture Messaging is a messaging service that provides delivery of personal picture messages from phone to phone or from phone to email. The Picture messaging icon () displays in the icon area when you have received a new text message.

In addition to the familiar text content available via traditional text messages, picture messages can contain images, graphics, voice, and audio clips.

A Picture Messaging message is a multimedia presentation contained in a single file. It is not a text file with attachments.

Using the Picture Messaging feature, your phone can receive and send messages that contain multimedia files, such as photos, sounds and images that you downloaded from the Internet and voice notes you recorded. This function is available only if it is supported by your service provider. Only phones that offer picture messaging features can receive and display picture messages.

Creating and Sending a Picture Message

- From Home screen, press Menu (LSK) → Messaging → Create message.
- 2. Highlight the **To** field and enter a phone number.
 - or —
- Highlight the To field and press Add () to add a recipient and choose from one of the following:
 - Recent recipients: allows you to select from recipients of your previous messages.
 - Contacts: allows you to enter the phone number you want from Contacts.
 - Groups: allows you to select a group.
 - or –

Press the **Options** soft key and select one of the following:

- Add recipients: allows you to add Recent recipients, Contacts, or a Group.
- View recipients: allows you to view and add a recipient from the Recipient list.
- Exit composer: exits the composer and displays the Create new screen.

Note: Your recipient must reside in Contacts before you can add the recipient to this message.

4. Highlight the text field and create your message.

Note: For more information about entering characters, see "Using ABC Mode" on page 40. You can enter up to 2000 standard Alphabet characters per page in your message. The message can be up to 20 pages in length.

- Scroll down to the attachment options, highlight an option, and pressThe following options are available:
 - Add photo: allows you to add a photo by either taking a new picture or adding an existing photo.
 - Take photo: activate the camera so you can take a picture and attach it to this message.
 - Add from photos: attach a photo from the Photos folder.
 - Add video: allows you to add a video by either recording a new video or adding an existing video.
 - Record video: record a video to attach to this message.
 - Add from video: attach a video file from the Videos folder.
 - Add sound: allows you to add a sound by either recording a new audio message or adding an existing audio file.
 - Record sound: record a voice note to attach to this message.
 - Add from sounds: attach a sound file or voice list from the Sounds folder

 Add others: allows you to add an attachment such as: a Files, Name card, Appointment, Anniversary event, Private, Holiday, Important, Tasks, Memo, or Bookmarks.

When an attachment is detected, the message is changed into a picture message.

- 6. After adding the attachment, press **Options** to set options for this message:
 - Preview: allows you to view the message prior to sending.
 - Jump to recipient field: allows you to add Recent recipients, Contacts, Groups. or send this message to the Online Album.
 - Jump to attachment bar: allows you to choose from one of the available attachment options.
 - Insert text: allows you to insert a Text templates, Text emoticon, Contacts, or Bookmarks. The Text templates allow you to apply one of the preset message templates to the text. Select one of the 10 items stored in the Text templates menu. Contact allows you to add names and phone numbers to your message. Bookmarks allows you to add Internet addresses to your message.
 - More: allows you to Add page, Add subject, Edit style, Sending options, or Select a language (Français, or Español) for this message.
 - Exit composer: exits the composer and displays the Create new screen.
- 7. Press Send () to send the current picture message.

Message Inbox

The Message inbox stores received messages. You can tell what kind of message it is by the icon displayed. If the open envelope icon displays then the message was read, otherwise the closed envelope icon displays. The following types of messages may display in your Message inbox:

- Text messages
- Picture or Video messages

When you enter the Message inbox, the list of messages displays with the sender's phone numbers, or names, if available in your Contacts. After you read the message, the open envelope icon displays.

Note: Press the Left or Right Navigation keys or scroll across the optical joystick to move between Conversations, Drafts, Templates (Text and Picture message templates), and My folders.

From Home screen, press Menu (LSK) → Messaging → Conversations.

Message Threads

Sent and received text/picture messages are grouped into message threads. Threaded messages allow you to see all the messages exchanged between parties and displays a contact on the screen. Message threads are listed in the order in which they were received, with the latest message displayed at the top.

To reply to a text message:

- From Home screen, press Menu (LSK) → Messaging → Conversations.
- Select a text message from the list and press View (to view the contents.



Scroll down to the Reply field and compose your reply. Your texts appear within a light Blue box and your caller's reply's appear within a white box.

Note: Your text chatter is displayed on-screen as a "bubble". Your recipients' replies are described as a reply bubble.

4. Press **Send** () to send the current picture message.

Viewing a Text Message

- From Home screen, press Menu (LSK) → Messaging → Conversations
- Select a text message from the list and press View (to view the contents.



- or -

From the message list, press **Options** (LSK) and select one of the following:

- Create message: allows you to create a new message.
- Call: Places a call back to the number.
- Delete: deletes the selected text message, multiple messages, or all messages.
- Save to contacts: saves the selected contact information to Contacts.

Note: The Save to Contacts feature displays only if the contact information is not already saved to Contacts.

- Sort by: allows you to sort messages by Date, Sender, or Frequency.
- Search: allows you to search through your current text message conversations for keywords.

- Scroll down to the **Reply** field and compose your reply message.
 - or –

Select a message bubble and press **Options** (LSK) while reading a text message to display the following:

- Full Composer: launches the full text composer screen.
- Attach: allows you to attach a file from your available Media folder (Photos, Images, Music, Sounds, Videos, or Other files).
- View Recipient list: allows you to view and add a recipient from the Recipient list.
- Call: places a call back to the number.
- Delete: allows you to delete bubbles from the current message such as: Selected, Multiple, or All.
- Forward: allows you to forward the message to another number.
- Lock/Unlock: allows you to lock or unlock the message.
- Save to: saves the selected message to either your Drafts or Templates folder.
 - When you save a highlighted message bubble as a text message template it can later be used as a stock reply to recipient messages.
- Exit conversation: exits from the current message conversation (thread).

Viewing a Picture Message

- From Home screen, press Menu (LSK) → Messaging → Conversations.
- Highlight a message from the list and press View (to view the contents.
- Highlight the message bubble containing the grey multimedia icon and press Play/Pause () to play or pause the multimedia message. Press Stop (LSK) to stop the playback.
 - or -

After viewing the media (**Stop** [LSK]), press **Options** (LSK) to display the following:

- Reply: allows you to reply to the current sender.
- Call sender: allows you to call back the current sender.
- Forward: allows you to forward the message to another number.
- Replay: allows you to replay the current media attachment.
- Save to contacts: allows you to save the current senders' contact information into your Contacts list as a new entry.
- **Delete**: allows you to delete the current media file.
- Save media: saves the selected attachment to either your Phone or Memory card.

- Lock/Unlock: allows you to lock or unlock the attachment.
- Save to templates: saves the selected attachment to your T
- More: provides additional options suhc as: Move to my folder, Print via Bluetooth, and Properties

Viewing a Picture Message When You Receive It

When a new picture message comes in, the icon area displays the Picture Messaging Message icon ().

Note: The message can also be displayed as a missed Picture message.

- 1. Press View () to view the picture message.
 - or -

Press **Exit** (RSK) if you want to view the message later in the Message inbox.

– or –

Press **Options** (LSK) to access the various options previously described.

2. Press when you are finished.

Drafts

This message box stores messages you may want to edit or send at a later time. When you enter this menu, the list of draft messages is displayed.

From Home screen, press Menu (LSK) → Messaging →
 Drafts

Note: Press the Left or Right Navigation keys or scroll across the optical joystick to move between Conversations, Drafts, Templates (Text and Picture message templates), and My folders.

- Highlight a message from the Drafts list and press Options (LSK) to select from the following options:
 - Send: allows you to send the draft message.
 - Preview: allows you to preview the multimedia contents of an MMS message.
 - **Delete**: deletes the Selected, Multiple, or All messages.
 - Lock/Unlock: locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
 - More:
 - Move to my folder: the draft message to a personal folder.
 - Sort by: allows you to sort the messages stored in this folder by Date, Recipient, Type, Subject, Size, or Lock/Unlock.
 - Properties: shows you information about the draft message.

- or -

Press **Edit** () and alter the message contents.

- 3. Press Send () to send the message.
- 4. Press to return to the Home screen.

Tip: While viewing a draft message, press **Options** to choose different options. Options depend on the type of message.

Templates

Besides entering message text using the keypad keys, you can speed message composition by including copies of stored text and/or image templates in your message.

► From Home screen, press Menu (LSK) → Messaging → Templates.

The following options are available:

- Text templates
- Picture Message templates

Sending a Text Message Template

- From Home screen, press Menu (LSK) → Messaging → Templates → Text templates.
- Select a template from the Templates list and press Send () to send the message.
- 3. Press Add () and select from one of the following:
 - Recent recipients: allows you to select a number or an address from the last 10 destinations you entered.
 - Contacts: allows you to enter the phone number you want from Contacts.
 - **Groups**: allows you to send this message to a group.
- Select the text message field to alter the template if desired.
- 5. Press Send () when you are finished.

Creating a new Picture Message Template

- From Home screen, press Menu (LSK) → Messaging →
 Templates → Picture message templates.
- 2. Press Create (LSK) to create a new template.
- 3. Highlight the Subject field and enter your text.
- 4. Highlight the text field and create your message.

- Scroll down (or press the **Down** Navigation key), then select one of the following:
 - Add photo: allows you to add a photo by either taking a new picture or adding an existing photo.
 - Take photo: activate the camera so you can take a picture and attach it to this message.
 - Add from photos: attach a photo from the Photos folder.
 - Add video: allows you to add a video by either recording a new video or adding an existing video.
 - Record video: record a video to attach to this message.
 - Add from video: attach a video file from the Videos folder.
 - Add sound: allows you to add a sound by either recording a new audio message or adding an existing audio file.
 - **Record sound**: record a voice note to attach to this message.
 - Add from sounds: attach a sound file or voice list from the Sounds folder.
 - Add others: allows you to add an attachment such as: a Files, Name card, Appointment, Anniversary event, Private, Holiday, Important, Tasks, Memo, or Bookmarks.
- Press Save () to store the new picture message template.

Sending a Picture Message Template

From Home screen, press Menu (LSK) → Messaging →

Templates → Picture message templates.

- Highlight a template from the Picture message templates list and press Options (LSK) → Send.
- From the Create screen, highlight the To field, press
 Options (LSK) and select one of the following options:
 - Add recipients: allows you to add receipients for the new template.
 Choose from: Recent recipients, Contacts, Groups, and Online album.
 - **Preview**: allows you to view the message prior to sending.
 - Save to: save the current message to either the drafts or picture message templates list.
 - Exit composer: exits the composer and displays the Create new screen.
- Select the text message field to alter the template if desired
- Press Send () when you are finished. The template message is sent to the selected recipient(s).

My folders

Use My folders to manage and organize your messages and store them on your phone.

From Home screen, press Menu (LSK) → Messaging → My folders.

Creating a new folder

- Press Create (LSK).
- 2. Enter the title of the folder and press the **OK** (LSK)



The newly created folder displays on the My folders screen.

Voicemail

This menu helps you access your voice mailbox, if provided by your network. You can also setup Voicemail from this menu.

- From Home screen, press Menu (LSK) → Messaging → Voicemail.
- At the prompt, press Yes (LSK), if you want to set up your Voicemail, or No (RSK) to reject VVM.
- 3. Select Voicemail again from the Messaging menu.
- 4. Press Options (LSK) to access the following application options:
 - Voicemail settings: allows you to record a greeting, change your PIN, or activate the voicemail feature.
 - Call voicemail: dials the voice mailbox.
 - Sync now: synchronizes with the voicemail inbox and displays recent voicemail messages.

- or -

Highlight a listed voicemail message and press **Options** (LSK) to access the following voicemail message options:

- Reply: allows you to call or send message to sender.
- **Delete**: deletes the selected or multiple voicemail messages.
- Forward via: allows you to forward via Message or Email.
- Save in contacts: allows you to save number to Contacts.
- Copy to: allows you to copy voice sound to Phone or Memory card.
- Sort by: allows you to sort the voicemail inbox by Date, Sender, Played, or Duration
- Voicemail settings: allows you to record a greeting, change your PIN, or activate the voicemail feature.
- Call voicemail: dials the voice mailbox.
- Sync now: synchronizes with the voicemail inbox and displays recent voicemail messages.

Voicemail settings

 From Home screen, press Menu (LSK) → Messaging → Voicemail

Important!: You must have previously activated your account to use this feature.

- 2. Press Options (LSK) → Voicemail settings.
- 3. Select Record greeting, Change PIN, or Deactivate now.

Email

From Home screen, press Menu (LSK) → Messaging → E-mail to view received email messages.

The first time you select Email, a Welcome message displays. Follow the onscreen prompts.

Note: Confirm your email settings if you experience any issues with sending or receiving email.

Exchange Email

Use the following procedure to configure your phone to synchronize with a corporate email account. Before you begin synchronizing, record the server and URL address of the Exchange server, your Exchange account user name, and your Exchange account password. You also need to know the domain name for the Exchange server, and whether to use SSL encryption.

- From Idle mode, press Menu (LSK) → Messaging → Exchange email. The Exchange email Tutorial screen displays.
- Press Next to continue the tutorial, or Manual (LSK) to begin setting up the account.

Note: Data charges can apply to usage of email services.

3. Enter the appropriate information on the Server settings screen and press **Save** (LSK) to save your configuration.

Social Buzz

When you first open this application the Status screen displays. After login to your social networking applications (Facebook, Myspace, or Twitter), status updates display automatically in the top box for any of your friends for each of these applications. Your My Facebook status displays your status automatically as you post. You can view a stream of updates from friends, as well as your inbox or wall.

- From Home screen, press Menu (LSK) → Messaging → Social Buzz.
- 2. Read the onscreen disclaimer and press Continue (LSK).
- Read the onscreen End User License Agreement (EULA) and press Accept (LSK).

Note: The screen defaults to a Facebook login screen.

- Scroll left or right to select a desired social networking icon (top of screen) such as Facebook, My Stream, Twitter, or MySpace, then log in to the application.
- Sign in to the selected social networking service.
- Press More (RSK) once you are signed in to refresh the screen, change settings, minimize the screen, exit, or view help.
- 7. Press twice to exit the application.

- or -

Press → Yes (LSK) when "Do you want to exit?" displays to exit this application.

Instant Messaging (IM)

Instant Messaging is a way of sending short, simple messages that are delivered real time to users online.

Before using this feature, you need to subscribe to a messenger service. Your handset has two pre-loaded Messaging services (Windows Live Messenger, and Yahoo!). This message box stores messages that you may want to edit

- 1. From Home screen, press Menu (LSK) → Messaging → IM.
- 2. Select an account, and press Select (LSK) or



- **3.** Enter a user ID and password information.
- Press to place a check mark next to Save my password, Automatic sign-in, or Sign In as invisible.
- 5. Highlight **Sign in** and press **to** log on.

Settings

The **Settings** menu allows you to set various message options, delete messages by folder, or check your phone's memory status.

From Home screen, press Menu (LSK) → Messaging → Settings.

Messages settings

In this menu, you can set up a default text message or a picture message. The last setting you accessed is automatically activated for sending subsequent messages.

- From Home screen, press Menu (LSK) → Messaging →
 Settings → Messages settings.
- 2. Select an available option and press Select (LSK)
 - or 🔚
 - Choose from: Text message, Text message center, Picture message, Voicemail, or Push message.

Text message

Centers around Text sending options. The following **Sending options** are available:

- Reply path: allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- Request delivery report: allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message was delivered.

Text message center

Sets the default method of text message transmission used by the Text message center. The options are:

- T-Mobile
- Center 2
- Center 3
- Center 4

Picture message

▶ Press **Save** (LSK) to store the new settings.

Sending options

- Priority: you can select the priority level of your messages. Selections are: Normal, High or Low.
- Expiration: allows you to select the length of time for your message to remain on the MMS server: Maximum, 1 day, 2 days, 1 week, 2 weeks, Custom time(Hour).
- Message size: allows you to set a size limit for your message: 30 KB, 100 KB, 300 KB, 600 KB, or 1MB.
- Request delivery report: when enabled, the network informs you whether or not your message was delivered.
- Request read report: when enabled, the network informs you when your message is read.
- Keep a copy: when this option is enabled, a copy of your message is stored.
- Add my name card: allows you to add your name card to your message.

Receiving options

This option specifies the category of messages you want to receive and allows you to set the following:

 Send read report: when enabled, your phone sends a notification back to the recipient indicating that your message was received.

- Send delivery report: when enabled, the phone informs the network whether or not your message was received.
- Reject anonymous: automatically rejects messages with a category of anonymous.
- Reject advertisement: automatically rejects messages with a category of advertisement.

Auto resize image

- No Resize
- 100 KB
- 300 KB
- 600 KB
- 1MB

Creation Mode

- Free
- Warning
- Restricted

Default style

- Font color
- Font style (Small normal, Small bold, Small Italic, Medium normal, Medium bold, Medium italic, Large normal, Large bold, or Large italic)
- · Background color
- Page duration (2 seconds, 5 seconds, 10 seconds, or a Custom time)

Voicemail

This menu displays the default phone number used for access of phone's remote voicemail.

Push Message

- Receiving options: you can specify whether to turn push message reception On or Off.
- Service loading: you can specify whether to load this service:
 - Always
 - Prompt
 - Never

Delete by folder

This menu allows you to delete all of the messages in each message box. Or, you can also delete all of your messages in all message boxes at one time.

Important!: Once messages are deleted, they cannot be recovered.

- From Home screen, press Menu (LSK) → Messaging → Settings → Delete by folder.
- Select a message box to clear. To delete all of your messages, select the All option.
- Highlight a message box to clear and press Mark (to place or remove a check mark next to your selection.

- Press Delete (LSK) to delete the marked objects.
- Press Yes (LSK) after you receive the Delete? Locked messages confirmation.

Memory status

To view the memory status:

► From Home screen, press Menu → Messaging → Settings → Memory status and press Select (LSK) or ...

You can view the amount of the allocated memory and the memory available for picture messages. Scroll left or right to display the memory status for the various categories listed below

The display shows the total space including the used and free space. You can also view how much space and the number of messages currently occupying each message box type:

· Picture message

- -Message inbox
- Sentbox
- Drafts
- My folders

- Text message (saved on the phone)
 - Phone
 - SIM card
 - Message inbox
 - Sentbox
 - Drafts
 - My folders

• Configuration

- Phone
- My folders

• Push message - Phone

- PHONE
- My folders

· Voice mail

- Inbox



Section 7: People

This section explains how to use and manage your Contacts list. You can save phone numbers to your phone's memory or to your SIM card.

Mobile Backup

Your Contacts list is backed up by T-Mobile the first time you turn on your phone and each time you make a change to the address book.

 If notified that Contact sync is in progress, press either Yes (LSK) or No (RSK).

Important!: You can view and manage all your contacts and update your Mobile Backup options at my.t-mobile.com.

Using the Contacts List

Storing a Number in the Phone's Memory

The default storage location for saving phone numbers to your contacts is your phone's built-in memory. As soon as the SIM card is inserted into the handset, the phone synchronizes the Contacts (using the Mobile backup feature) to the T-Mobile network. Additional, new contact information stores directly to the phone's memory and synchronizes with T-Mobile's network during predetermined, timed intervals.

For information on how to change this setting, see "Save Contacts To" on page 66. Also, numbers that were stored on your SIM card can later be copied to your phone's memory.

Note: When you copy a phone number from your SIM card to your phone, the number displays twice in your Contact list.

Note: When storing a Contacts list entry into your SIM card, note that only the Name, and Number are saved. To save additional information for a particular contact, such as notes, e-mail, etc., it is important to save that Contact into your phone's onboard memory.

- From Home screen, press Menu (LSK) → People → Create contact.
- Enter a first name in the First name text box. For further details about how to enter characters, see "Using ABC Mode" on page 40.
- Enter a last name in the Last name text box.
- Highlight a number type by pressing the Up or Down Navigation key, then enter a number in the text box.

The following options are available:

- Mobile: assigns the number entered to the Mobile entry.
- **Home**: assigns the number entered to the Home entry.
- Work: assigns the number entered to the Office entry.
- Others: allows you to enter an additional phone number for this entry.
- **Email**: allows you to enter the email address for the contact.
- Group: allows you to assign this contact to a group.
- Picture ID: allows you to add a Picture ID assigned to the contact.
- Ringtone: allows you to assign a Ringtone by choosing from one of the following locations: Voice list, Sounds, or Music.
- Birthday: allows you to enter the contact's birthday.
- Address: allows you to enter the address for the contact.
- Notes: allows you to enter additional information about the contact.
 Up to 100 characters are allowed.
- Press Save () to store your selections. The number saves to your selected destination and the new contact information displays.
- 6. Press to return to the Home screen.

Copying a Contact Number

The default storage location for saving phone numbers to your Contacts list is your phone's built-in memory. To save a number to your SIM card, you need to change the Default saving option first.

Note: When you copy a phone number from your SIM card to your phone (or vice versa), the number displays twice in your Contact list.

Only the icon adjacent to the Contacts entry indicates where the entry is stored (Phone or SIM).

- From Home screen, press Menu (LSK) → People → Contacts.
 - or -

From Home screen, press Contacts (RSK).

- Highlight a Contacts entry and press Options (LSK) →
 Copy to SIM card → Select/Multiple. The SIM storage
 location is then indicated as a value (Ex: 6/250).
 - or -

Highlight a Contacts entry and press **Options** (LSK) \rightarrow **Copy to phone** \rightarrow **Select/Multiple**.

3. Press to return to the Home screen.

Finding a Contact Entry

You can store phone numbers and their corresponding names onto either your SIM card or phone's built-in memory. They are physically separate but are used as a single entity, called Contacts.

Note: A Phone icon appears to the left of a Contact entry stored on the phone.

A SIM card icon appears to the left of an entry stored on the SIM card.

- From Home screen, press Menu (LSK) → People → Contacts.
- Enter the first few letters of the name in the text box. The Contacts entries are listed, starting with the first entry matching your input.
 - or -

Scroll up or down until the entry you want is highlighted.

3. Once you locate the desired entry, press to dia the number.

- or -

Press Options (LSK) to access the following options:

 Edit: allows you to edit the Name and number for the selected contact

- Send: allows you to send a message to the selected number. You
 may choose between Message, Email, or Exchange email.
- New contact: takes you to the Add new contact menu.
- Call: places the call to the selected phone number.
- Copy to phone/SIM card: copies the selected or all of the contacts to the phone or SIM card. Depends on where the contact was previously saved.
- Assign speed dial: allows you to assign a speed dial key number to the selected Contacts entry.
- Send namecard via: allows you to send your name card by way of Message, Bluetooth enabled devices, Email, or Exchange email.
- Delete: allows you to delete the Selected or Multiple names and numbers from your Contacts or delete all numbers. You are asked to confirm your name and number deletion by pressing the Yes (LSK). To cancel, press the No (RSK).
- **Print via Bluetooth**: sends the contents of the selected contact to a Bluetooth enabled printer.
- Mobile backup: allows you to view the Last sync you performed, or view the About mobile backup information.
- Back: allows you to return to the previous screen.
- Press View () to view contact information, then press Options (LSK) and select one of the following options:
 - Edit: allows you to edit the name and number fields in the entry.
 You can also add an email address and notes.

- Send: allows you to send a message to the selected number. You
 may choose between Message, Email, or Exchange email.
- Copy to phone/SIM card: copies the selected or all of the contacts to the phone or SIM card. Depends on where the contact was previously saved.
- Send namecard via: allows you to send your name card by way of Message, Bluetooth enabled devices, Email, or Exchange email.
- Delete: allows you to delete the contact. You are asked to confirm your name and number deletion by pressing the Yes (LSK). To cancel, press the No (RSK).
- Print via Bluetooth: sends the contents of the selected contact to a Bluetooth enabled printer.
- 5. Press Call () to dial the selected number.

Dialing a Number from Contacts

Once you store phone numbers in People, you can dial them easily and quickly by using the location numbers assigned to them and listed in the Contacts.

Note: If you cannot remember a location number, you must go into the Contacts menu in the People menu to search for the entry by name. For more information, refer to "Finding a Contact Entry" on page 62.

 From Home screen, press Menu (LSK) → People → Contacts.

- Enter the location number for the contact you want to dial. For more information, refer to "Finding a Contact Entry" on page 62.
 - Highlight the desired number and press



Caller Groups

- or -

Adding a New Caller Group

- From Home screen, press Menu (LSK) → People → Groups.
- Press Options (LSK) → Create group.
- Enter a name for the new group in the New group field and press Options (LSK) → Save or

Configuring the Caller Groups Settings

1. Highlight the newly created group and press



Press Options (LSK) → Group settings.

- Highlight the Picture field and press Select (LSK) or to create a Picture ID for this new caller group. Select from an available location on either the phone or SIM card:
 - Wallpapers: allows you to select a wallpaper image to use as a Picture ID.
 - Downloaded images: displays a list of downloaded images from which to select as a Picture ID.
- 4. Highlight the Ringtone field and press Select (LSK) or to create a ringtone for this new caller group. Select from one of the following options:
 - Sounds: displays a list of sounds from which to select as a ringtone.
 - Voice list: displays a list of voice messages from which to select as a ringtone.
- Press Options (LSK) → Save when you are finished.
- **6.** Press **10.** to return to Home screen.

Editing a Caller Group

- From Home screen, press Menu (LSK) → People → Groups.
- 2. Scroll through the group list and highlight the group you want.
- Press Options (LSK) → Rename group. Modify the text in the Rename group text box.

- or -

Press **Options** (LSK) \rightarrow **Delete group**. Delete the selected group.

- or -

Press **Options** (LSK) **→ Group settings**.

- 4. With Group settings enabled, highlight the Picture field and press Change () to alter the Picture ID for this caller group. The following options are available:
 - Wallpapers: allows you to select a wallpaper image to use as a Picture ID.
 - Downloaded images: displays a list of downloaded images from which to select as a Picture ID.

- Highlight the Ringtone field and press Change (alter the ringtone. The following options are available:
 - Sounds: displays a list of sounds from which to select as a ringtone.
 - Voice list: displays a list of voice messages from which to select as a ringtone.
- 6. Press **Options** (LSK) → **Save** when you are finished.
- 7. Press to return to Home screen.

Speed Dialing

Once you store phone numbers from your Contacts list, you can set up to 8 speed dial entries and then easily dial them whenever you want, by pressing the associated numeric key.

 From Home screen, press and hold the speed dial numbers assigned to keys (2 to 9).

Note: Memory location 1 is reserved for your Voice mail server number and this speed dial location can not be changed.

Setting Up Speed Dial Entries

 From Home screen, press Menu (LSK) → People → Speed dial.

- Select an available keypad number key to where you wish to assign the new speed-dialing number, select from the 2 to 9 keys.
 - . Press Assign (LSK) or
- 4. Highlight a contact entry number from the list and press Select (LSK) or . You receive a Speed dial assigned confirmation and the Speed dial menu is displayed with the number assigned to the number key highlighted.
- **5.** Press to return to the Home screen.

Management

The **Management** menu allows you to select where your contacts are saved, copy your SIM contacts to your phone and phone contacts to your SIM card, sort by contacts, delete your contacts, or check your memory status.

From Home screen, press Menu (LSK) → People → Management.

View Contacts From

This option allows you filter the displayed contacts and to select the location from which you displayed available contacts **SIM card**. **Phone**, or the **Phone and SIM card**.

Note: The Phone and SIM card option from the Menu → People → Management → View contacts from → Phone and SIM card option must be selected in order to access all Contacts.

Save Contacts To

This option allows you to assign the default storage location for new contacts. Choose from: **Phone**, **SIM** card, **Ask on saving**.

Copy All To

You can copy all Contact entries from their current location to either the Phone's memory or the SIM card.

- From Home screen, press Menu (LSK) → People →
 Management → Copy all to.
- Highlight Phone or SIM card the press the Select (LSK) or
 By default, all the entries in the Contacts list on the Phone or SIM card are selected.
- Highlight each contact you want to copy and press to place a check mark next to the entry or place a check mark alongside All to copy all entries.
- Press Copy (LSK) to copy the selected contacts to the Phone or SIM card.

Delete contacts

Allows you to delete either All contacts, or those only from your Phone or SIM card.

Delete all

Important!: Once contact entries are deleted, they cannot be recovered.

This option allows you to delete all your contacts from both your phone and SIM card.

Deleting all of the Contact Entries

Perform the following procedure to delete all your entries from both your phone's memory and the SIM card.

Important!: Once contact entries are deleted, they cannot be recovered.

- From Home screen, press Menu (LSK) → People →
 Management → Delete contacts.
- Select All and when the Delete? confirmation message displays, press Yes (LSK) to delete or press No (RSK) to cancel.
- **3.** Press to return to the Home screen.

Deleting Contact Entries from the Phone or SIM

Important!: Once contact entries are deleted, they cannot be recovered.

- From Home screen, press Menu (LSK) → People →
 Management → Delete contacts.
- Select Phone and when the Delete? confirmation message displays, press Yes (LSK) to delete or press No (RSK) to cancel.
 - or -

Select **SIM card** and when the **Delete?** confirmation message displays, press **Yes** (LSK) to delete or press **No** (RSK) to cancel.

3. Press to return to the Home screen.

Memory status

You can check how many names and numbers are stored in the Contacts, within the Phone, SIM and FDN. You can also see the current storage capacity of the memory.

 From Home screen, press Menu (LSK) → People → Management → Memory status.

- Select an available category (Phone, SIM, or FDN) and free space by navigating to the submenus and deleting unnecessary information.
- 3. Press to return to the Home screen.

My Profile

My Profile allows you to create a virtual business card. Once completed, you can send the card to recipients as a V-card attachment.

Note: As with any profile, your profile can be associated with a group.

- From Home screen, press Menu (LSK) → People → Contacts.
 - or -

From Home screen, press Contacts (RSK).

Note: My profile is listed at the top of the contact list and displays the name of the associated group (if applicable).

- 2. Press Edit () to view if your profile is available.
- Fill in the desired fields.
- I. Press **Save** () to save your information.

My number

This function is a memory aid, which you can use to edit or remove your own phone number. You can also edit the default name assigned to your phone number.

- From Home screen, press Menu (LSK) → People → My number.
- 2. Press () to change the information.
- Highlight the Name field and enter in desired text to name your phone. Press and hold to erase any current entry.
- **4.** Scroll down and press to erase the current entry and type in a new number if desired.
- 5. Press Save () when finished.

Note: If you later need to edit the information in these fields, highlight a field and press Options (LSK) → Edit.

Service Dialing Numbers

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers include emergency numbers, customer service numbers and directory inquiries.

From Home screen, press Menu (LSK) → People → Service number. The service numbers are displayed.

Section 8: Media and Web

This section outlines the media features available on your phone such as the web2go browser, Games and Apps, photos, music, images, sounds, videos, and other types of files.

T-Mobile Mall

This built-in application provides access to several phone features and tunes.

- 1. From Home screen, press Menu (LSK) → T-Mobile Mall.
- Read and accept the on-screen disclaimers to complete the activation process.
- 3. Select from the available on-screen options:

web2go

This section outlines the web2go features available on your phone. For more information, contact T-Mobile.

web2goSM is a WAP (Wireless Application Protocol) browser which provides you wireless access and navigation of the Web using your phone.

To access web2go via the menu:

From Home screen, press Menu (LSK) → web2go.

Tip: From the Home screen you can also quickly press web2go (RSK) to bypass the need to access the main menu.

Important!: To use the web2go feature, Javascript must be enable from your phone's browser settings menu (Menu → web2go → Browser settings → Preferences and enable Run javascript).

The following options are available:

Home

Selecting this menu connects the phone to the network and loads the web2go homepage.

The content of the web2go startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the **Up** and **Down** keys.

To go to the startup homepage from any other screen in the web2go, use the **Home** option. For more information on the web2go menus, see "Selecting and Using Menu Options" on page 71.

- From Home screen, press Menu (LSK) → Media → web2go → Home.
 - or -

From Home screen, press **Menu** (LSK) \rightarrow **web2go**.

When you access the Browser, the **web2go home page** displays the following topics:

- Google Search: allows you to quickly search for online topics using the Google search engine.
- Advertisement: provides an on-screen advertisement bubble providing suggested phone applications.
- . More sites: provides you access to additional sites.
- Downloads: allows you to download Ringtone, Callertunes, Games, Apps, or Gift and Deals.
- Yahoo Mail: displays the Sign in for Yahoo Mail. Register by sending a text message with the word START to 92500 if you are not already registered.
- Facebook: displays the Facebook Log in. Sign up from this page if you are not already registered.
- Monachie, NJ: based on your location settings, AccuWeather displays the current weather conditions The default location is NJ.
- CNN: displays current news headlines and more.
- ESPN: displays current sports news headlines and more.

- What's Now: provides quick access to a variety of different entertainment and shopping websites.
- My Account: provides quick access to your My Account page.

Exiting web2go

▶ To exit the browser at any time, press



Navigating web2go

- To scroll through browser items, either scroll around the screen using the optical joystick or press the Up or Down Navigation key.
- 2. To select browser items, press
- To return to the previous page, press Back (RSK).
- 4. Press Back (RSK) until the startup Home page displays.

Entering Text in web2go

When you are prompted to enter text, the currently active text input mode is indicated on the screen. The following modes are available:

- ABC mode: this mode allows you to enter letters by pressing the key labeled with the letter you want.
- **T9** (English): this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing a can enter G, H, or I. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional ABC mode.
- Numeric: this mode allows you to enter numbers.
- Symbol: this mode allows you to enter symbols, such as punctuation marks.

To change the text input mode:

- Press Right soft key (RSK) one or more times.
- To edit text, set the cursor to the right of the character(s) to be corrected.

- To delete current characters, press (portrait mode)
 or (QWERTY landscape mode) as required.
- 5. Enter the correct character(s).

Selecting and Using Menu Options

Various menus are available when you are using web2go to navigate the Wireless Web.

To access the browser options menu:

Note: The menus may vary, depending on your version of web2go.

- From an active page, press **Options** (LSK) and select from the following options:
 - Reload: reloads the current page.
 - Resize page: allows you to manually resize the page by sliding the size bar to the left or right.
 - Forward: pages forward one page
 - **Go to**: navigates to the URL address, Homepage, Bookmarks, History, or Saved pages.
 - Save: allows you to save the Image or Page.
 - Add to bookmarks: adds the current URL to Bookmarks.
 - Send URL via message: sends the currently viewed URL to a recipient as a message.

- Page details: allows you to view details about the current page such as: Title, Address, Size, MIME type, and Last updated.
- Browser settings: various settings are available, see "Browser Settings" on page 73.
- Exit browser: exits the browser page you are viewing and returns to the Home page.

Enter URL

This menu allows you to manually enter the URL address of a web site that you wish to access. For further details about entering characters, see "Entering Text" on page 35.

Bookmarks

This menu stores up to 15 URL addresses.

To store a URL address:

- From Home screen, press Menu (LSK) → web2go → Bookmarks.
- Press Options (LSK) → Add bookmark.
- Enter a name for the bookmark in the Title text box the address in the URL text box and press Save ().

- 4. Highlight the newly created bookmark and press Options (LSK) to access the following options:
 - Edit bookmark: allows you to edit the address.
 - Delete: allows you to delete the selected address or multiple addresses.
 - Add bookmark: allows you to enter a new bookmark URL.
 - Send URL via message: allows you to send the selected bookmark as a text message.
 - Set as homepage: allows you to set the selected bookmark as a homepage.
- 5. Select a URL and press **Go** (). Your browser displays the site.

Saved Pages

This option displays a list of the pages that were saved while navigating the browser.

History

This option provides you with a list of the most recently visited web sites. You can use these entries to return to previously visited, but not bookmarked, web pages.

Browser Settings

Various settings are available when you are using the web2go browser to navigate the wireless web.

► From Home screen, press Menu (LSK) → web2go → Options (LSK) → Browser settings. Choose from the following options:

Clear cache

You can clear the information stored in the cache, which is the phone's temporary memory and stores the most recently accessed Web pages.

 Press Yes (LSK) to confirm the deletion. Otherwise, press No (RSK).

Cookies

Use this option to select cookie mode or to delete cookies.

- Cookie mode: this mode allows you to Accept all cookies, Reject all cookies, or Prompt you when a site wants to deposit a cookie.
- Delete cookies: deletes all currently stored cookies. Cookies identify who you are when you visit favorite web sites; however, they can also be used to track your web surfing habits.

To delete cookies:

▶ Highlight Delete cookies and press Select (LSK) or



→ Yes (LSK) at the Delete cookies? prompt.

Preferences

The Preferences option allows you to set web2go preferences such as Run javascript, Display images, Play sound, and View mode.

About Browser

About Browser displays information about the browser such as the type and version.

Games and Apps

Use **Games and Apps** to download MIDlets (Java applications that run on mobile phones) from various sources using the browser and store them in your phone.

From Home screen, press Menu (LSK) → Media → Games and Apps.

When you access the **Games and Apps** menu, the list of default games displays. Once you download new games, they are added to the list.

Find Great Games

You can download more games from the T-Mobile website by using the **Find Great Games** option.

From Home screen, press Menu (LSK) → Media → Games and Apps → Find Great Games.

Note: When downloading games, charges may apply. MIDlet game options differ depending on the MIDlet selected.

The Best Apps

You can download the best T-mobile applications from the T-Mobile website using this feature.

From Home screen, press Menu (LSK) → Media → Games and Apps → The Best Apps.

Note: When downloading applications, charges may apply.

Social Buzz

This menu item lets you log in to your social networking applications (twitter, Facebook, or Myspace) and get automatic status updates for each of these applications.

From Home screen, press Menu (LSK) → Media → Games and Apps → Social Buzz. For more information, refer to "Social Buzz" on page 55.

Photos

Use the **Photos** option, to manage photos saved on your phone.

- From Home screen, press Menu (LSK) → Media → Photos.
 When you access this menu, your phone displays the photos in Line view (column), which shows them as small images. Use the Navigation keys to scroll through the photos.
- To view the photos on the full screen, press View (To go back to Line view, press Back (RSK).

Photos Options

- While viewing the image, press the **Options** (LSK) to display these options:
 - Send to My Album: allows you to send the selected photo to My Album.
 - Send via: allows you to send the selected photo as a Message, Email, Exchange email, or to a Bluetooth enabled device.
 - Set as: allows you to set the photo as a Wallpaper or as a Picture ID.
 - **Default destination**: allows you to Remove or Change the destination folder for your photos.
 - **Delete**: allows you to delete the currently active image.

- **Rename**: allows you to rename the photo.
- Edit image: allows you to take edit the current image by choosing from features such as: Effects, Adjustments, Transformations, Cropping, and Insertions.
- Bluetooth visibility: allows you to configure the visibility of your device via Bluetooth.

Note: The Bluetooth visibility option is available only if you are viewing an image stored on your phone and not within the default Memory card location.

- Slide show: allows you to display all available images as part of an onscreen slideshow where the images are cycled.
- Print via Bluetooth: allows you to send the selected photo to a Bluetooth enabled printer.
- Lock/Unlock: allows you to lock the image to protect it from deletion, or unlock it to allow deletion.
- Properties: allows you to view Basic details about the selected image.

Deleting a Photo

You can delete photos one by one or all at one time.

- From the Photos menu, highlight the photo you want to delete.
- Press Options (LSK) → Delete.
- 3. Select an available option: Selected, Multiple, or All.

- Press Yes (LSK) to confirm the deletion.
- 5. Press when you are finished.

My Album

My album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text. When you take a photo, the phone prompts with **Send to: My Album Online?**.

Note: When accessing My Album, charges may apply.

 From Home screen, press Menu (LSK) → Media → Photos → My album.

Note: The My album feature is only available from within the Photos → On phone tab.

- In your browser, select the Inbox Album link and press Go ().
- Use the Up or Down key to highlight a particular image and press to view the photos.
- **4.** Press when you are finished.

Camera

Use your phone's **Camera** to take photos of people or events while on the move. Additionally, you can send these photos to other people in a Picture Messaging message or set a wallpaper or picture ID image.

For more information about using the Camera and features, see "Using the Camera" on page 102.

Images

In this menu, you can view the list of images downloaded from the web server, taken with the built-in camera, or received in messages. You can set an image as the current background image.

From Home screen, press Menu (LSK) → Media → Images. Choose from either: Fresh Wallpaper, Wallpapers, or Downloaded images.

Fresh wallpaper

Using the Fresh Wallpaper option, allows you to access the T-Mobile website and download new images to use as wallpaper using the browser.

► Highlight Fresh Wallpaper and press Connect (

Note: When downloading wallpapers, charges may apply.

Wallpapers

Allows you to access the local default wallpaper images.

- Select Wallpapers.
- Press either **View** () to open the selected image full screen
 - or -

Press **Options** (LSK) to select from available onscreen options.

- Set as: sets the image as Wallpaper or as a Picture ID.
- Take Photo: allows you to take a photo and use it as a wallpaper.
- Create folder: creates a new folder in which to contain your own images.
- Sort by: lists the images by Date, Type, Name, or Size.
- Properties: displays the image name, format, resolution, size, forwarding, date created, and location.

Downloaded images

This menu allows you to access your downloaded images on your phone.

- With the image highlighted within the list, press the Options (LSK) to choose from the following options:
 - Send to My Album: sends the selected image to My Album.
 - Send via: creates a message to send the image as a Message, Email, Exchange email, or to another Bluetooth device.
 - . Set as: allows you to set the image as a Wallpaper or Picture ID.
 - **Delete**: erases images. Choose from Selected, Multiple, or All.
 - Move: moves the Selected, or Multiple images to another location.
 - Copy: copies the Selected, or Multiple images to another location.
 - Default destination: Remove or Change the default destination for images.
 - Rename: renames the image.
 - Take Photo: allows you to take another photo with the camera.
 - Create folder: allows you to create a new folder in which to store images.
 - Sort by: lists images by Date, Type, Name, or Size.

Bluetooth visibility: allows you to enable the image so it is visible
to other Bluetooth devices. This option is available for a single
image you are viewing, not selected or multiple images.

Note: The Bluetooth visibility option appears for downloaded images stored within the Phone and not on the SIM card.

- Print via Bluetooth: sends the selected image to a Bluetooth printer.
- Lock/Unlock: locks the image to protect it from deletion, or unlocks it to allow deletion.
- Properties: displays Basic details or Media Information about the image.

Music

Your phone's **Music** features allow you to play and manage the music files stored on your phone.

1. From Home screen, press Menu (LSK) \rightarrow Media \rightarrow Music.

Note: Music should be stored within the SD card. It is recommended you create a Music folder and store the DRM-free music files therein.

- From the On card tab, select a music file and press Options (LSK) to choose from the following options:
 - Send via: allows you to send the selected music file via Message, Exchange email, or to a Bluetooth enabled device.

- Set as: allows you to set the music file as a Ringtone, Individual ringtone, Alarm tone, Message tone, or as a Calendar reminder.
- **Delete**: allows you to delete the Selected, Multiple, or All music files.
- Move: allows you to move the Selected music file or Multiple music files to another location or folder.
- Copy: allows you to copy the Selected music file or Multiple music files to another location or folder.
- Rename: allows you to rename the selected music file.
- Create folder: allows you to create a folder in which to store the selected music file.
- Sort by: allows you to sort the music by Date, Type, Name, or Size.
- Bluetooth visibility: allows you to select one or multiple music files to share with other Bluetooth devices.
- Lock/Unlock: allows you to lock the music file to protect it from deletion or unlocks it to allow deletion.
- Properties: displays Basic details about the selected music file such as Name, Format, Size, Forwarding, Date created, and Location.

Music Player

Use **Music Player** to add music files or play music stored in your playlist.

- From Home screen, press Menu (LSK) → Media → Music → Music player.
- Select All tracks, Artists, Albums, or Playlists and press Open (LSK).
- Highlight a music file, then press Options (LSK) and select one of the following options:
 - Add to playlist: allows you to add the Selected, Multiple, or All music files to a playlist.
 - List by: allows you to display music files by category such as: Recently added, My rating, or Title.
 - Delete: allows you to delete the Selected, Multiple, or All music files.
 - Send via: allows you to send this music file as a Message, Email, Exchange email, or to a Bluetooth device.
 - Set as: allows you to set the music file as Ringtone, Individual ringtone, Alarm tone, Message tone, or as a Calendar reminder.
 - Properties: displays Basic details about the selected music file.
 - Settings: set Background playing, choose Sound effects, change the 5.1 channel setting (requires attached earphones), and adjust the Volume limit.

- Select a music file and press to play the music.
 During playback, press Options (LSK) for playback options:
 - Transfer to Bluetooth stereo headset: sends audio via Bluetooth to a Bluetooth stereo headset.
 - Set as: allows you to set the music file as Ringtones, Individual ringtone, Alarm tone, Message tone, or as a Calendar reminder.
 - **Send via**: allows you to send this music file as a Message, Email, Exchange email, or to a Bluetooth device.
 - Rate track: select a rating for the track from 0 to 5 stars or No rating.
 - Add to Playlist: allows you to add the current track to a playlist.
 - Properties: displays Basic details about the music file.
 - Settings: set Background playing, choose Sound effects, change the 5.1 channel setting (requires attached earphones), and adjust the Volume limit.
 - Shortcuts: view keypad and navigation key shortcuts.

Music Player Shortcut Keys

While playing a music file you can use one of the following shortcut keys to control the player.

- From Home screen, press Menu (LSK) → Media → Music
 → Music player.
- 2. Select a music file and press to play the music.

3. While playing a music file, the following keys act as shortcuts:



OK key. Plays or pauses the music file, depending on which mode is active.

Up Navigation key. One press accesses the Music player listing of songs.

Down Navigation key stops the playback of the music file.

Left Navigation key plays the previous music file in the playlist. Press and hold to scrub back through the current song.

Right Navigation key plays the next music file in the playlist. Press and hold to scrub forward through the current song.

Volume Keys Up Volume key: Press to increase playback volume.

Down Volume key: Press to decrease playback volume.

1 🖏

To toggle between 5.1 channel surround sound mode and the currently selected equalizer setting (accessed via the 2 key).

≥ ABC

Press to change the Sound effects presets: NORM (Normal), AUTO, POP, ROCK, JAZZ, DAN (Dance), CLAS (Classical), LIVE, WIDE, CONH, CLAR, BASS, or EXTE.

3 DEF

Press to adjust the song rating

4 GHI

Press to toggle Player modes:

- Normal: songs are played in the order they appear in the current list.
- Repeat one: repeats the current track, until you stop playback.
- Repeat all: repeats all songs in the current playlist, until you stop playback.

5 JKL

Press to toggle Shuffle mode On or Off.

4. Press to exit and return to Home screen.

Playlists

There are ten available playlists. You can add music files to any one of these playlists, and you can customize the playlists by renaming them. You cannot, however, add a new playlist or delete a playlist.

- From Home screen, press Menu (LSK) → Media → Music
 → Music player → Playlists.
- 2. Highlight a playlist and press to open the playlist.

Creating a Playlist

- From Home screen, press Menu (LSK) → Media →
 Music → Music player → Playlists.
- Select Create playlist, enter a name for the playlist and press Save (LSK).

Renaming a playlist

- From Home screen, press Menu (LSK) → Media →
 Music → Music player → Playlists.
- 2. Highlight a playlist and press **Options** (LSK) → **Rename**.
- 3. Press 5 to delete the previous name.
- 4. Enter a new name for this playlist and press **Save** (LSK) or

Adding Music Files to a Playlist

- From Home screen, press Menu (LSK) → Media → Music → Music player.
- 2. Highlight the playlist in which you want to add a music file and press ...
- Press Options (LSK) → Add → Tracks.
- Locate and highlight a music file then press to place a check mark next to the file(s) you want to add to this playlist.
- 5. Press Add (LSK) to add the music file(s).

Sounds

In this menu, you can view the list of sounds downloaded from the web server or received in picture messages. You can also set a downloaded sound as the current ring tone.

From Home screen, press Menu (LSK) → Media → Sounds.

Hottest Ringtones

In this menu, you can view a list of the Hottest Ringtones offered by T-Mobile.

1. From Home screen, press Menu (LSK) → Media → Sounds

- → Hottest Ringtones. A list of ringtones and other downloads display.
- Select a category of ringtones, select a ringtone, then follow the prompts to download or purchase the ringtone.

Browse CallerTunes

In this menu, you can view a list of CallerTunes and download them for your phone.

- From Home screen, press Menu (LSK) → Media → Sounds
 → Browse CallerTunes[®].
- 2. A list of CallerTunes display.
- Follow the prompts to download and purchase CallerTunes.

Sounds

Use Sounds to manage sounds on your phone.

- ▶ Highlight an item in the Sounds menu and press **Options** (LSK). The following options are available:
 - Set as: allows you to set the sound as an Ringtone, Individual ringtone, Alarm tone, Message tone, or Calendar reminder.
 - Create folder: allows you to create a new folder to contain sounds.

- Sort by: allows you to sort sound files by: Date, Type, Name, or Size.
- Properties: displays the sound name, format, size, forwarding, date created, location.

Voice list

The Voice list contains your recorded audio messages.

- Highlight an item and press Options (LSK). The following options are available:
 - Send via: allows you to send this voice file as a Message, Email, Exchange email, or to a Bluetooth enabled device.
 - Set as: allows you to set the voice file as Ringtones, Individual ringtone, Alarm tone, Message tone, or Calendar reminder.
 - Delete: deletes Selected, Multiple, or All voice files.
 - Move: moves Selected or Multiple voice files to another folder.
 - Copy: copies Selected or Multiple voice files to another folder.
 - Rename: allows you to rename the selected voice file.
 - Create folder: allows you to create a new folder for voice files.
 - Sort by: sorts the voice files by Date, Type, Name, or Size.
 - Bluetooth visibility: makes Selected or Multiple voice files visible to a Bluetooth device.
 - Lock/Unlock: locks the voice file to protect it from deletion, or unlocks the voice file to allow deletion.

 Properties: displays basic details about this voice file such as: Name, Format, Size, Forwarding, Date created, and Location.

Videos

In this menu, you can record a video, or view a list of videos downloaded from the web server or received within multimedia messages. You can also view a video saved to your Videos folder or memory card.

- 1. From Home screen, press Menu (LSK) → Media → Videos.
- 2. Highlight a video clip from your Videos folder and press Play () to play it.

– or –

Before you play the video, press **Options** (LSK) and select one of the following:

- Send via: sends the video using a Message, Email, Email exchange, or to a Bluetooth enabled device.
- **Delete**: deletes the Selected. Multiple, or All video files.
- Move: allows you to move the Selected or Multiple videos to another location
- Copy: allows you to copy the Selected or Multiple videos to another location.
- Rename: changes the name of the video.

- Create folder: allows you to create a new folder to contain your videos.
- Sort by: allows you to sort and view videos by Date, Type, Name, or Size.
- Bluetooth visibility: allows you to enable Bluetooth to share the selected video or multiple videos with other Bluetooth devices.
- Lock/Unlock: locks the video file to protect it from deletion, or unlocks the video file to allow deletion.
- Properties: shows properties of the video, such as Name, Format, Resolution, Size, Forwarding, Date created, and Location.

Recording a Video

Use your phone's Camcorder to take videos of people or events while on the move. You can send these videos in a message or to another Bluetooth device. For more information on how to record a video, see "Recording and Sending a Video" on page 106.

Other Files

In **Other Files**, you can view or store other types of files without corruption, various document files and files stored in the phone's memory, or on a memory card.

Available file formats are Microsoft Word, Adobe PDF, or Plain text.

From Home screen, press Menu (LSK) → Media →
Other files.

- Highlight a file and press the Options (LSK) to choose from the following options:
 - **Send via**: allows you to send a file as an attachment via Message, Email, Exchange email, or to a Bluetooth enabled device.
 - **Delete**: allows you to delete the Selected, Multiple, or All files.
 - Move: allows you to move the Selected, or Multiple files to another location or folder.
 - Copy: allows you to copy the Selected, or Multiple files to another location or folder.
 - Rename: allows you to change the name of the selected file.
 - Create folder: allows you to create a new folder in which to contain other files.
 - Sort by: allows you to sort files by Date, Type, Name, or Size.
 - Bluetooth visibility: allows you to enable Bluetooth to share the selected file or multiple files with other Bluetooth devices.
 - Lock/Unlock: allows you to lock the file to protect it from deletion or unlock it to allow deletion.
 - Properties: allows you to view Basic details about the selected file.

Memory Status

With **Memory Status**, you can check the amount of memory being used and memory remaining for Photos, Music, Images, Sounds, Videos, Other files, or Games and Apps.

- From Home screen, press Menu (LSK) → Media → Memory status.
- Scroll across the optical joystick or press the Left or Right navigation keys to scroll between the memory status On phone or On memory card.

Section 9: Organizer

This section outlines the various applications that are available on your phone.

Organizer

The Organizer allows you to set alarms, schedule appointments, view the calendar, create tasks, perform simple math calculations, check world time, perform unit conversions, set a timer, and use a stopwatch.

Calendar

With the Calendar feature, you can:

- Consult the calendar by month, week, or day.
- · Set schedules and note anniversaries
- · Write memos to keep track of your schedule.
- · Set an alarm to act as a reminder, if necessary.
- Check your memory status.

To navigate to the Calendar:

From Home screen, press Menu (LSK) → Organizer → Calendar.

When you select the **Calendar** menu, the following options are available:

Month view

This is the default view for the Calendar application, the calendar displays the selected month with today's date highlighted.

- ▶ In Month view, press **Options** (LSK) for choose any of these options:
 - View by: displays the Day view or Week view for the selected day.
 - Create: allows you to create an Appointment, Anniversary, Holiday, Important. or Private event.
 - Go to: takes you to the Today's date or the date you entered.
 - Event list: displays a list of selectable events such as: Appointments, Anniversaries, Holidays, Important, or Private.
 - Delete: allows you to delete all events for a selected date, for a specified period, for this month, or before a date. You can also delete all events.
 - Settings: allows you to configure calendar viewing settings such as the Starting day (of the week) and View by.
 - Missed alarm events: displays a list of any missed events.
 - Memory status: displays the number of calendar events you presently have and how many events you can create for each category. For example: 0/50 means you used zero of fifty available events for this category.

Week view

When you select this option, the calendar displays the selected week with today's date and time highlighted.

- From Home screen, press Menu (LSK) → Organizer →
 Calendar → Options (LSK) → View by → Week.
- In Week view, press Options (LSK) for choose any of these options:
 - View by: takes you to the Day view or Month view for the selected day.
 - Create: allows you to create an Appointment, Anniversary, Holiday, Important, or Private event.
 - Go to: takes you to today's date or the date you entered.
 - Event list: displays a list of selectable events such as: Appointments, Anniversaries, Holidays, Important, or Private.
 - Delete: allows you to delete all events for a selected date, for a specified period, for this week, or before a date. You can also delete all events.
 - Settings: allows you to configure calendar viewing settings such as the Starting day (of the week) and View by.
 - Missed alarm events: displays a list of missed alarm events.
 - Memory status: displays the number of calendar events you presently have and how many events you can create for each category. For example: 0/50 means you used zero of fifty available events for this category.

Day view

When you select this option, you are taken to the Day view of the selected day with any events listed.

- From Home screen, press Menu (LSK) → Organizer →
 Calendar → Options (LSK) → View by → Day.
- In Day view, highlight the event and press Options (LSK) for choose any of these options:
 - View by: takes you to the Week view or Month view for the selected day.
 - Create: allows you to create an Appointment, Anniversary, Holiday, Important, or Private event.
 - Send via: allows you to send this event information as an attachment via Message, Email, Exchange email, or to a Bluetooth enabled device.
 - Event list: displays a list of selectable events such as: Appointments, Anniversaries, Holidays, Important, or Private.
 - Delete: allows you to delete the selected event, or delete all events.
 - Save in Other files: allows you to save this event information to Other files.
 - Print via Bluetooth: allows you to send this event information to a Bluetooth enabled device.
 - Settings: allows you to configure calendar viewing settings such as the Starting day (of the week) and View by.

- Missed alarm events: displays a list of missed alarm events.
- Memory status: displays the number of calendar events you presently have and how many events you can create for each category. For example: 0/50 means you used zero of fifty available events for this category.
- Press View () to view the information about the selected event.

Appointments

This option allows you to set appointments.

- From Home screen, press Menu (LSK) → Organizer →
 Calendar.
- Press Options (LSK) → Event list → Appointments.
- 3. Press Options (LSK) → Create.
- Enter the occasion in the Title text box then press the Down Navigation key.
- Continue to enter other information including Details, Start date, Start time, End date, End time, Location, Alarm, Before, Alarm tone, Repeat and Until.
- Press Save () to save the Appointment event to the Calendar.

Anniversaries

This option allows you to record anniversaries in your calendar. You can also set an alarm to remind you of important anniversaries.

- From Home screen, press Menu (LSK) → Organizer →
 Calendar.
- 2. Press Options (LSK) → Event list → Anniversaries.
- Press Options (LSK) → Create.
- Enter the occasion in the **Title** text box then press the **Down** Navigation key.
- Continue to enter other information including Details, Date, Alarm, and Repeat every year.
- Press Save () to save the Anniversary event to the Calendar.

Holidays

This option allows you to record holidays in your calendar. You can also set an alarm to remind you of important anniversaries.

- From Home screen, press Menu (LSK) → Organizer →
 Calendar.
- 2. Press Options (LSK) → Event list → Holidays.
- Press Options (LSK) → Create.
- Enter the occasion in the **Title** text box then press the **Down** Navigation key.
- Continue to enter other information including Details, Date, and Repeat every year.
- Press Save () to save the Holiday event to the Calendar.

Important

This option allows you to record important dates in your calendar. You can also set an alarm to remind you of important dates.

- From Home screen, press Menu (LSK) → Organizer →
 Calendar.
- Press Options (LSK) → Event list → Important.
- 3. Press Options (LSK) → Create.

- Enter the occasion in the **Title** text box.
- Continue to enter other information including Details, Start date, Start time, End date, End time, Location, Alarm, Before, Alarm tone, Repeat, and Until.
- Press Save () to save the Important event to the Calendar.

Private

This option allows you to record private dates in your calendar. You can also set an alarm to remind you of important dates.

- From Home screen, press Menu (LSK) → Organizer →
 Calendar.
- Press Options (LSK) → Event list → Private.
- Press Options (LSK) → Create.
- 4. Enter the occasion in the **Title** text box.
- Continue to enter other information including Details, Start date, Start time, End date, End time, Location, Alarm, Before, Alarm tone, Repeat, and Until.
- **6.** Press **Save** () to save the Private event to the Calendar.

Missed alarm events

You can display all the events where an alarm was set, but was not turned off.

- From Home screen, press Menu (LSK) → Organizer →
 Calendar.
- Press Options (LSK) → Missed alarm events.
- To view event information, highlight an event and press . The missed alarm event information displays.
- To acknowledge and remove the event, press Confirm (LSK) or . The event is removed from the Missed alarm events menu.

Memory status

This menu item shows the number of calendar events that are stored on the handset as well as the total number of available events. Example: 2/100 means that currently there are two alarm events scheduled out of a possible 100.

From Home screen, press Menu (LSK) → Organizer →
Calendar.

 Press Options (LSK) → Memory status. The available categories are: Appointment, Anniversary, Holiday, Important, or Private.

TeleNav GPS Navigator

TeleNav is a driving aid that uses both audible and visual directions for GPS navigation.

- From Home screen, press Menu (LSK) → Organizer →
 TeleNav GPS Navigator.
- At the prompt, read the agreement and press Agree (LSK) to accept the terms, or press Exit (RSK) → Yes (LSK) to close the window.

Note: When accessing TeleNav Navigator, charges may apply.

Alarm

This feature allows you to:

- . Set up to ten alarms to ring at specified times.
- Set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:

- Alarm 1 Alarm 10: set the Name, Alarm activation, Alarm time, Alarm type, Alarm tone, Alarm volume, Day, Snooze, and Repeat for this alarm.
- Auto power: alarm rings at the specified time even if the phone is turned off. If the option is set to Off, the alarm does not ring.

To set the alarm:

- From Home screen, press Menu (LSK) → Organizer →
 Alarm.
- 2. Select an alarm and press the Select (LSK) or



- Highlight the Name field, press and hold to backspace and erase the text, then enter a new name for this alarm (if desired).
- Highlight the Alarm activation field and scroll right on your optical joystick or use the Right Navigation key to select On.

- Highlight the Alarm time option. Enter the time you want the Alarm to sound.
- Highlight the Alarm type option and press Edit ().
 Select one of the following alarm types and press OK (LSK):
 - Melody: the alarm rings using the selected ring melody.
 - Increasing melody: the volume of the melody increases.
 - Vibration: the phone vibrates but does not play a tone.
 - **Vibration then melody**: the phone vibrates 3 times and then starts playing a melody.
 - Vibration and melody: the phone vibrates and plays the melody simultaneously.
 - Vibration and increasing melody: the phone vibrates and increases the volume of the melody.
- Highlight the Alarm tone field, press Edit () to display
 a list of tones from which to choose, then press Select
 (LSK).
- Highlight the Alarm volume field and scroll right on your optical joystick or press the Left or Right Navigation key to decrease or increase the volume.
- Highlight the weekday check boxes. Press Edit () to display a list of days.

- Press to place a checkmark (Mark) next to one of the following selections: Everyday, Once only, Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, or Saturday. Press to place or remove a check mark (Unmark).
- . Press OK (LSK) to confirm your selections.
- Highlight the Snooze field and press the Right Navigation key to select one of the following times: Off, 1 min, 3 min, 5 min, 7 min, or 10 min.
- Highlight the Repeat field and scroll right to select one of the following times: 1 time, 2 times, 3 times, 5 times, or 10 times.
- 12. Press Save () to confirm and store your new settings.
- **13.** Press the key to return to Home screen.
- To stop the alarm when it rings, press any key or press the Snooze (RSK).

Voice Recognition

This feature is used to activate a wide variety of functions on your phone. You can use your phone's built-in automatic speech recognition (ASR) software to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone, and your phone will recognize your voice and complete tasks by itself.

The screen displays and says "Say a command." The phone prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts.

- Call <Name or #> to call an entry in your Contacts list or a spoken phone number. (For more information, refer to "Making a Voice Call" on page 92.)
- Send Text to <Name or #> to launch text messaging on your phone and specify a recipient for a new message. (For more information, refer to "Sending a Message" on page 93.)
- Look up <Name> to lookup a Contacts entry name from your current list of available contacts.
- Go To <App> to jump directly to menu items or applications. (For more information, refer to "Opening Menus using Voice Recognition" on page 94.).
- Check <Item> to check your phone's status. (For more information, refer to "Checking Phone Status" on page 94.)

Note: Use ASR in a quiet environment so it can accurately recognize your commands. Voice Dial works best in quieter environments. When saying a name, speak at a normal speed and say the name clearly. There is no need to pause between the first name and last name.

 From Home screen, press Menu (LSK) → Organizer → Voice recognition.

- 2. When the Voice Dialer says the "Say a command" prompt, say one of the following commands:
 - · "Call Steve Smith"
 - "Call Steve Smith at home,..."
 - · "Call (888) 555 5555"
 - · "Send text to Steve Smith"
 - "Lookup Steve Smith"
 - · "Go to [Application]"
 - · "Go to Calendar"
 - · "Check Missed calls"
- 3. A menu prompts you to confirm your selection. If you said a name with more than one match in Contacts, or if you stored more than one number for the contact, you are prompted to select from multiple options.

Tips for Using Voice Dial

Voice recognition works best in quieter environments. When saying a name, speak at a normal speed and say the name clearly. There is no need to pause between the first name and last name.

Making a Voice Call

- From Home screen, press Menu (LSK) → Organizer → Voice recognition.
- When the application says the "Say a command" prompt, say "Call".
- 3. If you hear "Say the name or number," say a name or a phone number.
- 4. If you hear "Which number?," say a number type (for example, "Mobile1").

Note: You can skip steps 3 and 4 by saying a name and location after "Call" without pausing (for example, "Call Steve Smith mobile").

Note: If the voice recognition does not recognize the name or number, it will find the most likely matches and display a list of up to three names or numbers. You will hear "Did you say..." followed by the name or number. You can confirm by saying "Yes." Say "No" to change the selection.

Sending a Message

- From Home screen, press Menu (LSK) → Organizer → Voice recognition.
- When the application says the "Say a command" prompt, say "Send Text to".
- 3. If you hear "Say the name or number," say a name or phone number of the recipient. For example, say "Steve Smith" or "9725555555." The entry information for the specified contact is displayed. Use the name of a person in your Contacts list and, optionally, the type of number (Mobile1, Home1, etc.) you want to send it to. For example, say "Send Text Steve Smith Mobile1."
- 4. If the phone did not properly recognize the command, it prompts you with "Did you say, send text message to?"
- Respond by saying one of the following: Yes, No, Repeat, or Cancel.
- Use the keypad to enter text and press Send () to complete the message and deliver it. For more information, refer to "Entering Text" on page 35.

Note: If you want to create a multimedia message, follow steps 7 and 8.

- 7. Press the **Down** navigation key and select **Add photo**.
- 8. After adding the attachment, press **Options** to set options for this message:
 - Preview: allows you to view the message prior to sending.
 - Jump to recipient field: allows you to add Recent recipients, Contacts, Groups. or send this message to the Online Album.
 - Jump to attachment bar: allows you to choose from one of the available attachment options.
 - Insert text: allows you to insert a Text templates, Text emoticon, Contacts, or Bookmarks. The Text templates allow you to apply one of the preset message templates to the text. Select one of the 10 items stored in the Text templates menu. Contact allows you to add names and phone numbers to your message. Bookmarks allows you to add Internet addresses to your message.
 - More: allows you to Add page, Add subject, Edit style, Sending options, or Select a language (Français, or Español) for this message.
 - Exit composer: exits the composer and displays the Create new screen.
- 9. Press **Send** () to send the current picture message.

Looking Up a Name using Voice Recognition

- From Home screen, press Menu (LSK) → Organizer → Voice recognition.
- When the application says the "Say a command" prompt, say "Look up".
- If you hear "Say the name," say a name of the recipient you would like to look up.
 - or -

If you hear "Say the name," say Check Minutes (to look up your current minute usage) or Voicemail (to access your voicemails).

Opening Menus using Voice Recognition

- From Home screen, press Menu (LSK) → Organizer → Voice recognition.
- When the application says the "Say a command" prompt, say "Go to". A list of valid destinations is displayed and you are prompted with "Which shortcut?"

- If the list is too long to fit on one screen, you can say the name of a destination. Examples can include: Web, Calendar, Ringtones, Tasks, Contacts, Voicemail, or Games and Apps.
- Say the name of the application you want the phone to activate.

Checking Phone Status

You can use voice recognition to obtain information about your phone such as Status, Messages, Missed calls, Time, Signal strength, Network, Battery, My phone number, and Volume.

- From Home screen, press Menu (LSK) → Organizer → Voice recognition.
- When the application says the "Say a command" prompt, say "Check".
- 3. When you hear "Which status item?", speak an item.

Voice Recognition Settings

- ► From Home screen, press Menu (LSK) → Organizer → Voice recognition → Settings (RSK). Voice recognition settings consist of the following options:
 - Confirmation
 - Adaptation
 - Audio modes
 - Speakerphone
 - About

Configuring Voice Recognition Options

To change the confirmation:

- From Home screen, press Menu (LSK) → Organizer → Voice recognition.
- From the "Say a command" prompt, press Settings (RSK)
 → Confirmation
- 3. Select one of the available options:
 - Automatic to always provide you with options if there was an issue registering the command, confirm any commands, and then announce any actions.
 - Always Confirm to always confirm any command actions before they are done, even if it was properly registered.

 Never Confirm to never confirm any command operations. The phone will always act on what it registers as the current command, even if it is incorrect and without notifying you.

To adapt the system to your voice:

- From Home screen, press Menu (LSK) → Organizer →
 Voice recognition → Settings (RSK) → Adaptation →
 Adapt voice → Start.
- Hold the phone so that the microphone is approximately six inches away from your mouth and you can clearly read the onscreen number sequences.
- Repeat either the digits or words shown onscreen using a normal tone of voice.
 - If the phone cannot recognize your words, it will continue to display the same information onscreen.
- Repeat the previous step for the remaining sets of digits or words.
- When you are finished with a full session, you will reach a screen that reads, "Adapting."
- Press to save.

To reset the adaptation

- From Home screen, press Menu (LSK) → Organizer →
 Voice recognition → Settings (RSK) → Adaptation →
 Reset Voice. (The phone displays a reset voice dialog).
- Press Yes to reset the voice recognition parameters or No to exit.

To enable and disable Audio Modes:

You can customize whether the voice recognition feature displays either a list of top voice recognition choices or automatically dials the first number without displaying a choice list.

- From Home screen, press Menu (LSK) → Organizer → Voice recognition.
- From the "Say a command" prompt, press Settings (RSK)
 → Audio modes.
- Select one of the following:
 - Expert mode displays both a selectable list of matching entries and
 if the first entry is not correct, the phone will continue to read out
 each available option until it detects either a confirmation (Yes) or
 rejection (No).
 - Prompt mode displays a selectable list of available dialing options and only reads out the entry name. You are required to touch an onscreen option to activate a command.

 Readout mode reads out every onscreen menu and option selected.

To enable and disable Speakerphone:

You can control the speakerphone behavior while using voice recognition.

- From Home screen, press Menu (LSK) → Organizer → Voice recognition.
- From the "Say a command" prompt, press Settings (RSK)
 → Speakerphone.
- Select one of the following: Automatic, Always on, or Always off.

To display information about voice recognition

From Home screen, press Menu (LSK) → Organizer →
Voice recognition → Settings (RSK) → About.

Tasks

This feature allows you to enter a task list.

- From Home screen, press Menu (LSK) → Organizer →
 Tasks.
- 2. Press Options (LSK) → Create task to create a new task.
- Enter a short description of the task in the **Title** field then press the **Down** Navigation key.
- Enter a short description in the **Details** field and press the **Down** Navigation key.
- Continue to enter other information including Start date, Due date, Alarm, Alarm date, Alarm time, Alarm tone and Priority.
- **6.** Press **Save** () when you are finished. Your Task list saves to the Calendar.

Editing the Tasks List

When you select the Tasks list menu, the current contents display with a status checkbox and a priority marker.

If the item was done, a check displays in the checkbox.

High priority items display a "1" triangle icon, Normal priority items display a "2" triangle icon, and Low priority items display a "3" triangle icon.

- From Home screen, press Menu (LSK) → Organizer →
 Tasks.
- 2. Highlight a task from the list and press View (
- Highlight a field to edit and press Edit ()
- Edit the items you wish to change and press Save (when your edits are complete.

Memo

This option allows you to create notes to add to your events.

- From Home screen, press Menu (LSK) → Organizer →
 Memo.
- Press Options (LSK) → Create memo to create a new memo. A blank Memo screen displays.
- 3. Enter your text and press Save () to save.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

- From Home screen, press Menu (LSK) → Organizer →
 Calculator.
- 2. Enter the first number using the numeric keys.
- Select the calculation method, according to the illustration on the display.
- Enter the second number using the numeric keys.

Note: Press the Left soft key to insert a decimal point, or press it multiple times to create brackets.

Press ** to move the cursor to the left or press to move the cursor to the right within a number.

5. Press to view the result. Repeat steps 1 to 4 as many times as required.

Tip calculator

This feature calculates a tip amount by percentage, and divides the total bill by the number of payers.

- From Home screen, press Menu (LSK) → Organizer → Tip calculator.
- 2. In the Bill field, enter the check amount.

Note: Press ** to enter a decimal point for the exact dollar amount.

- Highlight Tip(%) percentage. 15 is the default value but you can change this value. The Tip(\$) field value calculates according to the values entered.
- Highlight the # paying field to change the number of people contributing to the bill.
- 5. The **You pay** field displays the total for each individual.

World clock

This feature allows you to see the current time in another part of world. There are two time lines available. You can set the first setting to your home city and use the second setting to check other city times.

- From Home screen, press Menu (LSK) → Organizer → World clock.
- 2. Press Options (LSK) → Add to create a new time zone.
- Scroll across your optical joystick or press the Left or Right Navigation key until the desired GMT time zone displays in the field.
- Place a check mark in the Daylight saving checkbox (if applicable).
- Press OK (LSK) to confirm you settings.

Converter

The conversion menu provides the following conversion categories:

- Currency
- Length
- Weight
- Volume
- Area
- Temperature

To convert from one unit to another:

- From Home screen, press Menu (LSK) → Organizer →
 Converter.
- Scroll to the conversion category you wish to use and press Select (LSK) or
- Use the Up, Down, Left, and Right navigation keys to select the From and To units of measure for the quantity you want converted.

Tip: Press ** to enter a decimal point.

Press Back (RSK) to return to the Converter menu.

Timer

You can use this menu to set a timer. To enable the Timer, use the following options:

- From Home screen, press Menu (LSK) → Organizer →
 Timer.
- Press Set (LSK), enter the length of time as HH:MM:SS and press OK (LSK).
- 3. Press Start () to start the timer.
 - or -
 - Press **Pause** () to pause the timer.
- **4.** Press when you are finished.

Stopwatch

This feature allows you to use a stopwatch.

- From Home screen, press Menu (LSK) → Organizer → Stopwatch.
- 2. Press Start or to start the stopwatch.
- 3. Press Lap () to record each lap.
- Press Stop (RSK) or to stop recording the lap time.
 You can view up to 50 lap times.
- Press Reset (LSK) to erase all previously recorded stopwatch times.

RSS reader

The RSS reader feature allows you to receive up-to-date web pages, news, and other information (such as updates) distributed through an RSS feed.

Enter the RSS feed address in the RSS reader to create an entry, then periodically update the entry manually or automatically.

To set up the RSS reader feature:

- From Home screen, press Menu (LSK) → Organizer → RSS reader.
- Press Options (LSK) → Add.

- Enter a URL for the RSS feed, then press **OK** (LSK). The URL automatically retrieves.
- Press Subscribe (LSK), to add the current RSS to your list of stored RSS feeds, or Cancel (RSK) to exit the application.

Configuring the RSS reader settings

- From Home screen, press Menu (LSK) → Organizer → RSS reader.
- 2. Press Options (LSK) → Settings.
- 3. Highlight Auto update and press Mark (
- Highlight the next field and press the Right Navigation key to select the frequency the RSS reader updates: RSS reader launch, Daily, or Weekly.
- 5. Press Save (LSK) to confirm and save your selections.

Section 10: Camera

This section explains how to use the camera on your phone. You can take photographs by using the built-in camera functionality.

Using the Camera

Using the camera module in your phone, you can take photos of people or events while on the move. Additionally, you can send these photos to other people in a Picture Messaging message or set a wallpaper or caller ID image.

Note: Do not take photos of people without their permission.

Do not take photos in places where cameras are not allowed.

Do not take photos in places where you may interfere with another person's privacy.

Take and Send

Your camera produces photos in JPEG format.

Note: When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

- From Home screen, press Menu (LSK) → Media → Photos → Camera.
 - or -

Press and hold (Camera) on the right side of the phone to access the camera module.

- 2. Adjust the image by aiming the camera at the subject.
- Press Menu (LSK) to access the camera options. For details, see "Configuring Camera Options" on page 104.

Note: You can use the keypad to quickly change the camera options.

4. Press or to take the photo.
The Send to: My Album Online? message.

5. Press Yes (RSK) if you want to send the photo to your T-Mobile My Album Online service. The phone's default destination is set to My Album Online. The photo is automatically saved to the Photos folder in the phone.

Note: To change the default destination for your pictures, press Options (LSK) when Send to: My Online Album? displays on the screen. Select the Default destination -> Change, then change your default destination to Recent recipients, Contacts, Online album, New email, or New number

- **6.** Press **Options** (LSK) to view the following options:
 - Take another: allows you to take another picture.
 - Send to: sends this image to Recent recipients, Contacts, Groups, or Online album.
 - Send via: attaches this photo to a new outgoing Message, Email, Exchange email, or Bluetooth.
 - Default destination: allows you to remove or change the default destination for the location of photos. Options to change include: Recent recipients, Contacts, Online album, New email, or New number.
 - Print via Bluetooth: allows you to send the current picture to an external Bluetooth printer for reproduction.
 - Delete: allows you to erase the current image. Press Yes (LSK) to complete the deletion.
 - Set as: allows you to set this image as a Picture ID or Wallpaper.

- Edit: allows you to edit the current image attributes such as: Effects, Adjust, Transform, Crop, Insert, Set as, Send via, or Print via Bluetooth. Within the Edit screen, press Options (LSK) to activate these options.
- Rotate: allows you to rotate the current image.
- Slide Show: displays several images as a slide show.
- Properties: displays properties for the current image such as: Name, Format, Resolution, Size, Forwarding, Date created, and Location
- Press Options (LSK) → Send via to send this image in a Message, Email, Email exchange, or via Bluetooth.

- or -

Press Options (LSK) → Send to creates a Message, where you can choose to send the photo to Recent recipients, Contacts, Groups, or to an Online album.

- or -

Press **Options** (LSK) and select **Take another** then press **Select** or **Take** to return to Capture mode.

8. Press to return to Home screen.

Camera Shortcuts:

Shortcut keys allow you to change some settings using the keypad, Navigation keys, and Volume key while in capture mode.

Note: These button functions also apply to the camera feature if it is accessed via Menu (LSK) → Media → Photos → Camera.



takes the photograph.

Navigation Kevs $\ensuremath{\mathbf{Up}}$ and $\ensuremath{\mathbf{Down}}$ navigation keys adjust the image

brightness.

Left and Right navigation keys zoom in and out.

Optical Joystick Scroll $\mbox{\bf Up}$ and $\mbox{\bf Down}$ to adjust the image brightness.

Scroll Left and Right to zoom in and out.

1 . ,

Allows you to switch between Camera and Camcorder modes

⊇ABC

toggles through the shooting modes.

3 DEF

cycles among the various timer modes (Off, 2 seconds, 5 seconds, or 10 seconds).

#₫+

changes the viewfinder mode.

Configuring Camera Options

- Before taking a photo, press Menu (LSK) to access the following:
 - Camera: allows you to take a picture.
 - Shooting Mode: takes a photo in various modes. Once you change the mode, the corresponding indicator displays at the top left of the display.
 - Single: takes a single photo and allows you view it before returning to the shooting mode.
 - Continuous: takes a succession of photos.
 - Panorama: takes multiple photos to be combined into a single panoramic image.
 - Smile shot: focuses on the foreground or subject and not on the background.
 - Mosaic: takes up to four photos and then groups them together into a single final photo.
 - Night mode: select On (allows for better pictures in low light conditions) or Off.
 - Size: allows you to set the image size to either: 2M (1600x1200), 1.3M (1280x960), 0.3M (640x480), or 320x240.
 - White balance: allows you to set this option from the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
 - Exposure meter: choose how the camera measures the light source: Matrix, Center-weighted or Spot.

- Effects: choose how the image effects: None, Black and white, Sepia, Negative, and Watercolor.
- Set default destination: allows you to Remove a current destination location or Change the current location by establishing a new folder in which to place the photo(s). Change the destination to one of the following options: Recent recipients, Contacts, Online album, New email, or New number.
- Self timer: choose the time delay before an image is taken: Off, 2 seconds, 5 seconds, or 10 seconds.
- Viewfinder mode: choose assign the way in which the camera image is displayed: Full screen view and indicator, Full screen view, Full screen view and quidelines.
- Settings:
 - Photo: choose the Quality of new photos (Economy, Fine, or Superfine).
 - Setup: configure the Review screen, Shutter sound, Default storage, or view camera Shortcuts.

Photo Gallery Options

- From Home screen, press Menu (LSK) → Media →
 Photos. When you access this menu, your phone displays
 the photos in Line view, which shows them as small
 images. Scroll through the available photos.
- Highlight and image file and press View () to open the photo on the full screen. Press Back (RSK) to redisplay the files in list view.
- 3. With the image displayed in full screen, press Options (LSK) to use the following options:
 - Send to My Album: allows you to send your photos to My Album.
 - Send via: allows you to send the selected photo as a Message, Email, Exchange email, or to a Bluetooth enabled device.
 - Set as: allows you to set the photo as a Wallpaper or as a Picture ID.
 - Default destination: allows you to Change or Remove where your photos are sent after you take them.
 - **Delete**: allows you to delete the selected or multiple photos.
 - Rename: allows you to rename the photo.
 - Edit image: allows you to edit the selected image.

 Bluetooth visibility: allows you to configure the visibility of your device via Bluetooth.

Note: The Bluetooth visibility option is available only if you are viewing an image stored on your phone and not within the default Memory card location.

- Slide show: allows you to see all of your photos in a slide show presentation.
- Print via Bluetooth: allows you to send the selected photo to a Bluetooth enabled printer.
- Lock/Unlock: allows you to lock the selected photo to protect it from deletion, or unlock the photo to allow deletion.
- Properties: shows the properties of the photo, such as the file Name. Date. Format. Resolution. Size. and Lock/Unlock.

Deleting a Photo

You can delete photos one by one or all at one time.

- From Home screen, press Menu (LSK) → Media →
 Photos. From the Photos menu, highlight the photo you want to delete.
- Press Options (LSK) → Delete and press the Right Navigation key.
- Select a deletion of either the currently Selected image, Multiple, or All images and press Select (LSK) or

- Press Yes (LSK) to confirm the deletion.
- 5. Press when you finish.

Using the Camcorder

Use the camcorder module in your phone to record videos of people or events while on the move. You can send videos to other people in a message or via Bluetooth.

Recording and Sending a Video

Tip: For best results when shooting video in direct sunlight or in bright conditions, provide your subject with sufficient light by putting the light source behind you.

- From Home screen, press Menu (LSK) → Media → Videos
 Camcorder.

 - or –

Press and hold (Camera) → 1 3 to activate the camcorder mode.

- Before recording the video, press Menu (LSK) to access camcorder options. For more information, refer to "Configuring the Camcorder Settings" on page 107.
- 3. Adjust the image by aiming the lens at the subject.

Tip: You can use shortcuts to quickly change some camcorder settings. For more information, refer to "Camcorder Shortcuts" on page 108.

- 4. Press or to begin shooting video.
- Press Stop (RSK) or Camera key to stop the recording and save the video. Press to pause or resume recording.
- 6. After the video saves you have two available options:
 - The screen displays "Send to: My Album Online?"
 Press Yes (RSK) to send the highlighted video to your online album.
 - Press Options (LSK) for Video options. For more information, see "Video Options" on page 108.
- Press Options (LSK) → Send via to send the video in a Message, Email, Exchange email, or to a Bluetooth device.
 or –

Press **Options** (LSK) → **Send to**, to create a Message, where you can choose to send the video to Recent recipients, Contacts, Groups, or to an Online Album.

8. Press to return to the Home screen.

Configuring the Camcorder Settings

- Before taking a photo, press Menu (LSK) to access the camcorder options.
 - Camcorder: allows you to record a video.
 - Video Mode: limit the size of videos. Choose Normal or Limit for MMS.
 - Size: if the Limit setting is set to Normal, this displays either 320x240 or 176 x 144.
 - White balance: choose a setting to match conditions. Choose from Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
 - Exposure meter: choose how the camera measures the light source: Matrix, Center-weighted or Spot.
 - Effects: apply special effects to the photo. Options include: None, Black and White, Sepia, Negative, or Watercolor.
 - Default destination: Remove a current destination location or Change the current location.
 - Timer: set a time delay between the time you press and the video starts to record. Select the length of delay, from Off, 2 seconds, 5 seconds, or 10 seconds.
 - **Viewfinder mode**: select either Full screen view and indicator, Full screen view, or Full screen view and guidelines.

· Settings:

- Video: set the Quality of the video (Economy, Fine, or Superfine), and set Audio recording (On or Off).
- Setup: configure the Review screen, Default storage, or view camcorder Shortcuts.

Camcorder Shortcuts

Shortcut keys allow you to change some settings using the keypad, Navigation keys, and Volume key while in capture mode.

Note: These button functions also apply to the camcorder feature if it is accessed via Menu (LSK) → Media → Videos → Record video.



shoots the video.

Navigatio	
Keys	

n Up and Down navigation keys adjust the video

brightness.

Left and Right navigation keys zoom in and out.

Optical Joystick Scroll **Up** and **Down** navigation keys adjust the video brightness.

Scroll Left and Right navigation keys zoom in and out.

٦ .ஓ,

Allows you to switch between Camcorder and Camera modes

⊇ ABC

changes the size of the image being recorded.



cycles among the various timer modes (Off, 2 seconds, 5 seconds, or 10 seconds).



changes the viewfinder mode.

Video Options

- With the video recording just stopped (capture mode), press Options (LSK) for these options:
 - Record another: returns to capture mode to record another video.
 - Play: plays back the current video.
 - Send to: creates a message to send this video in a message.
 - **Send via**: sends the selected photo in a Message, Email, Exchange email, or to a Bluetooth enabled device.
 - Default destination: change where your videos are sent after recording. Change the destination to one of these options: Recent recipients, Contacts, Online Album, New Email, New number.
 - **Delete**: delete the selected video.
 - Slide Show: allows you to display all available videos as part of an onscreen slideshow where the videos are cycled.
 - Properties: displays information about the video, such as Name, Format, Resolution, Size, Forwarding, Date created, and Location.

My Album

My album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text.

Use the following procedures to access My album.

Note: When accessing My album, charges may apply. The feature is not activated until you send your first image to the remote My album location.

- 1. From Home screen, press Menu (LSK) → Media → Photos.
- Select My album. The web2go browser launches and the T-Mobile Web page displays.
- Scroll to highlight an album and press Select (LSK) or to view the photos.
- 4. Scroll to view the photos in the album.
- Fress the key to exit the browser and return to the Home screen.

Section 11: Changing Your Settings

This section explains the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any other settings associated with your phone.

My Account

This option provides you with account specific information such as your current activity, Monthly Usage, Bill Summary, Plan & Services, My Downloads, MobileLifeSM, Store Locator, Support, and Help. XXX??? not working XXX??/

From Home screen, press Menu (LSK) → My Account.

Personalize your Phone

You can customize various phone settings such as sounds, the display, phone settings, messaging key, memory, language, greeting message, and time and date.

From Home screen, press Menu (LSK) → Settings → Personalize.

Sound profiles

You can choose and customize sound settings as part of sound profile.

Normal

Normal profile includes audible alerts and tones for incoming calls and messages, key presses, and powering on and off.

- From Home screen, press Menu (LSK) → Settings → Personalize → Sound profiles.
 - Normal: the phone's incoming Alert Type is set to melody.
 - Silent: the speaker is muted.
 - Vibration: the phone vibrates but does not play any other sound or melody.
 - Driving: the speaker is activated and launches the currently selected ringtone or melody when the associated notification is activated.
 - Outdoor: the speaker is activated, the volume settings are raised to their highest levels, and any currently active ringtones or melodies are activated.
- To customize the Normal profile settings, highlight Normal and press the press Options (LSK) → Edit. Scroll left or right to select a new tab and modify its parameters.

- Incoming call: highlight a setting and press
 Edit to make a selection.
 - Call alert type: select an alert type for incoming calls, from Melody, Increasing melody, Vibration then melody, Vibration and melody, or Vibration and increasing melody.
 - Ringtone: select a ringtone for incoming calls, from one of the listed folders, or from the optional memory card.
 - Ringtone volume: choose a volume level between 1 and 7 for incoming call alerts.
- New messages: highlight a setting and press
 Edit to make a selection.
 - Message alert type: select an alert type for new messages, from Melody, Vibration, Vibration and melody, or Mute.
 - Message alert tone: choose an alert tone for new messages, from T-Mobile message, Message tone 1 - 7.
 - Message alert repetition: choose an interval for repeating alerts for new messages, from Once, Every 1 minute, or Every 2 minutes.
 - Message tone volume: choose a volume level between 1 and 7 for new messages alerts.
- a selection.

 Koward trans: select a trans for koward processe, from Room Lucid of

Phone sounds: highlight a setting and press Edit (

- Keypad tone: select a tone for keypad presses, from Beep, Lucid, or Off.
- Power on type: choose a type of sound for the phone to play when powering on, from Melody, Vibration, Vibration and melody, or Mute.

- Power off type: choose a type of sound for the phone to play when powering off, from Melody, Vibration, Vibration and melody, or Mute.
- Phone sound volume: choose a volume level between 0 and 7 for phone sounds.
- After making selections, press Options (LSK) → Save or press the Back soft key, then press the Yes (LSK) soft key to confirm your settings.

Silent

When set to Silent profile, your phone makes no sounds.

From Home screen, press Menu (LSK) → Settings → Personalize → Sound profiles → Silent.

Note: There are no settings to customize for the Silent profile.

Vibration

) to make

When set to Vibration profile, your phone vibrates to alert you to incoming calls and messages.

- From Home screen, press Menu (LSK) → Settings → Personalize → Sound profiles → Vibration.
- To customize the Vibration profile settings, highlight Vibration and press the press Options (LSK) → Edit. Select the New messages tab.

- New messages: highlight a setting and press (hange the selection.
 - Message alert repetition: choose an interval for repeating alerts for new messages, from Once, Every 1 minute, or Every 2 minutes.

Edit to

Note: There is only one setting available for customization within the Vibration profile.

To return to the previous sound profile, press and hold the until the phone returns to the previous profile and the icon disappears.

Driving

You can customize the Driving profile to include audible alerts and tones for incoming calls and messages, key presses, and powering on and off.

- From Home screen, press Menu (LSK) → Settings → Personalize → Sound profiles.
- To customize the Driving profile settings, highlight Driving and press the press Options (LSK) → Edit. Select an available tab.

- Incoming call: highlight a setting and press Edit () to make a selection.
 - Call alert type: select an alert type for incoming calls, from Melody, Increasing melody, Vibration then melody, Vibration and melody, or Vibration and increasing melody.
 - Ringtone: select a ringtone for incoming calls, from the Music, Sounds, or Voice list folders on your phone, or from the optional memory card.
 - Ringtone volume: choose a volume level between 1 and 7 for incoming call alerts.
- New messages: highlight a setting and press Edit () to make a selection.
 - Message alert type: select an alert type for new messages, from Melody, Vibration, Vibration and melody, or Mute.
- Message alert tone: choose an alert tone for new messages, from T-Mobile message, Message tone 1 - 7.
- Message alert repetition: choose an interval for repeating alerts for new messages, from Once, Every 1 minute, or Every 2 minutes.
- Message tone volume: choose a volume level between 1 and 7 for new messages alerts.
- a selection.

Phone sounds: highlight a setting and press Edit (

- Keypad tone: select a tone for keypad presses, from Beep, Lucid, or Off.
- Power on type: choose a type of sound for the phone to play when powering on, from Melody, Vibration, Vibration and melody, or Mute.

- Power off type: choose a type of sound for the phone to play when powering off, from Melody, Vibration, Vibration and melody, or Mute.
- Phone sound volume: choose a volume level between 0 and 7 for phone sounds.
- After making selections, press Options (LSK) → Save or press the Back soft key, then press the Yes soft key to confirm your settings.

Outdoor

You can customize an Outdoor profile to include audible alerts and tones for incoming calls and messages, key presses, and powering on and off.

- From Home screen, press Menu (LSK) → Settings → Personalize → Sound profiles.
- To customize the Outdoor profile settings, highlight Outdoor and press the press Options (LSK) → Edit. Select an available tab.
 - Incoming call: highlight a setting and press Edit (to make a selection.
 - Call alert type: select an alert type for incoming calls, from Melody, Increasing melody, Vibration then melody, Vibration and melody, or Vibration and increasing melody.
 - Ringtone: select a ringtone for incoming calls, from the Music, Sounds, or Voice list folders on your phone, or from the optional memory card.

- Ringtone volume: choose a volume level between 1 and 7 for incoming call alerts.
- New messages: highlight a setting and press Edit (make a selection
- t(t
 - Message alert type: select an alert type for new messages, from Melody, Vibration, Vibration and melody, or Mute.
 - Message alert tone: choose an alert tone for new messages, from T-Mobile message, Message tone 1 - 7.
 - Message alert repetition: choose an interval for repeating alerts for new messages, from Once, Every 1 minute, or Every 2 minutes.
 - Alert tone volume: choose a volume level between 1 and 7 for new messages alerts.
- Phone sounds: highlight a setting and press Edit (a selection.
 - Keypad tone: select a tone for keypad presses, from Beep, Lucid, or Off.
 - Power on type: choose a type of sound for the phone to play when powering on, from Melody, Vibration, Vibration and melody, or Mute.
 - Power off type: choose a type of sound for the phone to play when powering off, from Melody, Vibration, Vibration and melody, or Mute.
 - Phone sounds volume: choose a volume level between 0 and 7 for phone sounds.
- After making selections, press Options (LSK) → Save or press the Back soft key, then press the Yes soft key to confirm your settings.

Display settings

Use Display settings to change various settings for the display or backlight.

Themes

Select from an available menu "skin" such as Starry Night or Lime Green.

- From Home screen, press Menu (LSK) → Settings → Personalize → Display settings → Themes.

Wallpaper

Select a background image for display while in Home screen mode.

Note: Wallpapers can be assigned to the Main Display.

- From Home screen, press Menu (LSK) → Settings → Personalize → Display settings → Wallpaper.
- Choose either the current Theme Wallpaper or select Other image to browse for images from the Photos or Images folders on your phone, or from an optional memory card.

- To set an image as the Wallpaper, highlight the image and press Select (LSK) or the key.
- Preview the image, then press Set (LSK) to retain the wallpaper, or press the Back soft key to discard the change and choose another image.

Dialing display

Choose font and the background settings for the dialing display.

- From Home screen, press Menu (LSK) → Settings → Personalize → Display settings → Dialing display.
- 2. Highlight a setting and press Select (LSK) to customize it:
 - Font type: choose Normal 1 or Normal 2, then press Save (LSK).
 - Font size: select Large, Medium or Small, then press Save (LSK).
 - Font color: select Basic (black and white), Monochrome, or Gradation. For Monochrome or Gradation, press the **Down** Navigation key and then scroll through the available colors. Press Save (LSK) to save your selection.
 - Background color: choose from the available colors, then press Save (LSK).

Brightness

Adjust the display brightness for better viewing in different lighting conditions.

- From Home screen, press Menu (LSK) → Settings →
 Personalize → Display settings → Brightness.
- Choose a brightness level between 1 and 5 by scrolling across your optical joystick, then press Save (LSK) to save your changes.

Backlight time

Select the length of time that the screen backlight stays on and how long the backlight is dimmed before turning off.

- From Home screen, press Menu (LSK) → Settings → Personalize → Display settings → Backlight time.
- 2. Highlight a setting and press Edit () to select a time:
 - On: choose a length of time for the screen backlight to stay on, from 5 seconds, 15 seconds, or 30 seconds.
 - Dim: choose a length of time for the screen backlight to remain dim after the backlight setting, from Off, 5 seconds, 15 seconds, or 30 seconds.
- Choose a time value, then press Save (LSK) to save your changes.

Keypad light

Choose settings for times of day when the keypad light turn on.

- From Home screen, press Menu (LSK) → Settings → Personalize → Display settings → Keypad light.
- In the Set time field, choose Use at any time to have the keypad light turn on at any time of day, or Use at custom time to create a time window for keypad light by setting After time and Until time.
- Press Save (LSK) to store your changes.

Phone settings

Use Phone settings to customize your phone's operation to suit your needs.

Airplane mode

Airplane Mode allows you to use many of your phone's features, such as Games, Voice Notes, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or messages, or access online information.

- From Home screen, press Menu (LSK) → Settings →
 Personalize → Phone settings → Airplane mode.
- 2. Highlight On or Off and press Save (LSK).

HAC mode

This menu is used to activate or deactivate the Hearing Aid Compatibility feature.

Important!: Hearing aid (HAC) mode works when the phone is open but is not accessible when the phone is closed.

- From Home screen, press Menu (LSK) → Settings → Personalize → Phone settings → HAC mode.
- 2. Highlight On or Off and press Save (LSK).

Keypad auto-lock

- From Home screen, press Menu (LSK) → Settings → Personalize → Phone settings → Keypad auto-lock.
- 2. Select either Off or On and press the Save (LSK).

Security

The Security settings allow you to restrict the use of your phone by others and to restrict dialed calls. Lock codes and passwords are used to protect the features of your phone.

From Home screen, press Menu (LSK) → Settings → Personalize → Phone settings → Security.

Lock phone

When the Lock phone setting is enabled, the phone locks automatically when powered on, and you must enter the phone password to use the phone. After entering the correct password, you can use the phone until you power it off.

From Home screen, press Menu (LSK) → Settings →
 Personalize → Phone settings → Security → Lock phone.

Select Enable to have the phone prompt you for a user-defined code when you power on the phone.

- or -

Select **Disable** to have the phone power on with no code required.

Press Confirm (LSK) to store your changes.

Lock applications

Using this menu, you can lock your applications which provide access to information such as All, Call history, Messaging, Voicemail, E-Mail, Exchange email, IM, Media (Sounds, Images, Videos, Music, Other files), Contacts, Calendar, Tasks, and Memo. Once you have locked the contents, you must enter the phone's password to access the associated menus.

- From Home screen, press Menu (LSK) → Settings →
 Personalize → Phone settings → Security →
 Lock applications.
- Use the optical joystick or navigation key to highlight an on-screen option and press Mark () to place a check mark alongside the selected item.
 - Select All to lock all listed applications.
- 3. Press Save (LSK) to lock the selected applications.

4. Enter a security password and press **Confirm** (LSK).

Change phone password

The Change phone password setting allows you to change the current phone password to a new one. You must enter the current password to confirm the password change.

- From Home screen, press Menu (LSK) → Settings →
 Personalize → Phone settings → Security → Change
 phone password.
- Enter a password in the Current password field and press Confirm (LSK). This password would have been previously setup, see "Lock phone" on page 116.
- Enter the new password in the New password field and press Confirm (LSK).
- Re-enter the same new password and press Confirm (LSK).

Note: If you change your password, be sure to record it and keep it in a safe place. If you forget your password, contact your Service Provider for assistance.

Check PIN code

When the Check PIN code feature is enabled, you must enter your PIN each time you switch on the phone. This means that any person who does not know your PIN cannot use your phone without your approval.

Note: You must enter the PIN code to enable or disable the Check PIN Code feature.

- From Home screen, press Menu (LSK) → Settings →
 Personalize → Phone settings → Security → Check PIN
 code.
- Select Enable to have the phone prompt you for the PIN each time you power it on.
 - or -

Select **Disable** to have the phone connect directly to the network when you power it on.

3. Press Save (LSK) to store your changes.

Change PIN code

This feature allows you to change your current PIN, provided that the Check PIN code feature is enabled. You must enter the current PIN before you can specify a new one.

Note: Pin lock must be enable before using this feature.

- Once you enter a new PIN, you are asked to confirm the PIN number by re-entering it.
 - From Home screen, press Menu (LSK) → Settings → Personalize → Phone settings → Security → Change PIN code.

Set FDN mode

FDN (Fixed Dialing Number) mode, if supported by your SIM card, allows you to restrict your dialed calls to a limited set of phone numbers.

- From Home screen, press Menu (LSK) → Settings →
 Personalize → Phone settings → Security → Set FDN
 mode
- 2. Select one of the following options:
 - **Disable**: you can call any number.

- Enable: you can only call phone numbers stored in Contacts. You must enter your PIN2 code. You can obtain your PIN2 from T-Mobile's customer service.
- 3. Press Save (LSK) to store your changes.

Change PIN2 code

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must first enter the current PIN2 (obtained from T-Mobile) before you can specify a new one. Once you enter a new PIN2, you are asked to re-enter the new PIN2 to as confirmation.

Note: Not all SIM cards have a PIN2. This menu does not display if your SIM card does not have the PIN2 feature.

USB Mode

Select the default method of communication when you connect your phone to a USB port on a PC to transfer files between your PC and phone.

- From Home screen, press Menu (LSK) → Settings →
 Personalize → Phone settings → USB mode.
- 2. Choose one of the following options:
 - **Samsung PC studio**: uses PC Studio to communicate with the phone.
 - Ask on connection: each time you connect the phone to a PC, the phone will prompt you to choose a USB mode.

- Mass storage: treats your phone's memory, and an optional memory card, as a removable storage drive.
- 3. Press Save (LSK) to store your changes.

Note: You are unable to connect to PC Studio when the Mass storage option is selected.

Data Roaming

This feature allows you to control the use of data services when your phone is in roaming area.

Important!: Once data roaming is disabled, avoid applications that may reactivate the data roaming feature and charges incurred. Please contact your T-Mobile service center for details.

- From Home screen, press Menu (LSK) → Settings → Personalize → Phone settings → Data roaming.
- Select either Enable (allows data roaming) or Disable (prevents you from using your data services when you find yourself in a roaming area).
- 3. Press Save (LSK) to store your changes.

Optical Joystick Sensitivity

Also known as "0J Sensitivity", allows you to configure the sensitivity of your optical joystick.

- From Home screen, press Menu (LSK) → Settings →
 Personalize → Phone settings → OJ Sensitivity.
- 2. Use your joystick to move the sensitivity level slider.
- Press Save (LSK) to store the new sensitivity level.

Messaging Key

This menu allows you to assign a shortcut to the Messaging key on both the keypad and QWERTY keyboard.

- From Home screen, press Menu (LSK) → Settings → Personalize → Messaging key.
- 2. If this is the first time you are programming this key, read the information that displays and press **OK** (LSK).
- Select the application shortcut to assign to the Messaging key and press Assign (LSK). Choose from: Create message, Conversations, Voicemail, Email, Exchange email, Social Buzz, or IM.

4-way Shortcuts

This menu allows you to both assign a shortcut to the Navigation keys on the QWERTY keyboard or activate/deactivate the optical joystick.



Navigation Keys

 From Home screen, press Menu (LSK) → Settings → Personalize → 4-way shortcuts.

- Select one of the on-screen shortcut navigation key directions to change the assigned application. Choose from:
 - Left: Messaging shortcut. Press the left key from the navigation area to launch a messaging shortcut. Applications include: Create message, Conversations, Voicemail, Email, Exchange email, Social Buzz, and IM.
 - Up: Media shortcut. Press the up key from the navigation area to launch a media shortcut. Applications include: Media, Photos, Camera, Camcorder, and Music Player.
 - Right: Social shortcut. Press the right key from the navigation area to launch a social shortcut. Social sites include: Social Buzz, Facebook, Twitter, My Space, My Stream, Upload pic, Facebook chat.
 - Down: Web shortcut. Press the down key from the navigation area to launch a Web shortcut. Web applications include: web2go and Rookmarks
- 3. Highlight a shortcut category and press



 Select an available on-screen application and press or Assign (LSK).



Keyboard Shortcuts

This menu allows you to assign a shortcut to the key.



Pressing this key in conjunction with another QWERTY key will launch a user-assignable shortcut when pressed. You can modify this setting any time.

- From Home screen, press Menu (LSK) → Settings → Personalize → Keyboard shortcuts.
- If this is the first time you are programming this key, read the information that displays and press OK (LSK).
- Scroll down the list of alphabet location and press Change

 ().
- Highlight an available application and press Assign (LSK). Choose from one of the following: T-Mobile Mall, People, Media, web2go, Messaging, Call history, Settings, Organizer, or My Account.

To change the assigned keyboard shortcuts:

- From Home screen, press Menu (LSK) → Settings → Personalize → Keyboard shortcuts.
- Press Options (LSK), highlight an option and press Select (LSK). Choose from one of the following: Clear shortcut, Restore selected, or Restore all.

Memory Settings

Clear phone memory

From this menu you can clear the memory for Media, Messaging, Phonebook, Calendar, Tasks, or Memo. You can also select All to clear everything listed.

- From Home screen, press Menu (LSK) → Settings →
 Personalize → Memory settings → Clear phone memory.
- 3. Press OK (LSK) to clear the application.
- Enter your phone password in the Password field and press Confirm (LSK).

At the Clear? prompt, press Yes (LSK) to confirm your action or No (RSK) to cancel.

Memory Card Settings

From this menu you can view details about the memory card, format the memory card, rename the memory card, or turn Bluetooth visibility on or off.

- From Home screen, press Menu (LSK) → Settings →
 Personalize → Memory settings → Memory card settings.
- 2. Select one of the following options and press



- Memory card details: displays information about the memory card such as Name, Maximum size and Available memory.
- Format: allows you to format the memory card.
- Rename memory card: allows you to rename the memory card.
- Bluetooth visibility on: allows you to control the visibility of a memory card to Bluetooth devices.

Memory status

You can check the amount of the memory being used and the memory remaining for Shared memory, Messaging, Media, Calendar, Tasks, Memo, and Contacts.

The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.

You can also check how many names and numbers are stored on the Phone, on the SIM card, and the FDN list.

- From Home screen, press Menu (LSK) → Settings →
 Personalize → Memory settings → Memory status.
- **2.** Select a category from the menu and press the memory status for that category.



Language

Select the language for screen text and inputs.

- From Home screen, press Menu (LSK) → Settings → Personalize → Language.
- Highlight the Screen text field and press Edit (), the select Automatic (based on the Input language), English, Français, or Español.
- Highlight the Input language field and press Edit (), then select English, Français, or Español.
- 4. Press Save (LSK) to confirm your selections.

Greeting message

Enter a greeting to display briefly when the phone is powered on. For details about entering characters, see "Entering Text" on page 35.

- From Home screen, press Menu (LSK) → Settings → Personalize → Greeting message.
- 2. Press to clear the default text and enter your own message.
- 3. Press Options (LSK) for these options:
 - Save: saves the currently entered greeting message.
 - Select language: select Français or Español as the language for displaying your message.
 - Edit style: configure the Font color, Font size, or Font type for this
 greeting message.
 - Cancel: exits the menu and return to the Personalize options.
- 4. Press to save your selections.

Time and Date

This menu allows you to control how your phone determines and displays the current time and date.

- From Home screen, press Menu (LSK) → Settings → Personalize → Time and Date.
- 2. Select any of the following options:
 - Time zone updating: allows you to receive time information from T-Mobile's network.
 - Automatic: the phone automatically updates the time and date according to the current time zone using the network service.
 - Manual only: you need to manually set the time and date according to the current time zone using the Set time menu.
 - Prompt first: the phone asks for a confirmation before the update.
 Home zone: choose from a list of 30 time zones, if Manual only or
 - Prompt first are selected.

 Time: allows you to change the hour and minute, if Manual only or
 - Time: allows you to change the hour and minute, if Manual only or Prompt first are selected.
 - Date: allows you to enter the month, day, and year, if Manual only or Prompt first are selected.
 - Time format: allows you to select whether the time displays in 12 hour or 24 hour format
- 3. Press Save (LSK) to store your changes.

Help

This option uses the browser to display the T-Mobile Help menu.

From Home screen, press Menu (LSK) → Settings → Help.

Bluetooth

About Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

You don't need to line up the devices to beam information with Bluetooth. If the devices are within range, you can exchange information between them, even if they are located in different rooms.

► From Home screen, press Menu (LSK) → Settings → Bluetooth

The following options are available:

Turn Bluetooth On/Off

Turn Bluetooth On or Off:

Make a selection and press Select (LSK) or _____. When you turn Bluetooth on, your phone proceeds with searching for nearby Bluetooth devices.

My devices

This option allows you to search for new Bluetooth devices.

Select My devices → Search new device. The phone searches for available devices.

My visibility

When Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This can be useful if you are attempting to connect to other Bluetooth devices. Making your phone visible can pose a security risk and invite unauthorized connection. This feature should be used with Bluetooth security options.

My phone name

When your phone's Bluetooth visibility is On, it identifies itself using the name entered into this text field. This name can be altered by selecting the pre-existing text and entering a new text string in its place. This feature should be paired with a Bluetooth security option.

1. Press and hold 5 to erase the previous name.

- Use the phone's keypad to enter a new name. The default input entry method is Abc, where the initial character is Uppercase and each consecutive character in that same word is left as lowercase text.
- 3. Press Save () to save the new name.

Security mode

When the Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This transmission can pose a security risk and invite unauthorized connection to your phone. It is recommended that you activate your phone's Bluetooth security.

► Highlight **On** or **Off** and press **Select** (LSK) or



Remote SIM mode

This mode allows you to control whether a Bluetooth car kit can access the contact information stored on your phone's SIM card.

Press On or Off and press Select (LSK) or



Features

The Bluetooth specification describes how Bluetooth short-range wireless technology works, and service profiles, or features, describe the services supported by individual devices. Profiles improve the chances that different devices can communicate.

Your phone supports these Bluetooth features:

- Headset: used to make incoming and outgoing calls via Bluetooth headsets.
- Handsfree: used to make incoming and outgoing calls via Bluetooth handsfree car kits.
- Bluetooth stereo headset: used to make calls and listen to music via Bluetooth stereo headset.
- File transfer: used to transfer files to and from Bluetooth devices.
- Object push: used to exchange personal data such as name cards and Phonebook contacts between Bluetooth devices.
- Basic printing: used to print images, text, and personal data such as name cards and appointments via a Bluetooth printer.
- Serial port: used to connect to other Bluetooth devices via a virtual serial port.
- SIM access: used to provide access to the SIM card through Bluetooth.
- Phonebook access: used to export phonebook data to BLuetooth devices

Help

Launches the web2go browser and the T-Mobile Help menu for general help information.

Manage Online Album

This menu allows you to manage the addresses for Flickr, Kodak, Photobucket, or Snapfish.

- From Home screen, press Menu (LSK) → Settings → Manage Online Album.
- Select one of the services, Flickr, Kodak, Photobucket, or Snapfish and press View. (LSK)
- Press Edit (LSK) and enter a new Email address in the Email address field.
- Press to save your entry.

Call settings

Use Call settings to customize your phone's call functions.

Answering mode

Answering Mode allows you to select how your phone answers incoming calls.

- From Home screen, press Menu (LSK) → Settings → Call settings → Answering mode.
- Highlight an option, then press Save () to update your selection. Options include:
 - Send key: answers the call when the Send key is pressed.
 - Any key: answers the call when any key on the keypad is pressed.

Auto redial

You can have the phone automatically redial the last number if the call was cut off or did not connect.

- From Home screen, press Menu (LSK) → Settings →
 Call settings → Auto redial.
- 2. Highlight a selection and press Save (LSK). Options include:
 - Off: the phone will not automatically redial the last number.
 - On: the phone will automatically redial the number.

Show My Number

Use the Show my number setting to control how your phone number is displayed when you make a call.

- From Home screen, press Menu (LSK) → Settings → Call settings → Show my number.
- 2. Highlight an option and press Save (LSK). Options include
 - Set by network: uses the network's settings to determine whether your phone number is displayed.'
 - Show number: displays your information to the recipient.
 - Hide number: hides your information from the recipient.

Auto block

This feature allows you to block specific types of incoming and outgoing calls on your phone based on a phone number. This is useful if you allow someone to use your phone for a short period of time.

- From Home screen, press Menu (LSK) → Settings →
 Call settings → Auto block.
- Highlight the Activation field and press the right Navigation key to enable the feature.
- 3. Highlight Block list and press ().

- Add or edit the current block list:
 - · Unknown blocks all incoming calls from unknown phone numbers.
 - Add additional numbers by select the Block list field and pressing Options (LSK) → Add new.
- 5. Press Save (LSK) or to save the new numbers.

Call Forwarding

This network service enables incoming calls to re-route to a secondary number that you specify.

Example: You may wish to forward your business calls to a colleague while you are on holiday.

To activate call forwarding:

- From Home screen, press Menu (LSK) → Settings → Call settings → Call forwarding.
- Select an available option, then press Select (LSK).
 - · Always: all calls are forwarded until this setting is changed.
 - If busy: calls are forwarded when you are already on another call.
 - If no reply: calls are forwarded when you do not answer the phone for a specified time period (set when you activate call forwarding).
 - If out of reach: calls are forwarded when you are not in an area covered by T-Mobile, or when your phone is switched off.
 - Cancel all: cancels all call forwarding settings.

- In the Forward to field, enter the number to which calls should be forwarded. The current status displays. If the option was previously set, the Forward to number displays.
- 4. Press Options (LSK), then select Activate.
- Press Back (RSK) to go back to activate additional call forwarding options.

To deactivate call forwarding:

- From Home screen, press Menu (LSK) → Settings → Call settings → Call forwarding.
- 2. Select an available option, then press **Select** (LSK).
 - Always: all calls are forwarded until this setting is changed.
 - If busy: calls are forwarded when you are already on another call.
 - $\bullet\,$ If no reply: calls are forwarded when you do not answer the phone.
 - If out of reach: calls are forwarded when you are not in an area covered by T-Mobile, or when your phone is switched off.
 - Cancel all: cancels all call forwarding settings.
- 3. Press Options (LSK), then select Deactivate.

Call Barring (SIM Card Dependent)

Call Barring allows you to restrict specific types of incoming and dialed calls on your phone. This is useful if you allow someone to use your phone for a short period of time.

Call Waiting

Call waiting is a network service which informs you when someone is trying to reach you during another call. You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

- From Home screen, press Menu (LSK) → Settings → Call settings → Call waiting.
- Press Options (LSK) → Deactivate or Activate.

- or -

Press **Options** (LSK) **→ Check status** to confirm your current call waiting status.

Call Status Tones

This option allows you to activate the phone to alert you to changes in call status.

- From Home screen, press Menu (LSK) → Settings → Call settings → Call status tones.
- 2. Press to check/uncheck the following options:
 - Call connect tone: an alert is played when the call is connected.
 - Minute minder: an alert plays at one-minute intervals.
 - Call end tone: an alert plays when the call is disconnected.
- 3. Press Options (LSK) \rightarrow Save or press the Back soft key.

Alerts on Call

Specify whether the phone will use sounds to alert you to incoming messages or calls during a call.

- From Home screen, press Menu (LSK) → Settings → Call settings → Alerts on call.
- 2. Highlight Off or On and press Save (LSK) or



Auto Reply

Create a text message to be sent to the caller when you choose to Reject an incoming call.

- From Home screen, press Menu (LSK) → Settings → Call settings → Auto reply.
- In the Activation field, scroll left or right to choose On or Off.
- Scroll to the Reply to send field, then enter the text of the reply message.
- Press Options (LSK) and select Save to store the message.

Call History Management

This menu allows you to manage your call history. You can view time logs for all calls dialed and received, as well as delete call history.

From Home screen, press Menu (LSK) → Settings → Call settings → Call history management.

Call time

This menu lets you view the time log for calls both made and received.

Important!: The actual time invoiced by T-Mobile may differ from times displayed due to network features and service plan.

From Home screen, press Menu (LSK) → Settings → Call settings → Call history management → Call time.

The following time logs are available:

- Last call time: shows the length of your last call.
- Total incoming: shows the total length of all calls you have received since the timer was last reset.
- Total outgoing: shows the total length of all calls you have made since the timer was last reset.
- Life time: shows the total length of time for all incoming and dialed calls. This information cannot be cleared.

Delete all history

This menu allows you to delete all of the call history, or you can delete missed calls, dialed calls, or answered calls.

- From Home screen, press Menu (LSK) → Settings → Call settings → Call history management.
- 2. Select Delete all history and press Select (LSK) or [



- · All calls: deletes all call history.
- Missed calls: deletes all missed call history.
- Dialed calls: deletes all dialed call history.
- Answered calls: deletes all answered call history.
- Voice mail: deletes all voicemail history.
- Press Delete to delete the selected records.

Advanced

Advanced settings allow you to select and manage your networks, update software, and reset all your settings.

Network

Use the Network setting select the network when roaming outside of your home area.

Note: You can select a network other than your home network only if there is a valid roaming agreement between the two.

To select a network:

- From Home screen, press Menu (LSK) → Settings → Advanced → Network.
- 2. Select Search now.
- 3. Highlight a network and press Select (LSK) or



To change your Default setup:

- From Home screen, press Menu (LSK) → Settings → Advanced → Network.
- Select Default setup.
- Highlight an option and press Select (LSK) or
 - Automatic: you are connected to the first available network when roaming.

Manual: search for available networks and make a selection.

Software Update

Use the Software Update setting to check for upgrades and upload them directly to your phone.

- From Home screen, press Menu (LSK) → Settings → Advanced → Software update.
- 2. Follow the on-screen instructions.

Reset settings

Use Reset settings to set phone settings to their default settings. The following options are available:

- All: Phone, Display, and Sound, are returned to default values.
- Phone settings: only phone settings are returned to default values.
- Display settings: only display settings are returned to default values.
- Sound profiles: only sound settings are returned to default values.

To reset your settings:

- From Home screen, press Menu (LSK) → Settings → Reset settings → Reset settings.
- Highlight individual options or highlight All, and press Mark
) to mark selections.
- Press Reset (LSK).
- 4. Enter your password and press Confirm.

At the Reset settings? prompt, press Yes (LSK) to reset the settings.

Master reset

From this menu you can reset your phone and sound settings to the factory default settings.

- From Home screen, press Menu (LSK) → Settings → Reset settings → Master reset.
- 2. Enter your phone password and press Confirm (LSK).
- Press Yes (LSK) to reset your settings or No (RSK) to cancel.
 Once reset, the phone reboots.

Section 12: Health and Safety Information

This section outlines the safety precautions associated with using your phone. The terms "mobile device" or "cell phone" are used in this section to refer to your phone. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Signals

The U.S. Food and Drug Administration (FDA) has published information for consumers relating to Radio Frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

Do cell phones pose a health hazard?

Many people are concerned that cell phone radiation will cause cancer or other serious health hazards. The weight of scientific evidence has not linked cell phones with any health problems.

Cell phones emit low levels of Radio Frequency (RF) energy. Over the past 15 years, scientists have conducted hundreds of studies looking at the biological effects of the radio frequency energy emitted by cell phones. While some researchers have reported biological changes associated with RF energy, these studies have failed to be replicated. The majority of studies published have failed to show an association between exposure to radio frequency from a cell phone and health problems.

The low levels of RF cell phones emit while in use are in the microwave frequency range. They also emit RF at substantially reduced time intervals when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects.

The biological effects of radio frequency energy should not be confused with the effects from other types of electromagnetic energy.

Very high levels of electromagnetic energy, such as is found in X-rays and gamma rays, can ionize biological tissues. Ionization is a process where electrons are stripped away from their normal locations in atoms and molecules. It can permanently damage biological tissues including DNA, the genetic material.

The energy levels associated with radio frequency energy, including both radio waves and microwaves, are not great enough to cause ionization of atoms and molecules. Therefore, RF energy is a type of non-ionizing radiation. Other types of non-ionizing radiation include visible light, infrared radiation (heat), and other forms of electromagnetic radiation with relatively low frequencies.ctromagnetic radiation with relatively low frequencies.

While RF energy does not ionize particles, large amounts can increase body temperatures and cause tissue damage. Two areas of the body, the eyes and the testes, are particularly vulnerable to RF heating because there is relatively little blood flow in them to carry away excess heat.

Research Results to Date: Is there a connection between RF and certain health problems?

The results of most studies conducted to date say no. In addition, attempts to replicate and confirm the few studies that have shown a connection have failed.

The scientific community at large therefore believes that the weight of scientific evidence does not show an association between exposure to Radio Frequency (RF) from cell phones and adverse health outcomes. Still the scientific community has supported additional research to address gaps in knowledge. Some of these studies are described below.

Interphone Study

Interphone is a large international study designed to determine whether cell phones increase the risk of head and neck cancer. A report published in the International Journal of Epidemiology (June, 2010) compared cell phone usage for more than 5,000 people with brain tumors (glioma and meningioma) and a similar number of healthy controls.

Results of this study did NOT show that cell phones caused brain cancer. In this study, most people had no increased risk of brain cancer from using cell phones. For people with the heaviest use of cell phones (an average of more than ½ hour per day, every day, for over 10 years) the study suggested a slight increase in brain cancer. However, the authors determined that biases and errors prevented any conclusions being drawn from this data. Additional information about Interphone can be found at http://com.iarc.fr/en/media-centre/pr/.

Interphone is the largest cell phone study to date, but it did not answer all questions about cell phone safety. Additional research is being conducted around the world, and the FDA continues to monitor developments in this field.

International Cohort Study on Mobile Phone Users (COSMOS)

The COSMOS study aims to conduct long-term health monitoring of a large group of people to determine if there are any health issues linked to long-term exposure to radio frequency energy from cell phone use. The COSMOS study will follow approximately 300,000 adult cell phone users in Europe for 20 to 30 years. Additional information about the COSMOS study can be found at http://www.ukcosmos.org/index.html.

Risk of Brain Cancer from Exposure to Radio Frequency Fields in Childhood and Adolescence (MOBI-KIDS)

MOBI-KIDS is an international study investigating the relationship between exposure to radio frequency energy from communication technologies including cell phones and brain cancer in young people. This is an international multi-center study involving 14 European and non-European countries. Additional information about MOBI-KIDS can be found at http://www.creal.cat/programes-recerca/en_projectes-creal/view.php?ID=39.

Surveillance, Epidemiology, and End Results (SEER) Program of the National Cancer Institute

The National Cancer Institute (NCI) actively follows cancer statistics in the United States to detect any change in rates of new cases for brain cancer. If cell phones play a role in risk for brain cancer, rates should go up, because heavy cell phone use has been common for quite some time in the U.S. Between 1987 and 2005, the overall age-adjusted incidence of brain cancer did not increase. Additional information about SEER can be found at http://seer.cancer.gov/.

Cell Phone Industry Actions

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the cell phone industry to take a number of steps, including the following:

- Support-needed research on possible biological effects of RF for the type of signal emitted by cell phones;
- Design cell phones in a way that minimizes any RF exposure to the user; and
- Cooperate in providing users of cell phones with the current information on cell phone use and human health concerns.

The FDA also is working with voluntary standard-setting bodies such as the Institute of Electrical and Electronics Engineers (IEEE), the International Commission on Non-Ionizing Radiation Protection (ICNIRP), and others to assure that safety standards continue to adequately protect the public.

Reducing Exposure: Hands-Free Kits and Other Accessories

Steps to Reduce Exposure to Radio Frequency Energy

If there is a risk from being exposed to radio frequency energy (RF) from cell phones - and at this point we do not know that there is - it is probably very small. But, if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your RF exposure.

- · Reduce the amount of time spent using your cell phone;
- Use speaker mode or a headset to place more distance between your head and the cell phone.

Hands-Free Kits

Hands-free kits may include audio or Bluetooth® headsets and various types of body-worn accessories such as belt-clips and holsters. Combinations of these can be used to reduce RF energy absorption from cell phones.

Headsets can substantially reduce exposure because the phone is held away from the head in the user's hand or in approved body-worn accessories. Cell phones marketed in the U.S. are required to meet RF exposure compliance requirements when used against the head and against the body.

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used for convenience and comfort. They are also required by law in many states if you want to use your phone while driving.

Cell Phone Accessories that Claim to Shield the Head from RF Radiation

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that accessories which claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hands-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

Children and Cell Phones

The scientific evidence does not show a danger to any users of cell phones from RF exposure, including children and teenagers. The steps adults can take to reduce RF exposure apply to children and teenagers as well.

• Reduce the amount of time spent on the cell phone;

 Use speaker mode or a headset to place more distance between the head and the cell phone.

Some groups sponsored by other national governments have advised that children be discouraged from using cell phones at all. For example, The Stewart Report from the United Kingdom made such a recommendation in December 2000. In this report, a group of independent experts noted that no evidence exists that using a cell phone causes brain tumors or other ill effects. Their recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (updated 10/1/2010):

- FCC RF Safety Program: http://www.fcc.gov/oet/rfsafety/.
- Environmental Protection Agency (EPA): http://www.epa.gov/radtown/wireless-tech.html.
- Occupational Safety and Health Administration (OSHA): http://www.osha.gov/SLTC/radiofrequencyradiation/.

 (Note: This web address is case sensitive.)
- National Institute for Occupational Safety and Health (NIOSH): http://www.cdc.gov/niosh/.

- World Health Organization (WHO): http://www.who.int/peh-emf/en/.
- International Commission on Non-Ionizing Radiation Protection: http://www.icnirp.de.
- Health Protection Agency: http://www.hpa.org.uk/Topics/Radiation/.
- US Food and Drug Administration:
 http://www.fda.gov/Radiation-EmittingProducts/
 RadiationEmittingProductsandProcedures/
 HomeBusinessandEntertainment/CellPhones/default.htm.

Specific Absorption Rate (SAR) Certification Information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

These FCC exposure limits are derived from the recommendations of two expert organizations: the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE).

In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the mobile device a minimum of 1.5 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- Head: XXXXXX???? W/Kg.
- Body-worn: XXXXXXX???? W/Kg.

SAR information on this and other model phones can be viewed online at http://www.fcc.gov/oet/ea. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Smart Practices While Driving

On the Road - Off the Phone

The primary responsibility of every driver is the safe operation of his or her vehicle.

Responsible drivers understand that no secondary task should be performed while driving whether it be eating, drinking, talking to passengers, or talking on a mobile phone - unless the driver has assessed the driving conditions and is confident that the secondary task will not interfere with their primary responsibility. Do not engage in any activity while driving a moving vehicle which may cause you take your eyes off the road or become so absorbed in the activity that your ability to concentrate on the act of driving becomes impaired. Samsung is committed to promoting responsible driving and giving drivers the tools they need to understand and address distractions.

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. For example, only hands-free use may be permitted in certain areas.

Before answering calls, consider your circumstances. Let the call go to voicemail when driving conditions require. Remember, driving comes first, not the call!

If you consider a call necessary and appropriate, follow these tips:

- Use a hands-free device;
- · Secure your phone within easy reach;
- · Place calls when you are not moving;
- Plan calls when your car will be stationary;
- Do not engage in stressful or emotional conversations;
- Let the person with whom you are speaking know that you are driving and will suspend the call if necessary;
- · Do not take notes or look up phone numbers while driving;

Notice regarding legal restrictions on mounting this device in an automobile:

Laws in some states may prohibit mounting this device on or near the windshield of an automobile. In other states, the law may permit mounting this device only in specific locations in the automobile. Be sure to consult the state and local laws or ordinances where you drive before mounting this device in an automobile. Failure to comply with these restrictions could result in fines, penalties, or other damages.

Never mount this device in a manner that will obstruct the driver's clear view of the street and traffic.

Never use wireless data services such as text messaging, Web browsing, or e-mail while operating a vehicle.

Never watch videos, such as a movie or clip, or play video games while operating a vehicle.

For more information, go to http://www.ctia.org.

Battery Use and Safety

Importantl: Handle and store batteries properly to avoid injury or damage.

Most battery issues arise from improper handling of batteries
and, particularly, from the continued use of damaged batteries.

- Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery. Do not put a high degree of pressure on the battery. This can cause leakage or an internal shortcircuit, resulting in overheating.
- Do not let the phone or battery come in contact with liquids.
 Liquids can get into the phone's circuits, leading to corrosion. Even
 when the phone appears to be dry and appears to operate normally,
 the circuitry could slowly corrode and pose a safety hazard. If the
 phone and/or battery get wet, have them checked by your service
 provider or contact Samsung, even if they appear to be working
 properly.
- Do not place your battery in or near a heat source. Excessive
 heating can damage the phone or the battery and could cause the
 phone or the battery to explode. Do not dry a wet or damp battery with
 an appliance or heat source such as a microwave oven, hair dryer,

- iron, or radiator. Avoid leaving your phone in your car in high temperatures.
- Do not dispose of the phone or the battery in a fire. The phone or the battery may explode when overheated.
- Do not handle a damaged or leaking battery. Do not let leaking battery fluid come in contact with your eyes, skin or clothing. For safe disposal options, contact your nearest Samsung-authorized service center
- Avoid dropping the cell phone. Dropping the phone or the battery, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Do not allow the battery to touch metal objects. Accidental
 short-circuiting can occur when a metallic object (coin, key, jewelry,
 clip, or pen) causes a direct connection between the + and terminals
 of the battery (metal strips on the battery), for example when you carry
 a spare battery in a pocket or bag. Short-circuiting the terminals may
 damage the battery or the object causing the short-circuiting.

Important!: Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers which are specifically designed for your phone. Warning!: Use of a non-Samsung-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard. Samsung's warranty does not cover damage to the phone caused by non-Samsung-approved batteries and/or chargers.

- Do not use incompatible cell phone batteries and chargers. Some
 websites and second-hand dealers not associated with reputable
 manufacturers and carriers, might be selling incompatible or even
 counterfeit batteries and chargers. Consumers should purchase
 manufacturer or carrier-recommended products and accessories. If
 unsure about whether a replacement battery or charger is compatible,
 contact the manufacturer of the battery or charger.
- Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, or leakage, leading to serious injuries, damages to your phone, or other serious hazard.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories.

Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

Recycling programs for your mobile device, batteries, and accessories may not be available in your area.

We've made it easy for you to recycle your old Samsung mobile device by working with respected take-back companies in every state in the country.

Drop It Off

You can drop off your Samsung-branded mobile device and batteries for recycling at one of our numerous Samsung Recycling Direct (SM) locations. A list of these locations may be found at: http://pages.samsung.com/us/recyclingdirect/ usactivities environment samsungrecyclingdirect locations.jsp.

Samsung-branded devices and batteries will be accepted at these locations for no fee.

Consumers may also recycle their used mobile device or batteries at many retail or carrier-provided locations where mobile devices and batteries are sold. Additional information regarding specific locations may be found at: http://www.epa.gov/epawaste/partnerships/plugin/cellphone/index.htm or at http://www.call2recycle.org/.

Mail It In

The Samsung Mobile Take-Back Program will provide Samsung customers with a free recycling mailing label. Just go to http://www.samsung.com/us/aboutsamsung/citizenship/ usactivities environment samsungrecyclingdirect.html?INT=STA_recyle_your_phone_page and follow the instructions to print out a free pre-paid postage label and then send your old mobile device or battery to the address listed, via U.S. Mail, for recycling.

Dispose of unwanted electronics through an approved recycler.

To find the nearest recycling location, go to our website:

www.samsung.com/recyclingdirect Or call, (877) 278-0799.

Follow local regulations regarding disposal of mobile devices and batteries

Dispose of your mobile device and batteries in accordance with local regulations. In some areas, the disposal of these items in household or business trash may be prohibited. Help us protect the environment - recycle!

Warning!: Never dispose of batteries in a fire because they may explode.

UL Certified Travel Charger

The Travel Charger for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines:

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Display / Touch-Screen

Please note the following information when using your mobile device:

WARNING REGARDING DISPLAY

The display on your mobile device is made of glass or acrylic and could break if your mobile device is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

WARRANTY DISCLAIMER: PROPER USE OF A TOUCH-SCREEN MOBILE DEVICE

If your mobile device has a touch-screen display, please note that a touch-screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch-screen may damage the tempered glass surface and void the warranty. For more information, please refer to the "Standard Limited Warranty" on page 153.

GPS & AGPS

Certain Samsung mobile devices can use a Global Positioning System (GPS) signal for location-based applications. A GPS uses satellites controlled by the U.S. Government that are subject to changes implemented in accordance with the Department of Defense policy and the 2008 Federal Radio navigation Plan (FRP). Changes may affect the performance of location-based technology on your mobile device.

Certain Samsung mobile devices can also use an Assisted Global Positioning System (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore airtime, data charges, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. The location-based information may be shared with third-parties, including your wireless service provider, applications providers, Samsung, and other third-parties providing services.

Use of AGPS in Emergency Calls

When you make an emergency call, the cellular network may activate AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and might not work in your area. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the mobile device for as long as the emergency responder instructs you.

Navigation

Maps, directions, and other navigation data may contain inaccurate or incomplete data, and circumstances can and do change over time. In some areas, complete information may not be available. Therefore, you should always visually confirm that the navigational instructions are consistent with what you see before following them. All users should pay attention to road conditions, closures, traffic, and all other factors that may impact safe driving or walking. Always obey posted road signs.

Emergency Calls

This mobile device, like any wireless mobile device, operates using radio signals, wireless and landline networks, as well as user-programmed functions, which cannot guarantee connection in all conditions, areas, or circumstances. Therefore, you should never rely solely on any wireless mobile device for essential communications (medical emergencies, for example). Before traveling in remote or underdeveloped areas, plan an alternate method of contacting emergency services personnel. Remember, to make or receive any calls, the mobile device must be switched on and in a service area with adequate signal strength.

Emergency calls may not be possible on all wireless mobile device networks or when certain network services and/or mobile device features are in use. Check with local service providers.

To make an emergency call:

- 1. If the mobile device is not on, switch it on.
- Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
- 3. Press

If certain features are in use (call blocking, for example), you may first need to deactivate those features before you can make an emergency call. Consult your User Manual and your local cellular service provider. When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your mobile device may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Care and Maintenance

Your mobile device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years:

Keep your Samsung Mobile Device away from:

Liquids of any kind

Keep the mobile device dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits. If the mobile device does get wet, do not accelerate drying with the use of an oven, microwave, or dryer, because this may damage the mobile device and could cause a fire or explosion. Do not use the mobile device with a wet hand. Doing so may cause an electric shock to you or damage to the mobile device.

Extreme heat or cold

Avoid temperatures below 0°C / 32°F or above 45°C / 113°F.

Microwaves

Do not try to dry your mobile device in a microwave oven. Doing so may cause a fire or explosion.

Dust and dirt

Do not expose your mobile device to dust, dirt, or sand.

Cleaning solutions

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the mobile device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

Shock or vibration

Do not drop, knock, or shake the mobile device. Rough handling can break internal circuit boards.

Paint

Do not paint the mobile device. Paint can clog the device's moving parts or ventilation openings and prevent proper operation.

Responsible Listening

Caution!: Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cell phones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing, Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings, and equipment.

You should follow some common sense recommendations when using any portable audio device:

- Always turn the volume down before plugging the earphones into an audio source.
- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- Be aware that you can adapt to higher volume settings over time, not realizing that the higher volume may be harmful to your hearing.
- When using headphones, turn the volume down if you cannot hear the
 people speaking near you or if the person sitting next to you can hear
 what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you
 choose to listen to your portable device in a noisy environment, use
 noise-cancelling headphones to block out background environmental
 noise. By blocking background environment noise, noise cancelling
 headphones should allow you to hear the music at lower volumes than
 when using earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before you hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.

Do not listen at any volume that causes you discomfort. If you
experience ringing in your ears, hear muffled speech, or experience
any temporary hearing difficulty after listening to your portable audio
device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: http://www.audiology.org/Pages/default.aspx

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Email: nidcdinfo@nih.gov

Internet: http://www.nidcd.nih.gov/

National Institute for Occupational Safety and Health (NIOSH)

395 E Street, S.W.

Suite 9200

Patriots Plaza Building

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674)

1-800-CDC-INFO (1-800-232-4636)

Outside the U.S. 513-533-8328

Email: cdcinfo@cdc.gov

Internet: http://www.cdc.gov/niosh/topics/noise/default.html

1-888-232-6348 TTY

Operating Environment

Remember to follow any special regulations in force in any area, and always switch your mobile device off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the mobile device or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

Using Your Mobile Device Near Other Electronic Devices

Most modern electronic equipment is shielded from Radio Frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless mobile device. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless mobile device and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the mobile device more than six (6) inches from their implantable medical device when the mobile device is turned ON;
- · Should not carry the mobile device in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the mobile device OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless mobile device with an implantable medical device, consult your health care provider.

For more information see: http://www.fcc.gov/oet/rfsafety/rf-fags.html#.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your mobile device off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle before using your mobile device in a motor vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your mobile device off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your mobile device off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch the mobile device off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless mobile devices under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless mobile devices be compatible with hearing aids.

The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities. While some wireless mobile devices are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and mobile devices also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless mobile devices to assist hearing device users find mobile devices that may be compatible with their hearing devices. Not all mobile devices have been rated. Mobile devices that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated mobile device successfully. Trying out the mobile device with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Mobile devices rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Mobile devices rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless mobile device rating values are then added together.

A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the above example, if a hearing aid meets the M2 level rating and the wireless mobile device meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with "normal usage" while using their hearing aid with the particular wireless mobile device.

"Normal usage" in this context is defined as a signal quality that is acceptable for normal operation. The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules.

The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

Restricting Children's Access to Your Mobile Device

Your mobile device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the mobile device, or make calls that increase your mobile device bill.

Keep the mobile device and all its parts and accessories out of the reach of small children.

FCC Notice and Cautions FCC Notice

The mobile device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the mobile device if such interference cannot be eliminated. Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association.

Cautions

Any changes or modifications to your mobile device not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and void the mobile device warranty if said accessories cause damage or a defect to the mobile device. Although your mobile device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the mobile device or install the mobile device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Check regularly that all wireless mobile device equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the mobile device, its parts, or accessories.

- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment near or in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your mobile device off before boarding an aircraft. The use of wireless mobile devices in aircraft is illegal and may be dangerous to the aircraft's operation. Check with appropriate authorities before using any function of a mobile device while on an aircraft.
- Failure to observe these instructions may lead to the suspension or denial of cell phone services to the offender, or legal action, or both.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.
- Dispose of phones in accordance with local regulations. In some areas, the disposal of phones in household or business trash may be prohibited. For safe disposal options for phones, contact your nearest Samsung authorized service center.

Section 13: Warranty Information

Standard Limited Warranty

What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the first consumer purchaser ("Purchaser") that SAMSUNG's handsets and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone 1 Year
Batteries 1 Year
Case/Pouch/Holster 90 Days
Other Phone Accessories 1 Year

What is Not Covered?

This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress; (b)

scratches, dents and cosmetic damage, unless caused by SAMSUNG; (c) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (d) equipment that has the serial number or the enhancement data code removed, defaced. damaged, altered or made illegible; (e) ordinary wear and tear; (f) defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (g) defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG: (h) defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source; (i) defects or damage resulting from cellular signal reception or transmission, or viruses or other software problems introduced into the Product: or (i) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery: (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations?

During the applicable warranty period, provided the Product is returned in accordance with the terms of this Limited Warrantv. SAMSUNG will repair or replace the Product, without charge to Purchaser, or at SAMSUNG'S sole option, refund the purchase price, SAMSUNG may, at SAMSUNG's sole option, use rebuilt. reconditioned, or new parts or components when repairing any Product, or may replace Product with a rebuilt, reconditioned or new Product, Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/ replaced Products will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced Products, parts, components, boards and equipment shall become the property of SAMSUNG. This Limited Warranty is extended to the Purchaser and is not transferable or assignable to any other person or entity.

What must you do to obtain warranty service?

To obtain service under this Limited Warranty, Purchaser must return the Product to an authorized phone service facility in an adequate container for shipping, accompanied by the sales receipt or comparable proof of sale showing the original date of purchase, the serial number of the Product and the seller's name and address. To obtain assistance on where to deliver the

Product, please call SAMSUNG Customer Care at 1-888-987-4357. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

Purchaser should keep a separate backup copy of any contents of the Product before delivering the Product to SAMSUNG for warranty service, as some or all of the contents may be deleted or reformatted during the course of warranty service.

What Are The Limits On SAMSUNG's liability?

THIS LIMITED WARRANTY SETS OUT THE FULL EXTENT OF SAMSUNG'S RESPONSIBILITIES, AND THE EXCLUSIVE REMEDY REGARDING THE PRODUCTS. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SAMSUNG BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR FOR, WITHOUT LIMITATION, COMMERCIAL LOSS OF ANY SORT; LOSS OF USE, TIME, DATA, REPUTATION, OPPORTUNITY, GOODWILL, PROFITS OR SAVINGS; INCONVENIENCE; INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES; OR DAMAGES ARISING FROM THE USE OR INABILITY TO USE THE PRODUCT. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR

CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT USED IN CONJUNCTION WITH THE PRODUCT, OR THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE. RESPONSIBILITY FOR THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT RESTS SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT.

Nothing in the Product instructions or information shall be construed to create an express warranty of any kind with respect to the Products. No agent, employee, dealer, representative or reseller is authorized to modify or extend this Limited Warranty or to make binding representations or claims, whether in advertising, presentations or otherwise, on behalf of SAMSUNG regarding the Products or this Limited Warranty.

This Limited Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

What is the procedure for resolving disputes?

ALL DISPUTES WITH SAMSUNG ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE. CONDITION OR PERFORMANCE OF THE PRODUCTS SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY. Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action. The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted according to the American Arbitration Association (AAA) Commercial Arbitration Rules applicable to consumer disputes. This arbitration provision is entered pursuant to the Federal Arbitration Act. The laws of the State of Texas, without reference to its choice of laws principles, shall govern the interpretation of the Limited Warranty and all disputes that are subject to this arbitration provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which the Purchaser's total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less ("Small Claim"), the arbitrator may, if the Purchaser prevails, award the Purchaser's reasonable attorney fees, expert

witness fees and costs as part of any award, but may not grant SAMSUNG its attorney fees, expert witness fees or costs unless it is determined that the claim was brought by the Purchaser in bad faith. In a Small Claim case, the Purchaser shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and SAMSUNG shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which the Purchaser's total damage claims, exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction.

This arbitration provision also applies to claims against SAMSUNG'S employees, representatives and affiliates if any such claim arises from the Product's sale, condition or performance.

Purchaser may opt out of this dispute resolution procedure by providing notice to SAMSUNG no later than 30 calendar days from the date of Purchaser's original purchase of the Product. To opt out, Purchaser must send notice by e-mail to optout@sta.samsung.com, with the subject line: "Arbitration Opt Out." Purchaser must include in the opt out e-mail (a)

Purchaser's name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number, as applicable, if Purchaser has it (the IMEI or MEID or Serial Number can be found (i) on the Product box; (ii) on the Product information screen, which can be found under "Settings;" (iii) on a label on the back of the Product beneath the battery, if the battery is removable; and (iv) on the outside of the Product if the battery is not removable). Alternatively, Purchaser may opt out by calling 1-888-987-4357 and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and Purchaser will continue to enjoy the benefits of the Limited Warranty.

Severability

If any portion of this Limited Warranty is held to be illegal or unenforceable, such partial illegality or unenforceability shall not affect the enforceability of the remainder of the Limited Warranty.

Samsung Telecommunications America, LLC 1301 F. Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG Phone: 1-888-987-HELP (4357) ©2011 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [050611]

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, AND DISCONTINUE USE OF THE SOFTWARE.

 GRANT OF LICENSE. Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single

- computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.
- 2. RESERVATION OF RIGHTS AND OWNERSHIP. Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.
- 3. LIMITATIONS ON END USER RIGHTS. You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.
- 4. CONSENT TO USE OF DATA. You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may

- use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.
- 5. UPGRADES. This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.
- 6. SOFTWARE TRANSFER. You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.
- 7. EXPORT RESTRICTIONS. You acknowledge that the Software is subject to export restrictions of various countries. You agree to

- comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.
- 8. TERMINATION. This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you must cease all use of the Software and destroy all copies, full or partial, of the Software.
- 9. THIRD-PARTY APPLICATIONS. Certain third-party applications may be included with, or downloaded to this mobile device. SAMSUNG makes no representations whatsoever about any of these applications. Since SAMSUNG has no control over such applications, Purchaser acknowledges and agrees that SAMSUNG is not responsible for the availability of such applications and is not responsible or liable for any content, advertising, products, services, or other materials on or available from such applications. Purchaser expressly acknowledges and agrees that use of third-party applications is at Purchaser's sole risk and that the entire risk of unsatisfactory quality, performance, accuracy and effort is with Purchaser. It is up to Purchaser to take precautions to ensure that whatever Purchaser selects to use is free of such items as viruses, worms, Trojan horses, and other items of a destructive nature. References on

this mobile device to any names, marks, products, or services of any third-parties are provided solely as a convenience to Purchaser, and do not constitute or imply an endorsement. sponsorship, or recommendation of, or affiliation with the thirdparty or its products and services. Purchaser agrees that SAMSUNG shall not be responsible or liable, directly or indirectly. for any damage or loss caused or alleged to caused by, or in connection with, use of or reliance on any such third-party content, products, or services available on or through any such application. Purchaser acknowledges and agrees that your use of any third-party application is governed by such third-party application provider's Terms of Use, License Agreement, Privacy Policy, or other such agreement and that any information or personal data you provide, whether knowingly or unknowingly, to such third-party application provider, will be subject to such third-party application provider's privacy policy, if such a policy exists. SAMSUNG DISCLAIMS ANY RESPONSIBILITY FOR ANY DISCLOSURE OF INFORMATION OR ANY OTHER PRACTICES OF ANY THIRD-PARTY APPLICATION PROVIDER.

10. Disclaimer of Warranty Regarding Third-Party Applications. SAMSUNG DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE AVAILABILITY, USE, TIMELINESS, SECURITY, VALIDITY, ACCURACY, OR RELIABILITY OF, OR THE RESULTS OF THE USE OF, OR OTHERWISE RESPECTING, THE CONTENT OF ANY THIRD-PARTY APPLICATION WHETHER

SUCH THIRD-PARTY APPLICATION IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG, IS DOWNLOADED, OR OTHERWISE OBTAINED LISE OF ANY THIRD-PARTY APPLICATION. IS DONE AT PURCHASER'S OWN DISCRETION AND RISK AND PURCHASER IS SOLELY RESPONSIBLE FOR ANY DAMAGE TO YOUR MOBILE DEVICE OR LOSS OF DATA THAT RESULTS FROM THE DOWNLOADING OR USE OF SUCH THIRD-PARTY APPLICATIONS. SAMSUNG EXPRESSLY DISCLAIMS ANY WARRANTY REGARDING WHETHER PURCHASER'S PERSONAL INFORMATION IS CAPTURED BY ANY THIRD-PARTY APPLICATION PROVIDER OR THE USE TO WHICH SUCH PERSONAL INFORMATION MAY BE PUT BY SUCH THIRD-PARTY APPLICATION. PROVIDER. ANY THIRD-PARTY APPLICATIONS PROVIDED WITH THIS MOBILE DEVICE ARE PROVIDED "AS IS" AND ON AN "AS AVAILABLE" BASIS. WITHOUT WARRANTIES OF ANY KIND FROM SAMSUNG, EITHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT POSSIBLE PURSUANT TO APPLICABLE LAW. SAMSUNG DISCLAIMS ALL WARRANTIES EXPRESS. IMPLIED. OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY OR WORKMANLIKE EFFORT. FITNESS FOR A PARTICULAR PURPOSE. RELIABILITY OR AVAILABILITY, ACCURACY, LACK OF VIRUSES, QUIET ENJOYMENT, NON-INFRINGEMENT OF THIRD PARTY RIGHTS OR OTHER VIOLATION OF RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENE WITH YOUR ENJOYMENT OF

THE THRID-PARTY APPLICATION, THAT THE FUNCTIONS CONTAINED IN THE THIRD-PARTY APPLICATION WILL MEET PURCHASER'S REQUIREMENTS, THAT THE OPERATION OF THE THIRD-PARTY APPLICATION WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE THIRD-PARTY APPLICATION WILL BE CORRECTED. PURCHASER ASSUMES THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR, OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW EXCLUSIONS OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY PURCHASER FROM SAMSUNG SHALL BE DEEMED TO ALTER THIS DISCLAIMER OF WARRANTY REGARDING THIRD-PARTY APPLICATIONS, OR TO CREATE ANY WARRANTY.

11. Limitation of Liability. SAMSUNG WILL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND ARISING OUT OF OR RELATING TO THE USE OR THE INABILITY TO USE ANY THIRD-PARTY APPLICATION, ITS CONTENT OR FUNCTIONALITY, INCLUDING BUT NOT LIMITED TO DAMAGES CAUSED BY OR RELATED TO ERRORS, OMISSIONS, INTERRUPTIONS, DEFECTS, DELAY IN OPERATION OR TRANSMISSION, COMPUTER VIRUS, FAILURE TO CONNECT, NETWORK CHARGES, AND ALL OTHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES EVEN IF SAMSUNG HAS BEEN

ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. NOTWITHSTANDING THE FOREGOING, SAMSUNG'S TOTAL LIABILITY TO PURCHASER FOR ALL LOSSES. DAMAGES. CAUSES OF ACTION, INCLUDING BUT NOT LIMITED TO THOSE BASED ON CONTRACT, TORT, OR OTHERWISE, ARISING OUT OF PURCHASER'S USE OF THIRD-PARTY APPLICATIONS ON THIS MOBILE DEVICE, OR ANY OTHER PROVISION OF THIS EULA, SHALL NOT EXCEED THE AMOUNT PURCHASER PAID SPECIFICALLY FOR ANY SUCH THIRD-PARTY APPLICATION THAT WAS INCLUDED WITH THIS MOBILE DEVICE. THE FOREGOING LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS (INCLUDING SECTIONS 9. 10. AND 11) SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

- 12. U.S. GOVERNMENT END USERS. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.
- 13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the

International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to

default settings. Please contact the **Samsung Customer Care Center** for details.

Important!: Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein Rd. Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

Important!: If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets

Phone: 1-888-987-HELP (4357)

©2011 Samsung Telecommunications America. All rights

reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Index

ABC mode 37, 71 Calendar 85 Call Accessing a Menu Function 33 Auto Block 127 B Call Functions 22 Adjusting the Call Volume 23 Answering a Call 24 Call History 24 Correcting the Number 22 Ending a Call 22 Installing 8 Low Battery Indicator 10 Removal 9 Wall Charger 9 Battery Cover Replace 6 Battery Use & Safety 140 Bluetooth About 124 Features 126 Turning Bluetooth On and Off 124 Call and Call Wistory 24 Call Functions 22 Adjusting the Call Volume 23 Answering a Call 22 Ending a Call 22 Making a Call 22 Making a Call 122 Making a Call 122 Making a Call 100 Placing a Call on Hold 29 Redialing Last Number 22 Splitting Callers 31 Vibration Profile 27 viewing recently answered calls 26 Call History Call Time 130 Dealet All 131	Call Records All calls 24 Delete all 26 Dialed calls 26 Missed calls 25 Voicemail 26 Call Waiting 30 Caller Groups 63 Adding 63 Editing 64 Camcorder Default Storage 108 Options 107 Recording 106 Sending 106 Settings 107 Camcorder Shortcuts Shortcut Keys 108 Camera 102 taking photos 102
--	--

Care and Maintenance 145 Dialing Display 114 **Regulations for Wireless Devices** 150 **FCC Notice and Cautions 151 Charging Battery** 9 Display Children and Cell Phones 136 Backlight 19 Find Great Games 74 Icons 18 Flickr 126 **Contact Entries** Deleting All 66 Display / Touch-Screen 143 Font Size Deleting from Phone 67 Do cell phones pose a health hazard? Main Display 114 Deleting from SIM 67 133 Fun & Apps 69, 85 **Functions and Options 27** Contacts F Default Storage Settings 66 **Emergency Calls 145** Conversations 48 **Entering Text** 35 Getting Started 4, 33 Copying Changing the Text Entry Mode 37 Activating Your Phone 6 Contact 61 Using ABC Mode 40 Battery 8 Number 61 Using Numeric Mode 41 microSD card 7 Phone to SIM 61 SIM Card 6 Using Symbol Mode 41 Using T9 Mode 38 Visual Voicemail 12 **Default Destination Exposure to RF Signals** 133 **GPS & AGPS** 143 н Images 74 Deleting Facebook 121 HAC Mode 116 Contacts 66 **Health and Safety Information** 133 Chat 121 Dialing FCC Hearing Aid Compatibility (HAC) Help 21, 124 With a SIM 11 Without a SIM 11 In Call Options 28 **Dialing a Number** International Call 22 Phonebook 63

K	Message settings	My Number 68
Keyboard Shortcuts 121	Picture message 57	My Space 121
Keypad Light Settings 115	Message Threads 48 Messages 43	My Stream 121
Kodak 126 L Low Battery Indicator 10 M Making a Call Phonebook 23 Mass Storage 119 Master Reset 132 Memory Status 67 Menu Navigation 33 Message Inbox Viewing a Picture Message 50 Viewing a Text Message 49 Viewing an Incoming Picture Message 50 Message Settings 56 Receiving Options 57 Sending Options 57 Text Message 56 Text Message Center 56	Types of Messages 43 Messaging Key 120 microSD Card Insertion 7 Removal 8 Missed Call Viewing 25 Multi-Party Call 30 Creating 31 Dropping One Participant 32 Private Conversation 31 Setting up 30 Splitting Callers 31 Mute 28 My Album 75, 109 My Folders 53 Creating 53	Number mode 37, 71 Numeric 37, 71 O Operating Environment 148 Optical Joystick Sensitivity 120 Options During a Call 28 Making a New call while in a call 29 Organizer 85 Calculator 98 Calendar 85 Converter 99 Stopwatch 100 Timer 100 Tip calculator 98 World time 99 Other Important Safety Information 15

Responsible Listening 146	Sound Settings
Restricting Children's Access to Your	Vibration Mode 111
Mobile device 151	Speakerphone 29
S	Speed Dial
Samsung PC Studio 119	Setting Up Entries 65
Samsung Products and Recycling 141	Standard Limited Warranty 153
SAR Certification Information 137	Stopwatch 100
Sending a Video 106	Storing a Number
Sensitivity 120	phone's memory 60
Settings 110	Symbol mode 37, 71
Bluetooth 124	T
Display 114	T9 mode 37, 71
Phone 116	Take and Send 102
Sound 110	Task List 97
Time and Date 124	Text Input Mode
Shortcuts 34, 120, 121	Changing 37
Show My Number 127	Text Messages 44
SIM Card	Themes 114
Insertion 6	Timer 100
Removal 7	T-Mobile Mall 69
Smart Practices While Driving 139	Twitter 121
Snapfish 126	
Social Buzz 55, 121	
Soft Keys 27	
Software Update 132	
	Samsung PC Studio 119 Samsung Products and Recycling 141 SAR Certification Information 137 Sending a Video 106 Sensitivity 120 Settings 110 Bluetooth 124 Display 114 Phone 116 Sound 110 Time and Date 124 Shortcuts 34, 120, 121 Show My Number 127 SIM Card Insertion 6 Removal 7 Smart Practices While Driving 139 Snapfish 126 Social Buzz 55, 121 Soft Keys 27

U	Confirmation 95
IL Certified Travel Charger 142	Looking Up 94
Inderstanding Your Phone 13	Making a Voice Call 92
Camera View 15	Opening Menus 94
Features of Your Phone 13	Reset Adaptation 96
Open View 13	Sending a Message 93
Inderstanding Your Phonebook 60	Settings 95
Finding a Contact Entry 62	Speakerphone 96
lpload pic 121	Tips for Using 92
ISB Mode 119	Voicemail 26
Mass Storage 119	W
V	Wallpaper 77, 114
ibration Mode 27, 111	Warranty Information 153
isual Voicemail	web2go 69
Accessing 12	Bookmarks 72
Enabling 12	Browser settings 73
Getting Started 12	Clear cache 73
Setting Up 12	Enter URL 72
Voice Mail 12, 53	Entering Text 71
oice Recognition 91	Exiting 70
About 96	History 72
Adaptation 95	Home 69
Audio Modes 96	Navigating 70
Checking Phone Status 94	Saved pages 72
Configuring Settings 95	