

# SGH-t519

## PORTABLE Quad - Band TELEPHONE

### User Guide

**Please read this manual before operating your  
phone, and keep it for future reference.**

The Samsung logo is a blue oval with the word "SAMSUNG" in white, bold, uppercase letters inside it.

**SAMSUNG**

## Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

## Samsung Telecommunications America (STA), Inc.

Headquarters:	Customer Care Center:
1301 E. Lookout Drive	1000 Klein St.
Richardson, TX 75082	Plano, TX 75074
	Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

Do you have questions about your Samsung Mobile Phone? For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

©2006 Samsung Telecommunications America, Inc. is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Printed in Korea





GH68-11787A

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

## **Disclaimer of Warranties; Exclusion of Liability**

    EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.




## Table of Contents

<b>Section 1: Getting Started</b> .....	<b>5</b>
Activating Your Phone .....	6
Switching the Phone On or Off .....	11
Setting Up Your Voice mail .....	12
<b>Section 2: Understanding Your Phone</b> .....	<b>15</b>
Features of Your Phone .....	16
View of Your Phone .....	16
Keys .....	17
Display Layout .....	19
Get More Help .....	21
<b>Section 3: Call Functions</b> .....	<b>23</b>
Making a Call .....	24
Adjusting the Call Volume .....	26
Answering a Call .....	27
Call records .....	28
Silent mode .....	32
Selecting Functions and Options .....	32
<b>Section 4: Menu Navigation</b> .....	<b>43</b>
Menu Navigation .....	44
Menu Outline .....	45
<b>Section 5: Entering Text</b> .....	<b>51</b>
Changing the Text Input Mode .....	52
Using ABC Mode .....	53
Using T9 Mode .....	55
Using Number Mode .....	57
Using Symbol Mode .....	57
<b>Section 6: Understanding Your Phonebook</b> ...	<b>59</b>
Storing a Number in the Phone's Memory .....	60
Storing a Number in the SIM Card .....	61

Finding a Phonebook Entry .....	64
Speed Dialing .....	66
Editing a Caller Group .....	67
Copying all SIM Phonebook Entries .....	69
Deleting all of the Phonebook Entries .....	69
My Name Card .....	71
Finding My Own Phone Number .....	71
FDN List .....	72
Management .....	73
<b>Section 7: Messages .....</b>	<b>75</b>
Types of Messages .....	76
Voice notes .....	76
Text messages .....	78
Picture message .....	81
Inbox .....	84
Sentbox .....	91
Outbox .....	92
Drafts .....	93
Templates .....	93
Voice mail .....	95
Delete all .....	95
Settings .....	96
Broadcast Messages (SIM Dependent) .....	97
Memory status .....	97
Instant Messaging .....	98
<b>Section 8: Changing Your Settings .....</b>	<b>101</b>
Time & Date .....	102
Phone settings .....	103
Display settings .....	105
Sound settings .....	108
Bluetooth .....	111
Network services .....	113

 Security .....	117
Software update .....	120
Reset settings .....	121
<b>Section 9: Fun &amp; Apps .....</b>	<b>123</b>
My Files .....	124
Games .....	133
Music player .....	135
Camera .....	136
Organizer .....	136
<b>Section 10: Camera and Camcorder .....</b>	<b>147</b>
Using the Camera and Camcorder .....	148
Take and send .....	148
Record video .....	152
My photos .....	154
My videos .....	156
My Album .....	158
My Journal .....	159
<b>Section 11: t-zones .....</b>	<b>161</b>
t-zones .....	162
<b>Section 12: Health and Safety Information ...</b>	<b>167</b>
Health and Safety Information .....	168
UL Certified Travel Adapter .....	170
Consumer Information on Wireless Phones .....	171
Road Safety .....	180
Operating Environment .....	183
Using Your Phone Near Other Electronic Devices .....	183
Potentially Explosive Environments .....	185
Emergency Calls .....	185
FCC Notice and Cautions .....	187
Other Important Safety Information .....	187
Product Performance .....	188
Availability of Various Features/Ring Tones .....	190



Battery Standby and Talk Time .....190






Battery Precautions .....190

Care and Maintenance .....192

**Section 13: Warranty Information .....195**

Standard Limited Warranty .....196

     **Index .....203**



## Section 1: Getting Started

### Topics Covered

---

- Activating Your Phone
  - Switching the Phone On or Off
  - Setting Up Your Voicemail
- 

This section describes how to start using your phone by activating your service and setting up your voice mail.

Section 1

## Activating Your Phone

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available, and many others.

### Installing the SIM Card

---

**Important!** The plug-in SIM card and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

---

1. If necessary, switch off the phone by holding down the  key until the power-off image displays.
2. If necessary, disconnect the Travel Adapter from the phone. See “Charging a Battery” on page 9 for more information.
3. Remove the battery cover.

To do so, press the ridged area on the battery cover using your thumb and gently slide it in the direction of the arrow. Remove the battery cover.




Activating Your Phone

4. Grasp the top of the battery with your finger and lift up in the direction of the arrow. Remove the battery.




5. Slide the SIM card into the SIM card socket so that the card locks into place. Make sure the gold contacts of the card face into the phone.

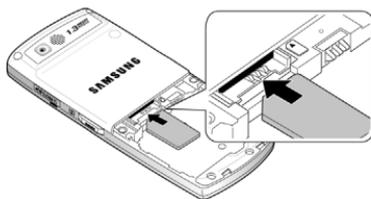

---

**Note:** When you need to remove the SIM card, slide it, as shown, and take it out of the socket.

---

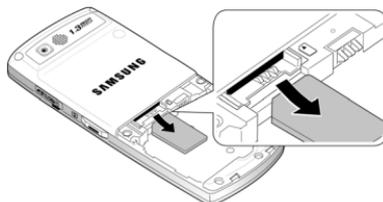

Section 1

6. Place the battery so that the 3 brass tabs on the end align with the 3 brass prongs at the bottom of the battery compartment. The arrow on the battery should be pointing down. Press the battery down until it clicks into place.



## Activating Your Phone

7. Place the battery cover on and slide it into place until it clicks.



### Charging a Battery

Your phone is powered by a rechargeable Li-ion battery.

A Travel Adapter comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

You can use the phone while the battery is charging, but doing so will require additional charging time.

---

**Note:** You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 2 hours.

---

1. With the battery in position in the phone, plug the connector of the Travel Adapter into the jack on the side of the phone.

Section 1



---

**Note:** The following illustration is the **incorrect** method for connecting the charger. If attempted, damage to the accessory port will occur therefore voiding the phone's warranty.

---



2. Plug the adapter into a standard AC wall outlet.

---

**Note:** For connection to an electrical supply not located in the U.S., you **must** use an adaptor of the proper configuration for the power outlet. Use of the wrong adaptor could damage your phone and void your warranty.

---

3. When charging is finished, unplug the Travel Adapter from the power outlet and disconnect it from the phone.

## Switching the Phone On or Off



---

**Important!** You must unplug the Travel Adapter before you remove the battery from the phone during charging; otherwise, the phone could be damaged.

---

### Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and the “Warning low battery” message repeats at regular intervals on the display. When this happens, your phone turns off the backlight to conserve the remaining battery power.

When the battery level becomes too low, the phone automatically turns off.

### Switching the Phone On or Off

1. Press and hold the  key until the phone switches on.
2. If the phone asks for a PIN, enter the PIN and press the **OK** soft key or the  key. For further details, see “PIN check” on page 117.

The phone searches for your network and after finding it, the name of your service provider appears on your display. Now, you can make or receive calls.

---

**Note:** The display language is preset to English at the factory. To change the language, use the Language menu. For further details, see "Language" on page 103.

---

3. When you wish to switch off the phone, press and hold the  key until the power-off image displays.

## Setting Up Your Voice mail

For new users, follow the instructions below to set up Voice mail:

1. In Idle mode, press and hold the  key on the keypad.
2. Follow the tutorial to create a password, a greeting, and your name.

---

**Note:** These steps may be different depending on your network.

---

## Accessing Your Voice mail

You can access your Voice mail by pressing and holding the  key on the keypad or by going to the menu. To access Voice Mail using the menu:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Highlight **Messages** and press the **Select** soft key or the  key.
3. Highlight **Voice mail** and press the **Select** soft key or the  key.

 
 

### Setting Up Your Voice mail

4. Highlight **Call voice mail** and press the **OK** soft key or the **OK** key. Your phone dials the specified voice mail number. When connected, follow the voice prompts from the Voice mail center.

## Changing the Voice mail Number

Your SIM card gives you the default service number of the Voice mail center. However, should you need to change the number or add a second Voice server number, use the following procedures:

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Highlight **Messages** and press the **Select** soft key or the **OK** key.
3. Highlight **Voice mail** and press the **Select** soft key or the **OK** key.
4. Highlight **Voice server number** and press the **OK** soft key or the **OK** key. Highlight **Voice mail** and press the **OK** soft key.
5. Press the **Edit** soft key. Edit the number, then press the **OK** soft key. The number will be saved.
6. Press the **Back** key to return to Idle mode.

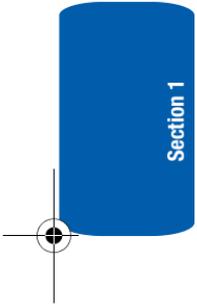

## Section 2: Understanding Your Phone

### Topics Covered

---

- Features of Your Phone
  - View of Your Phone
  - Keys
  - Display Layout
  - Get More Help
- 

This section outlines some key features of your phone. It also describes the screen and the icons that are displayed when the phone is in use.

Section 2

## Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- 1.3 Megapixel Camera and Camcorder
- Bluetooth® Wireless Technology
- Instant Messaging capability
- Multimedia capability
- Fun & Apps feature provides My Files, music player, games, alarms, calendar, task list, calculator, world time, unit conversion, timer, and stopwatch.

## View of Your Phone

The following illustrations show the main elements of your phone:





## Keys

The following list correlates to the illustrations.

1. During a call, adjusts the earpiece volume.  
In Idle adjusts the ring volume. With the phone closed, turns on the external display when held down.  
When receiving a call with the mutes the ringer and can reject the call to Voice mail.
2. The headset jack is used for the hands-free headset. Also used to plug your battery charger cable or your USB cable here.
3. Performs the functions indicated by the screen text on the bottom line of the display.
4. Makes or answers a call.  
In Idle mode, recalls the last number dialed or received when held down.
5. In Idle mode, accesses voice mail when held down.
6. Enters special characters. Performs various functions.

7. The microphone used during phone calls and voice note recordings.
8. Enters numbers, letters, and some special characters.
9. The Cancel key deletes characters from the display.  
In Menu mode, it returns you to the previous menu level.
10. Ends a call. Also switches the phone on and off when held down.  
In Menu mode, cancels your input and returns the phone to Idle mode.
11. OK/Select key. In Menu mode, selects the highlighted menu options.

When the Left soft key shows **Options**, it is the short-cut key to select the first option in the options list.

12. In Menu mode, scrolls through the menus and Phonebook.

In Idle mode:

- **Up key**: allows you to access the Camera or Camcorder feature directly.
- **Down key**: allows you to access your Contact list directly.
- **Left key**: allows you to access Text messaging directly.
- **Right key**: allows you to access Voice notes recording directly.

When entering text, moves the cursor to the left or right, depending on which side you press.


13. Used to launch the camera/camcorder with a press and hold.

## Display Layout

14. Micro SD memory card slot. This expansion slot allows you to insert a micro SD memory card to add additional memory and storage capacity.
15. Display area where text and graphics are displayed.
16. Used to listen to audio from your phone.
17. The built-in digital camera/camcorder lens.
18. The external speaker used for the speakerphone and to hear audio during a video playback.

## Display Layout

The display has 4 areas:

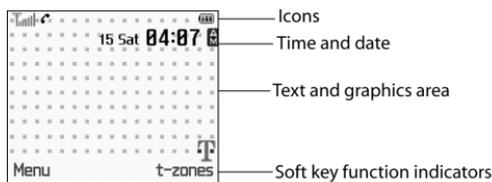

## Icons

-  Shows the received signal strength. The greater the number of bars, the stronger the signal.
-  Appears when a micro SD memory card has been inserted.
-  Appears when a new text message has been received.
-  Appears when a new voice mail has been received.
-  Appears when a new multimedia message has been received.

-  Appears when you set an alarm to ring at a specified time. For details, see page “Alarm” on page 136.
-  Appears when you are out of your service area.
-  Appears when a call is in progress.
-  Appears when the Call Forwarding feature is active. For details, see page “Call forwarding” on page 113.
-  Appears when Alert type is vibration or you set the phone to vibrate when you receive a call.
-  Appears when Silent Mode is active (Vibration).
-  Appears when Mute is active (Mute).
-  Appears when Mute mode is active during a call.
-  Shows the level of your battery. The more bars you see, the more power you have remaining.
-  Appears when Bluetooth wireless technology is active.

## Backlight

The backlight illuminates the display and the keypad. When you press any key the backlight turns on. It goes off when no keys have been pressed within a given period of time, depending on the setting in the Backlight menu.

The **On** setting is how long the keypad backlight is on. You can select 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.

The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit. You can

[Get More Help](#)

select Off, 15 seconds, 30 seconds, 1 minute, or 3 minutes.

To specify your Backlight settings:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Settings** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Display settings** option and press the **Select** soft key or the **OK** key.
4. Highlight the **Backlight** option and press the **Select** soft key or the **OK** key.
5. Highlight the **On** option. Use the **Left** or **Right** Navigation key to select the time that the backlight is on. You may choose between 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.
6. Press the Down key to take you to the **Dim** option. Use the **Left** or **Right** Navigation key to select the time that Dimming mode is on. You may choose between Off, 15 seconds, 30 seconds, 1 minute, or 3 minutes.
7. Press the **Save** soft key to save your settings.

Section 2

## Get More Help

Get More Help is designed to show you some of the features of your phone using t-zones. You can search help files on the fly while traveling, at home or anywhere, using [help.wap.t-mobile.com](http://help.wap.t-mobile.com).

1. In Idle mode, press the **t-zones** soft key to access Get

More Help.

2. You can access the following options when you press Menu.
  - Go to
  - Brower menu
  - t-zones

The following options are available:

- **Browse Help Topics:** this option gives you a list of different topics that you can select.
- **Enter a Search:** this option allows you to enter a keyword to search on.
- **About:** this option offers general information about Get More Help including concept and site design, copyright information, and contact email address.

To access the browser options menu:

1. Press the **Menu** soft key to see the Browser Options.
2. Make a selection and press the **Select** soft key or the **OK** key.

---

**Note:** The menus may vary, depending on your t-zones subscription.

---

For more information on browser options, see “Selecting and Using Options” on page 164.

## Section 3: Call Functions

### Topics Covered

---

- Making a Call
  - Adjusting the Call Volume
  - Answering a Call
  - Call records
  - Silent Mode
  - Selecting Functions and Options
- 

This section describes how to make or answer a call. It also includes information on the features and functionality associated with making or answering a call.

## Making a Call

When the idle screen displays, enter the number you wish to dial and press the  key.

---

**Note:** When you activate the **Auto redial** option in the Extra settings menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone, provided your call is not sent to voice mail. See page “Extra settings” on page 104 for further details.

---

## Making an International Call

1. Press and hold the  key. The + character appears.
2. Enter the country code, area code, and phone number and press the  key.

## Correcting the Number

1. To clear the last digit displayed, press the  key.
2. To clear any other digit in the number, press the **Left** or **Right** navigation key until the cursor is immediately to the right of the digit to be cleared. Press the  key. You can also enter a missing digit.
3. To clear the whole display, press and hold the  key.

## Ending a Call

When you want to finish your call, briefly press the  key.

## Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the caller is identified.

To recall any of these numbers:

## Making a Call

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Call records** icon. Press the **Select** soft key or the **OK** key to enter the menu.

---

**Note:** You can also access the call records of incoming, outgoing, and missed calls by pressing the  key in Idle mode.

---

3. Select **All calls** and press the **Select** soft key or the **OK** key.
4. Use the **Up** and **Down** keys to scroll through the numbers and highlight the number you want.
5. To dial the number, press the  key.

Before you dial the number, you may press the **Options** soft key for the following options:

- **Detail:** Displays details of the number including name, number, and dates and times of calls.
- **Call back:** Places a call back to the number.
- **Send message:** Allows you to send a Text message, Picture message, or Voice note to the number.
- **Save to phonebook:** Stores the number in your phonebook. Choose to save this number as a **New contact** or **Existing Contact**.
- **Delete:** Allows you to delete the Selected call record or All call records.

## Making a Call from the Phonebook

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the Phonebook.

Once you have stored a number in the Phonebook, you can dial it by pressing a few keys. You can also assign your most frequently-used numbers to number keys using the Speed Dial feature.

For further details about the Phonebook feature, see "Section 6: Understanding Your Phonebook" on page 59.

## Adjusting the Call Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.


Press the  key to increase the volume level and the  key to decrease the level.

## Muting Ringer and Rejecting Calls

When receiving a call, if you want to mute the ringer without answering the call, press either volume key.

To reject a call and send it immediately to Voice mail, press and hold either of the volume keys.

## Answering a Call

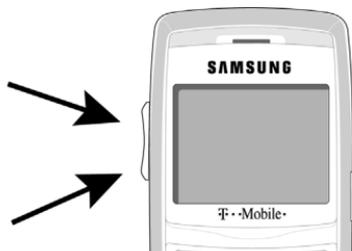

### Adjusting Ringer Volume

In Idle mode, you can also adjust the ring volume using these keys while the phone is open.

### Answering a Call

When somebody calls you, the phone rings and displays the incoming call image.

The caller's phone number, or name if stored in Phonebook, displays.

1. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Anykey answer** option in the Extra settings menu is activated, you can press any key to answer a call except for the  key and the **Reject** soft key.

---

**Note:** To reject an incoming call, press the **Reject** soft key or  key.

---



---

**Note:** You can reject a call with your phone closed by pressing the volume key on the side of the phone.

---

2. End the call by closing the phone or pressing the  key.

---

**Note:** You can answer a call while using the Phonebook or menu features. After answering the call, the phone returns to the function screen you were using.

---

## Call records

All incoming, outgoing and missed calls are listed in the Call records. You can also view Call time.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Call records** icon. Press the **Select** soft key or the  key to enter the menu.

---

**Note:** You can also access the call records of incoming, outgoing, and missed calls by pressing the  key in Idle mode.

---

The following Call records options are available:

### All calls

This menu lets you view the 90 most recent calls you received, sent, and missed.

The number or name, if already stored in your Phonebook, displays with the number of occurrences of each number.

---

**Note:** at any time while you are in Call records, you may use the **Left** or **Right** Navigation key to scroll between **All calls**, **Missed calls**, **Incoming calls**, and **Outgoing calls**.

---

## Missed calls

This menu lets you view the 30 most recent calls you received, but did not answer.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.

### Viewing Missed calls without Using the Menu

When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.

The number of calls you have missed displays on the idle screen immediately after a call is missed.

To view a missed call immediately:

1. Press the **View** soft key.

The number corresponding to the most recent missed call displays, if available.

2. To scroll through the missed calls, press the **Up** or **Down** Navigation key.
3. To call the number displayed, press the  key.
4. Press the **Options** soft key for the following options:
  - **Detail:** Displays details of the number including name, number, and dates and times of calls.
  - **Call back:** Places a call back to the number.
  - **Send message:** Allows you to send a Text message, Picture message, or Voice note to the number.
  - **Save to phonebook:** Stores the number in your phonebook. Choose to save this number as a **New contact** or **Existing Contact**.

- **Delete:** Allows you to delete the Selected call record or All call records.

You can press the  key at any time to exit the Missed calls feature.

### Incoming calls

This menu lets you view the 30 most recent calls you received.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.

### Outgoing calls

This menu lets you view the 30 most recent calls you dialed.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.

### Delete all

This menu allows you to delete all of the records in each call record separately, or you can delete all of your call records at one time.

1. Highlight the type of calls you want to delete and press the  key to make a check mark.
2. Press the **Delete** soft key to delete the calls.
3. When a confirmation message displays, press the **Yes** soft key or  key to confirm.

## Call time

This menu lets you view the time log for calls made and received.

---

**Note:** The actual time invoiced by your service provider may differ from times displayed due to network features and service plan.

---

The following time logs are available:

- **Last call time:** shows the length of your last call.
- **Total incoming:** shows the total length of all calls you have received since the timer was last reset.
- **Total outgoing:** shows the total length of all calls you have made since the timer was last reset.
- **Life time:** shows the total length of time for incoming and outgoing calls. The length of call time must be at least 1 minute to increment this field. This information cannot be cleared.

To reset a call timer:

1. Use the **Up** or **Down** navigation key to highlight the timer you want to reset.
2. Press the **Reset** soft key. Enter the phone password and then press the **OK** soft key or **OK** key.

---

**Note:** The password is preset to "00000000" at the factory. To change this password, see "Change password" on page 118.

---

## Silent mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

In Idle mode, press and hold the **[#\*\*]** key until the “Silent mode on” message and the Silent mode icon (🔇) display.

In Silent mode, instead of sounds, your phone will vibrate.

To exit and reactivate the previous sound settings, press and hold the **[#\*\*]** key again until “Exit silent mode” message appears. The Silent mode icon (🔇) no longer displays.

## Selecting Functions and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

### Soft Keys

The roles of the soft keys vary depending on the function you are currently using. The labels on the bottom line of the display just above each key indicate their current role.

## Selecting Functions and Options

Press the Left soft key for **Menu** mode.



Press the Right soft key to access the **t-zones** menu.

### Selecting Options

To view the various functions and options available and to select the one you want:

1. Press the appropriate soft key.
2. To select the function displayed or the option highlighted, press the **Select** soft key or the **OK** key.
3. To view the next function or highlight the next option on a list, press the **Down** Navigation key.
4. To move back to the previous function or option on a list, press the **Up** key.
5. To move back up one level in the menu structure, press the **Back** soft key.
6. To exit the menu structure without changing the settings, press the **End Call** key.

When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

## Options During a Call

Your phone provides a number of control functions that you can use during a call.

### Switch to phone/Switch to headset (Bluetooth only)

You can use this option to switch between using your Bluetooth headset and using your phone's earpiece and microphone without interrupting the call in progress.

---

**Tip:** This option is handy if your Bluetooth headset battery is running low on talk power or is experiencing interference.

---

---

**Note:** This option does not appear when you are not using your Bluetooth headset.

---

To switch from using your Bluetooth headset:

1. While in a call, press the **Options** soft key and highlight the **Switch to phone** option.
2. Press the **Select** soft key or the **OK** key. A message is displayed. You can now talk with the other person using your phone's microphone and earpiece.

To switch to using your Bluetooth headset:

1. While in a call, press the **Options** soft key and highlight the **Switch to headset** option.
2. Press the **Select** soft key or the **OK** key. A message is displayed. You can now talk with the other person using your Bluetooth headset.

### Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

---

**Example:** You wish to say something to a person in the room but do not want the person on the phone to hear you.

---

To switch the microphone off temporarily:

1. Press the **Options** soft key and highlight the **Mute** option.
2. Press the **Select** soft key or the **OK** key. The other person can no longer hear you. The Mute icon is displayed.

To switch the microphone back on:

1. Press the **Options** soft key and highlight the **Unmute** option.
2. Press the **Select** soft key or the **OK** key. The other person can hear you again.

### Putting a Call on Hold

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

To place a call on hold, simply press the **Options** soft key, highlight the **Hold call** option, then press the **Select** soft key or the **OK** key. You can reactivate the call whenever you want, by pressing the **Resume** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in the Phonebook.
2. Press the **Call** key to dial the second call.

The first call is automatically put on hold.

Or

1. Press the **Options** soft key and select **Hold call**.
2. Make the second call in the normal way.

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

To switch between the two calls, simply press the **Options** soft key and select **Swap**.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with that person.

When you want to finish, end each call normally by pressing the  key.

### Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing annoying key tones during a call.

---

**Note:** To communicate with answering machines or computerized telephone systems, the **Send keys** option must be selected.

---

### Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact your service provider.

### Setting up a Multi-Party Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multi-party call, press the **Options** soft key or the **OK** key and select **Join**. Press the **Select** soft key or the **OK** key.
4. To add a new person to the multi-party call, call the new person in the normal way and then press the **Options** soft key or the **OK** key. Select the **Join** option and press the **Select** soft key or the **OK** key.

You can add incoming callers by answering the call and pressing the **Options** soft key or the **OK** key, and selecting **Join**. Repeat as required.

### Having a Private Conversation With One Participant

1. Press the **Options** soft key or the **OK** key and highlight the **Select one** option. Press the **Select** soft key or the **OK** key.

The list of call participants appears.

2. Highlight a person you wish to talk privately with by pressing the **Up** or **Down** Navigation key, and press the **Options** soft key.
3. Highlight the **Split** option and press the **OK** soft key.

Now you can talk only to that person. The other participants can continue to converse with each other.

- To return to the multi-party call, press the **Options** soft key or the  key and select **Join**. Press the **Select** soft key or the  key.

All of the multi-party call participants can now hear each other.

### Dropping One Participant

- Press the **Options** soft key and highlight the **Select one** option. Press the **Select** soft key or the  key.  
The list of call participants appears.
- Highlight the person you want to keep. Press the **Options** soft key and highlight the **Split** option. Press the **OK** soft key.
- Press the **Options** soft key or the  key and highlight the **End held multiparty**. Press the **Select** soft key or the  key.

The call with the participant on hold will end, but you can continue to talk to the other participants.

- When you want to end the multi-party call, close the phone or press the  key.

### Searching for a Number in Phonebook

You can search for a number in Phonebook during a call.

- Press the **Options** soft key.
- Press the **Down** key to highlight the **Phonebook** option and press the **Select** soft key or the  key.

The Phonebook menu appears in the display.

### Selecting Functions and Options

3. Press the **Down** key to highlight the **Contact list** option and press the **Select** soft key or the **OK** key.  
The **Contact list** screen appears in the display.
4. Enter the name that you wish to find in the textbox located above the entries. If you enter the first few letters of the name, the Phonebook entries are listed starting with the first entry matching your input.  
Or, use the **Up** or **Down** Navigation key to highlight the contact that you desire.
5. To view the highlighted entry, press the **Options** soft key.
6. Highlight the **View** option and press the **Select** soft key or the **OK** key. The Contact is displayed.
7. Press the  key to dial the call.

For further details about the Phonebook feature, see “Finding a Phonebook Entry” on page 64.

### Send DTMF

You can use the **Send DTMF** option to send a key string or number during a phone call. For example, you can send a calling card number by DTMF while on a call.

1. Press the **Options** soft key.
2. Highlight the **Send DTMF** option and press the **Select** soft key or the **OK** key.
3. Enter a number and press the **OK** soft key. The number is sent.

## Message

This option causes the Messages menu to appear in the display. You can use this option to send, receive, and review text and picture messages. See "Section 7: Messages" on page 75 for more information.

## Menu

This option places your phone in main menu mode without interrupting the call in progress. You can use this option to access many of your phone's features during a call.

## Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

1. Press the **Spkr on** soft key to turn the Speakerphone on.
2. To turn the Speakerphone off, press the **Spkr off** soft key.

## Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the Call waiting menu to **Activate**. You are notified of an incoming call by a call waiting tone. See "Call waiting" on page 115 for more information on setting up Call waiting.

To answer a call while you have a call in progress:

 
1. Press the **Accept** soft key or the  key to answer the incoming call. The first call is automatically put on hold.

Selecting Functions and Options



2. To switch between the two calls, press the **Options** soft key, highlight **Swap** and press the **Select** soft key or the **OK** key.

To end a call on hold, press the **Options** soft key and select the **End held call** option. Then press the **Select** soft key or the **OK** key.

To end the current call, press the **End** key.



Section 3

  

## Section 4: Menu Navigation

### Topics Covered

---

- Menu Navigation
  - Menu Outline
- 

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

## Menu Navigation

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

### Accessing a Menu Function by Scrolling

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the Navigation keys to reach a main menu, **Settings** for example. Press the **Select** soft key or the  key to enter the menu.
3. If the menu contains sub-menus, **Security** for example, you can access them by pressing the **Select** soft key or the  key after the sub-menu has been highlighted.  
If the menu that you have selected contains further options, repeat this step.
4. To scroll through the menus, press the **Up** or **Down** Navigation keys.
5. To confirm the chosen setting, press the **Select** soft key, or the  key.
6. To return to the previous menu level, press the **Back** soft key, or the  key.
7. To exit the menu without changing the settings, press the  key.

## Using Shortcuts

The menu items, such as menus, sub-menus, and options, are numbered and can be accessed quickly by using their shortcut numbers. For the main menus, you can access any one of them by pressing the number keys (1 to \*) corresponding to their location on the screen.

---

**Example:** Accessing the Security menu.

---

1. Press the **Menu** soft key.
2. Press the  key for **Settings**.
3. Press the  key for **Security**.

## Menu Outline

The following list shows the menu structure and indicates the number assigned to each option.

---

**Note:** If you use a SIM-AT card that provides additional services, the Fun & Apps menu displays when you press **Menu 6** for Applications. For further details, see your SIM card instructions.

---

### 1 Voice notes

### 2 Call records

- 2.1 All calls
- 2.2 Missed calls
- 2.3 Incoming calls
- 2.4 Outgoing calls
- 2.5 Delete all

## 2.6 Call time

### 3 t-zones

#### 3.1 Home

#### 3.2 Go to URL

#### 3.3 Bookmarks

#### 3.4 Saved pages

#### 3.5 History

#### 3.6 Clear cache

### 4 IM

### 5 Messages

#### 5.1 Create new

##### 5.1.1 Text message

##### 5.1.2 Picture message

##### 5.1.3 Voice note

#### 5.2 Inbox

#### 5.3 Sentbox

#### 5.4 Outbox

#### 5.5 Drafts

#### 5.6 Templates

#### 5.7 Voice mail

##### 5.7.1 Call voice mail

##### 5.7.2 Voice server number

#### 5.8 Delete all

#### 5.9 Settings

##### 5.9.1 Text message

##### 5.9.2 Picture message

#### 5.0 Broadcast messages\*

#### 5.\* Memory status



## 6 Fun & Apps

### 6.1 My Files

- 6.1.1 Sounds
- 6.1.2 Images
- 6.1.3 Videos
- 6.1.4 Music
- 6.1.5 Other files
- 6.1.6 Memory card\*\*
- 6.1.7 Memory status

### 6.2 Games

- 6.2.1 Get More Games
- 6.2.2 My games

### 6.3 Music player

### 6.4 Camera

- 6.4.1 Take and send
- 6.4.2 Record video
- 6.4.3 My photos
- 6.4.4 My videos
- 6.4.5 My Album
- 6.4.6 My Journal

### 6.5 Organizer

- 6.5.1 Alarm
- 6.5.2 Calendar
- 6.5.3 Tasks
- 6.5.4 Calculator
- 6.5.5 World time
- 6.5.6 Unit conversion
- 6.5.7 Timer
- 6.5.8 Stopwatch

## 7 Get More Help

## 8 Phonebook

- 8.1 Add new contact

**Section 4**

- 8.2 Contact list
- 8.3 Group
- 8.4 Speed dial
- 8.5 My name card
- 8.6 Own number
- 8.7 FDN list
- 8.8 Management
  - 8.8.1 Default saving
  - 8.8.2 Copy all to
  - 8.8.3 Sort by contacts
  - 8.8.4 Delete all
  - 8.8.5 Memory status

**9 Settings**

- 9.1 Time & Date
- 9.2 Phone settings
  - 9.2.1 Language
  - 9.2.2 Greeting message
  - 9.2.3 Auto key lock
  - 9.2.4 Extra settings
  - 9.2.5 Airplane mode
- 9.3 Display settings
  - 9.3.1 Wallpaper
  - 9.3.2 Info display
  - 9.3.3 Interior display
  - 9.3.4 Brightness
  - 9.3.5 Backlight
  - 9.3.6 Dialing display
  - 9.3.7 Show caller Information
- 9.4 Sound settings
  - 9.4.1 Incoming call
  - 9.4.2 Keypad tone

- 9.4.3 Message tone
- 9.4.4 Power on/off
- 9.4.5 Silent mode
- 9.4.6 Extra tones

## 9.5 Bluetooth

- 9.5.1 Turn Bluetooth On/Off
- 9.5.2 My devices
- 9.5.3 My visibility
- 9.5.4 My phone name
- 9.5.5 Security modes
- 9.5.6 Features
- 9.5.7 Help

## 9.6 Network services

- 9.6.1 Call forwarding
- 9.6.2 Call barring\*
- 9.6.3 Call waiting
- 9.6.4 Network selection\*
- 9.6.5 Caller ID

## 9.7 Security

 
 
 
- 9.7.1 PIN check
- 9.7.2 Change PIN
- 9.7.3 Phone lock
- 9.7.4 Change password
- 9.7.5 Lock application
- 9.7.6 FDN mode
- 9.7.7 Change PIN2

## 9.8 Software update

## 9.9 Reset settings

\* Shows only if supported by your SIM card.

\*\* Shows only if a memory card is inserted into the phone.



## Section 5: Entering Text

### Topics Covered

---

- Changing the Text Input Mode
  - Using ABC Mode
  - Using T9 Mode
  - Using Number Mode
  - Using Symbol Mode
- 

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the number of key strokes associated with entering text.

## Changing the Text Input Mode

When using your phone, you will often need to enter text, such as when storing a name in your Phonebook, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **ABC mode:** this mode allows you to enter letters by pressing the key labeled with the letter you want. How many times you press the key determines which letter or number appears.
- **T9 mode:** this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing **5m** can enter J, K, or L. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional ABC mode.
- **Number mode:** this mode allows you to enter numbers.
- **Symbol mode:** this mode allows you to enter symbols, such as punctuation marks.

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

---

**Example:** Writing a text message.

---



1. To change the text input mode, press the **Right** soft key.
2. Each time you press the Right soft key, a different Text input mode indicator will be displayed at the lower right corner of your display.

The following options are available:

En: T9 mode

En: ABC mode

En: Number mode

En: Symbol mode

3. When the text input mode indicator that you desire is displayed, you may enter text in the text message box using the selected text input mode.

## Using ABC Mode

To use ABC mode, use the number keys to enter your text.

1. Press the key labeled with the letter you want:
  - Once for the first letter
  - Twice for the second letter

- And so on
- 2. Select the other letters in the same way.**
- To enter periods or hyphens, press the  key. ABC mode applies grammar rules to ensure that correct punctuation is used.
  - To shift case in ABC mode, use the  key. There are 3 cases: Initial capital, Capital lock, and Lower case.
  - You can move the cursor by using the Navigation keys. To delete letters, press the  key. Press and hold the  key to clear the display.

---

**Note:** The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

---

## Keys

 .@,-?!:()/1

 A B C 2 Ä Å Æ Ç Γ

a b c 2 à å æ γ

 D E F 3 É Δ Φ

d e f 3 è é φ

 G H I 4 Θ Ψ

g h i 4 ì ψ

**5** J K L 5 Λ

j k l 5 Λ

**6** M N O 6 Ñ Ø Ö ö

m n o 6 ñ ø ö ö

**7** P Q R S 7 Π Σ Ξ

p q r s 7 β Σ Ξ

**8** T U V 8 Ü ü

t u v 8 ù ü

**9** W X Y Z 9 Ω

w x y z 9 Ω

**0** Space

**\*** + = < > € £ \$ % & ¥ ¤ Ø

## Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the **2** to **9** keys. Press each key only once for each letter.

---

**Example:** To enter “Hello” in T9 mode, press the **4**, **3**, **5**, **5**, and **6** keys.

---

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

If the word doesn't display correctly, press the  key to display alternative word choices for the keys that you have pressed.

---

**Example:** Both “Of” and “Me” have the **6** and **3** keys. The phone displays the most commonly used choice first.

---

4. Insert a space by pressing the  key and start entering the next word.

To add a new word into the T9 dictionary:

1. After pressing the keys corresponding to the word you want to add, press the  key to display the alternative words.
2. When you press the  key at the last alternative word, the display shows **Add** on the bottom line. Press the **Add** soft key or the  key.
3. Enter the word you want to add using ABC mode.
4. Press the **OK** soft key or the  key.

The word is added to the T9 dictionary and becomes a word for the associated keypress series.

**Note:** This feature may not be available for some languages.

- To enter periods, hyphens, or apostrophes, press the  key. T9 mode applies grammar rules to ensure that correct punctuation is used.
- To shift case in T9 mode, use the  key. There are 3 cases: Initial capital, Capital lock, and Lower case.
- You can move the cursor by using the Navigation keys. To delete letters, press the  key. Press and hold the  key to clear the display.

 
 

 
## Using Number Mode

Number mode enables you to enter numbers into a text message. Press the keys corresponding to the digits you want to enter.

## Using Symbol Mode

Symbol mode enables you to insert symbols and punctuation marks into text.

1. To select a symbol, press the corresponding number key.
2. To display more symbols, press the **Up** or **Down** Navigation key.
3. To clear the symbol(s), press the  key. When the input field is empty, this key returns the display to the previous mode.
4. To insert the symbol(s) into your message, press the **OK** soft key or the  key.

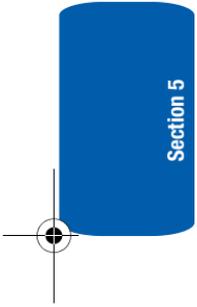

## Section 6: Understanding Your Phonebook

### Topics Covered

---

- Storing a Number in the Phone's Memory
  - Storing a Number in the SIM Card
  - Finding a Phonebook Entry
  - Speed Dialing
  - Editing a Caller Group
  - Copying all SIM Phonebook Entries
  - Deleting all of the Phonebook Entries
  - My Name Card
  - Finding My Own Phone Number
  - FDN List
  - Management
- 

This section describes how to manage your contacts by storing their name and number in your Phonebook. You can save phone numbers to your phone's memory or to your SIM card.

## Storing a Number in the Phone's Memory

The default for saving phone numbers to your phonebook is your phone's memory. You can also save it to your SIM card or you can set your default so that whenever a new phonebook entry is created, you will be prompted to choose between **Phone** or **SIM card**. See "Default saving" on page 73 for information on how to change this setting.

Also, numbers that have been stored on your SIM card can be copied to your phone's memory.

---

**Note:** When you copy a phone number from your SIM card to your phone, the number will appear twice in your Contact list.

---



### Section 6

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the **OK** key to enter your Phonebook.
3. The **Add new contact** option will be highlighted. Press the **Select** soft key or the **OK** key.
4. Enter a first name in the **Name** text box. Tab to the next text box by pressing the **Down** key.

For further details about how to enter characters, see "Using ABC Mode" on page 53.

5. Enter a last name in the text box.
6. Highlight a number Type by pressing the **Up** or **Down** Navigation key, then enter a number in the text box.

The following types are available:

### Storing a Number in the SIM Card

- **Mobile:** assigns the number entered to the Mobile entry.
  - **Home:** assigns the number entered to the Home entry.
  - **Office:** assigns the number entered to the Office entry.
  - **Fax:** assigns the number entered to the Fax entry.
  - **Other:** allows you to enter more detailed information for the entry.
  - **Email:** assigns the address to the Email entry.
7. Continue to scroll down using the **Down** Navigation key to enter **Picture ID, Ringtone, Group, and Memo** if desired.
  8. Press the **Save** soft key. The number is saved to your phone and the new contact information is displayed.
  9. To return to the Idle screen, press the  key.

## Storing a Number in the SIM Card

The default for saving phone numbers to your phonebook is your phone's memory. To store a number in your SIM card, you need to change the **Default Saving** option first.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter your Phonebook.
3. Scroll to **Management** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
4. Highlight **Default saving** and press the **Select** soft key or the  key.

5. Highlight **SIM card** and press the **Select** soft key or the  key.

---

**Note:** You can also set the **Default saving** option to **Ask on saving** in the Management menu. With this option, you will be prompted for storage location each time you add a new contact. See “Default saving” on page 73 for more information.

---

Now that your phone is set up to store numbers to your SIM card, follow this procedure to store a number.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter your Phonebook.
3. Highlight the **Add new contact** option and press the **Select** soft key or the  key.
4. Enter a name in the **Name** text box. Move to the next text box by pressing the **Down** key.

For further details about how to enter characters, see “Using ABC Mode” on page 53.

---

**Note:** Contacts stored to your SIM card do not have first and last names as separate fields. Therefore, you will have to enter first and last name in the name field if so desired.

---

5. Enter the phone number you want to store.
6. Continue to scroll down using the **Down** Navigation key to enter **Picture ID**, **Ringtone**, and **Group**, if desired. To select one of these options, press the  key.

**Storing a Number in the SIM Card**

7. When you are finished, press the **Save** soft key or the  key. The number is saved in your SIM card.

After storing, the phone displays the Phonebook entry you just created.

8. Press the **Options** soft key for the following options:
- **Edit**: allows you to edit the name and number fields in the entry.
  - **Send message**: allows you to send a message to the selected number. You may choose between Text message, Picture message, or Voice note.
  - **Call**: allows you to call the number.
  - **Copy to phone**: allows you to copy the number to your Phone.

---

**Note:** Depending on where the contact is stored (Phone or SIM) this menu option will display Copy to Phone or Copy to SIM

---

- **Send name card via**: allows you to send your name card via Text message, Picture message, or Bluetooth.
- **Assign speed dial**: allows you to assign a speed dial key number to the selected Phonebook entry.
- **Delete**: allows you to delete the name and number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.

9. To return to the Idle screen, press the  key.

## Finding a Phonebook Entry

You can store phone numbers and their corresponding names in your SIM card and phone's memories. They are physically separate but are used as a single entity, called Phonebook.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store may differ.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight **Contact list** and press the **Select** soft key or the **OK** key.

---

**Note:** Steps 1-3 can be bypassed by pressing the **Down** navigation key while in Idle mode.

---

4. Enter the first few letters of the name in the text box.  
The Phonebook entries are listed, starting with the first entry matching your input.
5. If needed, press the **Up** or **Down** Navigation key until the entry you want is highlighted.
6. Once you have found the entry, press the **Call** key to dial the number, or press the **Options** soft key to access the following Phonebook entry options:
  - **View:** shows details of the Phonebook entry.

### Finding a Phonebook Entry

- **Edit:** allows you to edit the contents of your contact.
- **Send message:** allows you to send a message to the selected number. You may choose between sending a Text message, a Picture message, or a Voice note.
- **New contact:** takes you to the New Contact menu.
- **Call:** places a call to the number.
- **Copy to (Phone or SIM):** allows you to copy the contact to your Phone or SIM card.

---

**Note:** Depending on where the contact is stored (Phone or SIM) this menu option will display Copy to Phone or Copy to SIM

---

- **Copy all to (phone or SIM card):** allows you to copy all numbers stored on your SIM card to your phone

---

**Note:** Depending on where the contact is stored (Phone or SIM) this menu option will display Copy to Phone or Copy to SIM

---

- **Send name card via:** allows you to send your name card via Text message, Picture message, or Bluetooth.
- **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
- **Delete:** allows you to delete the selected name and number from your Phonebook or delete all numbers. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.
- **Select language:** allows you to select between English, Français, or Español.

7. If you select the **View** option, press the **Options** soft key after the contact information is displayed, for these additional options:

- **Edit:** allows you to edit the name and number fields in the entry. You can also add email address and notes.
- **Send message:** allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
- **Call:** places a call to the number.
- **Copy to (Phone or SIM card):** allows you to copy the number to your Phone or SIM card.
- **Send name card via:** allows you to send your name card via Text message, Picture message, or Bluetooth.
- **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
- **Delete:** allows you to delete the name and number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.

After viewing one Phonebook entry, you can scroll through all Phonebook entries by pressing the **Right** or **Left** Navigation keys.

## Speed Dialing

Once you have stored phone numbers from your Phonebook list, you can set up to 8 speed dial entries and then dial them easily whenever you want, simply by pressing and holding the associated numeric key.

In Idle mode, to speed dial the numbers assigned to keys (2 to 9), press and hold the appropriate key.

### Setting Up Speed Dial Entries

1. In Idle mode, press the **Menu** soft key to access Menu mode.

### Editing a Caller Group

2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Scroll to **Speed dial** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **OK** key.
4. Use the **Up** or **Down** Navigation key to select a number key (choose from the **2** to **9** keys), and press the **Add** soft key.
5. Use the **Up** or **Down** Navigation key to select a contact and press the **Select** soft key.
6. The number will be assigned to your speed dial.

---

**Note:** Memory location 1 is reserved for your Voice mail server number and cannot be changed.

---

## Editing a Caller Group

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Group** option and press the **Select** soft key or the **OK** key.
4. Scroll through the group list by pressing the **Up** or **Down** Navigation key.
5. Highlight the group you want and press the **Options** soft key.

6. Highlight the **Edit** option and press the **Select** soft key or the **OK** key.
7. To edit the Caller group name, modify the text in the **Name** text box.
8. To change the image associated with the Caller group, press the **Down** key to highlight the Picture ID icon. Press the **OK** key.

The following options are available:

- **Take picture:** allows you to take a picture with your camera.
  - **My photos:** allows you to choose a photo from My photos folder.
  - **My downloads:** allows you to choose a photo from your downloaded images folder.
  - **Icons:** allows you to choose from pre-defined icons
9. To change the ringtone associated with the Caller group, press the **Down** key to highlight the Ringtone icon. Press the **OK** key.

The following options are available:

- **Default sounds:** allows you to choose between 20 different melodies.
  - **My sounds:** allows you to assign a Ringtone from your My sounds folder.
  - **Voice list:** allows you to assign a voice note to the group.
  - **Music:** allows you to assign a Ringtone from your Music list.
10. When you are finished, press the **Save** soft key. Your Caller group settings will be saved.
  11. Press the **Back** key to return to Idle mode.

## Copying all SIM Phonebook Entries

You can copy all SIM entries to the Phone using this option. When you copy entries to the phone, duplicate entries are created in your Phonebook.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight **Management** and press the **Select** soft key or the **OK** key.
4. Highlight **Copy all to** and press the **Select** soft key or the **OK** key.
5. Highlight **SIM card** and press the **Select** soft key
6. After receiving the **Copy all to SIM?** confirmation message, press the **Yes** soft key.

---

**Note:** Options are available for entries stored to your phone that are not available when stored to the SIM card. For details see "Storing a Number in the Phone's Memory" on page 60.

---

## Deleting all of the Phonebook Entries

You can delete all your entries from your phone's memory, your SIM card, or both.

---

**Important!** Once Phonebook entries have been deleted, they cannot be recovered.

---

1. In Idle mode, press the **Menu** soft key to access Menu

- mode.
- Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the **OK** key to enter the menu.
  - Highlight **Management** and press the **Select** soft key or the **OK** key.
  - Scroll to **Delete all** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **OK** key.
  - Press the **OK** key to place a check mark by the memory location you want to empty; **All**, **Phone**, **SIM card** or **SIM card (FDN)**.  
You can remove the check mark by pressing the **OK** key again.
  - Press the **Delete** soft key. Enter your password and press the **OK** soft key or the **OK** key.

---

**Note:** The password is preset to "00000000" at the factory. To change this password, see "Change password" on page 118.

---

- When the **Delete all?** confirmation message appears, press the **Yes** soft key or the **OK** key.
- To cancel the deletion, press the **No** soft key.
- When you are finished, press the **End** key to return to Idle mode.

## My Name Card

My Name Card allows you to create a virtual business card. Once completed, you can send the card to recipients as a V-card attachment.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight **My name card** and press the **Select** soft key or the **OK** key.
4. My Name Card opens with the **Name** field highlighted.
5. Enter information in each of the fields as desired. Use the Navigation keys to move between fields, then use the keypad to enter information.
6. When finished, press the **Options** soft key and highlight the **Save** option. Press the **Select** soft key or the **OK** key.
7. Your Name Card will be saved.

## Finding My Own Phone Number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

You can assign a name to each of your own phone numbers registered on your SIM card. You can also edit the names and numbers. Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Select the **Own number** option by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **OK** key.
4. Highlight the **Number 1** option and press the **Options** soft key or the **OK** key.
5. Highlight the **Edit** option and press the **Select** soft key or the **OK** key.
6. Your phone number is displayed. You may edit the name and number if you wish. Press the **Save** soft key or the **OK** key.

## FDN List

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The FDN List allows you to set up a list of numbers that your phone may dial.

FDN mode must first be enabled in the Security settings. See “FDN mode” on page 119 for more information on changing this setting.

To enable FDN mode, a PIN2 number is required. You can obtain your PIN2 from your service provider.

## Management

The Management menu allows you to select where your contacts will be saved, copy your SIM contacts to your phone, sort your contacts, delete your contacts, or check your memory status.

### Default saving

The Default saving option allows you to choose where your contacts will be saved. The following options are available:

- **Phone:** new phonebook contacts will be saved to your phone.
- **SIM card:** new phonebook contacts will be saved to your SIM card.
- **Ask on saving:** you will be prompted to choose between **Phone** or **SIM card** whenever you save a new contact.

### Copy all to

This option allows you to copy all contacts from your SIM card or to your Phone, or all your phone entries to your SIM card. For more information, see “Copying all SIM Phonebook Entries” on page 69.

### Sort by contacts

This options allows you to have your contacts sorted by **first name** or **last name**.

---

**Note:** Contacts stored to your SIM card do not have first and last names as separate fields. Therefore, they will be sorted on the first letter of the name entered in the **Name** field.

---

## Delete all

This option allows you to delete your contacts. You may delete from All, Phone, SIM card or SIM card(FDN). For more information, see “Deleting all of the Phonebook Entries” on page 69.

---

**Important!** Once contact entries have been deleted, they cannot be recovered.

---

## Memory status

You can check how many names and numbers are stored in the Phonebook, in both SIM card and the phone memory. You can also see the capacity of both memories. Your phone memory can hold up to 1000 contacts.

## Section 7: Messages

### Topics Covered

---

- Types of Messages
- Voice notes
- Text messages
- Picture messages
- Inbox
- Sentbox
- Outbox
- Drafts
- Templates
- Voice mail
- Delete all
- Settings
- Broadcast messages (SIM Dependent)
- Instant Messaging
- Memory status

---

This section describes how to send or receive different types of messages. It also includes the features and functionality associated with messaging.

## Types of Messages

Your phone provides the following message types:

- Voice notes
- Text messages
- Picture messages
- Voice mail messages
- Broadcast messages (SIM Dependent)
- Instant messaging

### Voice notes

In this menu, you can record a voice note of up to one minute long and then immediately send it by Picture message.

When you access this menu, a timer appears on the screen.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Voice notes** icon. Press the **Select** soft key or the **OK** key to enter the menu.

---

**Note:** Steps 1 and 2 can be bypassed by pressing the **Right** navigation key while in Idle mode.

---

3. Press the **Record** soft key to start recording.
4. Record a memo by speaking into the microphone.  
The display shows the elapsed time and the remaining time at one time.

## Voice notes

5. When you are finished, press the **Stop** soft key. Or, when the recording time is expired, the display switches to the next screen.
6. The Voice note is saved to your Voice list.
7. Press the **Options** soft key for the following options:
  - **Send to:** allows you to send the Voice note.
  - **Play:** plays back your Voice note.
  - **Re-record:** discards the Voice note and enables you to record another one.
  - **Set default destination:** allows you to remove or replace the default destination.
  - **Save:** saves the Voice note.
8. To send the Voice note, press the **Send** soft key or select the **Send to** option in the Options menu and press the **Select** soft key or the **OK** key.
9. Highlight one the following options:
  - **Recent recipients:** allows you to select a phone number or an email address from the last 30 destinations to which you sent messages.
  - **Phonebook:** allows you to select the phone number or email address you want from your Phonebook. Use the **OK** key to check the selected entries.
  - **New recipient:** allows you to enter a new contact. The following options are available.
    - **Phone number:** allows you to enter a phone number.
    - **Email address:** allows you to enter an email address.
  - **My Album:** allows you to send the voice note to My Album.
  - **My Journal:** allows you to send the voice note to My Journal.
10. Press the **Select** soft key or the **OK** key.

11. Select where you would like to send your voice note and it will be entered in the Send menu in a **To** field.
12. To add another destination, select an empty **To** field and press the **Options** soft key.

---

**Note:** When entering multiple destinations, you can also choose **Add recipient**, **Change recipient type** and **Cancel** options in addition to the other send options.

---

13. Repeat from step 9. You can enter up to 10 destinations.
14. When you have finished entering the destinations, press the **Options** soft key, highlight the **Send** option and press the **Select** soft key or the **OK** key.

Your phone sends the message and saves the message in the Sentbox.

## Text messages

Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple pictures, melodies, and animated images in your messages. To use this feature, you must subscribe to your service provider's message service.

When the Message icon (✉) appears, you have received new text messages. When the memory is full, the message icon will flash on your phone and you cannot receive any new messages. You must delete a message before you can receive additional messages.

Use the **Delete** option in each message box to delete obsolete messages.

## Create new

In this menu, you can write and send a text message.

### Creating a Simple Text message

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Press the **Select** soft key or the **OK** key to enter the **Messages** menu.
3. Highlight the **Create new** option and press the **Select** soft key or the **OK** key.
4. Highlight the **Text message** option and press the **Select** soft key or the **OK** key.

---

**Note:** Steps 1–4 can be bypassed by pressing the **Left** navigation key while in Idle mode.

---

5. Create your message.

---

**Notes:** For further details about entering characters, see "Section 5: Entering Text" on page 51.  
You can enter up to 1836 characters in a text message.

---

6. When you finish entering your message, press the **Options** soft key.

The following options are available:

- **Insert from:** allows you to insert Text templates, Phonebook, or Bookmarks. The **Text templates** option allows you to apply one of the preset message templates to the text. Select one of the 10 items stored in the Text

messages template menu. **PhoneBook** allows you to add phone numbers or email addresses to your message.

**Bookmarks** allows you to add Internet (Web) addresses to your message.

- **Add content:** allows you to add a Picture, Animation, or Melody to your message.
- **Attach:** allows you to attach a Name card, Schedule, Anniversary, Miscellaneous, or Task to your message.
- **Save to Drafts:** saves the message to your Drafts folder.
- **Select language:** allows you to set the language to English, Français, or Español.
- **Text style:** allows you to format the size and style of the text. For the Text size, Large, Medium, and Small size are available. Text mode options are Normal, Underline, and Strikethrough. The options for Bold and Italic are set by using the  key to place a checkmark by them.
- **Back:** allows you save to your draft folder without sending.

---

**Note:** Steps 6–7 can be bypassed by pressing the  key when you finish entering your message.

---

7. Press the  key.

8. Highlight one of the following options:

- **Recent recipients:** allows you to select from recipients of your previous messages.
- **Phonebook:** allows you to select the phone number(s) you want from your phonebook.
- **Phone number:** allows you to enter a number to send your message to.

**Picture message**

9. If you chose **Recent recipients** or **Phonebook**, use the  key to place checkmarks next to the entry or entries you want your message sent to and press the **Send** soft key.
10. If you chose **Phone number**, enter the number in the **To** text box.
11. To add another destination, select an **Add recipients** option and press the **Add** soft key.

---

**Note:** When entering multiple destinations, you can also choose **Group** and **Save to Drafts** options in addition to the other send options.

---

12. Repeat from step 8. You can enter up to 20 destinations.
13. When you have finished entering the destinations, press the  key.

Your phone sends the Text message. After sending, the message is saved in the Sentbox.

## Picture message

This menu allows you to use the Multimedia Message Service.

Picture Messaging is a messaging service that provides delivery of personal multimedia messages from phone to phone or from phone to email.

In addition to the familiar text content of text messages, multimedia messages can contain images, graphics, voice, and audio clips. A Picture Messaging message is a multimedia presentation in a single file. It is not a text file with attachments.

Using the Picture Messaging feature, your phone can receive and send messages that contain multimedia files, such as photos, videos, sounds and images you downloaded from the Internet and voice notes you recorded. This function is available only if it is supported by your service provider. Only phones that offer multimedia messaging features can receive and display multimedia messages.

### Create new

This menu allows you to create a new multimedia message and send to one or multiple destinations.

#### Creating and Sending a Multimedia Message

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Press the **Select** soft key or the **OK** key to enter the **Messages** menu.
3. Highlight the **Create new** option and press the **Select** soft key or the **OK** key.
4. Highlight the **Picture message** option and press the **Select** soft key or the **OK** key.
5. Highlight **Subject** and press the **OK** key.
6. Enter the subject of your message and press the **OK** key.

---

**Note:** For more information about entering characters, see "Section 5: Entering Text" on page 51.

---

7. To add a picture or video clip, highlight the **Image & Video** option and press the **OK** key.

## Picture message

8. Highlight **Add Image** or **Add video** and press the **Select** soft key or the **OK** key.
9. Select an image or video from the various options available.
10. Press the **Options** soft key. Highlight the **Add** option and press the **Select** soft key or the **OK** key to add it to your message.
11. To add a sound, highlight the **Sound** option and press the **OK** key.

---

**Note:** if you attached a video clip to your message, you will not be able to add sound to the message.

---

12. Highlight the **Add Sound** option and press the **Select** soft key or the **OK** key.
13. Select a Sound or Voice note from the various options and press **OK** key. Press the **Add** soft key to add the sound to your message.
14. To add a text, highlight **Text** and press the **OK** key.
15. Enter your text and press the **OK** key.
16. When you have finished creating the text message, press the **Send** soft key.
17. Highlight one of the following options:
  - **Recent recipients:** allows you to select from recipients of your previous messages.
  - **Phonebook:** allows you to enter the phone number you want from your phonebook.

- **New recipient:** allows you to enter contact information. Choose from the following options. Press the Select soft key.
    - **Phone number:** allows you to enter a phone number.
    - **Email address:** allows you to enter an email address.
  - **My Album:** allows you to send the message to the My Album folder.
  - **My Journal:** allows you to send the message to My Journal.
18. After selecting where to send your message, press the  key. Your phone sends the message.

## Inbox

The Inbox stores messages that you have received. You can tell what kind of message it is by the icon displayed. If the icon envelope is open then the message has been read, otherwise it will appear closed.

The following types of messages may appear in your inbox:

-  Voice notes
-  Text messages
-  Multimedia messages
-  Push messages

When you enter the Inbox, the list of messages displays with the sender's phone numbers, or names, if available in your Phonebook. After you have read the message, the envelope in the icon will appear opened.

---

**Note:** By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

---

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Press the **Select** soft key or the **OK** key to enter the **Messages** menu.
3. Highlight the **Inbox** option and press the **Select** soft key or the **OK** key.

### Viewing a Text Message in Inbox

1. Select a text message from the list and press the **Options** soft key.

The following options will appear:

- **View:** read the text message.
  - **Reply via:** allows you to send a reply to the sender by sending a Text message, Picture message, or Voice note.
  - **Call back:** places a call to the selected number.
  - **Forward:** allows you to forward the message to another recipient.
  - **Delete:** deletes the selected text message or all messages.
  - **Move to phone/SIM card:** allows you to move the message to the phones memory or the SIM card depending on where it is prior to the move.
  - **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
  - **Lock:** allows you to lock the message to protect it from being deleted.
2. Press the **View** option. To scroll through the contents, press the **Up** or **Down** Navigation key.

While reading a text message, you may choose the following options by pressing the **Options** soft key:

- **Reply via:** allows you to send a reply to the sender by sending a Text message, Picture message, or Voice note.
- **Call back:** places a call to the selected number.
- **Forward:** allows you to forward the message to another number.
- **Save address:** allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Save media:** allows you to save the media in a message.
- **Delete:** allows you to delete the message.
- **Move to SIM/Phone:** allows you to move the message to the phone's memory or the SIM card depending on where it is prior to the move.
- **Lock:** allows you to lock the message to protect it from being deleted.

### Viewing a Picture Message in Inbox

1. Highlight a picture message from the list and press the **Options** soft key.

The following options will appear:

- **View:** read the picture message.
- **Reply via:** allows you to send a reply to the sender by sending a picture message, text message, or voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.
- **Call back:** places a call to the selected number.
- **Forward:** forwards the picture message to another handset.

Inbox

- **Delete:** deletes the selected picture message or all messages.
  - **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
  - **Lock:** allows you to lock the message to protect it from being deleted.
  - **Properties:** shows you information about the message, such as time and Date the message was received, the sender's email address or phone number, recipient's email address or phone number, Cc, Message size, Priority, and Msg class.
2. Highlight the **View** option and press the **Select** soft key or the **(OK)** key to read the message contents.
  3. To scroll through the contents, press the **Up** or **Down** Navigation key.

While viewing a picture message, you may choose the following options by pressing the **Options** soft key:

- **Reply via:** allows you to send a reply to the sender by sending a text or picture message or a voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.
- **Call back:** places a call to the selected number.
- **Forward:** allows you to forward the message to another number.
- **Replay:** allows you to view the message again.
- **Save address:** allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Save media:** allows you to save the picture or video to your My downloads folder.

- **Delete:** allows you to delete the message.
- **Lock:** allows you to lock the message to protect it from being deleted.
- **Properties:** shows you information about the message, such as Subject, who the message was From, Message size, Transaction ID, Msg class, MMS version, who the message was To, Priority, and Date and time message was received.

## Viewing a Voice Note in Inbox

1. Highlight a Voice note from the list and press the **Options** soft key.

The following options will appear:

- **Play:** listen to the voice note and view message details.
- **Reply via:** allows you to send a reply to the sender by sending a picture message, text message, or voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.
- **Call back:** places a call to the selected number.
- **Forward:** allows you to forward the voice note to another person.
- **Delete:** allows you to delete the selected Voice note or all messages.
- **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
- **Lock:** allows you to lock the Voice note to protect it from being deleted.
- **Properties:** shows you information about the Voice note, such as time and Date the Voice note was received, the sender's email address or phone number, recipient's email address or phone number, Cc, Voice note size, Priority, and Msg class.

## 2. Press the **Play** option to hear the voice note.

While listening to the message, you may choose the following options by pressing the **Options** soft key:

- **Reply via:** allows you to send a reply to the sender by sending a text or picture message or a voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.
- **Call back:** places a call to the selected number.
- **Forward:** allows you to forward the message to another number.
- **Replay:** allows you to listen to the voice note again.
- **Save address:** allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Save media:** allows you to save the message to different areas or to your vCard or vCalendar.
- **Delete:** allows you to delete the voice note.
- **Lock:** allows you to lock the message to protect it from being deleted.
- **Properties:** shows you information about the message, such as time and Date the message was received, the sender's email address or phone number, recipient's email address or phone number, Cc, Message size, Priority, and Msg class.

## Viewing a Push Message in Inbox

A Push message is a way of delivering content (e.g. images, ringtones, etc.) to mobile phones that are WAP enabled. With a Push message you don't actually send the content in the text message, you direct the mobile phone where to get it from.

1. Select a Push message from the list and press the **Options** soft key.

The following options will appear:

- **View:** listen to the Voice note and view message details.
  - **Delete:** allows you to delete the selected message or all messages.
  - **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
  - **Lock:** allows you to lock the message to protect it from being deleted.
2. Highlight the **View** option and press the **Select** soft key or the **OK** key to view the message contents.

While reading the message, you may choose the following options by pressing the **Options** soft key:

- **Go to URL:** allows you to go to the website on your WAP browser.
- **Save address:** allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Delete:** allows you to delete the message.
- **Lock:** allows you to lock the message to protect it from being deleted.

## Viewing a Message When You Receive It

When a new multimedia message comes in, the display shows the Picture Messaging Message icon.

1. Press the **View** soft key to view the message.  
Press the **Exit** soft key if you want to view the message later in the Inbox.

## Sentbox

2. Press the **Options** soft key or the  $\text{OK}$  key to access the various options described above.
3. When you are finished, press the  $\text{END}$  key.

## Sentbox

This message box stores messages that you have sent.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook.

---

**Note:** By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

---

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Press the **Select** soft key or the  $\text{OK}$  key to enter the **Messages** menu.
3. Highlight the **Sentbox** option and press the **Select** soft key or the  $\text{OK}$  key.
4. Select a message from the list and press the **Options** soft key.
5. Highlight the **View** option and press the **Select** soft key or the  $\text{OK}$  key to view the message contents.
6. To scroll through the contents, press the **Up** or **Down** Navigation key.

While viewing a message, you can choose different options by pressing the **Options** soft key.

## Outbox

This message box stores messages that you have attempted to send but have not actually been sent yet.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook.

---

**Note:** By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

---

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Press the **Select** soft key or the **OK** key to enter the **Messages** menu.
3. Highlight the **Outbox** option and press the **Select** soft key or the **OK** key.
4. Select a message from the list and press the **Options** soft key.
5. Highlight the **View** option and press the **Select** soft key or the **OK** key to view the message contents.
6. To scroll through the contents, press the **Up** or **Down** Navigation key.

While reading a message, you can choose different options by pressing the **Options** soft key.

## Drafts

This message box stores messages that you may want to edit or send at a later time.

When you enter this menu, the list of messages in the box displays.

---

**Note:** By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

---

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Press the **Select** soft key or the **OK** key to enter the **Messages** menu.
3. Highlight the **Drafts** option and press the **Select** soft key or the **OK** key.
4. Select a message from the list and press the **Options** soft key.
5. Highlight the **Edit** option and press the **Select** soft key or the **OK** key to edit the message contents.
  - For a Text Message, press the **OK** **Send** key.
  - For a Picture Message, press the **Send** soft key.

While viewing a draft message, you can choose different options, depending on the type of message, by pressing the **Options** soft key.

## Templates

Besides entering message text using the keypad keys, you can speed message composition by including copies of stored text (Templates) in your message.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Press the **Select** soft key or the **OK** key to enter the **Messages** menu.
3. Highlight the **Templates** option and press the **Select** soft key or the **OK** key.
4. Choose either **Text templates** or **Picture message templates** and press the **Select** soft key or the **OK** key.
5. Highlight **Text templates** and press the **Select** soft key. You can choose from 10 predefined sentences that you can add to your text message to save time.
6. Press the **Options** soft key to choose from the following options:
  - **Edit**: allows you to edit the text template.
  - **Send message**: allows you to send the text message or picture message.
  - **Add new**: allows you to add a new text template.
  - **Delete**: allows you to delete the text template.
7. Highlight Picture message templates to select from the 5 predefined picture templates. Press the **View** **OK** key to view the Picture message template. Press the **Options** soft key to choose from the following options:
  - **View**: allows you to view the picture message template.
  - **Edit**: allows you to edit the text template.
  - **Send message**: allows you to send the picture message.
  - **Add new**: allows you to add a new text template.
  - **Delete**: allows you to delete the text template.

## Voice mail

This menu provides you with a way of accessing your voice mailbox, if provided by your network.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Press the **Select** soft key or the **OK** key to enter the **Messages** menu.
3. Highlight the **Voice mail** option and press the **Select** soft key or the **OK** key.

The following options are available:

- **Call voice mail:** before using the Voice Mail feature, you must enter the voice server number obtained from your service provider. You can then select this option and press the **OK** soft key or the **OK** key to listen to your messages. You can also connect to the voice server by pressing and holding the **123** key in Idle mode.
- **Voice server number:** allows you to change the voice mail server number, if necessary.

---

**Note:** Voice mail is a network feature. Please contact your service provider for further details.

---

## Delete all

This menu allows you to delete all of the messages in each message box. Or, you can also delete all of your messages in all message boxes at one time.

1. To select a message box to clear, press the **Up** or **Down** Navigation key. To delete all of your messages, select the **Delete all** option.

2. To place or remove a check mark, press the **OK** key.
3. Press the **Delete** soft key to delete the marked objects.
4. After you receive a confirmation message, press the **Yes** soft key to delete the selected message box contents. Otherwise, press the **No** soft key.

## Settings

In this menu, you can set up default text message and picture message information. The last setting you accessed is automatically activated for sending subsequent messages.

### Text message

- **Service center:** allows you to store or change the number of your message center, which is required when sending messages. You must obtain this number from your service provider.
- **Destination address:** allows you to enter a number that you would like to send all messages to. You can still message others, but this number will always appear in the Send list.
- **Validity period:** allows you to set the length of time your text messages are stored at the message center while attempts are made to deliver them.
- **Reply path:** allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- **Delivery report:** when this option is check marked, the network informs you whether or not your message has been delivered.

### Picture message

The following options are used to set Send and Receive settings for Picture messages.

### Broadcast Messages (SIM Dependent)

#### Send settings

- **Delivery report:** when this option is enabled, the network informs you whether or not your message has been delivered.
- **Read reply:** when this option is enabled, your phone sends a request for a reply along with your message to the recipient.
- **Priority:** you can select the priority level of your messages.
- **Expiry date:** The expiration date is how long the message receiver has to retrieve the message.
- **Delivery time:** Delivery time is setting the length of time your messages are stored in the server. You can set a delay time before the phone sends your messages.

#### Retrieve settings

- **Anonymous reject:** you can set your phone to automatically reject anonymous messages.
- **Ads allowed:** allows you to receive advertisements.
- **Report allowed:** you can set the option to receive a delivery report.

### Broadcast Messages (SIM Dependent)

This network service allows you to receive text messages on various topics, such as the weather or traffic.

Please contact your service provider for further details.

#### Memory status

You can check the amount of the memory being used and the memory remaining for text, picture, broadcast, and push messages.

The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.

## Instant Messaging

Instant Messaging (IM) is a way of sending short, simple messages that are delivered immediately to users online at that moment.

Before using this feature, you need to subscribe to a messenger service. For further details, contact your service provider.

### Starting your Instant Messaging

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **IM** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the messenger service to which you subscribed using the **Up** or **Down** Navigation key and press the **Select** soft key or the **OK** key.
4. Highlight the **Sign on**, **Connect**, or **Sign in** option, depending on your messenger service and press the **Select** soft key or the **OK** key.
5. Enter the required sign on information such as ID and password and press the **OK** soft key.

---

**Note:** The information required for sign on will vary depending on the instant messaging provider you are using.

---

 
 
 
 
## Instant Messaging

6. Follow the on-screen instructions to read, reply to, compose, send, and manage your IM account.

### Using the Instant Messenger Menu

You can access the following options when you select <IM application> in Using the instant Messenger Menu. On the sign-on screen of the messenger, press the **Options** soft key to access the following options:

- **Sign on/Connect/Sign in:** allows you to login to your IM account.
- **Saved conversations:** shows permanent records of your IM conversations.
- **Offline conversations:** shows dynamic records of your last 10 IM conversations.
- **Settings/Preferences:** allows you to change your Default community and Community settings.
- **Help:** provides various help information depending on the community you have selected.



## Section 8: Changing Your Settings

### Topics Covered

---

- Time & Date
  - Phone settings
  - Display settings
  - Sound settings
  - Bluetooth
  - Network services
  - Security
  - Software update
  - Reset settings
- 

This section explains the sound and phone settings for your phone. It includes display settings, security settings, and extra settings associated with your phone.

## Time & Date

This menu allows you to change the current time and date displayed.

The following options are available:

- **Set time:** allows you to change the hour and minute.
- **AM/PM:** allows you to set either AM or PM.
- **Time format:** allows you to select whether your time is displayed in 12 hours or 24 hours format.
- **Set date:** allows you to enter the month, day, and year.
- **Date format:** allows you to select MM/DD/YYYY, DD/MM/YYYY, or YYYY/MM/DD format.
- **Week start day:** allows you to specify which day (Sunday or Monday) to consider as the first day of the week.
- **Auto update:** allows you to receive time information from your service provider's network.
  - **On:** the phone automatically updates the time and date according to the current time zone using the network service.
  - **Confirm first:** the phone asks for a confirmation before the update.
  - **Off:** you need to manually set the time and date according to the current time zone using the Set time menu.

To change your time and date settings:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Settings** icon. Press the **Select** soft key or the **OK** key to enter the menu.

## Phone settings

## Section 8

3. Highlight the **Time & Date** options and press the **Select** soft key or the **OK** key.
4. Use the **Up** or **Down** Navigation key to select the option you wish to change.
5. To set **Set time** or **Set date**, use the **Left** or **Right** navigation key to position the cursor over the number you wish to change.
6. Enter the desired number.
7. To change other options, use the **Left** or **Right** navigation key to select the desired setting.
8. When you are finished changing your settings, press the **Save** soft key to save your settings. Otherwise press the **Back** soft key.

---

**Note:** Automatic updates of time and date do not change the time you have set for alarm settings or calendar memos.

---

## Phone settings

You can customize various phone settings.

### Language

This menu allows you to select a display language for Text language and Input mode. Choose from **English**, **Français**, or **Español** or choose **Automatic** selection.

### Greeting message

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

For details about entering characters, see "Section 5: Entering Text" on page 51.

### Auto key lock

This menu allows you to set a lock on your keypad to eliminate pressing keys inadvertently. Highlight **On** or **Off** and press the **Select** soft key. Or to cancel, press the **Back** soft key.

### Extra settings

You can turn the automatic redialing or answering features on or off.

1. To turn a feature on, highlight the feature and press the **OK** key. A check mark displays in front of the option.
2. To turn a feature off, highlight the checked feature and press the **OK** key. The check mark no longer displays.

The following options are available:

- **Auto redial:** when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

---

**Note:** The interval between call attempts varies.

---

- **Anykey answer:** when this option is checked, you can answer an incoming call by pressing any key, except the **Power** key or the **Reject** soft key. To reject the call, press the **Power** key or the **Reject** soft key. When this option is unchecked, you must press the **Power** key or **Accept** soft key to answer a call.
3. When you have finished changing your settings, press the **Save** soft key to save your settings. Otherwise press the **Back** soft key.

## Airplane mode

Airplane mode allows you to use many of your phone's features, such as Games, Music, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

1. To turn a feature on, highlight the feature and press the Select soft key or the  key.
2. Highlight **On** or **Off** and press the **Save** soft key.

## Display settings

In this menu, you can change various settings for the display or backlight.

### Wallpaper

This menu allows you to change the background image to be displayed in Idle mode.

The following options are available:

- **Get more wallpaper:** this option takes you to t-zones where you can download wallpapers.

---

**Note:** When downloading wallpapers, charges may apply.

---

- **Default wallpapers:** allows you to choose from a list of wallpapers included with your phone.
- **My downloads:** allows you to choose a photo from your downloaded images folder.
- **My photos:** allows you to choose a photo from My photos folder.

To change the background image:

1. After selecting one of the above options, scroll through the list by pressing the Navigation keys and select an image.
2. Highlight your wallpaper choice and press the **OK** key.
3. Press the **Select** soft key.
4. The image will be saved as your wallpaper.

### Info display

This menu allows you to set **Text style** and **Text color**. Press the **Left** or **Right** Navigation key to change the settings.

### Interior display

You can select the color of the menus displayed. There are two different patterns to choose from.

### Brightness

You can adjust the display brightness to see it better in different lighting conditions.

Press the **Left** or **Right** Navigation key or press the **Volume** keys to adjust the brightness. Press the **OK** soft key to save your settings.

### Backlight

In this menu, you can select the length of time that the keypad backlight is on and how much longer the display is illuminated before going off.

The **On** setting is how long the keypad backlight is on. You can select 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.

## Display settings

The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit. You can select Off, 15 seconds, 30 seconds, 1 minute, or 3 minutes.

For example, if you set **On** for 30 seconds and **Dim** for 15 seconds, after 30 seconds the backlight on the keys would turn off and 15 seconds later the display light would turn off.

Press the **Left** or **Right** Navigation key to adjust the settings.

### Dialing display

This menu allows you to select the size and color of your dialing font and the background color.

To change the size of the font:

1. Highlight the **Font size** option and press the **Select** soft key or the **OK** key.
2. Use the **Left** or **Right** navigation key to select between Large, Medium, or Small.
3. Press the **Save** soft key or the **OK** key to save your change. Otherwise, press the **Back** soft key.

To change the color of the font:

1. Highlight the **Font color** option and press the **Select** soft key or the **OK** key.
2. Use the **Left** or **Right** navigation key to select either Basic (black), Rainbow, or Monochrome.



## Section 8

3. If you choose **Monochrome**, you may also select another color. Use the **Down Navigation** key to move to this field and the **Left** or **Right Navigation** key to make your selection.
4. Press the **Save** soft key or the **OK** key to save your change. Otherwise, press the **Back** soft key.

To change the background color:

1. Highlight the **Background color** option and press the **Select** soft key or the **OK** key.
2. Use the **Left** or **Right** navigation key to select your background color choice.
3. Press the **Save** soft key or the **OK** key to save your change. Otherwise, press the **Back** soft key.

### Show caller information

By turning this option on, when you miss a call, caller information such as name will be displayed on your display when your missed calls are listed.

### Sound settings

You can customize various sound settings for your phone.

#### Incoming call

##### Get More MegaTones

Using the **Get More MegaTones** option, you can access the web site preset by T-Mobile and download new sounds.

## Get More HiFi Ringers

Using the **Get More HiFi Ringers** option, you can access the web site preset by T-Mobile and download new HiFi Ringers.

---

**Note:** When downloading MegaTones® or HiFi Ringers™, charges may apply.

---

## Ringtone

This menu allows you to select a ring melody. Highlight **Ringtone** and press the **OK** key. Use the **Up** or **Down** key and select My sounds, Voice list, Music, or Default sounds. Then use the **OK** key to select a ringtone.

## Volume

This menu allows you to adjust the ring volume to one of 5 levels.

Use the **Right** or **Left** navigation key to increase or decrease the volume.

## Alert type

This menu allows you to specify how you are to be informed of incoming calls. Use the **Right** or **Left** navigation key to select a ring tone.

The following options are available:

- **Melody:** the phone rings using the ring melody selected in the Ringtone menu.
- **Vibration:** the phone vibrates but does not ring.
- **Vibration then melody:** the phone vibrates 3 times and then starts ringing.

## Keypad tone

This menu allows you to select the key tone and volume that the phone sounds when you press a key.

Use the **Right** or **Left** navigation key to make your selections.

To turn off the sound, select **Off**.

When the sound is set to **On**, the **Keytone** field becomes enabled allowing the **DTMF**, **Voice**, and **Xylophone** to be selected.

## Message tone

This menu allows you to set the message tone for incoming **Text**, **Picture**, and **Broadcast** messages. You can set the **Tone**, **Alert type**, and **Repetition**.

Use the **Right** or **Left** navigation key to make your selections.

## Power on/off

This menu allows you to select the melody that the phone sounds when it is switched on and off.

To turn off the sound, select **Off**.

## Silent mode

This menu allows you to select whether or not your phone will vibrate while in quiet mode. You may choose between **Vibration** and **Mute**.

## Extra tones

You can customize additional tones for the phone.

1. To turn a given tone on, press the **OK** key. A check mark

displays in front of the option.

2. To turn a given tone off, press the **OK** key. The check mark no longer displays in front of the option.

The following options are available:

- **Minute minder:** sets whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of your call.
- **Connection tone:** sets whether or not the phone beeps when your call is connected to the system.
- **Alerts on call:** sets whether or not you receive tones when a message arrives while you are on a call.

## Bluetooth

### About Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

The following Bluetooth options are available:

### Turn Bluetooth On/Off

This option allows you to turn Bluetooth **On** or **Off**. Make a selection and press the **Select** soft key or the **OK** key.

## My devices

This option allows you to search for new Bluetooth devices. Highlight the **Search new device** option and press the **Select** soft key or the **OK** key. The phone will search for available devices.

## My visibility

This option allows you to turn your visibility to **On** or **Off**. Make a selection and press the **Select** soft key or the **OK** key.

## My phone name

This option shows the name given to your phone for Bluetooth purposes. You can edit the name if needed.

## Security modes

This option allows you to set your security modes to **On** or **Off**. Make a selection and press the **Select** soft key or the **OK** key.

## Features

Actually, the Bluetooth specification is a protocol that describes how the short-range wireless technology works, whereas individual profiles describe the services supported by individual devices. Profiles reduce the chance that different devices will not work together.

The following Service profiles are available:

- **Headset:** The remote Bluetooth headset enables outgoing and incoming calls.

## Network services

## Section 8

- **Handsfree:** The remote Bluetooth car kit enables outgoing and incoming calls.
- **Serial port:** The remote Bluetooth device acts as a virtual serial port.
- **Dial up networking:** The remote Bluetooth device enables Internet access through a phone modem.
- **File transfer:** The remote Bluetooth device enables users to transfer files from their handset to others.
- **Object push:** The remote Bluetooth device enables the transfer of personal data (e.g. vCard, vCalendar, etc.) to other devices.

## Help

This options takes you to the **Get More Help** menu in t-zones.

## Network services

### Call forwarding

This network service enables incoming calls to be rerouted to the number that you specify.

---

**Example:** You may wish to forward your business calls to a colleague while you are on holiday.

---

To set your call forwarding options:

1. Select a call forwarding option by pressing the **Up** or **Down** Navigation key and then press the **Select** soft key or the **OK** key.

The following options are available:

- **Forward always:** all calls are forwarded.
- **Busy:** calls are forwarded when your phone is busy.

**Section 8**

- **No reply:** calls are forwarded when your phone is not answered.
  - **Unreachable:** calls are forwarded when you are not in an area covered by your service provider or when your phone is switched off.
  - **Cancel all:** all call forwarding options are canceled.
2. Select the type of calls, **Voice calls** or **Data calls**, by pressing the **Up** or **Down** Navigation key, and then press the **Select** soft key or the **OK** key.

The current status displays. If the option has already been set, the number to which the calls are forwarded displays.
  3. To activate call forwarding, select **Activate** by using the **Left** or **Right** navigation key.
  4. To deactivate call forwarding, select **Deactivate** by using the **Left** or **Right** navigation key.
  5. Enter the number to which the calls are to be forwarded in the **Forward to** text box and press the **Select** soft key or the **OK** key.

To enter an international code, press and hold the **+** key until the **+** sign displays.

The phone sends your settings to the network and the network's acknowledgement displays.

### Call barring (SIM Dependent)

Call Barring allows you to restrict specific types of incoming and outgoing calls for your phone. This is useful if you allow someone to use your phone for a short period of time.

## Call waiting

This network service informs you when someone is trying to reach you during another call.

You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

1. Select the type of calls, **Voice calls** or **Data calls**, to which the call waiting option is to be applied by pressing the **Up** or **Down** Navigation key and then press the **Select** soft key or the **OK** key.

The screen informs you whether call waiting is activated or deactivated.

2. Highlight **Activate** or **Deactivate** and press the **Select** soft key or the **OK** key.
3. Call waiting will then be activated or deactivated.
4. Select the **Cancel all** option to deactivate Call waiting on all voice and data calls.

## Network selection (SIM Dependent)

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

---

**Note:** You can select a network other than your home network only if there is a valid roaming agreement between the two.

---

To change Network Selection mode:

1. Highlight the **Search now** option and press the **Select** soft key or the **OK** key.

2. Press the **Up** or **Down** Navigation key until the network you want highlights and then press the **Select** soft key or the **OK** key.

The phone will scan for that network and you will be connected.

To change your Default setup:

1. Highlight the **Default setup** option and press the **Select** soft key or the **OK** key.
2. Highlight either the **Automatic** or **Manual** option and press the **Select** soft key or the **OK** key.

If you select **Automatic**, you are connected to the first available network when roaming.

3. If you select **Manual**, press the **Up** or **Down** Navigation key until the network you want highlights and then press the **Select** soft key or the **OK** key.

The phone will scan for that network and you will be connected.

## Caller ID

You can prevent your phone number from being displayed on the phone of the person being called.

---

**Note:** Some networks do not allow you to change this setting.

---

The following options are available:

- **Set by network:** the default setting provided by the network is used.
- **Hide number:** your number does not display on the other person's phone.

- **Show number:** your number is sent each time you make a call.

## Security

The Security feature enables you to restrict the use of your phone by others and to restrict the types of calls.

Various codes and passwords are used to protect the features of your phone.

### PIN check

When the PIN Check feature is enabled, you must enter your PIN each time you switch on the phone.

Consequently, any person who does not have your PIN cannot use your phone without your approval.

---

**Note:** Before enabling or disabling the PIN Check feature, you must enter your PIN.

---

The following options are available:

- **Disable:** the phone connects directly to the network when you switch it on.
- **Enable:** you must enter the PIN each time the phone is switched on.

### Change PIN

This feature allows you to change your current PIN, provided that the PIN check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

## Phone lock

When the Phone lock feature is enabled, the phone is locked and you must enter the 4- to 8-digit phone password each time the phone is switched on.

The password is preset to “00000000” at the factory. To change the phone password, see “Change password” on page 118.

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

- **Disable:** you are not asked to enter the phone password when you switch on the phone.
- **Enable:** you are required to enter the phone password when you switch on the phone.

## Change password

The Change password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is preset to “00000000” at the factory. Once you have entered a new password, you are asked to confirm it by entering it again.

---

**Note:** If you change your password, be sure to write it down and keep it in a safe place. If you forget your password, your phone will require service to have it unlocked.

---

## Lock application

Using the **Lock application** option, you can lock everything on your phone with the exception of making a call. The password must be entered to access Menu mode or t-zones.

To enable Lock application:

1. Use the **Up** or **Down** Navigation keys to select the category you wish to enable the **Lock application** press the **OK** key. A checkmark is placed next to the categories that you selected.
2. Press the **Save** soft key.
3. Enter your password and press the **OK** soft key or the **OK** key.

To disable Lock application:

1. Use the **Up** or **Down** Navigation keys to select the category you wish to disable the **Lock application** press the **OK** key. A checkmark is placed next to the categories that you selected.
2. Press the **Save** soft key.
3. Enter your password and press the **OK** soft key or the **OK** key.

---

**Note:** The password is preset to "00000000" at the factory. To change this password, see "Change password" on page 118.

---

## FDN mode

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

- **Disable:** you can call any number.
- **Enable:** you can only call phone numbers stored in your SIM's FDN. You must enter your PIN2. You can obtain your PIN2 from your service provider.

### Change PIN2

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one. Once you have entered a new PIN2, you are asked to confirm it by entering it again.

---

**Note:** Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

---

### Software update

This option lets you download Over-The-Air phone software Updates from T-Mobile that improve the performance of your phone. Only the internal software is updated. No phonebook entries or other information saved to your phone will be deleted.

---

**Important!** Make sure your phone battery is fully charged or connect your phone to the Travel Adapter before selecting this option.

---

To update your phone's software:

1. In Idle mode, press the **Menu** soft key to access Menu mode.

## Reset settings

- Using the Navigation keys, scroll to the **Settings** icon. Press the **Select** soft key or the **OK** key to enter the Settings menu.
- Using the Navigation keys, highlight the **Software update** option and press the **Select** soft key or the **OK** key.
- Follow the on-screen instructions.

## Section 8

## Reset settings

From this menu you can reset your phone and sound settings to the default settings.

The following options are available:

 
 
 
- All:** Phone, Display, and Sound settings will be returned to default values.
- Phone settings:** only phone settings will be returned to default values.
- Display settings:** only display settings will be returned to default values.
- Sound settings:** only sound settings will be returned to default values.

To reset your settings:

- Highlight one of the options and press the **OK** key to place a check mark next to the option.
- Press the **Reset** soft key.
- You will be prompted with **Reset settings?**. Press the **Yes** soft key.
- Enter the 4- to 8-digit password and press the **OK** soft key or the **OK** key. You will receive a **Reset** confirmation message.



The password is preset to "00000000." To change this password, see "Change password" on page 118.



## Section 9: Fun & Apps

### Topics Covered

---

- My Files
  - Games
  - Music player
  - Camera
  - Organizer
- 

This section outlines the various applications that are available on your phone.

## My Files

My Files allows you to manage your sounds, images, videos, and music, in one convenient location.

### Sounds

In this menu, you can view the list of sounds downloaded from the web server or received in multimedia messages. You can set a downloaded sound as the current ring tone.

---

**Note:** When downloading MegaTones® or HiFi Ringers™, charges may apply.

---

The following options are available:

#### Get More MegaTones

Using the **Get More MegaTones** option on the sounds list, you can access the web site preset by T-Mobile and download new sounds.

#### Get More HiFi Ringers

Using the **Get More HiFi Ringers** option on the sounds list, you can access the web site preset by T-Mobile and download new HiFi Ringers.

#### My sounds

Highlight an item in the My sounds menu and press the **Options** soft key. The following options are available:

- **Download new:** takes you to t-zones where you can download new sounds.
- **Play:** plays the sound.

- **Send via:** allows you to send the sound via Picture message or Bluetooth.
- **Set as:** allows you to set the sound as your Ringtone, a Caller ringtone, or an Alarm tone.
- **Delete:** allows you to delete the sound or delete Multiple sounds.
- **Move to memory card:** allows you to move the sound to your micro SD memory card.
- **Copy to memory card:** allows you to copy the sound to your micro SD memory card.
- **Rename:** allows you to change the name of the sound.
- **Bluetooth visibility:** allows the selected sound or multiple sounds to be shared or released for the use of another Bluetooth device.
- **Lock:** allows you to lock the sound to protect it from deletion.
- **Properties:** displays the sound Name, Date, Format, Size, and Protection.

### Voice list

The Voice list contains your recorded audio messages. Highlight an item in the Voice list menu and press the **Options** soft key. The following options are available:

- **Play:** plays the audio message.
- **Send via:** allows you to send the audio message via Picture message or Bluetooth.
- **Set as:** allows you to set the sound as your Ringtone, a Caller ringtone, or an Alarm tone.
- **Delete:** allows you to delete the selected audio message or delete Multiple audio messages.

- **Move to memory card:** allows you to move the audio message to your micro SD memory card.
- **Copy to memory card:** allows you to copy the audio message to your micro SD memory card.
- **Rename:** allows you to change the name of the audio message.
- **Bluetooth visibility:** allows the selected or multiple audio messages to be shared or released for the use of another Bluetooth device.
- **Lock:** allows you to lock the audio message to protect it from deletion.
- **Properties:** displays the audio message Name, Date, Format, Length, Size, and Protection.

### Memory card

Select this option to see the sounds that you have saved to your memory card.

---

**Note:** The Memory card option will only appear if a micro SD memory card has been inserted in your phone.

---

### Images

In this menu, you can view the list of images downloaded from the web server or received in messages. You can set a downloaded image as the current background image.

The following options are available:

#### Get More Wallpapers

Using the **Get More Wallpapers** option, you can access the web site preset by T-Mobile and download new images.

## My Album

My Album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text.

Use the following procedure to access **My Album**:

---

**Note:** When accessing My Album, charges may apply.

---

1. In your t-zone browser, select the **My Albums Menu** link and press the **Select** soft key or the **OK** key.
2. Photos sent to this folder are stored in the **Inbox Album**. Press the **Select** soft key to view the photos.
3. Press the **Exit** key to exit t-zones and return to the Idle screen.

## My Journal

Make notes in My Journal, your online diary and Weblog. Keep it private to store your personal memories, or send e-mails to invite people to view and comment on your album. See your service provider for more information.

---

**Note:** When accessing My Journal, charges may apply.

---

## My downloads

This menu allows you to access your downloaded images.

Scroll to the image you want to view. By pressing the **Options** soft key you can access the following options:



## Section 9

- **Download new:** takes you to t-zones where you can download new images.
- **View:** displays the image.
- **Send via:** allows you to send the image via Picture message or Bluetooth.
- **Set as:** allows you to set the image as Wallpaper or as a Caller ID.
- **Delete:** allows you to delete the Selected image or to delete Multiple images.
- **Move to memory card:** allows you to move the item to the micro SD memory card.
- **Copy to memory card:** allows you to copy the item to the micro SD memory card.
- **Rename:** allows you to change the name of the item.
- **Display mode:** allows you to see your images displayed in a Line view or in Thumbnail view.
- **Slide show:** allows you to see all of your photos in a slide show presentation.
- **Bluetooth visibility:** allows the selected or multiple images to be shared or released for the use of another Bluetooth device.
- **Lock:** allows you to lock the image to protect it from deletion.
- **Properties:** displays the image Name, Date, Format, Size, Resolution, and Protection.

### My photos

In this menu you can review the photos you've taken. Highlight a photo and press the **Options** soft key to choose from the following options:

- **View:** displays the photo.
- **Send to My Album:** sends the photo to My Album.

- **Send via:** allows you to send the image via Picture message or Bluetooth.
- **Set as:** allows you to set the photo as Wallpaper or as a Caller ID.
- **Default destination:** allows you to remove or replace the default destination.
- **Delete:** allows you to delete the Selected photo or to delete Multiple photos.
- **Move to memory card:** allows you to move the photo to the micro SD memory card.
- **Copy to memory card:** allows you to copy the photo to the micro SD memory card.
- **Rename:** allows you to change the name of the photo.
- **Display mode:** allows you to see your images displayed in a Line view or in Thumbnail view.
- **Slide Show:** allows you to see all of your photos in a slide show presentation.
- **Bluetooth visibility:** allows the photo to be shared or released for the use of another Bluetooth device.
- **Lock:** allows you to lock the image to protect it from deletion.
- **Properties:** displays the image Name, Date, Format, Size, Resolution, and Protection.

### Memory card

Select this option to see the images that you have saved to your memory card.

---

**Note:** The Memory card option will only appear if a micro SD memory card has been inserted in your phone.

---

## Videos

In this menu, you can view a list of videos downloaded from the web server or received in multimedia messages. The following options are available:

### Downloaded videos

This menu allows you to access your downloaded video clips.

Scroll to the video you want to view. By pressing the **Options** soft key you can access the following options:

- **Play:** plays the video.
- **Send via:** allows you to send the video via Picture message or Bluetooth.
- **Delete:** allows you to delete the Selected video clip or to delete Multiple video clips.
- **Move to memory card:** allows you to move the video to the micro SD memory card.
- **Copy to memory card:** allows you to copy the video to the micro SD memory card.
- **Rename:** allows you to change the name of the video.
- **Display mode:** allows you to see your videos displayed in a Line view or in Thumbnail view.
- **Bluetooth visibility:** allows the selected or multiple videos to be shared or released for the use of another Bluetooth device.
- **Lock:** allows you to lock the video to protect it from deletion.
- **Properties:** displays the video Name, Date, Format, Size, and Protection.

## My videos

In this menu you can review the photos you've taken. Highlight a video and press the **Options** soft key to choose from the following options:

- **Play:** plays the video.
- **Send via:** allows you to send the video via Picture message or Bluetooth.
- **Delete:** allows you to delete the selected or multiple videos or delete Multiple videos.
- **Move to memory card:** allows you to move the video to the micro SD memory card.
- **Copy to memory card:** allows you to copy the video to the micro SD memory card.
- **Rename:** allows you to change the name of the video.
- **Display mode:** allows you to see your videos displayed in a Line view or in Thumbnail view.
- **Bluetooth visibility:** allows the selected or multiple videos to be shared or released for the use of another Bluetooth device.
- **Lock:** allows you to lock the video to protect it from deletion.
- **Properties:** displays the video Name, Date, Format, Size, Resolution, and Protection.

## Memory card

Select this option to see the videos that you have saved to your memory card.

---

**Note:** The Memory card option will only appear if a micro SD memory card has been inserted in your phone.

---

## Music

This menu allows you to access the music files you have stored on your phone or the memory card.

### My music

This options allows you to access your MP3 files in your Music list.

---

**Note:** MP3 Bitrate is limited to 192Kbps.

---

### Memory card

Select this option to see the music files that you have saved to your memory card.

---

**Note:** The Memory card option will only appear if a micro SD memory card has been inserted in your phone.

---

## Other files

This option allows you to view other types of files that you have stored on your phone. This includes Excel spreadsheets, text files, wmf files, PowerPoint presentations, PDFs, MHTML, JPEGs, GIFs, BMPs, and Word documents. You can also move or copy the files to your memory card.

## Memory card

You can check the contents of your micro SD memory card and see what has been saved there. Press the **Up** or **Down** navigation keys to scroll between Sounds, Images, Videos, Music, and Other files.

After selecting a folder, press the **Options** soft key for the following options:

- **Open:** allows you to open the folder so you can access its contents.
- **Create folder:** allows you to create a new folder.
- **Delete folder:** allows you to delete a folder.
- **Rename folder:** allows you to rename a folder.
- **Bluetooth visibility:** allows you to share all data stored on the memor card.
- **Properties:** lists the folder Name, Date, Format, Size, and Protection.
- **Memory card info:** lists the Memory card Capacity, Used space, and Free space.

---

**Note:** The Memory card option will only appear if a micro SD memory card has been inserted in your phone.

---

For more information on downloading files from your PC to your Memory card, contact your service provider.

### Memory status

You can check the amount of memory being used and memory remaining for sounds, music, images, videos, and other files. You can select **Phone** or **Memory card**. Press the **Left** or **Right** navigation keys to scroll between size and count.

### Games

You can download MIDlets (Java applications that run on mobile phones) from various sources using t-zones and store them in your phone.

When you access the Games menu, the list of default games appears. Once you have downloaded games, they are added to the list.

---

**Note:** Java services may not be available, depending on your service provider.

---

## Get More Games

You can download more games from the web site preset by your service provider using the **Get more games** option.

### My games

1. Scroll to the MIDlet you want on the Games list and press the **OK** key.
2. The startup screen of the MIDlet will be displayed along with game options. Use the Navigation keys to scroll between options. Press the **OK** key to make a selection.
3. The startup screen of the MIDlet will be displayed along with game options.
4. To select options, press the **Options** soft key on the Games list.
5. Use the Navigation keys to scroll between options. Press the **OK** key to make a selection.

---

**Note:** MIDlet game options will differ depending on the MIDlet you select.

---

## Music player

The Audio Player can be used to play files you have loaded from your PC to your micro SD memory card.

**Note:** The following characters cannot be used in the filename:

← < > " ? / \ : \* |

1. In the **Fun & Apps** menu, select **Music player** and press the **Select** soft key or the **OK** key.
2. Before you select an MP3, press the **Options** soft key to select from the following options:
  - **Add music from:** allows you to add music from your Phone or memory card.
  - **Settings:** allows you to set these settings; Repeat mode, Shuffle, Equalizer, Visualization, Backlight, and Volume.
3. Highlight the **Add music from** option and press the **Select** soft key or the **OK** key.
4. Depending on where your MP3s are stored, highlight the **Phone** or **memory card** option and press the **Select** soft key or the **OK** key.
5. Press the **Up** or **Down** navigation keys to highlight the song or songs you want to listen to. Press the **OK** key to checkmark the songs.
6. Press the **Add** soft key. The marked songs will be added to your Music list.
7. Press the **Options** soft key and highlight the **Play** option. Press the **Select** soft key or the **OK** key to play your music.

8. While listening to an MP3, press the **Options** soft key for the following options:

- **Pause:** allows you to pause the song you are listening to. Press the **OK** to resume the song.
- **Open playlist:** allows you to open My playlist or Current playlist.
- **Remove from playlist:** removes the MP3 from your current playlist.
- **Settings:** allows you to set these settings; Repeat Mode, Shuffle, Equalizer, Visualization, Backlight, and Volume.
- **Properties:** allows you to view MP3 Name, Date, Format, Bitrate, Length, Size, and Protection.

## Camera

For information on using your camera and camcorder, see "Section 10: Camera and Camcorder" on page 147.

## Organizer

The Organizer allows you to set alarms, schedule appointments, view the calendar, create Tasks, perform simple math calculations, check world time, perform unit conversions, set a timer, and use a stopwatch.

### Alarm

This feature allows you to:

- set up to 3 alarms to ring at specified times.
- set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:

- **Wake up call:** the alarm rings to wake you up in the morning.

- **Alarm1:** set the time and tone for this alarm.
- **Alarm2:** set the time and tone for this alarm.
- **Auto power:** alarm rings at the specified time even if the phone is turned off. If the option is set to **Off** and the phone is switched off at the specified time, the alarm does not ring.

To set an alarm:

1. Highlight the alarm you would like to set and press the **Select** soft key or the **OK** key.
2. Highlight the **Alarm** option and press the **Right** navigation key to set Alarm to **On**.
3. Press the **Down** key to highlight the **Alarm time** option. Enter the time you want the Alarm to sound.
4. Press the **Down** key to highlight the **AM/PM** option. Press the **Left** or **Right** navigation key to set to **AM** or **PM**.
5. Press the **Down** key to highlight the **Repeat** option. Press the **Left** or **Right** navigation key to set to **Once**, **Everyday**, **Except weekend** or **Except sunday**.
6. Press the **Down** key to highlight the **Alarm tone** option. Press the **OK** key to bring up a list of alarm tone locations.
7. Press the **Up** or **Down** Navigation key to highlight an alarm tone location. Choose between My sounds, Voice list, Music, or Default sounds. Press the **Select** soft key or the **OK** key.
8. Press the **Up** or **Down** Navigation key to select an alarm tone. Press the **Select** soft key or the **OK** key.
9. Press the **Save** soft key.

10. Press the  key to return to Idle mode.

---

**Note:** Your phone is preset to a 12-hour format. To change the time format, see "Time & Date" on page 102.

---

11. To stop the alarm when it rings, press any key.

## Calendar

With the Calendar feature, you can:

- consult the calendar by month, week, or day.
- set schedules and note anniversaries.
- make a Task.
- write memos to keep track of your schedule.
- set an alarm to act as a reminder, if necessary.
- check your memory status.

When you select the Calendar menu, the following options are available:

### Month view

When you select this option, the calendar displays the selected month with today's date highlighted.

At the bottom of the calendar, the following icons are displayed along with the number of entries for each:

-  Schedule items
-  Anniversary events
-  Miscellaneous items

The number of entries next to each icon reflects the number of entries for the selected day on the calendar.

The following options are available when you press the **Options** soft key:

- **View mode:** allows you to select between Day view or Week view of the selected day.
- **Create:** allows you to create a Schedule, Anniversary, or Miscellaneous event.
- **Go to:** allows you to see the Month view with today's date highlighted or a specified date.
- **Delete:** allows you to delete all events for a selected date, delete all events for preceding dates, or delete all events for this Month dates. You can also delete all events.

### Week view

When you select this option, the calendar displays the selected week with today's date and time highlighted. The following options are available when you press the **Options** soft key:

- **View mode:** allows you to select between Day view or Month view of the selected day.
- **Create:** allows you to create a Schedule, Anniversary, or Miscellaneous event.
- **Go to:** allows you to see the Week view with today's date highlighted or a specified date.
- **Delete:** allows you to delete all events for a selected date, delete all events for preceding dates, or delete all events for this Week dates. You can also delete all events.

### Day view

When you select this option, you are taken to the Day view of the selected day with any events listed. If you

have an event scheduled, the following options are available when you press the **Options** soft key:

- **View:** allows you to view the event(s) scheduled for this day.
- **Create:** allows you to create a Schedule, Anniversary, or Miscellaneous event.
- **Send via:** allows you to send the event information via, Text message, Picture message, or Bluetooth device.
- **View mode:** allows you to select between Month view or Week view of the selected day.

### Schedule

This option allows you to write memos to a schedule.

1. From Month, Week, or Day View, press the **Options** soft key. Highlight the **Create** option and press the **Select** soft key or the **OK** key.
2. Highlight the **Schedule** option and press the **Select** soft key or the **OK** key.
3. Enter the subject in the **Subject** text box then press the **Down** soft key.
4. Enter other information including Details, Start date, Start time, AM/PM, Due date, End time, AM/PM, Location, Alarm, Before, Alarm tone. Check the **Repeat** box using the **OK** key if you want to repeat the alarm, then enter the repetition frequency (Everyday, Every week, or Every month) and the Until date.
5. When you are finished, press the **Save** soft key.  
Your information is saved to the Schedule.

## Anniversary

This option allows you to record Anniversaries in your calendar. You can also set an alarm to remind you of important anniversaries.

1. From Month, Week, or Day View, press the **Options** soft key. Highlight the **Create** option and press the **Select** soft key or the **OK** key.
2. Highlight the **Anniversary** option and press the **Select** soft key or the **OK** key.
3. Enter the occasion in the **Occasion** text box then press the **Down** soft key.
4. Continue to enter other information including Date, Alarm, Before, Alarm time, AM/PM, Alarm tone, and whether or not to Repeat every year.
5. When you are finished, press the **Save** soft key.

Your Anniversary information is saved to the Calendar.

## Miscellaneous

This option allows you to record miscellaneous dates or events in your calendar.

1. From Month, Week, or Day View, press the **Options** soft key. Highlight the **Create** option and press the **Select** soft key or the **OK** key.
2. Highlight the **Miscellaneous** option and press the **Select** soft key or the **OK** key.
3. Enter the subject in the **Subject** text box then press the **Down** soft key.

4. Continue to enter other information including Details, Start date, Start time, AM/PM, Due date, End time, and AM/PM.
5. When you are finished, press the **Save** soft key.  
Your Miscellaneous information is saved to the Calendar.

### Missed alarm events

You can check on all of the events that you have set an alarm on.

1. Highlight the **Missed alarm events** option and press the **Select** soft key or the **OK** key.
2. To view an event information, highlight an event and press the **OK** key. If no alarm events have been missed, **0 Missed** is displayed.

The missed alarm event information is displayed.

3. To acknowledge and remove the event, press the **Confirm** soft key or the **OK** key.

The event will be removed from the Missed alarm events menu.

### Memory status

This option displays the number of Calendar, Schedule, Anniversary, and Miscellaneous events and the amount of memory that they use.

### Tasks

Use the Task function to in the same way you would use a written task list. When the task has been completed, you can check it off as done.

To enter tasks into your Organizer, follow these steps:

## Organizer

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight **Organizer** and press the **Select** soft key or the **OK** key.
4. Highlight **Task** and press the **Select** soft key or the **OK** key.
5. The first time you enter the task menu, it will be empty. Press the **Options** soft key and highlight the **Create** option. Press the **Select** soft key or the **OK** key.
6. In the Task text box, enter your task. It can be up to 160 characters long.
7. Press the **Down** Navigation key and highlight the **Start date** option. If you want to have a start date, press the **OK** key to check the box then use the **Down** key to highlight the Start date text box. Enter the start date.
8. Scroll down and repeat step 7 for the Due date.
9. Scroll down and highlight the **Priority** option. Use the **Left** or **Right** Navigation keys to select High, Normal, or Low.
10. Press the **Save** soft key.

To see your Task list, you can go to the **Task** option in the Organizer or you can see each task under **Day view** of the calendar for the day it was started.

To mark a task as **Done**:

1. Select the task in the task list.
2. Press the **Options** soft key and highlight the **Done** option. Press the **Select** soft key or the  $\text{OK}$  key.
3. The task will have an exclamation mark before it in the Task list.

### Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

1. Enter the first number using the numeric keys.
2. Enter the operation for your calculation by pressing the following navigation keys:
  - **Left**: subtraction (-)
  - **Right**: addition (+)
  - **Up**: multiplication ( $\times$ )
  - **Down**: division ( $\div$ )
3. The Left soft key can be used to create a decimal point and left and right brackets.
4. Enter the next number.
5. To view the result, press the  $\text{OK}$  key.

Repeat steps 1 to 5 as many times as required.

### World time

This feature allows you to find out what time it is another part of world, using the **Left** and **Right** Navigation keys.

## Organizer

There are two time lines available. You can set the first setting to your home city and then use the second setting to check other city times.

Press the **Options** soft key for the following options:

- **Save:** this allows you to save your world time settings.
- **Set daylight saving time:** use the  key to place a checkmark next to the cities that you want to set daylight savings time. Each city listed represents a time zone.

### Unit conversion

The Unit conversion menu provides the following conversion categories:

- Currency
- Length
- Weight
- Volume
- Area
- Temperature

To convert any of the above categories, do the following:

1. Scroll to the conversion feature you wish to use and press the **Select** soft key or the  key.
2. Enter the quantity you want converted in the upper text box.

---

**Note:** To include a decimal point, press the  key.

---

3. Use the **Up**, **Down**, **Left**, and **Right** navigation keys to select the From and To units of money or measure for the quantity you want converted.

The converted quantity appears in the lower text box.

### Timer

You can use this menu to set a timer. To enable the Timer, use the following options:

1. Press the **Set** soft key to enter the length of time.
2. Enter the time and press the **OK** soft key.
3. Press the **OK** key to start the timer. Press the **OK** key again to stop the timer.

### Stopwatch

This feature allows you to use a stopwatch. Press the **OK** key to start the stopwatch. Press the **Reset** soft key to erase all stopwatch times recorded. Press the **OK** key for the lap time. You can have up to 3 lap times.

## Section 10: Camera and Camcorder

### Topics Covered

---

- Using the Camera and Camcorder
  - Take and send
  - Record video
  - My photos
  - My videos
  - My Album
  - My Journal
- 

This section explains how to use the camera and camcorder on your phone. You can take photos and video clips using the built-in camera and camcorder.

Section 10

## Using the Camera and Camcorder

Using the camera/camcorder module in your phone, you can take photos or video clips of people or events while on the move. Additionally, you can send photos and video clips to other people in a Picture message or set a wallpaper or caller ID image.

---

**Note:**

Do not take photos or videos of people without their permission.  
Do not take photos or videos in places where cameras are not allowed.  
Do not take photos or videos in places where you may interfere with another person's privacy.

---

### Take and send

Your camera produces photos in JPEG format.

---

**Note:** When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

---

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Using the Navigation keys, scroll to the **Camera** option. Press the **Select** soft key or the **OK** key to enter the menu.
4. Highlight **Take and Send** and press the **Select** soft key or the **OK** key.



Take and send

---

**Note:** Steps 1–4 can be bypassed by pressing the **Up** navigation key or the **Camera** key while in Idle mode.

---

5. Adjust the image by aiming the camera at the subject. Press the **Left** soft key to access the camera options. For details, see “Using Camera Options” on page 149. You can use the keypad to quickly change the camera options.
6. Press the **OK** key to take the photo. Send to My Album? is displayed. Press the **Yes** soft key if you want to send the photo to your T-Mobile **My Album** service. The phone’s default destination is set to **My Album**. The photo is automatically saved in **My photos** in the phone.

---

**Note:** To change the default destination for your pictures, press the **Options** soft key when **Send to My Album?** appears on the display. Highlight the **Default destination** option. You can then Remove your default destination or Replace it with a Recent recipients, Phonebook, New recipient, My Album, or My Journal.

---

7. To use the photo options, press the **Options** soft key.
8. To return to Capture mode, select **Take another**.
9. To return to Idle mode, press the  key.

## Using Camera Options

In Capture mode, you can use various options for the camera by pressing the **Left** soft key.

The following options are available:

- **Record video:** switches from camera to camcorder.

- **Shooting mode:** allows you to Take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. The following modes are available:
  - **Single shot:** allows you to Take a photo normally and have it Automatically saved.
  - **Multi-shot:** allows you to take a series of action stills. Select the capture speed, High Speed or Normal Speed, and the number of photos the camera will take. When you press the  key, the camera takes photos successively.
  - **Mosaic style:** allows you to take several photos to combine in a mosaic.
- **Effects:** allows you to change the color tone or apply special effects to the photo.
- **Frames:** allows you to select a decorative frame. Select a frame from the list using the Navigation keys and press the  key to save your setting.
- **Timer:** allows you to set a time delay before the camera takes the photo. Select the length of delay you want. When you press  key, the camera takes the photo after the specified time has elapsed.
- **Go to My photos:** takes you to your **My photos** folder.
- **Settings:** allows you to change the image settings.
  - **Size:** allows you to set the image size to either SXGA(1280X1024), Mega(1152X864), SVGA(800X600), VGA(640X480), QVGA(320X240) or Mobile(176X144). The selected image size displays on the capture screen.
  - **Viewfinder:** allows you to set the viewfinder to Full screen or Actual screen.
  - **Shutter sound:** allows you to select a tone for the shutter sound. Choose between 4 tones.
  - **Zoom sound:** allows you to turn zoom sound On or Off.

Take and send

- **Brightness sound:** allows you to turn brightness sound On or Off.
- **Default name:** allows you to change the default name assigned to your Photo.
- **Camera shortcuts:** shows you how to change Camera options using your keypad. See “Camera-Camcorder Shortcuts” on page 151 for a list of available shortcuts.

## Camera-Camcorder Shortcuts

The following shortcuts are available:

KEY	CAMERA MODE	CAMCORDER MODE
	<b>Up</b> and <b>Down</b> navigation keys adjust the image brightness.	
	<b>Left</b> and <b>Right</b> navigation keys zoom in and out.	
	Takes the photo.	Turns the video recording on or off.
	<b>Up</b> volume key flips the image vertically.	
	<b>Down</b> volume key creates a mirror image.	
	Changes from camera to camcorder or camcorder to camera.	
	Changes the picture/video resolution.	
	Changes the camera shot/recording mode.	
	Changes the color tone or applies a special effect to the photo/video.	
	Selects a decorative frame.	Turns the video sound on or off.

KEY	CAMERA MODE	CAMCORDER MODE
	Sets a time delay.	
	Changes from Preview to Photo Albums or Photo Albums to Preview.	Changes from Preview to Video Albums or Video Albums to Preview.
	Changes capture mode to full screen.	

## Record video

Your camcorder produces videos in 3GP format.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Using the Navigation keys, scroll to the **Camera** option. Press the **Select** soft key or the **OK** key to enter the menu.
4. Highlight **Record video** and press the **Select** soft key or the **OK** key.
5. Adjust the image by aiming the camcorder at the subject. Press the Left soft key to access the camcorder options. For details, see “Using Camcorder Options” on page 153. You can use the keypad to quickly change the camcorder options.
6. To start recording your video clip, press the **OK** key.

Record video

- To stop the recording, press the Right soft key. The video clip is automatically saved in the **My videos** folder.
- To delete the video clip, press the **Options** soft key, highlight **Delete**, press the **Select** soft key or the **OK** key, then press the **Yes** soft key.

To return to Idle mode, press the  key.

To access camcorder options, press the Left soft key.

## Using Camcorder Options

In Capture mode, you can use various options for the camcorder by pressing the **Left** soft key.

The following options are available:

- **Take picture:** allows you to take a photo in camera mode.
- **Effects:** allows you to change the color tone or apply special effects to the video clip.
- **Timer:** allows you to set a time delay before the camcorder takes the video clip. Select the length of delay you want. When you press the **OK** key, the camcorder records the video after the specified time has elapsed.
- **Go to My videos:** takes you to your **My videos** folder where you can view your videos.
- **Settings:** allows you to change the recording settings.
  - **Recording mode:** allows you to set to **Normal** or **Limit for message** to keep the video shorter.
  - **Size:** allows you to set the image size to either QICF(176X144), or SQCIF(128X96). The selected image size displays on the capture screen.
  - **Viewfinder:** allows you to set the view finder to Full screen view or Actual screen.
  - **Audio record:** allows you to be able to record sounds with your video. Set to On or Off.

- **Zoom sound:** allows you to be able to hear the zoom in and out.
- **Brightness sound:** allows you to be able to hear the change when adjusting the brightness.
- **Default name:** allows you to change the default name assigned to your Video.
- **Camcorder shortcuts:** shows you how to change Camcorder options using your keypad. See “Camera-Camcorder Shortcuts” on page 151 for a list of available short cuts.

## My photos

1. In Idle mode press the **Menu** soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Camera** option and press the **Select** soft key or the **OK** key.
4. Select **My photos** and press the **Select** soft key or the **OK** key.

When you access this menu, your phone displays the photos in Line view mode, which shows them as small images. Use the Navigation keys to scroll through the photos.

5. To view the photos on the full screen, press the **OK** key. To go back to Line view, press the **Back** soft key or the **C** key.
6. You can use the **Up** and **Down** navigation keys to scroll through your photos.

## My photos Options

In the My photos menu, press the **Options** soft key to use the following options:

- **View:** allows you to view the photo on your display.
- **Send to My Album:** allows you to send the photo to Recent recipients, Phonebook, New recipient, My Album and My Journal.
- **Send via:** allows you to send the photo via Picture message or Bluetooth.
- **Set as:** allows you to set the photo as your Wallpaper or as a Caller ID.
- **Default destination:** allows you to send the photo to Recent recipients, Phonebook, New recipient, My Album and My Journal.
- **Delete:** allows you to delete the Selected photo or to delete Multiple photos.
- **Move to memory card:** allows you to move the selected photo or all photos to your micro SD memory card.
- **Copy to memory card:** allows you to copy the selected photo to your micro SD memory card.
- **Rename:** allows you to change the name of the photo.
- **Display mode:** allows you to see your photos displayed in a Line view or in Thumbnail view.
- **Slide show:** allows you to see all of your photos in a slide show presentation.
- **Bluetooth visibility:** allows the selected photo or multiple photos to be shared or released for the use of another Bluetooth device.
- **Lock:** allows you to protect the photo from being deleted.
- **Properties:** shows the properties of the photo, such as the Name, Date, Format, Resolution, Size, and Protection status.

## Deleting a Photo

You can delete photos one by one or all at one time.

1. From the **My photos** menu, select the photo you want to delete and press the **Options** soft key. Highlight the **Delete** option and press the **Select** soft key or the **OK** key.
2. Highlight the **Selected** option and press the **Select** soft key or the **OK** key. Or, highlight **Multiple** to delete more than one photo or to delete **All** photos.
3. Press the **Delete** soft key after pressing the **Options** soft key.
4. When you have finished, press the  key.

## My videos

1. In Idle mode press the **Menu** soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Camera** option and press the **Select** soft key or the **OK** key.
4. Select **My videos** and press the **Select** soft key or the **OK** key.

When you access this menu, your phone displays the video clips in Thumbnail mode, which shows them as small images. Use the Navigation keys to scroll through the video clips.

My videos

5. To view the video clips on the full screen, press the **OK** key.

## My videos Options

In the My videos menu, press the **Options** soft key to use the following options:

- **Play:** allows you to view the video clip on your display.
- **Send via:** allows you to send the video as part of a Picture message or Bluetooth.
- **Delete:** allows you to delete the Selected video clip or delete Multiple video clips.
- **Move to memory card:** allows you to move the video to your micro SD memory card.
- **Copy to memory card:** allows you to copy the video to your micro SD memory card.
- **Rename:** allows you to change the name of the video clip.
- **Display mode:** allows you to see your videos displayed in a Line view or in Thumbnail view.
- **Bluetooth visibility:** allows the selected or multiple videos to be shared or released for the use of another Bluetooth device.
- **Lock:** allows you to protect the video clip from being deleted.
- **Properties:** shows the properties of the video clip, such as the Name, Date, Format, Size, Resolution, and Protection status.

## Deleting a Video Clip

You can delete video clips one by one or all at one time.

1. From the My videos menu, use the **Up** or **Down** Navigation key to highlight the video you want to delete and press the **Options** soft key.
2. Highlight the **Delete** Option, then press the **Select** soft key or the **OK** key.

3. Highlight **Selected** if you only want to delete the video clip that you selected. Highlight **Multiple** if you want to delete more than one or all video clips.
4. Press the **Select** soft key or the **OK** key.
5. Press **Delete** soft key after pressing **Options** soft key
6. When you have finished, press the  key to return Idle mode.

## My Album

My Album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text.

Use the following procedures to access **My Album**.

---

**Note:** When accessing My Album, charges may apply.

---

1. In Idle mode press the **Menu** soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight **Camera** and press the **Select** soft key or the **OK** key.
4. Select **My Album** and press the **Select** soft key or the **OK** key. The browser is launched and the T-Mobile Web page displays.
5. Select the **My Albums Menu** link and press the **OK** key.

### My Journal

6. Photos sent to this folder are stored in the **Inbox Album**. Highlight the Inbox Album link and press the **OK** key. Highlight a photo and press the **OK** key to view the photos.
7. Press the  key to exit t-zones and return to the Idle screen.

 
## My Journal

Make notes in My Journal, your online diary and Weblog. Keep it private to store your personal memories, or send e-mails to invite people to view and comment on your album. See your service provider for more information.




---

**Note:** When accessing My Journal, charges may apply.

---



Section 10

   

## Section 11: t-zones

### Topics Covered

---

- t-zones
- 

This section outlines the t-zones service on your phone. For more information, contact T-Mobile.

## t-zones

Your phone is equipped with a WAP (Wireless Application Protocol) browser to allow you to access and navigate the Wireless Web using your phone.

To access t-zones, follow these steps:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **t-zones** icon. Press the **Select** soft key or the **OK** key to enter the menu.

The following options are available:

### Home

Selecting this menu connects the phone to the network and loads the t-zones homepage.

---

**Note:** You can enter t-zones without going through the t-zones menu by simply pressing the **t-zones** soft key while in Idle mode.

---

The content of the t-zones startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the **Up** and **Down** Navigation keys.

To go to the startup homepage from any other screen in the t-zones, use the **Home** option. For more information on the t-zones menus, see "Selecting and Using Options" on page 164.

### Exiting the t-zones

To exit the browser at any time, simply press the  key.

## Navigating the t-zones

1. To scroll through browser items, press the **Up** or **Down** Navigation key.
2. To select browser items, press the **OK** key. Or, press the **Options** soft key. Highlight the **Select** option and press the **OK** soft key.
3. To return to the previous page, press the **⏪** key. Or, press the **Options** soft key. Press the **Go** option, highlight the **Back** option and press the **OK** soft key.
4. To return to the startup homepage, press the **Menu Home** soft key. Highlight the **Home** option and press the **Select** soft key.

## Entering Text in t-zones

When you are prompted to enter text, the currently active text input mode is indicated on the screen. The following modes are available:

- **Upper-case character mode (A)**: allows you to enter upper-case English characters.
- **Lower-case character mode (a)**: allows you to enter lower-case English characters.

---

**Note:** You can enter symbols in upper-case or lower-case character mode by pressing the **ⓧ** key.

---

- **Number mode (1)**: allows you to enter numbers.
- **Predictive text (t9)**: allows you to use the phones predictive text for quick text entry.

To change the text input mode, use the following procedures:

1. Press the **OK** soft key one or more times.
2. To enter a space, press the **o+** key.
3. To edit text, set the cursor to the right of the character(s) to be corrected.
4. Press the **C** key as required.
5. Enter the correct character(s).

### Selecting and Using Options

Various menus are available when you are using t-zones to navigate the Wireless Web.

To access the browser options menu:

1. Press the **Menu** soft key.

---

 
 
**Note:** The menus may vary, depending on your version of t-zones.

---



The following options are available:

- **Go to homepage:** takes you back at any time to the home page of the Wireless Web service provider.
- **Go to URL:** allows you to manually enter the URL address of a Web page. After entering an address, press the **OK** key to go there directly.
- **Go:** allows you to go forward or back to the previous menu.
- **Reload:** reloads the current page.
- **Bookmarks:** shows the bookmarks list. You can add and view a bookmark on the current web page or access previously bookmarked pages.
- **Send URL:** displays the URL address of the Web page to which you are currently connected. It also enables you to send the current site to Recent recipients, Phonebook, or a Phone number.

- **Inbox:** takes you to your message Inbox.
- **To SmartFit view/ToDesktop view:** allows you to change the view display for the URL.
- **Save:** allows you to save the image or the web page.
- **Page details:** allows you to view the URL details (title, type, last update, and size).
- **Browser Options:** allows you set browser options.
  - **Cache:** a memory area where frequently accessed data can be stored for rapid access.
    - **Cache mode:** choose from No cache, Net first, or Cache first.
    - **Clear cache:** allows you to clear the information stored in the phone's temporary memory which stores the most recently accessed Web pages.
  - **Cookies:** cookies are small text files of web pages stored on your phone.
    - **Cookie mode:** allows you to Accept all, Reject all, or be prompted to accept a cookie.
    - **Delete cookies:** allows you to delete cookies.
  - **Preferences:** allows you set t-zones preferences.
  - **Certificates:** allows you to view Internet certificates.
    - **Root Certificate:** provides several root certificates from which to choose.
    - **CA Certificate:** provides several CA certificates from which to choose.
  - **About browser:** information displays detail information about the browser.



Section 11

  

## Section 12: Health and Safety Information

### Section 12

#### Topics Covered

---

- Health and Safety Information
- 

This section outlines the safety precautions associated with using your phone. These safety precautions should be followed to safely use your phone.

## Health and Safety Information

### Exposure to Radio Frequency (RF) Signals

#### Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined

at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this model phone has been tested and meets FCC RF exposure guidelines when used with a Samsung accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- 850
  - Head: 0.397 W/Kg.
  - Body-worn: 0.461 W/Kg.
- 1900
  - Head: 1.28 W/Kg.
  - Body-worn: 0.642 W/Kg.

**Section 12**

SAR information on this and other model phones can be viewed on-line at [www.fcc.gov/oet/fccid](http://www.fcc.gov/oet/fccid). To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at [www.fcc.gov/cgb/sar](http://www.fcc.gov/cgb/sar).

### **UL Certified Travel Adapter**

The Travel Adapter for this phone has met UL 1310 safety requirements. Please adhere to the following safety instructions per UL guidelines.

**FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.**

**IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.**

**DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**

**FOR CONNECTION TO A SUPPLY NOT IN THE U.S.A., USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.**

## Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

### What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

### Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range

Section 12

while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### **What is FDA's role concerning the safety of wireless phones?**

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;

**Consumer Information on Wireless Phones**

- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are

## Section 12

thus not the primary subject of the safety questions discussed in this document.

**What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term

exposures, since the average period of phone use in these studies was around three years.

### **What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

### **What is FDA doing to find out more about the possible health effects of wireless phone RF?**

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

**Section 12**

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

**What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?**

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

## Consumer Information on Wireless Phones

## Section 12

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

**What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones.

Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

## **Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?**

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

## **Do wireless phone accessories that claim to shield the head from RF radiation work?**

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies

that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

### **What about wireless phone interference with medical equipment?**

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct

Section 12

testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:  
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):  
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):  
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National institute for Occupational Safety and Health (NIOSH):  
<http://www.cdc.gov/niosh/topics/emf/>
- World health Organization (WHO):  
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:  
<http://www.icnirp.de>
- National Radiation Protection Board (UK):  
<http://www.nrpb.org.uk>
- Updated 4/3/2002: US Food and Drug Administration  
<http://www.fda.gov/cellphones>

## Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a

car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

Section 12

7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

**"The wireless industry reminds you to use your phone safely when driving."**

For more information, please call 1-888-901-SAFE, or visit our web-site [www.wow-com.com](http://www.wow-com.com)

Provided by the Cellular Telecommunications & Internet Association.

## Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and

for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

## Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

### Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

**Persons with pacemakers:**

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

**Other Medical Devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

**Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

**Posted Facilities**

Switch your phone off in any facility where posted notices require you to do so.

## Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

### Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal

Section 12

strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

### **Restricting Children's access to your Phone**

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

## FCC Notice and Cautions

### FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

### Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

### Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

**Section 12**

- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

## Product Performance

### Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

### Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks

service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

### Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

### Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna, if applicable.
- Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit call performance.
- Speak directly into the phone's receiver.

- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

## Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

## Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

## Battery Precautions

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.

**Battery Precautions****Section 12**

- Follow battery usage, storage and charging guidelines found in the user's guide.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.

**Section 12**

- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

 
 
 
 
 
 
## Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.

**Care and Maintenance****Section 12**

- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- If your phone is equipped with an external antenna, use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.





## Section 13: Warranty Information

### Topics Covered

---

- Standard Limited Warranty
- 

Section 13

## Standard Limited Warranty

### What is Covered and For How Long? SAMSUNG

TELECOMMUNICATIONS AMERICA, L.P. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/ Pouch	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

**What is Not Covered?** This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or

## Standard Limited Warranty

ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

**What are SAMSUNG's Obligations?** During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be

## Section 13

warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

**WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY?**  
EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN

**Standard Limited Warranty**

EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS

**Section 13**

**Section 13**

WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE / PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY

**Standard Limited Warranty**

OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, L.P.

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG





Phone: 1-888-987-HELP (4357)

©2006 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Printed in Korea.

   **Section 13**

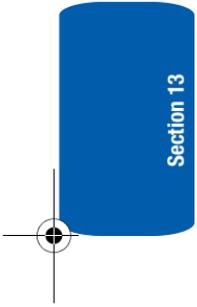

## Index

### A

**ABC mode** 52, 53

### Accessing a Menu Function

44

**Airplane Mode** 105

**Alarm** 136

**Alert type** 109

### B

### Backlight

description 20

settings 106

### Battery

charging 9

installing 8

low indicator 11

### Bluetooth

About 111

Features 112

Searching for new devices  
112

Security modes 112

Settings 111

Turning Bluetooth On and Off  
111

Visibility 112

**Broadcast Messages** 97

### C

**Calendar** 138

**Call Barring** 114

**Call Functions** 23

Adjusting the Call Volume 26

Answering a Call 27

Call records 28

Correcting the Number 24

Ending a Call 24

Making a Call 24

Making a Call from Phone-  
book 26

Redialing Last Number 24

Silent mode 32

### Call Records

All calls 28

Call time 31

Delete all 30

Incoming calls 30

Missed calls 29

Outgoing calls 30

**Call Waiting** 40, 115

**Caller group** 67

**Caller ID** 116

**Camcorder** 147

recording video 152

**Camera** 136, 147

taking photos 148

**Change password** 118

**Charging battery** 9

### D

**Dialing display** 107

### Display

backlight 20

icons 19

**DTMF** 36

### E

**Entering Text** 51

Changing the Text Input  
Mode 52

Using ABC Mode 53  
Using Number Mode 57  
Using Symbol Mode 57  
Using T9 Mode 55

**F**

**Fun & Apps** 123  
**Functions and Options** 32

**G**

**Games** 133  
**Get More Help** 21  
**Getting Started** 5  
    Activating Your Phone 6  
    Voicemail 12

**H**

**Health and Safety Information** 167

**HiFi Ringers** 109, 124

**I**

**Icons, description** 19  
**Instant Messaging** 98  
**International Call** 24

**K**

**Keypad** 110  
**Keypad Tone** 110

**L**

**Low battery indicator** 11

**M**

**Making a Call**  
    Phonebook 26  
**MegaTones** 108, 124  
**Memory card** 132

**Menu Navigation** 43

    Menu Outline 45

**Message settings** 96

**Message Tone** 110

**Messages** 75

**Messaging**

    Types of Messages 76

**micro SD memory card** 132

**Missed Call**

    Viewing 29

**Multi-Party Call** 36

    Dropping One Participant 38

    Private Conversation 37

    Setting up 37

**Music player** 135

**Mute** 34

**My Album** 127, 158

**My Files** 124

**My Journal** 127, 159

**My Name Card** 71

**My photos**

    accessing pictures 154

**My videos** 156

**N**

**Network Selection** 115

**Network Services**

    Call Barring 114

    Call Forwarding 113

    Call Waiting 115

    Caller ID 116

    Network Selection 115

**Network Services Settings**

113

**Number mode** 52**O****On/off switch, phone** 11**Options**

During a Call 34

Putting a Call on Hold 35

**Organizer** 136

Alarm 136

Calculator 144

Calendar 138

Stopwatch 146

Task 142

Timer 146

Unit conversion 145

World time 144

**Own Number** 71**P****Phone**

icons 19

switching on/off 11

**Phone lock** 118**Phone Settings** 103**Phonebook**

Searching for a Number 38

**Phonebook Management** 73**Picture Messages** 81**PIN**

change 117

check 117

**Push message**

viewing in Inbox 89

**R****Reset settings** 121**Ring Volume** 109**S****Security settings** 117**Sentbox** 91**Settings** 101

Bluetooth 111

Display 105

Network services 113

Phone 103

Reset 121

Security 117

Sound Settings 108

Time &amp; Date 102

**Shortcuts** 45**Silent mode** 110**SIM card**

installing 6

**Soft Keys** 32**Software update** 120**Speakerphone** 40**Speed Dial**

Setting Up Entries 66

**Standard Limited Warranty**

196

**Stopwatch** 146**Storing a number**

Phone's Memory 60

SIM Card 61

**Switching on/off**

phone 11

**Symbol mode** 52**T****T9 mode** 52

## **Templates** 93

### **Text input mode**

changing 52

### **Text Messages** 78

### **Timer** 146

### **Travel adapter** 9

### **t-zones** 162

Entering Text 163

Exiting 162

Navigating 163

## **U**

### **Understanding Your Phone** 15

Features of Your Phone 16

View of Your Phone 16

### **Understanding Your Phonebook** 59

Finding a Phonebook Entry

64

Finding My Phone Number

71

Management 73

### **Update your phone software**

120

## **V**

### **Videos** 130

### **Voice Mail** 12, 95

changing number 13

### **Voice Messages** 76

### **Voice notes** 76

## **W**

### **Warranty Information** 195