

Sprint®



Sprint PCS® Service

**Sprint Power VisionSM Multimedia Phone
MM-9000 by Sanyo®**

www.sprint.com

© 2005 Sprint Nextel. All rights reserved. No reproduction in whole or in part without prior written approval. Sprint, the "Going Forward" logo and other trademarks are trademarks of Sprint Nextel. Sanyo is a registered trademark of Sanyo Electric Co., Ltd.

Table of Contents

Welcome to Sprint	i
Introduction	ii
Section 1: Getting Started	1
1A. Setting Up Service	3
Getting Started With Sprint PCS Service	4
Setting Up Your Voicemail	5
Sprint PCS Account Passwords	6
Getting Help	7
Section 2: Your Sprint PCS Phone	11
2A. Your Sprint PCS Phone: The Basics	13
Front View of Your Phone	14
Viewing the Display Screen	17
Features of Your Sprint PCS Phone	19
Turning Your Phone On and Off	21
Using Your Phone's Battery and Charger	22
Displaying Your Phone Number	24
Making and Answering Calls	25
Entering Text	42
2B. Controlling Your Phone's Settings	49
Sound Settings	50
Display Settings	59
Location Settings	69
Messaging Settings	70
Airplane Mode	76
TTY Use With Sprint PCS Service	77
Phone Setup Options	79

2C. Setting Your Phone's Security	87
Accessing the Security Menu	88
Using Your Phone's Lock Feature	88
Restricting Calls	91
Using Special Numbers	92
Erasing Phone Content	93
Resetting Your Pictures Account	95
Resetting Your Phone	95
Resetting and Locking Your Phone Through SMS	96
Security Features for Sprint PCS Vision	98
2D. Controlling Your Roaming Experience	99
Understanding Roaming	100
Setting Your Phone's Roam Mode	102
Using Call Guard	103
2E. Navigating Through Menus	105
Menu Navigation	106
Menu Structure	106
Viewing the Menus	108
2F. Managing Call History	113
Viewing History	114
Call History Options	115
Making a Call From Call History	116
Saving a Phone Number From Call History	117
Prepending a Phone Number From Call History	118
Erasing Call History	119
2G. Using the Contacts Directory	121
Displaying the Contacts List	122

Adding a New Contacts Entry	123
Finding Contacts List Entries	124
Contacts List Entry Options	127
Adding a Phone Number to a Contacts Entry	128
Editing a Contacts Entry	129
Erasing a Contacts Entry From the List	129
Assigning Speed Dial Numbers	130
Assigning an Image to a Contacts Entry	131
Selecting a Ringer for an Entry	132
Secret Contacts Entries	133
Dialing Sprint PCS Services	134
2H. Using the Phone's Calendar and Tools	135
Using Your Phone's Calendar	136
Displaying Phone Information	145
Using Your Phone's Tools	147
2I. Using Your Phone's Voice Services	153
Using Automatic Speech Recognition	154
Using the Voice Recorder	166
Setting Up Screen Call	176
2J. Using the miniSD Card	181
Using Your Phone's miniSD Card and the miniSD Adapter	182
miniSD Settings	186
miniSD Files	188
Playing Media Player in the miniSD	189
Setting Up the Digital Print Order Format	192
Printing Pictures Directly From Your Phone	194
Connecting Your Phone to Your PC	196

2K. Using Your Phone's Built-in Camera199

Taking Pictures200

Recording Videos211

Storing Pictures and Videos217

Sending Sprint PCS Picture Mail222

Managing Sprint PCS Picture Mail225

2L. Using Sprint PCS Ready Link229

Getting Started With Sprint PCS Ready Link230

Making and Receiving a Sprint PCS Ready Link Call233

Adding and Editing Ready Link Contacts241

Erasing Ready Link List Entries248

Updating Sprint PCS Ready Link Lists250

Managing Sprint PCS Ready Link Settings250

2M. Using Your Phone's Built-In Media Player257

Your Multimedia Channel Options258

Accessing Your Media Player's Channel Listings259

Playing a Video or Audio Clip260

Multimedia FAQs261

Section 3: Sprint PCS Service Features265

3A. Sprint PCS Service Features: The Basics267

Using Voicemail268

Using Text SMS Messaging278

Using Voice SMS Messaging282

Using Caller ID285

Responding to Call Waiting285

Making a Three-Way Call286

Using Call Forwarding287

3B. Sprint PCS Vision	289
Getting Started With Sprint PCS Vision	290
Accessing Messaging	297
Downloading Premium Services Content	302
Exploring the Web	307
Sprint PCS Vision FAQs	313
3C. Sprint Power Vision	315
Getting to Know Sprint Power Vision	316
Exploring the Sprint Music Store	317
Personalizing Your Service With On Demand	321
Using Your Sprint PCS Phone as a Modem	324
3D. Sprint PCS Voice Command	327
Getting Started With Sprint PCS Voice Command	328
Creating Your Own Address Book	329
Making a Call With Sprint PCS Voice Command	330
Accessing Information Using Sprint PCS Voice Command	331
Section 4: Safety and Warranty Information	333
4A. Safety	335
Getting the Most Out of Your Reception	336
Maintaining Safe Use of and Access to Your Phone	338
Caring for the Battery	340
Acknowledging Special Precautions and the FCC Notice	341
Owner's Record	343
Phone Guide Proprietary Notice	343
4B. Manufacturer's Warranty	345
Manufacturer's Warranty	346
Index	351

Welcome to Sprint

Sprint is committed to bringing you the best wireless technology available. We built our complete, nationwide network from the ground up, so all your services – whether it's Voicemail, Caller ID, email, or Sprint PCS Picture Mail – will work the same wherever you go on the nationwide Sprint PCS network.

This guide will familiarize you with our technology and your new Sprint PCS Phone through simple, easy-to-follow instructions. It's all right here – from setting up your account passwords and voicemail to using the most advanced features of Sprint Power VisionSM.

Welcome and thank you for choosing Sprint.

Introduction

This **Phone Guide** introduces you to Sprint PCS Service and all the features of your new phone. It's divided into four sections:

- ◆ **Section 1:** Getting Started
- ◆ **Section 2:** Your Sprint PCS Phone
- ◆ **Section 3:** Sprint PCS Service Features
- ◆ **Section 4:** Safety Guidelines and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

Getting Started



Setting Up Service

In This Section

- ◆ Getting Started With Sprint PCS Service
 - ◆ Setting Up Your Voicemail
 - ◆ Sprint PCS Account Passwords
 - ◆ Getting Help
-

Setting up service on your new Sprint PCS Phone is quick and easy. This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact Sprint for assistance with your Sprint PCS Service.

Getting Started With Sprint PCS Service

Determining if Your Phone is Already Activated

If you purchased your phone at a Sprint Store, it is probably activated, unlocked, and ready to use. If you received your phone in the mail, it probably has been activated; all you need to do is unlock it.

If your phone is not activated, please refer to the Welcome to Sprint brochure included with your phone.

Unlocking Your Phone

To unlock your phone, follow these easy steps:

1. Press **END/0** to turn the phone on.
2. Press **Unlock** (left softkey).

Note: To select a softkey, press the softkey button directly below the softkey text that appears at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.

3. Enter your four-digit lock code. (For security purposes, the code is not visible as you type.)

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone number or try 0000 or NATL (6285). If none of these work, call Sprint Customer Service at: 1-888-211-4PCS (4727).

Setting Up Your Voicemail

All unanswered calls to your Sprint PCS Phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your Sprint PCS Phone is activated.

To set up your voicemail:

1. Press and hold  1.
2. Follow the system prompts to:
 - Create your pass code
 - Record your greeting
 - Record your name announcement
 - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding  1, bypassing the need for you to enter your pass code)

Note: If you are concerned about unauthorized access to your voicemail account, Sprint recommends you enable your voicemail pass code.

For more information about using your voicemail, see “Using Voicemail” on page 268.

Sprint PCS Account Passwords

As a Sprint PCS customer, you enjoy unlimited access to your personal account information, your voicemail account, and your Sprint PCS Vision account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

Account Password

If you are the account owner, you'll have an account password to sign on to www.sprint.com and to use when calling Sprint Customer Service. Your default account password is the last four digits of your Social Security number. If you are not the account owner (if someone else receives the invoice for your Sprint PCS Service), you can get a sub-account password at www.sprint.com.

Voicemail Password

You'll create your voicemail password (or pass code) when you set up your voicemail. See "Setting Up Your Voicemail" on page 5 for more information on your voicemail password.

Sprint PCS Vision Password

With your MM-9000 by Sanyo, you may elect to set up a Sprint PCS Vision Password. This optional password may be used to authorize purchase of Premium Services content and to protect personal information on multi-phone accounts.

For more information, or to change your passwords, sign on to www.sprint.com or call Sprint Customer Service at **1-888-211-4PCS (4727)**.

Getting Help

Visit www.sprint.com

You can go online to:

- Access your account information
- Check your minutes used (depending on your Sprint PCS Service Plan)
- View and pay your bill
- Make your life easier by enrolling in Online Invoicing and Automatic Payment
- Purchase accessories
- Shop for the latest Sprint PCS Phones
- View available Sprint PCS Service Plans and options
- Learn more about Sprint PCS Vision and other great products like Sprint PCS Picture MailSM, games, ringers, screen savers, and more

Reaching Sprint Customer Service

You can reach Sprint Customer Service many different ways:

- Dial  on your Sprint PCS Phone
- Sign on to your account at www.sprint.com
- Call us toll-free at **1-888-211-4727** (Consumer customers) or **1-888-788-4727** (Business customers)
- Write to us at Sprint Customer Service, P.O. Box 8077, London, KY 40742

Receiving Automated Invoicing Information

For your convenience, your phone gives you access to invoicing information on your Sprint PCS Account. This information includes balance due, payment received, invoicing cycle, and an estimate of the number of minutes used since your last invoicing cycle. (Normal airtime usage will apply.)

To access automated invoicing information:

▶ Press **Shift** **X** **GH1** **4** **TALK**.

Note: This service may not be available in all Affiliate areas.

Sprint PCS Directory Assistance

You have access to a variety of services and information through Sprint PCS Directory Assistance, including residential, business, and government listings; assistance with local or long-distance calls; movie listings; and hotel, restaurant, shopping, and major local event information. There is a per-call charge, and you will be billed for airtime.

To call Sprint PCS Directory Assistance:

▶ Press **GH1** **4** **1** **1** **TALK**.

Sprint PCS Operator Services

Sprint PCS Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

To access Sprint PCS Operator Services:

- ▶ Press **+ 0 TALK**.

For more information or to see the latest in products and services, visit us online at www.sprint.com.

Note: Sprint PCS Operator Services may not be available in all Affiliate areas.

Your Sprint PCS Phone



Your Sprint PCS Phone: The Basics

In This Section

- ◆ Front View of Your Phone
 - ◆ Viewing the Display Screen
 - ◆ Features of Your Sprint PCS Phone
 - ◆ Turning Your Phone On and Off
 - ◆ Using Your Phone's Battery and Charger
 - ◆ Displaying Your Phone Number
 - ◆ Making and Answering Calls
 - ◆ Entering Text
-

Your Sprint PCS Phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.

Front View of Your Phone



Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Main LCD (display)** displays the phone's main menu, features, modes, etc.
3. **Softkey (left)** lets you select the menu corresponding to the bottom left line on the Main LCD.
4. **Navigation Key** lets you navigate quickly and easily through the menu options. You can access the menu shortcuts by pressing **Right: Contacts**, **Left: Settings**, **Up: Messaging**, and **Down: My Content**.
5. **MENU/OK** lets you access the phone's menus and select menu options.
6. **Camera Key** lets you access the Picture and Video menu and take pictures and videos.
7. **TALK Key** lets you place or receive calls, answer Call Waiting, or use Three-Way Calling.
8. **Microphone** to speak into or record your voice.
9. **Accessories Connector** connects accessories such as travel charger (included).
10. **Standard Charger Jack** connects the Standardized Travel Charger (not included).
11. **Keypad** lets you enter numbers, letters, and characters, and navigate within menus. Press and hold keys 2-9 for speed dialing.
12. **SPEAKER Key** lets you place or receive calls in speakerphone mode.
13. **END/POWER Key** lets you turn the phone on/off, end a call, or return to standby mode.
14. **Side Camera Key** lets you activate the camera and video mode and take pictures and videos.

15. **BACK Key** lets you display the previous page or clear characters from the screen.
16. **Side Voice/Call Key** lets you place calls by using Automatic Speech Recognition.
17. **Softkey (right)** lets you select the menu corresponding to the bottom right line on the Main LCD.
18. **miniSD Card Slot** lets you use the miniSD card to expand the memory of your phone. (See “Using the miniSD Card” on page 181.)
19. **Camera Lens** the built-in camera lens lets you take pictures and videos.
20. **Macro/Normal Switch** lets you switch between macro and normal for close-up shots.
21. **Flash/LED Indicator** the built-in flash lets you take pictures and videos in low light and the LED indicator shows your phone’s connection status at a glance.
22. **Speaker** lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing ,  or any of the side keys.
23. **Sub LCD** lets you monitor the phone’s status and see who’s calling without opening the phone.
24. **Antenna** fully extend the antenna for the best reception.
25. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
26. **Ready Link/Recorder Button** allows you to access the Sprint PCS Ready Link List or Voice Recorder menu. (See “Using Sprint PCS Ready LinkSM” on page 229 or “Using the Voice Recorder” on page 166.)
27. **Side Volume Key** lets you adjust the receiver volume during a call or ringer volume in standby mode. You can also use it to scroll up or down to navigate through the different menu options.

Viewing the Display Screen

Your phone's display screen provides a wealth of information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

Tip: To view a list of your phone's icons and descriptions, from the main menu select **Settings > Phone Info > Help**.

-  shows your current signal strength. The more lines you have, the stronger your signal.
-  means your phone cannot find a signal.
-  indicates the call is on hold.
-  tells you a call is in progress.
-  indicates the Sprint PCS Ready Link service is enabled.
-  indicates the Sprint PCS Ready Link service is enabled and the speakerphone mode is set to on.
-  indicates the Sprint PCS Ready Link service is disabled.
-  indicates Sprint PCS Vision/Sprint PCS Ready Link access is dormant.
-  indicates Sprint PCS Vision/Sprint PCS Ready Link access is active.
-  indicates Sprint PCS Vision/Sprint PCS Ready Link access is disabled.
-  indicates Sprint Power Vision service is available.
-  indicates Sprint Power Vision service is dormant.
-  indicates your access to a secure site.

-  indicates you are “roaming” off the nationwide Sprint PCS network.
-  indicates you have missed voice calls.
-  indicates you have missed Ready Link calls.
-  indicates you have schedule events or call alarms.
-  indicates you have alarm clock and/or countdown notifications.
-  indicates you have picture messages, voicemail messages, text messages, and/or Voice SMS.
-  indicates you have urgent messages.
-  indicates miniSD is inserted in your phone.
-  shows the level of your battery charge. The more black you see, the more power you have left.
-  indicates the vibrate feature is set.
-  indicates volume level 4 or 1 and vibrate feature are set.
-  indicates 1 beep feature is set.
-  indicates the voice call ringer setting is off.
-  indicates all the sound settings are off.
-  indicates the Location Service of your phone is enabled.
-  indicates the Location Service of your phone is disabled.
-  indicates you have a new caller's message.
-  indicates the Screen Call Auto setting is on.
-  indicates the Alarm Clock setting is on.



indicates your phone is in TTY mode.



indicates Headset mode is set to Sprint PCS Ready Link and a headset is connected.



indicates Headset mode is set to Voice Calls and a headset is connected.



indicates the speakerphone mode is set to on.

Note: Display indicators help you manage your roaming charges by letting you know when you're off the nationwide Sprint PCS network and whether you're operating in digital mode. (For more information, see Section 2D: Controlling Your Roaming Experience on page 99.)

Features of Your Sprint PCS Phone

Congratulations on the purchase of your Sprint Power Vision Multimedia Phone. The MM-9000 by Sanyo is easy-to-use and reliable, and it also offers many significant features and service options. The following list previews some of those features and provides page numbers where you can find out more:

- Sprint Power Vision, utilizing the next generation of wireless data transfer technology, provides high-speed, high-capacity access to the wireless Internet (page 315).
- Sprint PCS VisionSM provides access to the wireless Internet in digital mode (page 289).
- Sprint PCS Mail (page 298), Text SMS (page 278) and Voice SMS Messaging (page 282) provide quick and convenient messaging capabilities.
- Sprint PCS Voice CommandSM lets you dial phone numbers by speaking someone's name or the digits of their phone number (page 327).

- Games, ringers, screen savers, and other applications can be downloaded to make your Sprint PCS Phone as unique as you are (page 302). Additional charges may apply.
- The Contacts directory can store up to 300 entries with up to seven phone numbers per entry (page 121). A separate Sprint PCS Ready Link Contacts list provides easy access to up to 200 personal contacts and 200 company-provided contacts (page 229).
- The built-in Calendar offers several personal information management features to help you manage your busy lifestyle (page 136).
- Your Sprint PCS Phone is equipped with a Location feature for use in connection with location-based services that may be available in the future (page 69).
- Your phone's external LCD display allows you to monitor the phone's status and to see who's calling without opening the phone.
- Speed dial lets you dial phone numbers with one key press (see page 40).
- The built-in camera allows you to take full-color digital pictures and videos, view your pictures and videos using the phone's display, and instantly send them to family and friends using Sprint PCS Picture MailSM service (page 199).
- Sprint PCS Ready Link allows you to enjoy quick, two-way, "walkie-talkie-style" communication with one or several Sprint PCS Ready Link users (page 229).
- The Media Player allows you to enjoy streaming video and audio with your phone (page 257).

Turning Your Phone On and Off

Turning Your Phone On

To turn your phone on:

- ▶ Press **END/⓪**.

Once your phone is on, it may display “Looking for service...,” which indicates that your phone is searching for a signal.

When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS Service by pressing any key (when your phone is turned on).

Tip: The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone Off

To turn your phone off:

- ▶ Press and hold **END/⓪** for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery and Charger

Battery Capacity

Your Sprint PCS Phone is equipped with a Lithium Ion (Lilon) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 3.2 hours of continuous digital talk time.

When there are approximately 5 minutes of talk time left, the battery icon turns red and the phone sounds an audible alert and then powers down.


Note: Long backlight settings, searching for service, vibrate mode, and browser use affect the battery's talk and standby times.

Tip: Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

To install the Lilon battery:


- ▶ To install, insert the battery into the opening on the back of the phone and gently press down until the latch snaps into place.

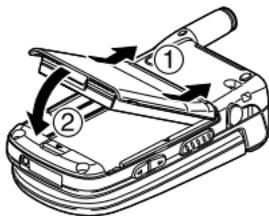

Removing the Battery

To remove your battery:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Press the battery release latch down and remove the battery from the phone at a 45-degree angle.

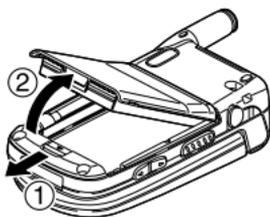

Charging the Battery

Your Sprint PCS Phone's Lilon battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon  appears and the phone displays a warning message.

Always use a Sprint-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

Warning: Using the wrong battery charger could cause damage to your phone and void the warranty.

Using the Charger

To use the travel charger provided with your phone:

- ▶ Plug the round end of the AC adapter into the phone's charger jack and the other end into an electrical outlet.
 - The  icon on the phone lets you know the battery is fully charged.

It takes approximately 4.0 hours to fully recharge a completely rundown battery. With the Sprint-approved Lilon battery, you can recharge the battery before it becomes completely run down.

Displaying Your Phone Number

Just in case you forget your phone number, your Sprint PCS Phone can remind you.

To display your phone number:

- ▶ Press  to access the main menu, then select **Settings > Phone Info > Phone#/User ID**. (Your phone number and other information about your phone and account will be displayed.)

Making and Answering Calls

Making Calls


Placing a call from your Sprint PCS Phone is as easy as making a call from any land line phone. Just enter the number and press **TALK**, and you're on your way to clear calls.

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press  **Back** to erase one digit at a time. Press and hold  **Back** to erase the entire number.)
3. Press **TALK**. (To make a call when you are roaming and Call Guard is enabled, see "Using Call Guard" on page 103.)
4. Press **END/0** or close the phone when you are finished.

Tip: When making calls off the nationwide Sprint PCS network, always dial using 11 digits (1 + area code + phone number).

You can also place calls from your Sprint PCS Phone by using Sprint PCS Voice Command™ (page 327), Speed Dialing (page 40), Automatic Speech Recognition (page 154), and using your Call History listings (page 116).

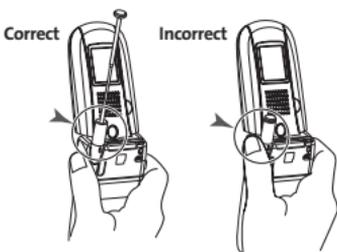

Important: To maximize performance when using your Sprint PCS Phone, extend the antenna before a call and do not touch the antenna during a call.

Dialing Options

Dialing options are displayed when you press **Options** (right softkey) after entering numbers in the phone's standby mode.

To select an option, highlight it and press .

- **Abbrev. Dial** to dial the phone number in your Contacts list that ends with the digits you entered. (See “Using Abbreviated Dialing” on page 41.)
- **Call** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Message** to send a Text SMS message (page 278), a Voice SMS message (page 282), or a Picture Mail (page 222).
- **Save Phone#** to save the phone number in your Contacts list. (See “Saving a Phone Number” on page 36.)
- **Find** to display Contacts list entries that end with the digits you entered. (See “Finding a Phone Number” on page 37.)
- **H Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 37.)
- **T 2-Sec. Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 37.)
- **Hyphen** to insert a hyphen. (Hyphens are generally for visual appeal only; they are not necessary when entering numbers.)

Tip: To speed dial a phone number, press and hold the appropriate speed dial key (locations 2-9). See “Assigning Speed Dial Numbers” on page 130.

Tip: Press  or  to display the Recent Calls list. Highlight a number and press  or  to make a call.

Answering Calls

To answer an incoming call:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press **TALK** or **SPEAKER** to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key.)

To answer an incoming call with the flip closed:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. When your phone rings or vibrates, press and hold the Side Voice/Call key () on the right side of the phone. (The call will be answered in speakerphone mode.)
– or –
Open the phone to use the earpiece.

Note: If the setting for Open Flip is set to “No Action,” opening the phone will not answer the call. (See “Setting the Open/Close Flip Option” on page 81.)

Your Sprint PCS Phone notifies you of incoming calls in the following ways:

- The phone rings and/or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts list, the entry's name is displayed. The caller's phone number may also be displayed, if available.

When receiving a call, the following options are also displayed by pressing **Options** (right softkey). To select an option, highlight it and press .

- **Call Guard** to answer the call when you are in roaming mode. (See page 103 for setting Call Guard.)
- **Answer** to answer the call.
- **Answer:Speaker** to answer the call in speakerphone mode.
- **Answer on Hold** to put the call on hold. (See “Setting Answer on Hold” on page 29.)
- **Screen Call** to answer the call by using a pre-recorded announcement. (See “Setting Up Screen Call” on page 176.)
- **Quiet Ringer** to mute the ringer. (If available.)

Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the nationwide Sprint PCS network. Please see Section 2D: Controlling Your Roaming Experience on page 99 for more information about roaming.

To answer a call when you are roaming and Call Guard is enabled:

1. Press  or .
2. Press  to proceed while the pop-up message is displayed.

Note: When your phone is off, incoming calls go directly to voicemail.

Setting Answer on Hold

This feature allows you to hold an incoming call when you cannot answer immediately.

To set Answer on Hold:

1. When you receive an incoming call, press **Options** (right softkey).
2. Highlight **Answer on Hold** and press . (The caller hears a message to wait your answer.  will display on the screen while the call is on hold.)

To resume the call:

- ▶ Press **Answer** (left softkey) or .

– or –

Press **Options** (right softkey), highlight **Answer** or **Answer:Speaker** and press .

Ending a Call

To disconnect a call when you are finished:

With the flip open:

- ▶ Close the phone or press .

With the flip closed:

- ▶ Press and hold .

Note: If the setting for Close Flip is not set to “End,” closing the phone will not end the call. (See “Setting the Open/Close Flip Option” on page 81.)

Tip: Time/Date is displayed when you press  while the phone is in use.

Using the Speakerphone

The speakerphone feature lets you hear audio through the speaker and talk without holding the phone. When the speakerphone is activated, use the volume control keys on the side of the phone to adjust the volume.

To turn the speakerphone on during a call:

▶ Press **SPEAKER**.

– or –

Press **Options** (right softkey), highlight **Speaker On**, and press **MENU OK**.

To turn the speakerphone off during a call:

▶ Press **SPEAKER**.

– or –

Press **Options** (right softkey), highlight **Speaker Off**, and press **MENU OK**.

Tip: You can adjust the speakerphone volume using the Side Volume key or the navigation key.

Warning! Due to higher volume levels, do not place the phone near your ear during speakerphone use.

Changing the Ringer Volume

To change the ringer volume, press the Side Volume key when the phone is open and in standby mode.

Note: To change the ringer volume from the main menu, see “Adjusting the Phone’s Volume Settings” on page 55.

Adjusting Volume During a Conversation

When you need to adjust the receiver volume during a conversation, use the side volume key, or press the navigation key up or down while a call is in progress.

Muting a Call

There are times when it’s necessary to mute a call so that your caller does not hear you or certain background noise.

To mute a call:

- ▶ Press **Options** (right softkey), highlight **Mute**, and press . (When the phone is muted, “**Muted**” appears on the display.)

To unmute a call:

- ▶ Press **Options** (right softkey), highlight **Unmute**, and press .

Tip: You can also mute a call with the flip closed. Simply press , which is located on the side of your phone.

Missed Call Notification

When an incoming call is not answered, the Missed Call log and the  icon are displayed on your screen.

To call the Missed Call entry:

- ▶ Press **TALK** or **SPEAKER**.

Tip: If you have two or more notifications, the Missed Alerts list will appear.

To clear the Missed Call display:

- ▶ Press **Dismiss** (right softkey).

Tip: To check the missed notification from standby mode, press  and select **Missed Alerts**.

Calling Emergency Numbers

You can place calls to 911 (dial **wxyz 9** **1** **1** and press **TALK**), even if your phone is locked or your account is restricted.

When you place an emergency call, your phone automatically enters Emergency mode.

Press **Options** (right softkey) to display the options. To select an option, highlight it and press **MENU OK**.

- **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option will appear as **Speaker Off** to deactivate.)
- **Unlock Phone** to unlock your phone (appears only if the phone is locked).
- **Close Menu** to close the pop-up menu (appears only if the phone is unlocked).

Tip: Press **My Phone** (left softkey) to display your phone number during Emergency mode.

To exit Emergency mode:

1. Press **END/⓪** during a 911 call.
2. Press **Options** (right softkey) to display the options.
3. Highlight **Exit Emergency** and press **MENU OK**.

Note: When you are in Emergency mode, you can only exit from the options menu.

To select Emergency mode options:

1. Press **END/⓪** during a 911 call.
2. Press **Options** (right softkey).
 - **Call 911** to call 911.
 - **Call 911:Speaker** to call 911 in speakerphone mode.
 - **Exit Emergency** to exit Emergency mode.
3. Highlight an option and press **MENU OK**.

In-Call Options

Pressing **Options** (right softkey) during a call displays a list of features you may use during the course of a call. To select an option, highlight it and press **MENU OK**. The following options are available through the Options menu:

- **Flash** to answer an incoming Call Waiting call or to connect a third party during Three-Way Calling.
- **Mute** or **Unmute** to mute or reactivate your phone's microphone.
- **Speaker On** or **Speaker Off** to activate or deactivate speakerphone mode.

Warning! Due to higher volume levels, do not place the phone near your ear during speakerphone use.

- **Three-Way Call** to call a third party.
- **Missed Alerts** to display missed notifications.
- **Call History** to access the Call History menu. (See “Managing Call History” on page 113.)
- **Contacts** to access the Contacts menu. (See “Using the Contacts Directory” on page 121.)

- **Messaging** to access the Messaging menu. (See “Sprint PCS Messaging” on page 297.)
- **Tools** to access the Tools menu. (See “Using the Phone’s Calendar and Tools” on page 135.)
- **Settings** to access the Settings menu. (See “Controlling Your Phone’s Settings” on page 49.)

Note: The Flash menu appears only for Call Waiting and Three-Way Calling. The Three-Way Call menu does not appear in Roaming areas.

End-of-Call Options

To display the following options, press **Options** (right softkey) within 10 seconds after disconnecting a call.

To select an option, highlight it and press .

- **Call Again** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Save Phone#** to save the phone number in your Contacts list.
 - **Go to Phone Book** appears when the number is already in your Contacts list. (See “Saving a Phone Number” on page 36.)

Note: The End-of-Call options are not displayed for calls identified as No ID or Restricted.

Saving a Phone Number

Your Sprint PCS Vision Phone can store up to 500 phone numbers in up to 300 Contacts entries (an entry may contain up to seven numbers). Each entry's name can contain 16 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see Section 2G: Using the Contacts Directory on page 121.)

To save a number from standby mode:

1. Enter a phone number.
2. Press **Options** (right softkey).
3. Highlight **Save Phone#** and press .
4. Select a label and press .
5. Enter a name and press . If you have already stored entries in the Contacts list, you are prompted to select the following entry modes:
 - **New Name** to enter a new name.
 - **From Ph. Book** to select a name from the Contacts entry list.
6. Press **Save** (left softkey).

Finding a Phone Number

You can search Contacts list entries for phone numbers that contain a specific string of numbers.

To find a phone number:

1. Enter the last four or more digits of the number and press **Options** (right softkey). (The more numbers you enter, the more specific the search becomes.)
2. Highlight **Find** and press **MENU OK**. (The Contacts entry that ends with the digits you entered appears.)
3. Scroll to your desired entry.
 - Press **MENU OK** to display the entry details.
 - Press **TALK** or **SPEAKER** to dial.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** sends the next set of numbers when you press **TALK**.
- **2-Sec. Pause** automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number and press **Options** (right softkey).
2. Highlight either **Hard Pause** or **2-Sec. Pause** and press . (Hard pauses are displayed as an “H” and 2-second pauses as a “T”.)
3. Enter additional numbers (for example, a passcode or an extension).
4. To dial the number, press  or . (When dialing a number with a hard pause, press  to send the next set of numbers.)
– or –
To save the number in your Contacts list, press **Options** (right softkey), highlight **Save Phone#**, and press .

Plus (+) Code Dialing

When placing international calls, you can use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls made from the United States).

To make a call using Plus Code Dialing:

1. Press and hold  until a “+” appears on your phone display.
2. Dial the country code and phone number you’re calling and press . (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)

Tip: Plus Code Dialing cannot be used when entering an address for messaging. (See “Using Text SMS Messaging” on page 278 to send a Text SMS message. See “Sending Sprint PCS Picture Mail” on page 222 to send a picture or video.)

Dialing From the Contacts Directory

To dial directly from a Contacts entry:

1. Press  to access the main menu.
2. Select **Contacts**.
3. Select **Find/Add Entry** (.

Shortcut: Press the navigation key right to list entries.

4. Scroll to the desired entry in the Contacts list and press .
5. Scroll to the number you want to call.
6. Press **Options** (right softkey) for the menu options.
7. Highlight **Call** or **Call:Speaker On** and press  to place a call.

Tip: You can also place a call by pressing , , or **Call** (left softkey) during step 5 above.

Note: The icons next to each entry represent the Contacts labels (for example, Mobile, Home, Work, etc.). A triangle next to an icon means there is another label for the entry. Press the navigation key right or left to select the desired label.

Using Speed Dialing

With this feature, you can dial your favorite entries using one key press for locations 2-9. (See “Assigning Speed Dial Numbers” on page 130.)

To use speed dial for voice calls:

- ▶ From standby mode, press and hold the appropriate key for approximately two seconds.

– or –

From standby mode, press the appropriate key and press

TALK or **SPEAKER**.

The display confirms that the number has been dialed when it shows “Connecting...”.

To use speed dial for Sprint PCS Ready Link calls:

- ▶ From standby mode, press the appropriate key and press **RLINK**. (See “Assigning Speed Dialing for Sprint PCS Ready Link Entries” on page 250.)

The display confirms that the number has been dialed when it shows “R-Link calling...”.

Note: Speed dialing is not available when you are roaming; when you are roaming off the nationwide Sprint PCS network, you must always dial using eleven digits (1 + area code + number).

Using Abbreviated Dialing

Abbreviated Dialing is another form of speed dialing. It allows you to dial a number by entering the last 3-6 digits of any number in your Contacts directory. This feature becomes available when you enable Abbreviated Dialing and enter the appropriate digits of a phone number. (See “Setting Abbreviated Dialing” on page 84.)

To place a call using Abbreviated Dialing:

1. Dial the last 3-6 digits of a contact’s phone number.
2. Press **Options** (right softkey) to display the dialing options.
3. Highlight **Abbrev. Dial** and press **MENU OK**, **TALK**, or **SPEAKER**.

Tip: If the Phone Book Match setting is on, you need to select an entry from a list before placing a call. (See page 84 for setting.)

Tip: You can also place a call by pressing **TALK** or **SPEAKER** during step 2 above.

Note: If there is no matched number, your phone dials the number you set for abbreviated dial with the last four or five digits you entered. If there are matched numbers in your Contacts list, the abbreviated dial list will be displayed. To place a call, select a number and press **TALK**.

Entering Text

Selecting a Character Input Mode

Your Sprint PCS Phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using Sprint PCS Mail and Text SMS Messaging).

To change the character input mode:

1. When you display a screen where you can enter text, press **Mode** (right softkey).
2. Select a character input mode:
 - **Add Word** to store words that you use frequently (see page 44).
 - **Preset Messages** to enter preset messages (see page 71).
 - **Recent Messages** to enter messages used recently.
 - **Signature** to enter your signature (see page 72).
 - **T9 Word** to enter characters using predictive T9 Text Input (see page 43).
 - **Alphabet** to enter characters by tapping the keypad (see page 46).
 - **SYMBOL** to enter symbols.
 - **NUMBER** to enter numbers.
 - **PRESET SUFFIX** to enter a preset suffix (for example, www., http://, or .com).
 - **SMILEYS** to enter smile pictures.
 - **Emoticons** to enter an emotion icon.

Tip: **Preset Messages**, **Recent Messages**, and **Emoticons** are only available when composing text messages.

- **Select Language** to select the language (English or Spanish).
- **Erase All** to erase all text (if applicable).
- **Paste** to paste copied or cut text (if applicable).
- **Select Text** to select stored text for copying or cutting.

Tip: When entering text, press the  key to change letter capitalization (**Abc** > **ABC** > **abc**).

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your Sprint PCS Phone by pressing keys just once per letter. (To select the **T9 Word** mode when entering text, see “Selecting a Character Input Mode” on page 42.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.)

To enter a word using T9 Text Input:

1. Select the **T9 Word** character input mode. (See “Selecting a Character Input Mode” on page 42.)
2. Press the corresponding keys once per letter to enter a word (for example, to enter the word “Bill,” press    ). (If you make a mistake, press  to erase a single character. Press and hold  to delete word by word.)
3. To accept a word and insert a space, press  or .

Tip: The  option is available during step 3 above only when the Auto Space setting is on (see page 83).

Adding a Word to the T9 Database

If a word you want to enter does not display as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the T9 Text Input database:

1. Select the **Add Word** mode. (See “Selecting a Character Input Mode” on page 42.)
2. Enter the word using multi-tap (Alphabet) text entry and press **Save** (left softkey).

– or –

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** ().
4. Select **Text Entry**.
5. Select **Add Word**.
6. Enter the word using multi-tap (Alphabet) text entry and press **Save** (left softkey).

To edit or erase the words you have added:

1. Follow steps 1-4 above.
2. Select **My Words**.
3. Select your desired word and press **Options** (right softkey).
4. To select an option, highlight it and press .
 - **Edit** to edit a word in My Words.
 - **Erase** to erase a word in My Words.

Customizing the T9 Settings

To customize the T9 Settings:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** (.
4. Select **Text Entry**.
5. Select **T9 Settings**.
6. Select your desired option and press .
 - **Predict.Text Mode** to allow T9 text input to recognize words you have added to the T9 database.
 - **Word Choice List** to display word choice list.
 - **Show after enter** to select when (after 1-3 digits) to display the words choice list. The word choice list will display based on the number of digits you selected.
 - **Show after wait** to select how many seconds the phone should wait to display the word choice list.

For more information about T9 Text Input, visit the Tegic Web site at www.t9.com.

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad:

1. Select the **Alphabet** mode. (See “Selecting a Character Input Mode” on page 42.)
2. Press the corresponding keys repeatedly until the desired letter appears (for example, to enter the word “Bill,” press  twice,  three times,  three times, and  three times again). (If you make a mistake, press  to erase a single character. Press and hold  to delete word by word.)

By default, the first letter of an entry is capitalized and the following letters are lowercase. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
 1	., @ 1 ? ! * # /	
 2	A B C 2	a b c 2
 3	D E F 3	d e f 3
 4	G H I 4	g h i 4
 5	J K L 5	j k l 5
 6	M N O 6	m n o 6
 7	P Q R S 7	p q r s 7
 8	T U V 8	t u v 8
 9	W X Y Z 9	w x y z 9
 0	0	
 #	Space	
 *	One-character- shifted Caps Lock Unshifted	

In Spanish mode, characters scroll in the following order:

Key	Spanish Sequence	
	Upper Case	Lower Case
1	., @ 1 ¿ ? ¡ * # /	
2	A Á B C 2	a á b c 2
3	D E É F 3	d e é f 3
4	G H Í 4	g h í 4
5	J K L 5	j k l 5
6	M N Ñ O Ó 6	m n ñ o ó 6
7	P Q R S 7	p q r s 7
8	T U Ú Ü V 8	t u ú ü v 8
9	W X Y Z 9	w x y z 9
0	0	
#	Space	
✕	One-character- shifted Caps Lock Unshifted	

To select Spanish mode for text entry, select **Mode > Select Language > Spanish**. (See “Selecting a Character Input Mode” on page 42.)

To change your phone’s menu to Spanish mode, see “Display Language” on page 80.

Controlling Your Phone's Settings

In This Section

- ◆ Sound Settings
 - ◆ Display Settings
 - ◆ Location Settings
 - ◆ Messaging Settings
 - ◆ Airplane Mode
 - ◆ TTY Use With Sprint PCS Service
 - ◆ Phone Setup Options
-

Using the menu options available on your Sprint PCS Phone, you can customize your phone to sound, look, and operate just the way you want it to. This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

Sound Settings

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

- **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- **Vibrating Ringer** alerts you to calls or messages without disturbing others.
- **Downloaded Ringers** can be downloaded right to your phone. (See “Downloading Premium Services Content” on page 302.)

Selecting Ringer Types for Voice Calls

Your Sprint PCS Phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

To select a ringer type for voice calls:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** ( **1**).
4. Select **Ringer Type** (.
5. Select **Voice Calls**.
6. Select **With Caller ID** or **No Caller ID**.
7. Scroll to your desired ringer type and press .

To select a distinctive ringer for voice calls while roaming:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** ( **1**).
4. Select **Ringer Type** ( **2**).
5. Select **Voice Calls**.
6. Select **Roaming**.
7. Select **Distinctive**. (Select **Normal** to deactivate this feature.)

Selecting Ringer Types for Sprint PCS Ready Link Calls

To select a ringer type for Sprint PCS Ready Link calls:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** ( **1**).
4. Select **Ringer Type** ( **2**).
5. Select **Ready Link**.
6. Select **Ready Link Calls, R-Link Missed, or R-Link Floor Tone**.
7. Scroll to your desired ringer type and press .

Selecting Ringer Types for Voicemail or Calendar/Alarm

To select a ringer type for voicemail or calendar/alarm:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** ( **1**).
4. Select **Ringer Type** ( **2**).
5. Select **Voicemail** or **Calendar/Alarm**.
6. Press , scroll to your desired ringer type, and press .

Selecting Ringer Types for Messaging

To select a ringer type for messaging:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** ( **1**).
4. Select **Ringer Type** ( **2**).
5. Select **Messaging**.
6. Select **Text**, **Picture Mail**, or **Voice SMS**.
7. Scroll to your desired ringer type and press .

Selecting a Tone Length

Your phone offers a number of options for selecting the audible tones accompanying a key press. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)

To select a tone length:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** (.
4. Select **Others** (.
5. Select **Tone Length**.
6. Select **Short** or **Long**.

Setting a Start-up/Power-off Tone

To set a start-up/power-off tone:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** (.
4. Select **Others** (.
5. Select **Start-up Tone** or **Power-off Tone**.
6. Scroll to your desired tone and press .

Using Voice Prompt

This feature allows you to hear voice prompts at Automatic Speech Recognition (ASR), Voice Recorder, Screen Call setting, etc. (default setting is off).

To enable or disable voice prompt:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** (.
4. Select **Others** (.
5. Select **Voice Prompt**.
6. Select **On** or **Off**.

Tip: When ringer volume is set to “Silence All,” voice prompts cannot be heard.

Setting Up Key Press Echo

With this feature, you can hear a voice say the numbers when you press the keypad. This feature is available when you are in standby mode.

To turn Key Press Echo on or off:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** (.
4. Select **Others** (.
5. Select **Key Press Echo**.
6. Select **On** or **Off**.

Adjusting the Phone's Volume Settings

You can adjust your phone's volume settings to suit your needs and your environment.

To adjust the ringer and key volume:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** ().
4. Select **Ringer/Key Vol.** ().
5. Select **Ringer Volume, Calendar/Alarm, Start-up/Pw-off, or Key Beep**.
6. Using the navigation key, choose a volume level and press .

To adjust the earpiece or speaker volume:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** ().
4. Select **Receiver Vol.** ().
5. Select either **Earpiece** or **Speaker**.
6. Using the navigation key, choose a volume level and press .

Tip: You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the Side Volume key.

To adjust the application volume:

This setting is available for the volume of video, Media Player, downloaded data, and browser.

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** ().
4. Select **Application Vol.** ().
5. Press , choose a volume level, and press .

Selecting Vibrate Patterns

With this feature, you can select vibrate patterns for incoming calls, messages, and schedule alarms.

To select vibrate patterns:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** ().
4. Select **Vibrate Pattern** ().
5. Select **Voice Calls**, **Ready Link**, **Voicemail**, **Messaging**, or **Calendar/Alarm**. The following items require an additional step:
 - **Voice Calls**: select **With Caller ID**, **No Caller ID**, or **Roaming**.
 - **Ready Link**: select **Ready Link Calls** or **R-Link Missed**.
 - **Messaging**: select **Text**, **Picture Mail**, or **Voice SMS**.
6. Using the navigation key, select a setting and press .

Alert Notification

Your Sprint PCS Phone can alert you with an audible tone when you change service areas, once a minute during a voice call, or for incoming or missed Sprint PCS Ready Link calls.

To set alerts:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** ().
4. Select **Alerts** ().
5. Select your desired option and press .
 - **Service** sets an alert to notify you of network services parameter changes.
 - **Ready Link** sets an alert to notify you of Ready Link calls. Select **Ready Link Calls** for incoming Sprint PCS Ready Link calls, **R-Link Missed** for missed Sprint PCS Ready Link calls, or **Headset Alert** for notifying you of taking the floor while using a headset.
 - **Voicemail** sets an alert to notify you of voice messages. Select **Ringer Length** to set the ringer length of Voicemail notification.
 - **Messaging** sets an alert to notify you of **Text**, **Picture Mail**, and **Voice SMS**. Select **Ringer Length** to set the ringer length of Messaging notification.
 - **Minute Beep** sets a minute reminder that beeps ten seconds before the end of each minute during a call.
 - **Signal Fade** sets an alert to notify you when your phone loses a signal during a call.

6. Use your navigation key to select a setting and press .

Tip: You can select **Once** or **Repeat Alert** if you select Ready Link Calls, R-Link Missed, Voicemail, or Messaging. **Repeat Alert** sounds an alert every two minutes for twenty minutes. (For Ready Link Calls, it sounds for 20 seconds continuously.)

Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Sounds** ( 1).
4. Select **Ringer/Key Vol.** ( 1).
5. Select **Ringer Volume**.
6. Press the navigation key down until **Silence All** appears on the display and press .

Shortcut: With the flip open, press and hold the Side Volume Key down to activate Silence All.

Tip: When Ringer Volume is set as Silence All, other items are changed to Off and cannot be highlighted.

To deactivate Silence All:

- ▶ With the flip open, press the Side Volume key up repeatedly to select a desired volume level.

Display Settings

Changing the Text Greeting

The text greeting can be up to fifteen characters and is displayed on your phone's screen in standby mode. You may choose to keep the phone's default greeting ("Sprint"), or you may enter your own custom greeting.

To display or change your custom greeting:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **Greeting**.
5. Select **Custom** (.

 - You can customize the greeting by entering a personalized greeting. (See "Entering Text" on page 42.)

6. Enter a custom greeting using your keypad and press .

To display the default greeting ("Sprint"):

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **Greeting**.
5. Select **Default** (.

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any key press is made.

To change the Main LCD or Sub LCD backlight setting:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **Backlight**.
5. Select **Main LCD** or **Sub LCD**.
6. Select **Always On**, **Always Off**, or your defined time length.

Note: The Always On setting returns to the previous value the next time you turn on the phone.

To change the Keypad backlight setting:

1. Select **Key** during step 5 above.
2. Select **Always Off** or your defined time length.

Note: Long backlight settings affect the battery's talk and standby times.

Changing the Display Screen Animation

Your new Sprint PCS Vision Phone offers options for what you see on the display screen during various phone functions.

To change the animation display:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** ().
4. Select **Animation**.
5. Select **Standby, Outgoing Calls, or Service Search**.
6. Press , scroll to your desired option and press .
 - For standby, you can also set the animation starting time. Select **after**, highlight your desired setting time, and press .
7. To set the display size, select **Video Size** (if applicable).
8. Select **Original** or **Enlarged** and press .

Changing the Display for Incoming Calls

You can set the color or downloaded image to be shown on the Incoming Calls display.

To change the incoming calls display:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** ().
4. Select **Incoming Calls**.
5. Press , scroll to your desired option and press .
6. Press **OK** (left softkey) twice to assign the desired color or image.

Changing the Display for Area Name

This feature enables you to show the area of the phone number you are calling or are called from when the number is not registered in your Contacts list. For example, a call to or from 213-555-5555 will display “California.”

To set your area name display:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **Match Area Code**.
5. Select **On** or **Off**.
 - This feature is available only when the phone number is 10 digits, or 11 digits beginning with 1 and matches an area code.
 - The area name will not be displayed when the number of an incoming call is saved in your Contacts list.

Changing the LED Indicator Color

To change the phone's LED indicator color:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **LED**.
5. Select **During Call, Incoming Calls, Voicemail, Messaging, or Calendar/Alarm**. The following items require an extra step:
 - **Incoming Calls:** select **With Caller ID, No Caller ID, or Roaming**.
 - **Messaging:** select **Text, Picture Mail, or Voice SMS**.
6. Select your desired color pattern and press .

Changing the Display for Standby Mode

This feature enables you to select a variety of items to display in standby mode.

To set your standby display:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **Standby Display**.
5. Select **Main LCD** or **Sub LCD**.
6. Select **Others**.
7. Select your desired item and press 
 - **Calendar** displays the calendar. (Main LCD only.)
 - **Digital Clock** displays the local time in digital view.
 - **Analog Clock** displays the local time in analog view.
 - **World Clock** displays the time of the selected city or country along with the local time.
 - **Default** returns the standby display to its default setting.
8. Press  to save the setting to follow each system prompt or when confirming the preview display.

Tip: In an area without service, the signal search display appears instead of the display for standby mode.

Changing the Screen Saver

Your new Sprint PCS Phone offers you the option of displaying a screen saver while in standby mode.

To change the screen saver:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **Standby Display**.
5. Select **Main LCD** or **Sub LCD**.
6. Select **Screen Saver**.
7. Press , scroll to your desired option, and press .
8. Press **OK** (left softkey) twice to assign the screen saver.

Changing the Phone's Menu Style

Your Sprint PCS Phone allows you to choose how the main menu appears on your display screen.

To change the main menu style:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **Main Menu**.
5. Select either **Graphic** or **Text**.

Changing the Display for My Buddy

This feature enables you to see a funny animation on the Main LCD by opening the flip.

To activate or deactivate My Buddy:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **My Buddy**.
5. Select **On** or **Off**.

Changing the Background

You can customize your phone display's appearance by selecting a color scheme to reflect your personality.

To change the display's background:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **Background**.
5. Select **Main LCD** or **Sub LCD**.
6. Select your desired color.

Changing the Font Size

You can change the font size settings for the message and browser.

To change the font size:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **Font Size**.
5. Select either **Messaging** or **Browser**.
6. Select your desired font size.

Tip: From the font example display, select your desired font size by pressing the navigation key right or left.

Setting Return to Standby Mode

This feature allows you to select the way to return to standby mode.

To set this feature:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **Return to Idle**.
5. A message appears. Press **OK** (left softkey) to continue.
6. Select **Automatically** or **End Key**.
 - **Automatically** to return to standby mode automatically in 30 seconds.
 - **End Key** to return to standby mode by pressing .

Note: **End Key** setting affects the battery's talk and standby times.

Sleep Mode

This feature helps conserve your battery power by restricting the display.

To set sleep mode:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Display** (.
4. Select **Sleep Mode**.
5. Select **Main LCD** or **Sub LCD**.
6. Select your desired option. (Select **Off** to deactivate this feature.)

Location Settings

Your Sprint PCS Phone is equipped with a Location feature for use in connection with location-based services that may be available in the future.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Even if the Location feature is enabled, no service may use your location without your express permission, unless the service called cannot identify the caller.

To turn your phone's Location feature on or off:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Location** (). (The Location disclaimer displays.)
4. Read the disclaimer and press **OK** (left softkey).
5. Select **On** or **Off**.

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will display.

Messaging Settings

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages and Voice SMS messages without placing a voice call. (For more information, see “Using Text SMS Messaging” on page 278, “Using Voice SMS Messaging” on page 282, and “Accessing Messaging” on page 297.)

Your phone's messaging settings make using messaging even faster and easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own preset (canned) messages, to name just a few.

Displaying Pop-up Messages

When you receive a text or Voice SMS message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a larger pop-up message on your display screen.

To display pop-up messages:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging** (.
4. Select **Notification** (.
5. Select **Msgs and Icon** or **Icon Only**.

Managing Preset Messages

Your phone is pre-set with twenty canned messages each in English and Spanish to help make sending text messages faster and easier. These messages, such as “Where are you?,” “Let’s get lunch.,” and “Meet me at,” can be customized or deleted to suit your needs. You can even add your own preset messages to the list.

To edit a preset message:

1. Press **MENU** **OK** to access the main menu.
2. Select **Settings**.
3. Select **Messaging** (**PDRS 7**).
4. Select **Preset Msgs** (**ABC 2**). (The list of preset messages displays.)
5. Select the message you want to edit.
6. Use your keypad to edit the message and press **OK** (left softkey) to save your changes. (“Preset Message Saved” will display.)
 - To reset all messages, press **Options** (right softkey) and select **Reset All Msgs** during step 5 above.

To change the language of the preset messages:

1. Follow steps 1-4 above.
2. Press **Options** (right softkey) and select **Select Language**.
3. Select **English** or **Spanish**.

Note: For information on editing text, see “Entering Text” on page 42.

Setting a Callback Number

With this feature, you can notify your recipients of your callback number with the text message.

To set the callback number:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging** ().
4. Select **Text** ().
5. Select **Send Callback#** ().
6. Press , select an option from the following.
 - **None** to send no callback number.
 - **My Phone#** to send your phone number.
 - **Other** to send a specific callback number. To set a number, enter a phone number and press .
7. Press **Done** (left softkey).

Adding a Customized Signature

Each message you send can have a customized signature to reflect your personality.

To add a customized signature to each sent message:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging** ().
4. Select **Text** ().
5. Select **Signature** ().

6. Press  and select **On**.
7. Select **Text**.
8. Enter your signature and press **OK** (left softkey).
9. Press **Save** (left softkey) to save your signature.

Note: You can insert your signature even when your signature setting is off. Press **Mode** (right softkey) and select **Signature** while composing your message.

Setting Drafts Alert

With this feature, you are notified to edit your draft messages when you have messages in the drafts folder and make a message.

To set Drafts Alert:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging** (.
4. Select **Text** (.
5. Select **Drafts Alert** (.
6. Select **On**.

Setting the Speakerphone for Voice SMS Messaging

You can set the speakerphone on or off for Voice SMS messaging. By default, the speakerphone is set to on.

To set the speakerphone on or off:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging** (.
4. Select **Voice SMS** (.
5. Select **Speakerphone** (.
6. Select **On** or **Off**.

Setting the Sender's Name for Voice SMS Messaging

With this feature, you can identify yourself to people who receive your Voice SMS message.

To set the sender's name:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging** (.
4. Select **Voice SMS** (.
5. Select **From Name** (.
6. Enter your name and press **OK** (left softkey).

Setting an Alert Notification for Voice SMS Messaging

Voice SMS Messaging uses your phone's data services. You can set your phone to play an audible alert to let you know you are connecting to data services each time you access a Voice SMS message.

To set alerts for Voice SMS messaging:

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Messaging** (**PORS 7**).
4. Select **Voice SMS** (**GHI 4**).
5. Select **Connection Alert** (**DEF 3**).
6. Press **Mark** (right softkey) to warn you each time when you connect voice messages.
7. Press **Done** (left softkey) to save the setting.

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Voice Recorder, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

To set your phone to Airplane Mode:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** (.
4. Select **Airplane Mode**. (The Airplane Mode disclaimer displays.)
5. Read the disclaimer and press **OK** (left softkey).
6. Select **On**.

While in Airplane Mode, your phone's standby screen will display "Phone Off."



TTY Use With Sprint PCS Service

ATTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Sprint PCS Service, please call Sprint Customer Service via the state Telecommunications Relay Service (TRS) by first dialing **PORS 7** **1** **1** **TALK**. Then provide the state TRS with this number: 866-727-4889.

To turn TTY Mode on or off:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** (.
4. Select **TTY**. (You will see a message on the display.)
5. Press **OK** (left softkey) to continue.
6. Select **Enable** or **Disable**.

Note: In TTY Mode, your phone will display the  icon.

Note: If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

IMPORTANT NOTICE: 911 Emergency Calling

Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs) rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and PSAP community are currently working to resolve this.

Phone Setup Options

My Favorites

Your phone offers you the option of assigning a shortcut key to a favorite or often-used function. Pressing the navigation key to the left in standby mode will launch your personally designated shortcut.

To assign your shortcut key:

1. Press **Favorites** (left softkey).
2. Select **<Add Favorite>**.
3. Select your desired menu and press **Set** (right softkey).

To edit the shortcut name:

1. Press **Favorites** (left softkey).
2. Select your desired shortcut and press **Options** (right softkey).
3. Highlight **Edit Name** and press .
4. Edit the name and press **OK** (left softkey).
5. Press **Save** (left softkey) to save the name.

To erase the shortcut:

1. Press **Favorites** (left softkey).
2. Select your desired shortcut and press **Options** (right softkey).
3. Highlight **Reset** and press .
4. Select **Yes**.
 - To erase all shortcuts, select **Reset All** during step 3 above.

Auto Answer Mode

You may set your phone to automatically pick up incoming calls in speakerphone mode or when connected to an optional hands-free car kit and headset.

To set Auto Answer mode:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** (.
4. Select **Auto Answer**.
5. Select **Car Kit/Headset** or **Speakerphone**.
6. Select **5 Seconds**, **15 Seconds**, or **Off**.

Display Language

You can choose to display your Sprint PCS Phone's onscreen menus in English or in Spanish.

To assign a language for the phone's display:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** (.
4. Select **Language**.
5. Select **English** or **Español**.

Setting the Open/Close Flip Option

This feature enables you to answer an incoming call by opening the flip or to end a call by closing the flip.

To activate the Open Flip feature:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** (.
4. Select **Open/Close Flip**.
5. Select **Open**.
6. Select **Answer Call**.
 - To deactivate this feature, select **No Action** during step 6 above.

To activate the Close Flip feature:

1. From step 5 above, select **Close**. (You will see a message on the display.)
2. Press **OK** (left softkey) to continue.
3. Select an option from the following.
 - **End** to end the call.
 - **Continue(Mute)** to continue the call. Your voice is muted, however you can hear the caller's voice from the speaker.
 - **Continue(Unmute)** to continue the call. You can hear the caller's voice and speak to the phone to answer.

Note: The Close Flip feature does not apply during Ready Link calls or when you are using the speakerphone, a headset, or a car kit.

Setting Any Key Answer

This feature allows you to answer incoming calls by pressing any key (except , , softkeys, and sidekeys).

To turn Any Key Answer on or off:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** ()
4. Select **Any Key Answer**.
5. Select **On** or **Off**.

Setting the Side Key Guard

This feature enables you to lock your side keys while the flip is closed.

To turn Side Key Guard on or off:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** ()
4. Select **Side Key Guard**.
5. Select **On** or **Off**.

Note: This feature does not apply when the flip is open.

Tip: You can deactivate this feature temporarily to use side keys by pressing and holding  while the flip is closed.

Setting Text Entry Options

To set your text entry options:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** (.
4. Select **Text Entry**.
5. Select your desired option and press .
 - **Auto-Capital** to set the auto-capital on or off.
 - **My Words** to set your original words (see page 44).
 - **Input Language** to select the language (English or Spanish).
 - **Auto-Space** to set the auto-space on or off after T9 words you enter.
 - **T9 Settings** to customize the T9 settings (see page 45).
 - **Add Word** to store words that you use frequently (see page 44).
 - **Help** to see the T9 instruction page.

Setting Abbreviated Dialing

Abbreviated Dialing is another form of speed dialing. It allows you to dial a number by entering 3-6 digits of any number in your Contacts Directory. If the digits you enter do not match any stored Contacts entry, your phone will automatically prepend the digits you specify.

To activate this feature:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** ().
4. Select **Abbrev. Dial**.
5. Select **Ph. Book Match**.
6. Select **Enable**.

To set your prepend number:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** ().
4. Select **Abbrev. Dial**.
5. Select **Prepend**.
6. Select **Enable**.
7. Select **Prepend#**.
8. Enter a five- or six-digit number (for example, an area code and prefix) and press **OK** (left softkey).
 - To deactivate this feature, highlight **Disable** during step 6 above.

Tip: To dial the prepend number, see “Using Abbreviated Dialing” on page 41.

Note: This setting does not apply to 911 or Directory Assistance.

Headset Mode

This feature allows you hands-free phone use. Set the headset mode to Voice Call or Ready Link and press the Turbo Button (the operation button) on the headset to activate useful functions.

To connect the headset:

- ▶ Simply plug the headset into your phone’s headset jack.

To set headset mode:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** (.
4. Select **Headset Mode**.
5. Select **Turbo Button**.
6. Select an option from the following.
 - **Voice Calls:** Press the Turbo Button to activate ASR (Automatic Speech Recognition). Press twice to redial the last call. Press and hold the button to activate the Voice Recorder.
 - **Ready Link:** Press the Turbo Button to make a Sprint PCS Ready Link call by using ASR (Automatic Speech Recognition). Press twice to redial the last Sprint PCS Ready Link call.
 - **Off:** Turns this feature off.

To set the sound mode:

1. From step 5 on page 85, select **Earpiece**.
2. Select **Stereo** or **Mono**.

To set the ringer sound:

1. From step 5 on page 85, select **Ringer Sound**.
2. Select **Normal** or **Headset Only**.

Note: Please make sure to insert the headset plug into the headset jack as far as it goes. Improper connection of the headset plug can cause abnormal sounds.

Note: A high volume setting may cause the audio to deteriorate or “crack.”

Setting Power On to Alert

Power On to Alert helps prevent unintentional or accidental power-on of your phone’s alarm settings while your phone is turned off (default setting is off). This feature applies only to Event Alerts, Call Alarm, and Alarm Clock.

To turn Power On to Alert on or off:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Others** (.
4. Select **Power On to Alert**.
5. Select **On** or **Off**.
 - **On** activates alarm in Airplane Mode even if the phone is turned off.
 - **Off** deactivates all alarm settings while the phone is turned off.

Setting Your Phone's Security

In This Section

- ◆ Accessing the Security Menu
 - ◆ Using Your Phone's Lock Feature
 - ◆ Restricting Calls
 - ◆ Using Special Numbers
 - ◆ Erasing Phone Content
 - ◆ Resetting Your Pictures Account
 - ◆ Resetting Your Phone
 - ◆ Resetting and Locking Your Phone Through SMS
 - ◆ Security Features for Sprint PCS VisionSM
-

By using the security settings on your Sprint PCS Phone, you receive peace of mind without sacrificing flexibility. This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

To access the Security menu:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Security** (.
4. Enter your lock code to display the Security menu.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone number or try 0000 or NATL (6285). If none of these work, call Sprint Customer Service at: 1-888-211-4PCS (4727).

Using Your Phone's Lock Feature

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint Customer Service, or special numbers. (See "Using Special Numbers" on page 92.)

To lock your phone:

1. From the Security menu, select **Lock Phone** (.
2. Select **Lock Now** (). (To set your phone to lock the next time it is turned on, select **On Power-up** []).
3. Highlight **Full Lock** or **Excep. Incoming Calls** and press .

Unlocking Your Phone

To unlock your phone:

1. From standby mode, press **Unlock** (left softkey).
2. Enter your lock code.

Locking the Picture and Video Menu

With this feature, you must enter your lock code when you access the Picture and Video menu.

To lock the Picture and Video menu:

1. From the Security Menu, select **Lock Pictures** (ABC 2).
2. Select **Lock Now**. (Select **Unlocked** to deactivate this feature.)

Lock Services

With this feature, you can choose to restrict access to Sprint PCS Vision services, incoming and outgoing voice calls, and Sprint PCS Ready Link calls.

To activate lock services:

1. From the Security Menu, select **Others** (TUV 8).
2. Select **Lock Services** (JKL 5).
3. Select **Voice Calls, Power Vision, or Ready Link**.
4. Select **Locked**. (Select **Unlocked** to deactivate this feature.)

Changing the Lock Code

To change your lock code:

1. From the Security Menu, select **Others** (TUV 8).
2. Select **Change Lock** (1).
3. Enter a new lock code (“1234” for example).
4. Reenter the new code.

Calling in Lock Mode

You can place calls to 911, Sprint Customer Service, and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 92.)

To place an outgoing call in lock mode:

- ▶ To call an Emergency number, special number, or Sprint Customer Service, enter the phone number and press **TALK**.

Note: You cannot place calls to Sprint Customer Service and to your special numbers in the voice call locked state. See “Lock Services” on page 89 for details.

Restricting Calls

There may be occasions when you want to limit the numbers your phone can call or from which it can receive calls. You can use the Restrict Calls setting to do just that. (The Restrict Calls setting does not apply to 911 or Sprint Customer Service.)

To restrict calls:

1. From the Security Menu, select **Others** (TUV 8).
2. Select **Limit Use** (ABC 2).
3. Select **Outgoing Calls** or **Incoming Calls**.
4. Select your desired option and press MENU OR.
 - **Allow All** lets you make or receive all calls.
 - **Phone Book Only** lets you make or receive calls to or from Contacts entries, voicemail, or special numbers only.
 - **Special #s Only** lets you make or receive calls to or from three special numbers only. (See “Using Special Numbers” on page 92.)

Note: Restricted incoming calls are forwarded to voicemail.

Using Special Numbers

Special numbers are important numbers that you have designated as being “always available.” You can receive calls from special numbers even if your phone is locked.

You can save three special numbers in addition to your Contacts entries (the same number may be in both directories).

To add or replace a special number:

1. From the Security Menu, select **Others** (TUV 8).
2. Select **Special #s** (DEF 3).
3. Select an entry number.
4. Enter your desired phone number and press .
— or —
Press **Options** (right softkey), highlight **From Ph. Book** or **Voicemail**, and press .

Note: Special numbers cannot be called in the voice call locked state.

Erasing Phone Content

The security menu lets you quickly and easily erase various categories of data from your phone's memory.

Erasing the Contacts Directory

To erase all the names and phone numbers in your Contacts Directory:

1. From the Security Menu, select **Erase Ph. Book** (DEF 3).
2. Press **OK** (left softkey) to continue.
3. If you are certain you would like to erase all of your Contacts entries, select **Yes**.

Erasing All Voice Tags

To erase all voice tags you have recorded:

1. From the Security Menu, select **Erase Voice Tag** (GH 4).
2. Press **OK** (left softkey) to continue.
3. If you're sure you want to erase the voice tags, select **Yes**.

Erasing All Downloads

You can use your phone's security menu to erase all items you have downloaded to your phone.

To erase all downloads:

1. From the Security Menu, select **Erase My Content** ().
2. Press **OK** (left softkey) to continue.
3. If you are certain that you would like to erase all items downloaded to your phone, select **Yes**.
 - If you have assigned downloaded data, the function returns to its default setting.

Note: The items with the  icon will not be deleted.

Resetting Your Pictures Account

This option resets your authentication ID for your Sprint PCS Picture Mail account.

To reset your pictures account:

1. From the Security Menu, select **Reset Picture Mail** (MNO 6).
2. Press **OK** (left softkey) to continue.
3. If you are certain that you would like to reset your pictures account, select **Yes**.

Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Calendar, and Messaging are not affected.

To reset your phone:

1. From the Security Menu, select **Reset Phone** (PORS 7).
2. Press **OK** (left softkey) to continue.
3. If you are certain that you would like to restore all of the factory settings, select **Yes**.

Resetting and Locking Your Phone Through SMS

When your phone is lost or stolen, you can erase your important personal information (such as Contacts entries, call history, and messages) and lock your phone by sending a special formatted SMS message to your phone.

From your computer, sign on to www.sprint.com and send a message to your phone (input your 10-digit Sprint PCS Phone Number) in the following format:

```
\\RESET**<Passcode>**RESET
```

<Passcode> – your defined passcode.

The default passcode is your phone's 11-digit ESN (Electronic Serial Number), which is written on the package or on the phone itself.

The locked phone will display the following message:

“If found, please call Sprint Customer Service 1-888-211-4727.”

Note: To send a message from mailer software, input your 10-digit Sprint PCS Phone Number followed by “@messaging.sprint.com.”

To activate this feature, the following presetting is required:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Security** (.
4. Enter your lock code.
5. Select **Others** (.
6. Select **Found Me** (.
7. Select **Reset/Lock** (.
8. Select **Enable**.

To unlock a phone that has been locked through SMS, bring the phone to a Sprint Store.

Changing the Passcode

To change the passcode for the special formatted SMS messages:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Security** (.
4. Enter your lock code.
5. Select **Others** (.
6. Select **Found Me** (.
7. Select **Change Passcode** (.
8. Enter a new passcode (11 digits).
9. Reenter the new passcode.

Security Features for Sprint PCS VisionSM

Enabling and Disabling Sprint PCS Vision Services

You can disable Sprint PCS Vision services without turning off your phone; however, you will not have access to all Sprint PCS Vision services, including Web and Sprint PCS Mail. Disabling Sprint PCS Vision will avoid any charges associated with Sprint PCS Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable Sprint PCS Vision services again at any time.

To disable Sprint PCS Vision services:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Power Vision** ().
4. Select **Disable Vision** (). (A message will appear.)
5. Press **Disable** (right softkey) to confirm that you want to sign out.

To enable Sprint PCS Vision services:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Power Vision** ().
4. Select **Enable Vision** (). (A message will appear.)
5. Press **OK** (left softkey) to enable Vision service.

Controlling Your Roaming Experience

In This Section

- ◆ Understanding Roaming
 - ◆ Setting Your Phone's Roam Mode
 - ◆ Using Call Guard
-

Roaming is the ability to make or receive calls when you're off the nationwide Sprint PCS network. Your new Sprint Power Vision Multimedia Phone MM-9000 by Sanyo works anywhere on the nationwide Sprint PCS network and allows you to roam on 1900 and 800 MHz digital networks where we've implemented roaming agreements with other carriers.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

Recognizing the Roaming Icon on the Display Screen

Your phone's display screen always lets you know when you're off the nationwide Sprint PCS network. Any time you are roaming, the phone displays the roaming icon (R).

Tip: Remember, when you are using your phone off the nationwide Sprint PCS network, always dial numbers using 11 digits (1 + area code + number).

Note: Unless your Sprint PCS Service Plan includes roaming, you will pay a higher per-minute rate for roaming calls and data services.

Roaming on Other Digital Networks

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the nationwide Sprint PCS network. However, you may not be able to access certain features, such as Sprint PCS Vision.

Note: If you're on a call or data service when you leave the nationwide Sprint PCS network and enter an area where roaming is available, your call is dropped or your data is clicked off. If the data service is clicked off in a roaming area, access the service again to reconnect. If your call is dropped in an area where you think Sprint PCS Service is available, turn your phone off and on again to reconnect to the nationwide Sprint PCS network.

Checking for Voicemail Messages While Roaming

When you are roaming off the nationwide Sprint PCS network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

To check your voicemail while roaming:

1. Dial 1+area code+your Sprint PCS Phone number.
2. When you hear your voicemail greeting, press .
3. Enter your pass code at the prompt and follow the voice prompts.

When you return to the nationwide Sprint PCS network, voicemail notification will resume as normal.

Setting Your Phone's Roam Mode

Your Sprint PCS Phone allows you to control your roaming capabilities. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode

Choose from three different settings on your multimedia phone to control your roaming experience.

To set your phone's roam mode:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Roaming** (.
4. Select **Set Mode**.
5. Select an option from the following.
 - **Sprint Only** allows you to access the nationwide Sprint PCS network only and prevents roaming on other networks.
 - **Automatic** seeks Sprint PCS Service. When Sprint PCS Service is unavailable, the phone searches for an alternate system.
 - **Roaming Only** forces the phone to seek a digital roaming system. The previous setting (Sprint Only or Automatic) is restored the next time the phone is turned on.

Using Call Guard

Your phone has two ways of alerting you when you are roaming off the nationwide Sprint PCS network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming charges by requiring an extra step before you can place or answer a roaming call and access to the data service. (This additional step is not required while on the nationwide Sprint PCS network.)

To turn Call Guard on or off:

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Roaming (MNO 6)**.
4. Select **Call Guard**.
5. Select **On** or **Off**.

To place roaming calls with Call Guard on:

1. From standby mode, dial 1 + area code + the seven-digit number. (You can also initiate a call from the Contacts directory, Call History, or Messaging.)
2. Press **TALK** or **SPEAKER** (or press **Options** [right softkey] and highlight **Call** or **Call:Speaker On**).
3. Press **1** to proceed while the pop-up message is displayed.
– or –
Press any key to erase the pop-up message, press **Options** (right softkey), highlight **Roam Call**, or **Roam:Speaker On**, and press **MENU OK**.

To answer incoming roaming calls with Call Guard on:

- ▶ Press **Options** (right softkey), highlight **Answer** or **Answer:Speaker**, and press .

– or –

1. Press  or .
2. Press  **1** to proceed while the pop-up message is displayed.

Reminder: If the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls.

Navigating Through Menus

In This Section

- ◆ **Menu Navigation**
 - ◆ **Menu Structure**
 - ◆ **Viewing the Menus**
-

Every function and feature of your Sprint PCS Phone can be accessed through an onscreen menu. This section is a road map to using your MM-9000 by Sanyo. Please take a few moments to learn your way around and you'll find your phone easier to use.

Menu Navigation

The navigation key on your Sprint PCS Phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, simply press the navigation key up or down.

Menu Structure

Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing .

For example, if you want to view your last incoming call:

1. Press  to access the main menu.
2. Select **Call History**.
3. Select **Incoming** by pressing  or by highlighting it and pressing . (If you have received any calls, they are displayed on the screen.)

Tip: You can also select menu options by using your number keys during step 2 above. The corresponding key changes depending on the main menu style. When the style is Text, press the number next to the menu. When the style is Graphic, the icon's position corresponds number key's position. (For example, press  to select **Call History**). See page 65 for setting the main menu style.

Backing Up Within a Menu

To go to the previous menu:

▶ Press  Back.

To return to standby mode:

▶ Press .

Shortcuts

Use your navigation key to quickly access your phone's menus.

- **Right** to take a shortcut to the **Contacts** menu.
- **Left** to take a shortcut to the **Settings** menu.
- **Up** to take a shortcut to the **Messaging** menu.
- **Down** to take a shortcut to the **My Content** menu.

Viewing the Menus

Menu Diagram

The following list outlines your phone's menu structure.

1. Missed Alerts

2. Call History

1. Outgoing
2. Incoming
3. Missed
4. Recent Calls
5. Erase History

3. Contacts

1. Find/Add Entry
2. Speed Dial #s
3. My Phone#
4. Services

4. Messaging

1. Send Message
2. Text
3. Picture Mail
4. Premium Msgs
5. Voice SMS
6. IM & Email
7. Chat & Dating
8. Voicemail

5. On Demand

6. Pictures

1. Camera
2. Camcorder
3. Picture Mail
4. My Albums
5. Order Prints
6. Settings & Info
7. URL Link 1-5 (If applicable)

7. My Content

1. Games
2. Ringers
3. Screen Savers
4. Applications
5. IM & Email
6. Call Tones
7. Dynamic 1-11 (If applicable)
8. Others (If applicable)

8. Music

9. Media Player

0. Web

***. Tools**

1. Voice Services
 1. Voice Recorder
 2. Screen Call
2. Calendar
3. Alarm Clock
4. Countdown
5. Stop Watch
6. World Clock
7. Calculator
8. Update Phone
9. USB Connection
0. miniSD
- *. Assign. Media
- #. PC Sync
 1. Ringers
 2. Images
 3. Erase Data

#. Settings

1. Sounds
 1. Ringer/Key Vol.
 2. Ringer Type
 3. Vibrate Pattern
 4. Alerts
 5. Receiver Vol.
 6. Application Vol.
 7. Others
2. Display
 1. Backlight
 2. Greeting
 3. Font Size
 4. Background
 5. Animation
 6. Incoming Calls
 7. Match Area Code
 8. Standby Display
 9. Main Menu
 10. My Buddy
 11. Return to Idle
 12. Sleep Mode
 13. LED
3. Power Vision
 1. Enable (or Disable) Vision
 2. Net Guard
 3. Update Profile
4. Ready Link
 1. Enable/Disable
 2. List Update
 3. Sounds
 4. Speakerphone
 5. Default View
 6. Floor Display
 7. R-Link Guard
 8. Restart
 9. Help

- 5. Location
- 6. Roaming
 - 1. Set Mode
 - 2. Call Guard
- 7. Messaging
 - 1. Notification
 - 2. Preset Msgs
 - 3. Text
 - 4. Voice SMS
- 8. Security
 - 1. Lock Phone
 - 2. Lock Pictures
 - 3. Erase Ph. Book
 - 4. Erase Voice Tag
 - 5. Erase My Content
 - 6. Reset Picture Mail
 - 7. Reset Phone
 - 8. Others
- 9. Others
 - 1. Airplane Mode
 - 2. Text Entry
 - 3. Any Key Answer
 - 4. Auto Answer
 - 5. Open/Close Flip
 - 6. Abbrev. Dial
 - 7. Power On to Alert
 - 8. Headset Mode
 - 9. TTY
 - 10. Side Key Guard
 - 11. Language
- 0. Phone Info
 - 1. Phone#/User ID
 - 2. Help
 - 3. Version
 - 4. Advanced

Managing Call History

In This Section

- ◆ Viewing History
 - ◆ Call History Options
 - ◆ Making a Call From Call History
 - ◆ Saving a Phone Number From Call History
 - ◆ Prepending a Phone Number From Call History
 - ◆ Erasing Call History
-

The Call History keeps track of incoming calls, calls made from your Sprint PCS Phone, and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing History

You'll find the Call History feature very helpful. It is a list of the last 20 voice calls and Ready Link calls for calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contact's name (if the phone number is in your Contacts list). Duplicate calls (same number and type of call) may only appear once on the list (except missed and recent calls).

To view a Call History entry:

1. Press  to access the main menu.
2. Select **Call History**.
3. Select **Outgoing** ( **1**), **Incoming** ( **2**), **Missed** ( **3**), or **Recent Calls** ( **4**).
4. Select the entry you wish to view.

Tip: You can switch the voice call history to the Sprint PCS Ready Link call history by pressing **R-Link** (left softkey). To return to the voice call history, press **Voice Call** (left softkey). This option is not available when Sprint PCS Ready Link mode is set to **Disable** (see page 230), or Sprint PCS Ready Link is locked (see page 89).

Tip: The icons next to the name in the Recent Calls list represent the status of the call history:  for Outgoing call,  for Incoming call, and  for Missed call.

Call History Options

For additional information and options on a particular call, highlight a Call History entry and press . This feature displays the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts list). By pressing **Options** (right softkey), you can select from the following options:

- **Call** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Message** to send a Text SMS message (page 278), a Voice SMS message (page 282), or a Picture Mail (page 222).
- **Save Phone#** to save the phone number (if applicable).
 - **Go to Phone Book** appears when the number is already in your Contacts list. (See “Saving a Phone Number From Call History” on page 117.)
- **Prepend** to add numbers to the beginning of the phone number. (See “Prepending a Phone Number From Call History” on page 118.)
- **Copy to Personal** to copy the phone number to the Ready Link Personal List (if applicable).
- **Erase** to erase the entry.

Making a Call From Call History

To place a call from Call History:

1. Press **MENU OK** to access the main menu.
2. Select **Call History**.
3. Select **Outgoing** (**1**), **Incoming** (**2**), **Missed** (**3**), or **Recent Calls** (**4**).
4. Scroll to the entry you want to call.
5. Press **TALK** or **SPEAKER**.
– or –
Press **Options** (right softkey), highlight **Call** or **Call:Speaker On**, and press **MENU OK**.

Note: You cannot make calls from Call History to entries identified as **NoID** or **Restricted**.

Saving a Phone Number From Call History

Your Sprint PCS Vision Phone can store up to 500 phone numbers in up to 300 Contacts entries (an entry may contain up to seven numbers). Each entry's name can contain sixteen characters.

To save a phone number from Call History:

1. Press **MENU OK** to access the main menu.
2. Select **Call History**.
3. Select **Outgoing** (**1**), **Incoming** (**2**), **Missed** (**3**), or **Recent Calls** (**4**).
4. Scroll to a call history entry and press **Options** (right softkey).
5. Highlight **Save Phone#** and press **MENU OK**.
6. Select the appropriate label.
7. Enter a name and press **MENU OK**.
Once you have stored an entry in the Contacts list, you are prompted to select the following entry mode:
 - **New Name** to enter a name directly.
 - **From Ph. Book** to select a name from the Contacts list.
8. Press **Save** (left softkey).

Note: You cannot save phone numbers already in your Contacts list or from calls identified as **No ID** or **Restricted**. If the selected entry has already been stored in the Contacts list, **Go to Phone Book** appears during step 5 above.

Prepending a Phone Number From Call History

If you need to place a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by prepending the number.

To prepend a phone number from Call History:

1. Press  to access the main menu.
2. Select **Call History**.
3. Select **Outgoing** ( **1**), **Incoming** ( **2**), **Missed** ( **3**), or **Recent Calls** ( **4**).
4. Scroll to a call history entry and press **Options** (right softkey).
5. Highlight **Prepend** and press .
6. Enter the digits you want to add to the number.
7. Press  or  to place a call.

To select another option, press **Options** (right softkey), highlight it and press .

- **Call** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Save Phone#** to store the phone number in your Contacts directory.
-  **Hard Pause** to insert a hard pause.
-  **2-Sec. Pause** to insert a 2-second pause.

Erasing Call History

To erase individual Call History entries, see “Call History Options” on page 115.

To erase Call History:

1. Press **MENU OK** to access the main menu.
2. Select **Call History**.
3. Select **Erase History** (**JKL 5**).
4. Select **Outgoing** (**1**), **Incoming** (**ABC 2**), **Missed** (**DEF 3**), **Recent Calls** (**GHI 4**), or **All** (**JKL 5**).
5. Highlight **Voice Calls** or **Ready Link** and press **MENU OK**.
 - **Voice Calls** to erase call history for voice calls.
 - **Ready Link** to erase call history for Sprint PCS Ready Link calls.
6. Select **Yes**.

Using the Contacts Directory

In This Section

- ◆ **Displaying the Contacts List**
 - ◆ **Adding a New Contacts Entry**
 - ◆ **Finding Contacts List Entries**
 - ◆ **Contacts List Entry Options**
 - ◆ **Adding a Phone Number to a Contacts Entry**
 - ◆ **Editing a Contacts Entry**
 - ◆ **Erasing a Contacts Entry From the List**
 - ◆ **Assigning Speed Dial Numbers**
 - ◆ **Assigning an Image to a Contacts Entry**
 - ◆ **Selecting a Ringer for an Entry**
 - ◆ **Secret Contacts Entries**
 - ◆ **Dialing Sprint PCS Services**
-

Now that you know the basics that make it easier to stay in touch with people and information, you're ready to explore your phone's more advanced features. This section explains how to use your phone's Contacts Directory and helps you make the most of your contacts and time when you are trying to connect with the important people in your life.

Displaying the Contacts List

You can change the display view for the Contacts list. You may choose to display a List view (the default setting) or you may display the list with picture ID.

To display your Contacts list:

- ▶ Press the navigation key right.

– or –

1. Press  to access the main menu.
2. Select **Contacts**.
3. Select **Find/Add Entry** (.

To change the contacts display view:

1. Press the navigation key right.
2. Press **Options** (right softkey), then select **Thumbnail** or **List** to switch between Thumbnail/List display mode.

Adding a New Contacts Entry

Your Sprint PCS Phone can store up to 500 phone numbers in up to 300 Contacts entries (an entry may contain up to seven numbers). Each entry's name can contain sixteen characters.

To add a new entry:

1. Press the navigation key right to display the Contacts list.
2. Select **<Add Contact>**.
3. Enter a name and press .
4. Select the appropriate label (**Mobile, Home, Work, Pager, Fax, Other, No Label, Email, or Web**), enter the phone number or address, and press .
5. Press **Save** (left softkey).

Finding Contacts List Entries

There are several ways to display your Contacts entries: by name, by speed dial number, by Sprint PCS Ready Link List, and by voice tags. Follow the steps outlined in the sections below to display entries from the Contacts list menu.

Finding Names

To find Contacts list entries by name:

1. Press the navigation key right to display the Contacts list.
2. Scroll through all the entries using your navigation key.
— or —
Enter the first letter of the name or part of the name. (The display shows the entries beginning with the letter entered.)
3. To display the entry's details, select your desired entry and press .
4. To make the call, highlight the desired number and press , , or Call (left softkey).

To find Sprint PCS Ready Link List entries:

1. Press the navigation key right to display your Contacts list.
2. Press **Go to** (left softkey). Highlight your desired list and press .
 - **Phone Book** to display the Contacts list.
 - **Company List** to display the Company List.
 - **Company Grps.** to display the Company Group List.
 - **Personal List** to display the Personal List.
 - **Personal Grps.** to display the Personal Group List.
3. Scroll through the list to select your desired entry.

Note: The **Go to** (left softkey) option does not appear when Sprint PCS Ready Link mode is set to **Disable** (see page 230), or Sprint PCS Ready Link is locked (see page 89).

Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:

1. Press  to access the main menu.
2. Select **Contacts**.
3. Select **Speed Dial #s** (). (The Speed Dial numbers list appears.)

Finding Voice Tags

To find Voice Tags in your phone:

1. Press .
2. You'll hear a tone after a prompt. Say “**Tools.**”
3. After the prompt, say “**Review Voice Tag.**” (The list of Voice tags appears.)

Contacts List Entry Options

To access a contact's options, display the Contacts list, highlight an entry and press . Then select a phone number and press **Options** (right softkey). To select an option, highlight it and press .

- **Edit** to edit the selected entry.
- **Call** to dial the selected number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Message** to send a Text SMS message (page 278), a Voice SMS message (page 282), or a Picture Mail (page 222).
- **Call Alarm** to set a call alarm for the entry. (See page 139 for Call Alarm.)
- **Set Speed Dial** to assign speed dial numbers to your favorite entries. (See “Assigning Speed Dial Numbers” on page 130.)
- **Prepend** to alter a phone number by adding numbers to the beginning of the entry. (See “Prepending a Phone Number From Call History” on page 118.)
- **Copy to Personal** to copy the phone number to your Ready Link Personal List (if available).

Adding a Phone Number to a Contacts Entry

To add a phone number to an entry:

1. Press the navigation key right to display the Contacts list.
2. Scroll to the entry you wish to add and press .
3. Select a phone number, press **Options** (right softkey), highlight **Edit**, and press .
4. Select the label field you want to add (Mobile, Home, Work, etc.).
5. Enter the number and press .
6. Press **Save** (left softkey).

Editing a Contacts Entry

To make changes to an entry:

1. Press the navigation key right.
2. Scroll to the entry you wish to edit and press .
3. Select a phone number, press **Options** (right softkey), highlight **Edit**, and press .
– or –
Select an email address or Web address and press **Edit** (right softkey).
4. Select the field you want to edit.
5. Edit the entry by using your keypad and press .
6. Press **Save** (left softkey) to save your changes.

Erasing a Contacts Entry From the List

To erase the selected entry:

1. Press the navigation key right.
2. Scroll to the entry you wish to delete by using the navigation key and press **Options** (right softkey).
3. Highlight **Erase Contact** and press .
4. Select **Yes**.

Assigning Speed Dial Numbers

With this feature you can dial Contacts Directory entries with one key press for locations 2-9. For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 40.

To assign Speed Dial:

1. Press  to access the main menu.
2. Select **Contacts**.
3. Select **Speed Dial #s** (.
4. Select an available speed dial location.
5. Select an entry from the list.
6. Select the phone number you want to set as a speed dial and press  to save the setting.

– or –

1. Press the navigation key right.
2. Scroll to your desired entry in the Contacts list and press .
3. Select the phone number you want to set as a speed dial and press **Options** (right softkey).
4. Highlight **Set Speed Dial** and press .
5. Select an available speed dial location.

Note: If you attempt to assign an already in-use speed dial location to a new phone number, a dialog will appear asking if you wish to overwrite the existing speed dial assignment. Select **Yes** to assign the location to the new phone number or **No** to cancel. To delete the previous speed dial assignment, select **Reset**.

Assigning an Image to a Contacts Entry

You can assign an image to a Contacts entry. The image is displayed when the entry calls you.

To assign an image for an entry:

1. Press the navigation key right.
2. Select the entry for which you want to assign the image and press .
3. Press **Options** (right softkey), highlight **Edit**, and press . (If you are selecting an email/web address, just press **Edit** [right softkey].)
4. Scroll down to the box next to the  icon and press .
5. Select your desired option and press **OK** (left softkey) to assign.
6. Press **Save** (left softkey) to save the image type.

Selecting a Ringer for an Entry

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 50.)

To select a ringer type for an entry:

1. Press the navigation key right.
2. Select the entry for which you want to set the incoming ringer and press .
3. Press **Options** (right softkey), highlight **Edit**, and press . (If you are selecting an email/web address, just press **Edit** [right softkey].)
4. Scroll down to the box next to the  icon and press .
5. Select your desired ringer and press . (When you highlight a ringer type, a sample ringer will sound.)
6. Press **Save** (left softkey) to save the ringer type.

Note: If you set an animation ringer (indicated with the  icon) and an image, your Sprint PCS Phone plays the ringer (audio) of the animation ringer and displays the image you selected.

Secret Contacts Entries

You can hide an entry's phone number(s) and require your lock code to edit the entry by making it secret. The entry name is still displayed, but the entry's phone numbers are replaced with "<Secret>".

To make an entry secret:

1. Press the navigation key right.
2. Scroll to the Contacts entry you want to tag as secret.
3. Press **Options** (right softkey) to display the menu options.
4. Highlight **Set Secret** and press .
5. Enter the 4-digit lock code.
6. Select **On**.

To make an entry public:

1. Press the navigation key right.
2. Scroll to the Contacts entry you want to tag as public.
3. Press **Options** (right softkey) to display the menu options.
4. Highlight **Set Secret** and press .
5. Enter the 4-digit lock code.
6. Select **Off**.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or your Sprint PCS Phone Number or try 0000 or NATL (6285). If none of these work, call Sprint Customer Service at 1-888-211-4PCS (4727).

Dialing Sprint PCS Services

Your Contacts list is preprogrammed with contact numbers for various Sprint PCS Services.

To dial a service:

1. Press **MENU OK** to access the main menu.
2. Select **Contacts**.
3. Select **Services** (**GHI 4**).
4. Select **Customer Service** (**☎ 1**), **Dir Assistance** (**ABC 2**), **Account Info** (**DEF 3**), **Sprint Operator** (**GHI 4**), or **Voice Command** (**JKL 5**).
5. Press **TALK** or **SPEAKER**.

To dial a service from standby mode using your keypad:

1. Dial the appropriate service number:
 - **Customer Service** - **Shift ✕ ABC 2**
 - **Directory Assistance** - **GHI 4** **☎ 1** **☎ 1**
 - **Account Info** - **Shift ✕ GHI 4**
 - **Sprint Operator** - **+ 0**
 - **Voice Command** - **Shift ✕**
2. Press **TALK** or **SPEAKER** to place the call.

Using the Phone's Calendar and Tools

In This Section

- ◆ Using Your Phone's Calendar
 - ◆ Displaying Phone Information
 - ◆ Using Your Phone's Tools
-

Your Sprint PCS Phone is equipped with several personal information management features that help you manage your busy lifestyle. This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments. It takes productivity to a whole new level.

Using Your Phone's Calendar

Displaying Your Calendar

To display your calendar:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Calendar** (.

Adding an Event to the Calendar

Your Calendar helps organize your time and reminds you of important events (up to 100 events).

To add an event:

1. From the Calendar display (see above), select the day you want to add an event and press **Options** (right softkey).
2. Highlight **Add Event** and press .
3. Select **Schedule** (.
4. Enter the description using your keypad and press  (or press **Mode** [right softkey] to select a description from “From To Do List”).

Note: The “From To Do List” option will not appear if there are no items stored in the To Do List. See “Adding To Do List Items” on page 142 for details.

5. Select the following items.
 - **Description** to enter a description of your event (up to 14 characters).
 - **From** to schedule the start time.
 - **To** to schedule the end time.
 - **Location** to edit the location of your event (up to 14 characters).
 - **Alarm** to select your desired ringer.
 - **Alarm Time** to edit the alarm time (number of hours or minutes before the event starts). Default alarm time is 10 minutes before.
 - **Repeat** to set the event's repeating status.
6. Press **Save** (left softkey) to schedule the event.

Tip: The date you have scheduled events for is indicated by "▶".

Tip: Press the navigation key up or down to scroll by week through the Calendar and the Side Volume key to scroll by month.

Event Alerts

There are several ways your Sprint PCS Vision Phone alerts you of scheduled events:

- By playing the alert tone (depending on the Ringer Type and Ringer Volume setting).
- By blinking the LED.
- By displaying the event's description on the Main LCD or Sub LCD.
- By lighting the LCD backlight (depending on the backlight setting).

Event Alert Menu

When you have an event alarm scheduled, your phone alerts you and displays the  icon and the event summary.

To silence an event alert:

- ▶ Press any key to silence an event alert. (The alarm will play again after 10 minutes.)

Other options available include:

- Press and hold the side camera key to cancel snoozing.
- Press **Dismiss** (right softkey) to dismiss the event.

Tip: To check the missed notification from standby mode, press  and select **Missed Alerts**.

Adding a Call Alarm to the Calendar

You can set call alarms to notify you when you need to place a call. The call alarm will let you know when and to whom to place a scheduled call. You can set up to 15 call alarms.

To add a call alarm to the calendar:

1. From the Calendar display (see page 136), select the day you want to add an event and press **Options** (right softkey).
2. Highlight **Add Event** and press .
3. Select **Call Alarm** (.
4. Enter the phone number directly or press **Options** (right softkey) for options.
 - **From Ph. Book** to select the desired number from your Contacts list.
 - **Vicemail** to select the number for voicemail access.
5. Select the following items.
 - **Time/Date** to edit the start time and date.
 - **Alarm** to select the ringer alarm.
 - **Repeat** to set the Call Alarm's repeat status.
6. Press **Save** (left softkey).

Call Alarm Alerts

There are several ways your Sprint PCS Phone alerts you of a scheduled call alarm:

- By playing the alert tone (depending on the Ringer Type and Ringer Volume setting).
- By blinking the LED.
- By displaying the call alarm notification on the Main LCD or Sub LCD.
- By lighting the LCD backlight (depending on the backlight setting).

Call Alarm Menu

When you have scheduled a call alarm, your phone alerts you and displays the  icon and the name or phone number you wish to call.

To respond to a call alarm:

- ▶ Press **TALK** or **SPEAKER** to dial the phone number.

Other options available include:

- Press  to make a Sprint PCS Ready Link call (if applicable).
- Press any key (except  or ) while the phone is closed) to repeat the alarm in 10 minutes.
- Press and hold the side camera key to cancel snoozing.
- Press **Dismiss** (right softkey) to dismiss the call alarm.

Editing an Event or Call Alarm

To edit an event or call alarm:

1. From the Calendar display (see page 136), select the date for which you set events and press .
2. Select one of the events or call alarms. (The event or call alarm details appear.)
3. Select the information you want to edit.
4. Enter or select a new setting and press .
5. Press **Save** (left softkey).

Viewing a Future or Past Day's Scheduled Events

To view a future or past day's scheduled events:

1. From the Calendar display (see page 136), press **Options** (right softkey).
2. Highlight **Go To Date** and press .
3. Enter the date by using numeric keys and the navigation key and press **OK** (left softkey).
4. Press  once again to view the day's event list.

Erasing an Event or Call Alarm

To erase a scheduled event or call alarm:

1. From the Calendar display (see page 136), select the date for which you set events and press .
2. Select one of the events or call alarms and press **Options** (right softkey).
3. Highlight **Erase Event** and press .
4. Select **Yes**.

Adding To Do List Items

Your phone can store and manage up to 20 To Do List items.

To add an item to your To Do List:

1. From the Calendar display (see page 136), press **Options** (right softkey).
2. Highlight **To Do List** and press .
3. Press **Options** (right softkey).
4. Highlight **Add Item** and press .
5. Enter the description (up to 14 characters) and press .
6. Select **Priority** and edit the To Do's priority.
7. Press **Save** (left softkey).

Adding a To Do List Item to the Calendar

To add your To Do List item to the calendar:

1. From the To Do List display (see page 142), select the item you want to add to the schedule and press **Options** (right softkey).
2. Highlight **Add To Schedule** and press .
 - **Add To Schedule** to copy the item from the To Do List and make it a scheduled event. (Adding an item to the schedule does not remove it from your To Do List.)
3. Enter the description using your keypad and press .
(See “Adding an Event to the Calendar” on page 136 for entering.)
4. Press **Save** (left softkey).

Note: If you have saved a To Do List item to the calendar, deleting it from the To Do List will not delete it from the calendar. To remove an item saved to the calendar, see “Erasing an Event or Call Alarm” on page 142.

Viewing Memory in Your Calendar

To view available memory space and options:

1. From the Calendar display (see page 136), press **Options** (right softkey).
2. Highlight **View Memory** and press .
3. Select **Schedule** () , **Call Alarm** () , or **To Do List** () . (The available memory space and options display.)

Purging All Events, Call Alarms, or To Do List Items

To delete all scheduled events, call alarms, or To Do List items:

1. From the Calendar display (see page 136), press **Options** (right softkey).
2. Highlight **Erase Memory** and press .
3. Select one item from the options.
 - **Erase Old** () deletes old events, call alarms, and To Do List items that are done.
 - **Erase All** () deletes all events, call alarms, and To Do List items.
4. Select **Yes**.

Displaying Phone Information

Displaying Your User Address

To display the phone's current user address:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Phone Info** (.
4. Select **Phone#/User ID** ( 1).
 - If you sign out, <PCS Vision Disabled> appears on the display.

Finding Icon Definitions

To view an explanation of icons that appear on the display:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Phone Info** (.
4. Select **Help** (.
5. Select the item for which you want to see the explanation and press . (The icon's explanation appears.)

Displaying the Version Information

To display the version number of the software, hardware, PRL (Preferred Roaming List), PRI (Product Release Instructions), etc., installed on your Sprint PCS Phone:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Phone Info** ().
4. Select **Version** (.

Displaying Advanced Information

To display advanced information such as technology and frequency:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Phone Info** ().
4. Select **Advanced** (.

Using Your Phone's Tools

In addition to helping you be more efficient and organized, your Sprint PCS Vision Phone offers useful and entertaining tools.

Using the Alarm Clock

Your phone comes with a built-in alarm clock with alarm capabilities. You can set up to 5 alarms.

To use the alarm clock:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Alarm Clock** ().
 - Press **Settings** (right softkey) to set the **Ringer Length** or **Snooze Interval**.
4. Select a number and the following items.
 - **Description** to enter a description of the alarm.
 - **Time** to enter the alarm time. Enter the desired alarm time and press .
 - **Repeat** to select the alarm frequency.
 - **Alarm** to set the alarm on or off.
5. Press **Save** (left softkey) to save the alarm settings.

Note: Depending on the Power On to Alert setting, the alarm setting will be active even if the phone is turned off. (See “Setting Power On to Alert” on page 86.)

Note: In a no-service area, it's necessary to set the actual time and date to use the Alarm Clock function after removing and installing your battery.

To stop the alarm:

- ▶ Press any key to stop the alarm. (The alarm will snooze and then sound again after the selected snooze interval.)
 - Press and hold the side camera key to cancel snoozing.
 - Press **Dismiss** (right softkey) to dismiss the alarm.

Using the Countdown Timer

This feature allows you to use the countdown timer with alarm capabilities. You can set up to 5 timers.

To use the countdown timer:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Countdown** ().
 - Press **Settings** (right softkey) to set the **Ringer Length** or **Snooze Interval**.
4. Select a number and the following items.
 - **Description** to enter a description of the countdown.
 - **Time** to enter the countdown time. Enter the desired time and press .
 - **Alarm** to set the countdown alarm on or off.
5. Press **Save** (left softkey) to save the countdown settings.

Tip: This feature is not available while your phone is turned off.

Using the Stop Watch

To start the stop watch:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Stop Watch** ().
 - Press **Start** (left softkey) to start the stop watch operation.
 - Press **Stop** (left softkey) to stop the stop watch operation.
 - Press **Resume** (left softkey) to start the stop watch operation again.

To record a lap time while the stop watch is running:

- Press **Lap** (right softkey) to record time of first lap.
- Press **Lap** (right softkey) again to record next lap. (You may continue this until lap 5.)

To display the stop watch options:

1. During stop watch operation, press **Options** (right softkey).
2. To select an option, highlight it and press .
 - **Go to Lap List** to display a saved Lap List. Press **Detail** (left softkey) to display the lap list detail.
 - **Save to Lap List** to save the recorded lap times.
 - **Reset** to reset the time to zero and clear any recorded lap times.

Using the World Clock

To set the world clock display:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **World Clock** (.
4. The world clock display appears.
 - Press the navigation key right or left to change countries.

Tip: Press **Summer** (left softkey) or **Standard** (right softkey) to select between daylight savings and standard time (if applicable). The  icon is shown in summer mode.

Using the Calculator

Your phone comes with a built-in calculator.

To use the calculator:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Calculator** (.
4. Enter numbers using your keypad. (Press the left softkey to insert a decimal point.)
5. Press the appropriate navigation key for an arithmetic option (**Up** for addition, **Down** for subtraction, **Left** for multiplication, **Right** for division).
6. Enter numbers and press  for the result.
 - To clear the numbers, press **CLR** (right softkey).

Updating Your Phone

Your MM-9000 by Sanyo allows you to update its software version over the air. You will be notified with a text message if a new software version is available for your phone. You can also check if an update is available through the **Tools** menu.

To update your phone:

1. Press **Yes** (left softkey) when an update notification appears.
2. Read the information screen and press **Next** (left softkey) to continue.
3. Select **Update Phone** to update your phone's software version.

To update your phone through the Tools menu:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Update Phone** (.
4. If a new software version is available, press **Yes** (left softkey) to continue.
5. Read the information screen and press **Next** (left softkey) to continue.
6. Select **Update Phone** to update your phone's software version.

Using Your Phone's Voice Services

In This Section

- ◆ Using Automatic Speech Recognition
 - ◆ Using the Voice Recorder
 - ◆ Setting Up Screen Call
-

Your Sprint PCS Vision Phone's Voice Services let you place calls using your voice, store voice reminders, and record memos right on your phone. This section includes easy-to-follow instructions on using voice-activated dialing and managing voice recordings.

Using Automatic Speech Recognition

Your Sprint PCS Vision Phone is equipped with an Automatic Speech Recognition (ASR) feature. This feature allows you to make calls or use the phone's functions by simply using your voice. All you have to do is to talk into the phone, and the phone will recognize your voice and complete tasks by itself. You can activate Automatic Speech Recognition whether the phone is open or closed.

Activating Automatic Speech Recognition

To activate Automatic Speech Recognition:

- ▶ From standby mode, press .

The phone displays the Command menu and prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts. You can speak the name of the command after you hear a beep.

The following is a list of available ASR commands:

- **Contact** to call an entry in your Contacts list. (See page 156 for details.)
- **Dial Number** to dial a phone number by speaking the number. (See page 157 for details.)
- **Call Voice Tag** to call the name or phone number stored in the Voice Tag List. (See page 158 for details.)
- **Find Contact** to find an entry stored in your Contacts list. (See page 158 for details.)
- **International** to make an international call. (See page 161 for details.)

- **Phone Status** to notify you of your phone number, the coverage area, the current signal strength, and the battery level. (See page 165 for details.)
- **Tools** to select additional commands from Digit Training, Add Voice Tag, Review Voice Tag, or Erase Voice Tag.
- **Help** to get instructions for Automatic Speech Recognition for available commands. (See page 165 for details.)
- **Ready Link** to place a Ready Link call from the Sprint PCS Ready Link List. (See page 162 for details.)

Tip: You can also activate Automatic Speech Recognition by pressing and holding **TALK** or **SPEAKER**. Say onscreen commands to continue.

Note: If your phone is unable to recognize an ASR command after three attempts, an error message will appear on the display and the phone will return to standby mode.

Note: Use the Automatic Speech Recognition feature in a quiet environment to correctly recognize your voice.

Making a Voice Call by Using ASR

With ASR, you can make a voice call by speaking a name, phone number, or using a voice tag.

To make a voice call by speaking a name:

1. Press  to activate the Command menu.
2. Say “**Contact**” to your phone.
3. Say the full name of a contact in your Contacts list (e.g., “John Jones”).
4. Say the label you’d like to call (e.g., “Mobile”).

Shortcut: To execute several commands at a time, you can also say several commands continuously (e.g. “Contact, John Jones, Mobile”).

5. The phone will automatically place a call if it recognizes your voice.
6. When you are finished, press .

Note: If the phone does not recognize the name, the phone will find the closest match in your Contacts list and display a list of up to three names. You will hear the voice prompt “Did you say...” followed by the matched name. You can confirm the name by saying “Yes,” or change the selection by saying “No.”

Tip: During ASR operation, you can also select your desired items by using the navigation key or pressing available softkeys on the display.

To make a call by speaking a phone number:

1. Press **[Mute]** to activate the Command menu.
2. Say “**Dial Number**” to your phone.
3. Say the digits of the phone number using a natural voice.

Shortcut: You can also say “Dial Number” followed by the number you want to call.

4. The phone automatically places the call if it recognizes your voice.
5. When you are finished, press **[END/0]**.

Note: If the phone does not recognize the number, the phone will find the most likely match number and display a list of up to three numbers. You will hear the voice prompt “Did you say...” followed by the matched number. You can confirm the number by saying “Yes,” or say “No” to change the selection.

Finding Contacts List Entries

This feature allows you to find the entry in your Contacts list by saying the name.

To find a contact in the Contacts list:

1. Press **Ⓜ** to activate the Command menu.
2. Say “**Find Contact**” to your phone.
3. Say the full name of a contact in your Contacts list (e.g., “John Jones”).
4. The phone will display the contact details for the recognized name.
5. To make a call, select the desired number from the list by using your navigation key and press **TALK** or **SPEAKER**.

Making a Call Using a Voice Tag

With a voice tag you record, your phone will automatically dial a phone number. Your phone can store up to 20 voice tags. (To create a voice tag, see “Programming a Voice Tag” on page 159.)

To make a call by using a voice tag:

1. Press **Ⓜ** to activate the Command menu.
2. Say “**Call Voice Tag**” to your phone.
3. Say your recorded voice tag.
4. The phone automatically places the call if it recognizes your voice.
5. When you are finished, press **END/Ⓚ**.

Programming a Voice Tag

To program a voice tag:

1. Press **⌘** to activate the Command menu.
2. Say “**Tools.**”
3. Say “**Add Voice Tag.**”
4. Say the digits of the phone number.
5. Say “**Yes**” to confirm or “**No**” to cancel.
6. Say the name you want to add.
7. Respond to the prompt by repeating the name after the beep. (You will hear a confirmation that voice tag has been successfully saved.)

Tip: Record voice tags in a quiet environment.

Reviewing Voice Tags

To review voice tags:

1. Press **⌘** to activate the Command menu.
2. Say “**Tools.**”
3. Say “**Review Voice Tag.**” (A review list will display and you will hear all of the names and phone numbers saved in the voice tag list.)

Tip: During step 3 above, you can make a call to the highlighted number by pressing **TALK** or **SPEAKER**.

Erasing a Voice Tag

To erase a voice tag:

1. Press  to activate the Command menu.
2. Say “**Tools.**”
3. Say “**Erase Voice Tag.**”
4. Say the name you want to erase from your voice tag list. (The name will be repeated and you will be asked to verify it.)
5. Say “**Yes**” to confirm or “**No**” to cancel. (You will hear a confirmation that the voice tag has been successfully erased.)

Tip: You can erase all voice tags through your phone’s Settings menu (see “Erasing All Voice Tags” on page 93).

Making International Calls by Using ASR

Your phone's ASR Dialing feature can dial the international access code when you are traveling outside of the United States.

To make international calls by using ASR:

1. Press **[Voice Assistant]** to activate the Command menu.
2. Say “**International.**”
3. Say the digits of the country code.
4. Say the digits of the phone number.
5. The phone automatically places the call if it recognizes your voice.
6. When you are finished, press **[END/⓪]**.

Note: If the phone does not recognize the country code/number, the phone will find the most likely match code/number and display a list of up to three numbers. You will hear the voice prompt “Did you say...” followed by the matched code/number. You can confirm the number by saying “Yes,” or say “No” to change the selection.

Making a Sprint PCS Ready Link Call by Using ASR

You can place a Sprint PCS Ready Link call by using automatic speech recognition from your Sprint PCS Ready Link List. To make a Sprint PCS Ready Link Call, your phone's Sprint PCS Ready Link mode must be set to Enable (see “Setting Sprint PCS Ready Link Mode” on page 230 for details).

To make a Sprint PCS Ready Link Call:

1. Press  to activate the Command menu.
2. Say “**Ready Link.**” (The Command menu of your Sprint PCS Ready Link List will display.)
3. Choose from one of the following options:
 - **Contact** to place a Sprint PCS Ready Link call from the Personal List.
 - **Group** to place a Sprint PCS Ready Link call from the Personal Groups.
 - **Company Contact** to place a Sprint PCS Ready Link call from the Company List (if applicable).
 - **Company Group** to place a Sprint PCS Ready Link call from the Company Group List (if applicable).
 - **Dial Number** to place a Sprint PCS Ready Link call by speaking a number.
 - **Phone Status** to notify you of your phone number and the signal strength.
 - **Help** to activate the Automatic Speech Recognition instruction for Ready Link calls.

4. Say “Contact,” “Group,” “Company Contact,” “Company Group,” or “Dial Number.”
5. Say the contact’s name in your Sprint PCS Ready Link List or the digits of the phone number. (Wait for the prompt.)
6. Respond to the prompt by saying the name or group name.
 - To place the call, press **XXXX**. (See “Making and Receiving a Sprint PCS Ready Link Call” on page 233 for details.)

Tip: If you say “Contact” or “Dial Number” during step 4 above, you can say following commands continuously (e.g., “Contact, John Jones” or “Dial Number, 999-999-9999”).

Tip: To redial the last Sprint PCS Ready Link call by using ASR with the flip open, press and hold **XXXX** on the side of your phone.

Tip: You can also make a Sprint PCS Ready Link call to Contact, Group, and dialed number by using ASR with the flip closed. Press and hold **XXXX**, and follow the voice prompts.

Using Digit Training

This feature allows you to train the phone to recognize your voice when speaking a phone number. You can get better recognition accuracy by programming your intonation pattern into your phone.

To program Digit Training:

1. Press **⌘** to activate the Command menu.
2. Say “Tools.”
3. Say “Digit Training.”
4. Say “Start” or press **Start** (left softkey) to start programming.
5. Follow the voice prompts and recite the digits into your phone’s microphone. (A voice prompt will indicate the current rate of adaptation.)
6. Respond to the voice prompt repeatedly until adaptation is complete. (When you are finished training, you will hear a confirmation that the adaptation has been successfully completed.)

Note: Try digit training in a quiet environment for the best results. When you train, make sure you speak clearly and distinctly in your natural voice.

To activate Digit Training:

1. Press **⌘** to activate the Command menu.
2. Say “Tools.”
3. Say “Digit Training.”
4. Say “On” or press **On** (right softkey) to activate the existing data. (A voice prompt will announce the activation of digit training.)

To deactivate Digit Training:

1. Follow steps 1-3 on the previous page.
2. Say “**Off**” or press **Off** (right softkey) to deactivate the existing data. (A voice prompt will announce the deactivation of digit training. The adaptation returns to its default setting.)

Phone Status Command

This feature uses a voice prompt to tell you your phone number and current signal strength.

To activate Phone Status Command:

1. Press  to activate the Command menu.
2. Say “**Phone Status.**” (You will hear your phone number, the coverage area, the current signal strength, and the battery level.)

ASR Help Command

This feature will help you learn the basics of using automatic speech recognition.

To activate Help Command:

1. Press  to activate the Command menu.
2. Say “**Help.**” (You will hear a brief summary of available automatic speech recognition commands.)

Using the Voice Recorder

This feature allows you to record voice data in standby mode. Your phone can store up to 20 voice recordings and the total available recording time is 5 minutes.

Tip: If you haven't signed up for Sprint PCS Ready Link service and Ready Link mode is set to **Disable** (see page 230), you can use the Ready Link/Recorder button () as a Voice Recorder button in standby mode.

Displaying the Voice Recorder Menu

To display the voice recorder menu:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services** ()
4. Select **Voice Recorder** ()

Shortcut: You can also display the voice recorder menu by pressing Ready Link/Recorder button () in standby mode. (This shortcut becomes available when you disable Sprint PCS Ready Link mode.)

Recording a Voice Memo

To record a voice memo:

1. From the voice recorder menu, select **Record** () or **Record:Speaker** ()
2. Start recording after the beep.
 - Press **Pause** (right softkey) to pause the recording. To restart recording, press **Record** (right softkey).
3. To finish recording, press ,  Back, or .

To set the audio quality:

1. Display the voice recorder menu (see page 166).
2. Highlight **Record** or **Record:Speaker** and press **Settings** (right softkey).
3. Select **Audio Quality**.
4. Select **High** or **Low**.

Note: When Audio Quality setting is High, the total recording time will be reduced.

Recording a Voice Memo in the miniSD Card

To record a voice memo in the miniSD card:

1. From the voice recorder menu, select **Auto Save to** ().
 - **Phone** to save the voice recording to your phone.
 - **miniSD** to save the voice recording to the miniSD.
 - **Switch w/Card** to save the voice recording to the miniSD when the miniSD card is inserted and to your phone when the miniSD card is not inserted.
2. Select **miniSD**.
3. To start recording, follow the steps 1-3 in “Recording a Voice Memo” on page 166.

Note: The maximum number of files that can be stored and managed in the Voice folder on a miniSD is 1000 files.

Playing Voice Recordings

To play individual or all voice recordings:

1. From the voice recorder menu, select **Play** (DEF 3) or **Play:Speaker** (GHI 4).
2. Select **Voice Data** (M 1).
 - Select **miniSD** (DEF 3) if you want to play the voice recordings saved in the miniSD. (The miniSD option appears when the miniSD is inserted.)
3. Highlight your desired recording from the list or highlight **All** if you want to play all voice recordings continuously.
4. Press **Play** (left softkey) to play the recordings.
 - Press **Speed** (left softkey) to change the playing speed.
 - Press **Pause** (right softkey) to pause. To restart, press **Play** (right softkey).

To play selected voice recordings:

1. Follow steps 1-2 above.
2. Check the box(es) next to the voice recordings by pressing **MENU OK** and press **Options** (right softkey).
3. Highlight **Play Selected** and press **MENU OK** to play the selected recordings.

Tip: Press and hold the navigation key right to fast-forward the recording; press and hold the navigation key left to fast-rewind.

Voice Recording Options

To display the voice recording options:

1. From the voice recorder menu, select **Play** (DEF 3) or **Play:Speaker** (GHI 4).
2. Select **Voice Data** (M 1).
3. Select your desired voice recording and press **Options** (right softkey) to display options.
4. To select an option, highlight it and press **MENU OK**.
 - **Speaker On** or **Speaker Off** to switch speakerphone mode on or off.
 - **Play Selected** or **Play All** to play the selected or all the voice recordings.
 - **Display/Edit** to select an option from the following:
 - **Edit Title** to edit the data title.
 - **Data Info** to display information about the data such as recorded time and size, etc.
 - **Sort by** to sort the data by recorded time, name, or size.
 - **Go to Time** to set the starting point of the recordings. Enter the time you want to start, and press **OK** (left softkey).
 - **Go to miniSD** to access the Voice folder in the miniSD (if available).
 - **Copy to miniSD** to copy the phone's voice recordings to the miniSD (if available).
 - **Move to miniSD** to move the phone's voice recordings to the miniSD (if available).
 - **Erase** or **Erase All** to erase the selected or all the voice recordings.

Note: You must have a miniSD card inserted to view the miniSD options.

miniSD Voice Folder Options

There are also several user options available for managing voice recordings stored on the miniSD card.

To display the miniSD Voice folder options:

- ▶ Access the Voice folder in the miniSD (see page 188) and press **Options** (right softkey). To select an option, highlight it and press .
- **Speaker On** or **Speaker Off** to switch speakerphone mode on or off.
- **Play Selected** or **Play All** to play the selected or all the voice recordings.
- **Display/Edit** to edit the title, display data info, or sort the data.
- **Go to Time** to set the starting point of the recordings.
- **Go to Phone** to access the phone's voice data folder.
- **Erase** or **Erase All** to erase the selected or all the voice recordings.

Setting the Recording Guard

With this feature, you can record voice recordings without any interruption such as incoming calls.

To set the recording guard:

1. From the voice recorder menu, highlight **Record** or **Record:Speaker** and press **Settings** (right softkey).
2. Select **Recording Guard**.
3. Select **On** or **Off**.

While Recording Guard is on, your phone's standby screen will display "Phone Off".

Erasing Voice Recordings

To erase an individual voice recordings saved in the phone:

1. From the voice recorder menu, select **Play** (DEF 3) or **Play:Speaker** (GHI 4).
2. Select **Voice Data** (MNO 1).
3. Press **MENU OK** to check the box(es) next to the voice recording and press **Options** (right softkey).
4. Select **Erase**.
5. Select **Yes**.

To erase all voice recordings saved in the phone:

1. From the voice recorder menu, select **Erase All** (MNO 6).
2. Select **Voice Data** (MNO 1).
3. Select **Yes**.

Tip: If you select **All** during step 2 above, you can erase all recordings (voice recordings and call memos) saved in the phone.

Recording Call Memos

You can use your phone's Voice Services to record the other party's voice during a phone call.

To record a call memo:

1. During a call, press **Options** (right softkey).
2. Select **Tools**.
3. Select **Voice Services** (☒ 1).
4. Select **Call Memo** (☒ 1).
5. Select **Record** (☒ 1).
6. Start recording after the beep.
7. To finish recording, press  or  Back .
 - Recording also stops when the call is disconnected.

Note: Your phone can store up to 12 call memos and the total available recording time is 72 seconds (maximum of 18 seconds per memo).

Tip: Call memos are stored with the date and time stamp in reverse chronological order.

Reviewing Call Memos

To play the call memos you have recorded:

1. From the voice recorder menu, select **Play** (DEF 3) or **Play:Speaker** (GHI 4).
2. Select **Call Memo** (ABC 2).
3. Select one memo from the list.
– or –
If you want to play all of the memos continuously, select **All**.
4. Press  to stop playing.
 - Press **Slow** (left softkey) or **Fast** (right softkey) to change the playing speed.
 - To play a more recent or older memo, press the navigation key right or left.

Tip: To set the speakerphone mode on or off, press **Options** (right softkey), highlight **Speaker On/Off**, and press  during step 3 above.

Erasing Call Memos

To erase an individual call memo:

1. From the voice recorder menu, select **Play** (DEF 3) or **Play:Speaker** (GHI 4).
2. Select **Call Memo** (ABC 2).
3. Select the memo you want to erase and press **Options** (right softkey).
4. Highlight **Erase** and press **MENU OK**.
5. Select **Yes**.

To erase all call memos:

1. From the voice recorder menu, select **Erase All** (MNO 6).
2. Select **Call Memo** (ABC 2).
3. Select **Yes**.

Setting Up Screen Call

This feature enables you to screen incoming calls by using a recorded announcement, either one that is pre-recorded or one that you record.

Activating Screen Call

To start Screen Call when you have incoming calls:

1. When the phone rings or vibrates, press **Options** (right softkey) to display the options.
2. Highlight **Screen Call** and press .

To set Auto Screen Call:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services** ( **1**).
4. Select **Screen Call** (.
5. Select **Auto**.
6. Select **On**.
7. Set the answering time by using numeric keys or by pressing the navigation key up or down.
8. Press . (The  icon is displayed on the standby display.)

Tip: If a new caller's message is waiting, the  icon appears on the display. The memos recorded while activating "Screen Call" are shown with the  or  icon in the Call Memo list (: once played, : not played yet). To listen to the message, see "Reviewing Call Memos" on page 174.

Tip: While the caller's message is being recorded, press  to answer the call, or press  to stop recording and disconnect the call.

Selecting an Announcement for Screen Call

To select a Screen Call announcement:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services** ( **1**).
4. Select **Screen Call** ( **2**).
5. Select **Announcement**.
6. Depending on your preference, select **Pre-Recorded** ( **1**) or **Custom** ( **2**).

Recording Your Name for a Pre-Recorded Announcement

You can use a pre-recorded announcement with or without your name. If you record your name, your phone uses your name recording to announce that you are not available to answer the call.

To record your name:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services** ().
4. Select **Screen Call** ().
5. Select **Announcement**.
6. Highlight **Pre-Recorded** and press **Edit** (right softkey).
7. Highlight **Record Name** and press .
 - If your name has already been recorded, select **Yes** to overwrite the existing recording.
8. Press  to start the first recording.
9. Press  to stop recording.
10. After the first recording, press  again to start the second recording.
11. Press  to stop recording.

Tip: Recording terminates automatically in 12 seconds.

Recording a Customized Announcement

To record an announcement:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services** ( **1**).
4. Select **Screen Call** ( **2**).
5. Select **Announcement**.
6. Highlight **Custom** and press **Edit** (right softkey).
7. Highlight **Record** and press .
 - When an announcement has already been recorded, select **Yes** to overwrite the existing recording.
8. Press  to start the first recording.
9. Press  to stop recording.
10. After the first recording, press  again to start the second recording.
11. Press  to stop recording.

Reviewing an Announcement

To review an announcement:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services** ( **1**).
4. Select **Screen Call** ().
5. Select **Announcement**.
6. Highlight **Pre-Recorded** or **Custom** and press **Edit** (right softkey).
7. Highlight **Play** or **Play:Speaker** and press .

Erasing an Announcement

To erase an announcement:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Voice Services** ( **1**).
4. Select **Screen Call** ().
5. Select **Announcement**.
6. Highlight **Pre-Recorded** or **Custom** and press **Edit** (right softkey).
7. Select **Erase Name** to erase the name for a Pre-Recorded announcement and press .
– or –
Select **Erase** to erase the message for a Custom announcement and press .
8. Select **Yes**.

Using the miniSD Card

In This Section

- ◆ Using Your Phone's miniSD Card and the miniSD Adapter
 - ◆ miniSD Settings
 - ◆ miniSD Files
 - ◆ Playing Media Player in the miniSD
 - ◆ Setting Up the Digital Print Order Format
 - ◆ Printing Pictures Directly From Your Phone
 - ◆ Connecting Your Phone to Your PC
-

Your MM-9000 by Sanyo allows you to use the miniSD card and its adapter to expand the phone's available memory space. This highly secure digital card enables images, music, and voice data to quickly and easily be exchanged among SD-compatible devices.

This section details the features and options of your phone's miniSD functionality.


Using Your Phone's miniSD Card and the miniSD Adapter

Using the miniSD Card

Your Sprint Power Vision Multimedia Phone is equipped with a 16MB miniSD (Secure Digital) memory card and its adapter to expand the phone's available memory space. It allows you to easily store images, music, and voice data in your phone.

Inserting the miniSD Card

1. Open the miniSD card slot by lifting the cover upward. Hold the miniSD card with the label side facing up and the notched corner on the right.
2. Insert the card by sliding it into the slot and gently press down until it snaps into place.
 - Once you have inserted the miniSD card, your phone displays the  icon.
3. Close the slot cover.

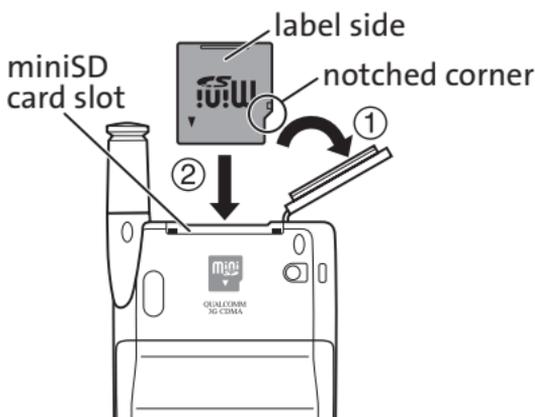

Important Note: Be sure to use only recommended miniSD cards (16MB-1GB). Using non-recommended miniSD cards could cause data loss and damage your phone.


We recommend using miniSD cards listed below.

SANDISK: 16MB-1GB, PANASONIC: 16MB-256MB, TOSHIBA: 16MB-256MB, LEXAR: 32MB-128MB. (They have all been tested and verified to work properly as of June, 2005.)

Note: This phone does not support the miniSD card security function.

Removing the miniSD Card

1. To remove the card, make sure the power is off. Open the miniSD card slot by lifting the cover upward. Push the top of the card into the slot to unlock it.
2. Gently pull the card from its slot.
3. Close the slot cover.

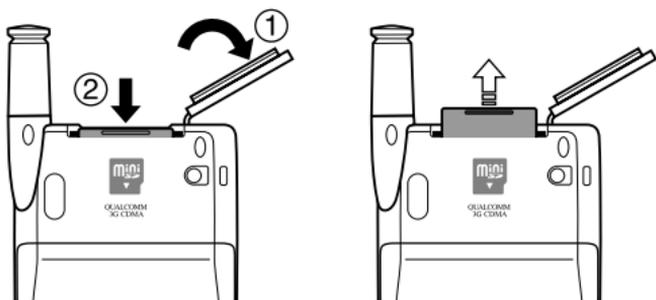

Note: The miniSD card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing, or handling them.

Note: The miniSD card slot cover may come off if forcibly pulled. If this occurs, simply place the cover back into its original position.

miniSD Icon Indications

When an included miniSD card is inserted in the phone, the following icon will appear at the top right of the screen. The miniSD icon does not appear unless a card is in the phone.

Status Icon	Meaning
-------------	---------



This icon indicates miniSD is inserted into your phone. It turns to green while miniSD is being accessed.

Note: DONOT remove a miniSD card while files are being accessed or transferred. It will result in loss or damage of data.


Note: Make sure your battery is fully charged before using the miniSD card. Your data may become damaged or unusable if the battery runs out while using the miniSD card.

Using the miniSD Adapter

The supplied miniSD adapter allows miniSD cards to be used in SD compatible devices. Before using the SD compatible host, you will need to insert the miniSD card into the miniSD adapter.

To insert the miniSD card into the miniSD adapter:

- ▶ With the label side of the miniSD card facing up, insert the card into the provided miniSD adapter and gently slide the card until it is fully inserted.

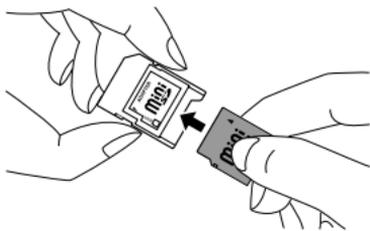


To remove the miniSD card from the miniSD adapter:

- ▶ Hold the front edge of the miniSD card and gently pull outward to remove it.



Important: To protect your vital data when using the miniSD adapter, lock the write-protect switch to prevent inadvertent overwriting of data.

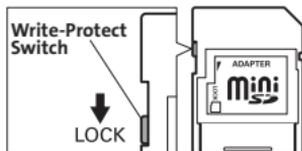

Note: When you are not using a miniSD card, make sure to replace the miniSD card slot cover.

miniSD Settings

Creating Folders in the miniSD Card

This feature allows you to create a basic folder in the miniSD card.

To create folders in the miniSD card:

1. With the miniSD inserted, press  to access the main menu.
2. Select **Tools**.
3. Select **miniSD** ( **0**).
4. Select **miniSD Settings** (.
5. Select **Create Folders** (). (The basic folders - Picture, Video, Voice, and Media - will be created in your miniSD card.)

Viewing Memory in the miniSD Card

With this feature, you can display the memory used and available in the miniSD card.

To view available memory space:

1. Follow steps 1-4 above to display the miniSD Settings menu.
2. Select **View Memory** ( **1**). (The available memory space displays.)

Formatting the miniSD Card

With this feature, you can easily remove all files stored in the miniSD card.

To format the miniSD card:

1. Follow steps 1-4 on the previous page to display the miniSD Settings menu.
2. Select **Format** (ABC 2).
3. If you're sure you want to format your miniSD card, select **Yes**.

Note: The formatting procedure erases all the data on the miniSD card and CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

Note: In some cases, the miniSD card formatted in a computer may not be recognized by the phone and cannot be formatted using your phone.

miniSD Files

Displaying the miniSD Files

You can view the data stored in the miniSD from the miniSD files.

To display the miniSD files:

1. With the miniSD inserted, press  to access the main menu.
2. Select **Tools**.
3. Select **miniSD** ( ).
4. Select **miniSD Files** ( **1**).
5. Select your desired folder (**Picture, Video, Voice, or Media**).
6. Use your navigation key to highlight and select an item you wish to view or play.

To display the miniSD files options:

- ▶ Please see one of the following:
 - “In Phone Folder and miniSD Files Options” on page 220.
 - “miniSD Voice Folder Options” on page 170.
 - “miniSD Media Folder Options” on page 191.

Note: The maximum number of files that can be stored in each folder on a miniSD card is 1000 files.

Warning! Exceeding the maximum number of files could cause damage to your miniSD card and void the warranty.

Playing Media Player in the miniSD

Your Sprint Power Vision Multimedia phone comes with a Media Player with easy-to-use playback features. It allows you to play video or audio clips wherever you go.

Playing a Video or Audio Clip in the miniSD

To access your media folder in the miniSD:

1. With the miniSD inserted, press  to access the main menu.
2. Select **Media Player**.
3. Select **miniSD** (.
4. Use your navigation key to scroll to the clip you would like to play and press **Select** (left softkey) or  to start playback.

Note: In some instances, you may not be able to play the media file on your phone when you add any sort of sound effects to your media file.

Playback Functions

To start or stop the playback:

- ▶ Use  or press the left softkey (**Pause or Play**) to pause or play.

To pause or restart the playback with the flip closed:

- ▶ Close the flip while playing a media file and press  to pause or restart.

To fast forward the playback:

- ▶ Press and hold the navigation key right until you reach the desired spot.

To rewind the playback:

- ▶ Press and hold the navigation key left until you reach the desired spot.

To play the previous/next media file:

1. Press the up or down navigation key while playing a media file. (You will see a list of media files.)
2. Highlight your desired file and press . (The file will also play automatically after 3 seconds of highlighting.)

To play the next media file with the flip closed:

- ▶ Close the flip while playing a media file and press the side camera key.

Adjusting the volume

- ▶ Press the side volume key up or down while playing a media file.

Selecting Play Mode

To select a play mode:

1. Access the Media folder in the miniSD (see page 188) and press **Options** (right softkey).
2. Select **Play Mode** and press .
3. Select your desired play mode and press .
 - **Single** will play the item you have selected.
 - **All** will play all the contents in the currently displayed media folder.
 - **Random** will random play all the contents in the currently displayed media folder.
 - **Repeat** will repeat the contents in the currently displayed media folder.
 - **All in this folder*** will play all the contents in the highlighted folder.
 - **Random in this folder*** will random play all the contents in the highlighted folder.(*Only appears when you have selected a folder in the media folder.)

miniSD Media Folder Options

To display the media folder options:

- ▶ Access the Media folder in the miniSD (see page 188) and press **Options** (right softkey).
 - **Media Listing** to display the media file list under the Media folder in miniSD.
 - **Channel Listing** to display the channel list.
 - **Info** to display the media file information (if available).
 - **Play Mode** to switch the play mode (see previous page).
 - **Player Skins** to select frames to display while playing clips.
 - **Original Size** to switch to the Original view mode.
 - **Enlarged View** to switch to the Enlarged view mode.
 - **Help** to see the Multimedia instruction page.
 - **Exit** to terminate the Media Player.

Note: The miniSD card and the phone's Media Player support the following file extensions: ".mp3", ".aac", ".mp4", ".3gp", ".3g2", ".m4a", ".qcp".

Setting Up the Digital Print Order Format

The Digital Print Order Format (DPOF) is a tool that allows you to set up your digital picture print orders in advance. You can use it to set options such as which pictures to print, the number of prints for each picture, and index printing settings.

To set up the DPOF:

1. With the miniSD inserted, press  to access the main menu.
2. Select **Tools**.
3. Select **miniSD** (.
4. Select **DPOF Print Order** (.
5. Select **Standard Print** () or **Index Print** (.
6. Press **Options** (right softkey) and select an option from the following.
 - **Select Picture** to select the pictures you want to print. (You may select up to 99 pictures.)
 - **Picture Info** to display the picture information.
 - **Unselect Picture** to unselect the picture you have selected.
 - **Set No. of Copies** to set the numbers of copies you want to print. (The maximum number of copies that you can select is 99 copies.)

7. When you have finished setting the print options, press **Save** (left softkey).
 - If you are setting the print options for standard prints, you will be prompted to choose whether to print the date. Select **Yes** or **No**. (Depending on your printer, some options may not be available.)

Note: You will only be able to print Exif JPEG files. Non-supported file formats on the miniSD card will be displayed as .

Clearing the DPOF Print Order

You can clear the DPOF Print Order for standard prints and index prints at the same time.

To clear the DPOF print order:

1. Follow the steps 1-4 on page 192 to access the DPOF Print Order menu.
2. Select **Clear Order** ()

Reviewing an Order Summary

To review an order summary:

1. Follow steps 1-4 on page 192 to access the DPOF Print Order menu.
2. Select **Order Summary** () (The printer setting details will display).
 - Press **Switch** (right softkey) to switch the display between Standard Print/Index Print.

Printing Pictures Directly From Your Phone

Your Sprint PCS Phone is PictBridge compatible, allowing you to print directly from your phone without connecting to a computer. Simply connect your phone to a PictBridge-enabled printer and enjoy printing your photos.

To print pictures directly from your phone:

1. Press  to access the main menu. (Make sure your phone is fully charged.)
2. Select **Tools**.
3. Select **USB Connection** (.
4. Select **PictBridge** (.
5. Select **Yes** (.
6. Connect your phone to the PictBridge-enabled printer by using the included USB cable. (Wait until the connection is completed.)
7. Select the print mode from **Default Printer**, **Standard Print**, **Index Print**, or **DPOF Print**.
 - If you have selected **DPOF Print**, select **Yes** to print. To set up the DPOF Print, see “Setting Up the Digital Print Order Format” on page 192.
8. Set the printer settings using your navigation key.
 - **Picture to Print:** You can select the picture from the In Phone folder or the miniSD. (You can select up to 99 pictures, however you can only select from one folder.)

- **Number of Copies:** You can set the number of copies (1-10). (You cannot specify number of copies when Index Print is selected.)
 - **Print Size:** You can set the print size from Default Printer, 4"x6", 5"x7", 8"x10", or Letter. (Print Size differs depending on the type of printer you have.)
 - **Date Stamp:** You can imprint the date on your pictures. Select **On** or **Off**. (Correct Date Stamp may not be placed depending on the type of printer you have.)
9. When you are finished selecting the printer settings, press **Print** (right softkey).
 10. When finished printing, press  or  Back.
 11. Select **Yes**. Follow the instructions on the display to unplug the USB cable from the phone.

Note: The Index Print mode lets you print out an index sheet of thumbnail pictures. You will only be able to print Exif JPEG files. Non-supported file formats on the miniSD card will be displayed as .

Note: While you are connected to the printer, your phone's screen will display "Phone Off." You cannot make or receive calls.

Note: Make sure your battery is fully charged before using the PictBridge.

PictBridge Error Messages: From time to time you may encounter printing problems. Any printer error messages will be displayed on your phone, informing you of the specific problems encountered. Please refer to the user's guide that came with your printer for descriptions, explanations, and possible resolutions for any error messages.

Connecting Your Phone to Your PC

Before using MM-9000's mass storage capabilities, you need to prepare your device's data services to synchronize with your desktop or laptop computer. Once the phone is connected to the PC, you can transfer your data in the miniSD card quickly and easily.

To connect your phone to your PC:

1. With the miniSD inserted, press  to access the main menu. (Make sure your phone is fully charged.)
2. Select **Tools**.
3. Select **USB Connection** (.
4. Select **Mass Storage** (.
5. Select **Yes** (.
6. Connect your phone to the PC by using the included USB cable. (Wait until the connection is completed.)
 - Once plugged into the USB port, the Mass Storage Device is detected by the host computer.
7. When you have finished, click on the USB device icon on your computer's task bar and follow the instructions provided to safely unplug the USB cable. (The process may vary depending on the PC.)

Reminder: No driver installation is required for Windows 2000/ME/XP users. If you use Windows 98/98SE, you have to download and install the USB Mass Storage Driver from the Sprint Web site at www.sprint.com.

Note: We recommend using Windows 2000/ME/XP. MM-9000 only guarantees the operation on the operating systems mentioned above.

Note: To avoid loss of data, **DONOT** remove the USB cable, the miniSD card or the battery while files are being accessed or transferred.

Note: Make sure to follow the proper procedure (step 7 on the previous page) when you disconnect the USB cable. Your computer may no longer detect your handset when you disconnect it several times improperly.

Note: **DONOT** change or edit the folder/file name in the miniSD card via the computer or attempt to transfer large amounts of data from the computer to the miniSD card. It may result in miniSD card failure.

Note: **DONOT** turn off, put into standby mode or restart your computer while using the Mass Storage Device. It will result in loss or damage of data.

Note: While you are connected to the computer, your phone's screen will display "Phone Off." You cannot make or receive calls.

Note: When you connect a Mass Storage device to a peripheral device, your device may not work properly.

Note: Fixed folders are displayed when you access to the miniSD via your computer. Your data is sorted as follows:

DCIM folder: pictures, videos

EPM folder: additional information of the data in DCIM folder

MEDIA folder: Media Player data

MISC folder: DPOF data

Voice folder: voice data

Using Your Phone's Built-in Camera

In This Section

- ◆ Taking Pictures
 - ◆ Recording Videos
 - ◆ Storing Pictures and Videos
 - ◆ Sending Sprint PCS Picture Mail™
 - ◆ Managing Sprint PCS Picture Mail
-

Your Sprint PCS Phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends. It's fun and as easy to use as a traditional point-and-click camera: just take a picture, view it on your phone's display, and send it from your phone to up to 25 people.

This section explains the features and options of your Sprint PCS Phone's built-in camera.

Taking Pictures

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.

To take a picture with the phone open:

1. Press  to access the main menu.
2. Select **Pictures** to access the Picture and Video menu.
3. Select **Camera** to activate camera mode. (Additional camera options are available through the camera mode **Options** menu. See “Camera Mode Options” on page 203 for more information.)

Shortcut: To activate camera mode, you can also press  twice.

4. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
5. Press **Capture** (left softkey), , , or the side camera key until the shutter sounds.

Tip: The taken picture is automatically saved in your selected storage area. (See “Selecting the Storage Area” on page 217 for details.)

6. Press **Next** (right softkey) for more options:
 - **Take New Picture** to return to camera mode to take new picture.
 - **Send to Contacts** to send your picture. (See page 222 for details.)

- **Order Prints** to order prints of the pictures. You can select to receive prints by mail or at retail store.
- **Post to Services** to access to the available services. Select **Update** to display the latest services.
- **Upload** to upload the picture you just took to the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail).
- **Review Media** to go to the My Albums menu.
- **Delete** to delete the picture you just took.
- **Set as** to assign the picture. Select your desired option and press .
- **Details/Edit** to edit or display your picture's details.

To take a picture with the phone closed:

1. Press the side camera key to activate the launch menu.
2. Select **Camera**.
3. Point the camera lens at your subject. (You can check the picture framing through the external display screen.)

Note: When taking a picture with the phone closed, the subject image appears in reverse on the external display. The captured image will not be saved in reverse.

4. Press the side camera key to take the picture.

Creating Your Sprint PCS Picture MailSM Password

The first time you use any of the picture management options involving the Sprint PCS Picture Mail Web site, you will need to establish a Sprint PCS Picture Mail password through your Sprint PCS Vision Picture Phone. This password will also allow you to sign in to the Sprint PCS Picture Mail Web site at www.sprint.com/picturemail to access and manage your uploaded pictures and albums.

To create your Sprint PCS Picture Mail password:

1. Press  to access the main menu.
2. Select **Pictures** to access the Picture and Video menu.
3. Select **My Albums**.
4. Select **Online Albums**. (You will be prompted to create a Sprint PCS Picture Mail password.)

Note: If your Sprint PCS Service Plan does not include Sprint PCS Picture Mail, you will be prompted to subscribe to the service for an additional monthly charge.

5. Enter your password and press . (You will be prompted to confirm your password.)
6. Please wait while the system creates your account.

Tip: Write down your Sprint PCS Picture Mail password in a secure place.

Once you have received confirmation that your account has been successfully registered, you may upload and share pictures and access the Sprint PCS Picture Mail Web site.

Camera Mode Options

When the phone is open and in camera mode, press **Options** (right softkey) to display additional camera options:

- **Picture Mode** to select picture mode from **Normal**, **Beach/Snow**, **Scenery**, **Soft Focus**, **Mirror Image**, **Night/Dark**, or **Sharp**.
- **Flash** to activate the flash. (See “Setting the Flash” on page 205 for details.)
- **Zoom** to zoom in on a subject. (See “Using the Zoom” on page 207 for details.)
- **Self-Timer** to activate the camera’s timer. (See “Setting the Self-Timer” on page 205 for details.)
- **Fun Tools** to select an option from the following:
 - **Stitch Shot** to take a stitch shot by stitching separate images together (see page 206).
 - **Fun Frames** to select your favorite fun picture frame to decorate your picture.
 - **Color Tone** to select a wide variety of color tones for the picture.

Note: Stitch Shot and Fun Frames are not available when the resolution setting is 1.3M (see “Selecting Camera Settings” on page 209 for details).

- **Image Controls** to select an option from **Brightness** or **White Balance**.
- **Camera Settings** to select your settings. (See “Selecting Camera Settings” on page 209 for details.)
- **Review Media** to go to the My Albums menu.

- **Camcorder Mode** to switch to video mode. (See “Recording Videos” on page 211 for details.)
- **Key Guidance** to indicate the key functions in camera mode.
- **My Favorite Settings** to select your favorite setting. (See “Setting Your Favorite Mode” on page 208.)

Using the Macro/Normal Switch

The macro/normal switch located on the front of the phone allows you to take close-up shots. Slide the macro/normal switch to switch between Normal and Macro (close-up) modes. When you select Macro mode, the  icon appears on the display.



Note: After using the camera for close-up shots (“Macro” mode), it is important to switch the camera back to the “Normal” setting.

Note: Placing the switch in between the macro and normal setting may result in out-of-focus images. For best results, slide the switch completely to one end or the other.

Setting the Flash

To activate the flash:

1. From camera mode, press **Options** (right softkey).
2. Highlight **Flash** and press .
3. Select your desired option and press .

Note: While the phone is open and in camera mode, press  **1** to switch between flash modes.

Setting the Self-Timer

To activate the self-timer:

1. From camera mode, press **Options** (right softkey).
2. Highlight **Self-Timer** and press .
3. Highlight the length of delay you want the timer to use (**10 Seconds** or **5 Seconds**) and press 
 - To deactivate the self-timer, highlight **Off** and press .
4. Press **Start** (left softkey) when you are ready to start the timer. (The  icon appears on the upper right portion of the main LCD during the self-timer countdown.)
5. Get ready for the picture. (When the timer is down to three seconds, the self-timer icon will turn red and the phone will begin to beep.)

To cancel the self-timer after it has started:

- ▶ Press **Cancel** (right softkey).

Note: While the self-timer is active, all keys are disabled except , and **Cancel** (right softkey)  **Back**.

Taking Stitch Shots

Stitch shot allows you to stitch separate images together. With this feature, your phone's viewfinder is divided in two and you can shoot each part separately. When you shoot the first part, the camera displays a section of the previous part, so you can line up the next picture with the first one.

To take a stitch shot:

1. From camera mode, press **Options** (right softkey).
2. Highlight **Fun Tools** and press .
3. Highlight **Stitch Shot** and press .
4. Select **Vertical** or **Horizontal** and press 
 - Use your navigation key to switch the stitch display.
5. To take the first picture, press  .
6. To take the second picture, press  .

Note: This option is not available when the resolution setting is 1.3M (see page 209).

Using the Zoom

This feature allows you to zoom in on an object when you take a picture. You can adjust the zoom from 1x to 20x.

To use the zoom:

1. From camera mode, press the navigation key right or left, or the Side Volume key up or down to adjust the zoom. (The gauge bar appears.)
2. Press **Capture** (left softkey), , , or the side camera key to take the picture. (The picture will automatically be saved to your selected storage area.)

Using the Mini-Flashlight

This function allows you to use the phone's camera flash as a miniature flashlight. To use this function, your phone must be in standby mode with the Side Key Guard unlocked. (See page 82 for the Side Key Guard.)

To use the mini flashlight:

- ▶ With the flip closed and in standby mode, press and hold the Side Volume key () . (The light remains on for 8 seconds.)

Note: This function doesn't apply when a Missed Call or Notification is displayed.

Setting Your Favorite Mode

With your Sprint Power Vision Multimedia Phone, you can customize various camera settings. This feature allows you to save your favorite setting.

To set your favorite mode:

1. From camera mode, select your favorite setting. (See page 203 for Camera mode options and see “Selecting Camera Settings” on page 209.)
2. Press **Options** (right softkey).
3. Highlight **My Favorite Settings** and press .
4. Select an unassigned number and press **Add** (right softkey).
5. Select **Yes**.
6. Enter a title and press .

Tip: You can also set your favorite mode for camcorder settings. Set your favorite setting in video mode and follow steps 2-6 above.

Selecting Camera Settings

To select your camera settings:

1. From camera mode, press **Options** (right softkey).
2. Highlight **Camera Settings** and press .
3. Select an option from the following.
 - **Resolution** to select a picture's file size (**1.3M-960x1280**, **Medium-480x640**, or **Low-240x320**).
 - **Quality** to select the picture quality setting (**Fine**, **Normal**, or **Economy**).
 - **Shutter Sound** to select a shutter sound. (See “Setting the Shutter Sound”.)
 - **Status Bar** to switch the status bar display on or off.

Setting the Shutter Sound

To select the Shutter Sound:

1. From camera mode, press **Options** (right softkey).
2. Select **Camera Settings**.
3. Select **Shutter Sound**.
4. Select an option from the following.
 - **Default** plays the default shutter sound.
 - **Say “Cheez”** plays a recording of the phrase “Say Cheez.”
 - **“Ready”** plays a recording of the word “Ready.”
 - **Off** makes no sound.
 - **Record Your Own** allows you to record your own voice. Press  to display options and select **Record**. Press  to start recording. (Maximum recording time is 3 seconds.) To save the recording, press **Save** (right softkey).

Camera Icon Indication

Function		Icons	Details
Storage Area	In Phone		Appears when the storage destination is your phone.
	In miniSD		Appears when the storage destination is miniSD.
Flash	On This Shot		To use the flash for only one shot.
	On Always		To use a flash every time you take a picture.
	Auto		To use the auto flash function.
Picture Mode	Beach/Snow		Use this setting in bright light.
	Scenery		Use this setting for scenery from a distance.
	Soft Focus		Use this setting to “soften” the picture.
	Mirror Image		Use this setting to take a mirror image.
	Night/Dark		Use this setting in low light.
	Sharp		Use this setting to “sharpen” the picture.
White Balance	Sunny		Use this setting for sunny weather.
	Cloudy		Use this setting for cloudy weather.
	Tungsten		Use this setting for standard household lighting.
	Fluorescent		Use this setting for fluorescent lighting.
	Manual		For the manual setting of white balance.
Brightness	Manual		For the manual setting of brightness.
Resolution	1.3M		For 1.3 Megapixel picture resolution.
	Medium		For medium picture resolution.
	Low		For low picture resolution.
Macro Mode (Close-up)			Use this setting for close-up shots.

Recording Videos

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your phone's built-in video camera.

To record a video:

1. Press  to access the main menu.
2. Select **Pictures** to access the Picture and Video menu.
3. Select **Camcorder** to activate video mode. (Additional video options are available through the video mode **Options** menu. See “Video Mode Options” on page 213 for more information.)
4. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
5. Press **Record** (left softkey), , , or the side camera key to begin recording.
6. Press , **Stop** (right softkey), or the side camera key to stop recording.

Tip: The recorded video is automatically saved in your selected storage area. (See “Selecting the Storage Area” on page 217 for details.)

7. Press **Next** (right softkey) for more options:
 - **Take New Video** to return to video mode to take another video.
 - **Play** to play the video you just took.
 - **Send to Contacts** to send your video. (See page 222 for details.)

- **Post to Services** to access to the available services. Select **Update** to display the latest services.
- **Upload** to upload the video you just took to the Sprint PCS Picture Mail Web site.
- **Review Media** to go to the My Albums menu.
- **Delete** to delete the video you just took.
- **Set as** to assign the video. Select your desired option and press .
- **Details/Edit** to display phone information, edit your video's caption, or select the video size.

To take a video with the flip closed:

1. Press the side camera key to activate the launch menu.
2. Select **Camcorder**.
3. Point the camera lens at your subject. (You can check the video framing through the Sub LCD.)

Note: When taking a video with the phone closed, the subject image appears in reverse on the external display. The captured image will not be saved in reverse.

4. Press the side camera key to start recording.
5. Press the side camera key to stop recording.

Video Mode Options

Several options are available from video mode.

Press **Options** (right softkey) to display additional options:

- **Video Mode** to select video mode from **Normal**, **Beach/Snow**, **Scenery**, **Soft Focus**, **Mirror Image**, or **Night/Dark**.
- **Video Light** to select a Video Light setting. Select **On** to light the video light.
- **Zoom** to zoom in on an object. You can adjust the zoom from 1x to 20x.
- **Self-Timer** to activate the timer function. (See “Setting the Self-Timer” on page 205 for details.)
- **Fun Tools** to select an option from the following:
 - **Color Tone** to select a wide variety of color tones for your video.
 - **Fade Shot** to select fade shot setting (see page 215).
- **Image Controls** to select an option from **Brightness** or **White Balance**.
- **Camcord.Settings** to select your settings. (See “Selecting Camcorder Settings” on page 214 for details.)
- **Review Media** to go to the My Albums menu.
- **Camera Mode** to switch to camera mode (if applicable).
- **Key Guidance** to indicate the key functions in video mode.
- **My Favorite Settings** to select your favorite setting. (See “Setting Your Favorite Mode” on page 208.)

Selecting Camcorder Settings

To select your camcorder settings:

1. From video mode, press **Options** (right softkey).
2. Highlight **Camcord.Settings** and press .
3. Select an option from the following.
 - **Resolution** to select a file size (**Good-176x144** or **Medium-128x96**) for a video.
 - **Quality/Length** to select video quality from **Economy-30sec.**, **Normal-20sec.**, **Rich-15sec.**, or **Rich-120min. miniSD**.
 - **Silent Movie** to select **On** to record without sounds. Select **Off** to deactivate this feature.
 - **Cue Sound** to select a cue sound. (See “Setting the Cue Sound” on page 215 for details.)
 - **Enlarged View** or **Normal Size** to switch the view size.
 - **Player Skins** to select your favorite frame.
 - **Status Bar** to switch the status bar display on or off.

Note: Recording time varies depending on the **Quality/Length** setting.

Setting the Cue Sound

To select the Cue Sound:

1. From video mode, press **Options** (right softkey).
2. Highlight **Camcord.Settings** and press .
3. Select **Cue Sound**.
4. Select an option from the following.
 - **Default** plays the default cue sound.
 - **“Action & Cut”** notifies you with the pre-recorded words.
 - **“Ready & Stop”** notifies you with the pre-recorded words.
 - **Off** makes no sound.
 - **Record Your Own** allows you to record your own voice for a cue sound. Select **Start Sound** or **End Sound**. Select **Record** and press  to start recording. (Maximum recording time is 3 seconds for each setting.)

Selecting Fade Out settings

This feature allows you to record videos with fade out.

To select the fade out setting:

1. From video mode, press **Options** (right softkey).
2. Highlight **Fun Tools** and press .
3. Highlight **Fade Shot** and press .
4. Select **Fade Out**.
5. Select **White, Black, or Wipe**.

Video Icon Indication

Function		Icons	Details
Storage Area	In Phone		Appears when the storage destination is your phone.
	In miniSD		Appears when the storage destination is miniSD.
Video Light			Appears when the video light setting is on.
White Balance	Sunny		Use this setting for sunny weather.
	Cloudy		Use this setting for cloudy weather.
	Tungsten		Use this setting for standard household lighting.
	Fluorescent		Use this setting for fluorescent lighting.
	Manual		For the manual setting of white balance.
Brightness	Manual		For the manual setting of brightness.
Video Mode	Beach/Snow		Use this setting in bright light.
	Scenery		Use this setting for scenery from a distance.
	Soft Focus		Use this setting to "soften" the picture.
	Mirror Image		Use this setting to take a mirror image.
	Night/Dark		Use this setting in low light.
Fade Shot	Fade Out		Appears when the "Fade Out" setting is on.
Resolution	Good		For good video resolution.
	Medium		For medium video resolution.
Silent Movie	On		Appears when the silent movie setting is on.
	Off		Appears when the silent movie setting is off.
Macro Mode (Close-up)			Use this setting for close-up shots.

Storing Pictures and Videos

There are three types of storage areas for your pictures and videos that can be used separately according to your needs:

- **In Phone** (see page 218)
- **miniSD** (see page 219)
- **Online Albums** (see page 227)

Selecting the Storage Area

When you take pictures and videos, you can choose to save them directly to your phone or to the miniSD card.

To select the storage area:

1. Press  to access the main menu.
2. Select **Pictures**.
3. Select **Settings & Info**.
4. Select **Auto Save to**.
5. Select your desired storage area:
 - **In Phone** to save pictures and videos to your phone.
 - **In miniSD** to save pictures and videos to the miniSD card.
 - **Switch w/Card** to save the pictures and videos to the miniSD card when the card is inserted. If not, those are saved to your phone automatically.

In Phone Folder

The storage area of your phone is called the **In Phone** folder. From the In Phone folder, you can view the saved pictures and videos in your phone, send them to the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail), delete images, and access additional options.

To review your stored pictures and videos in the In Phone folder:

1. Press  to access the main menu.
2. Select **Pictures** to access the Picture and Video menu.
3. Select **My Albums**.
4. Select **In Phone**. (Thumbnails will display, up to nine at a time.)
5. Use your navigation key to view and scroll through the pictures.

miniSD Picture and Video Folder

You can save pictures and videos directly to the miniSD card using your phone's pictures and videos settings. (See “Selecting the Storage Area” on page 217). The maximum number of pictures that can be stored and managed in each folder on a miniSD is 1000.

To review your stored pictures in the miniSD:

1. From the Picture and Video menu, select **My Albums**.
2. Select **In miniSD**.
3. Use your Navigation key to scroll through and view saved data.

Note: Contents stored below the DCIM folder on your miniSD card which do not conform to the DCF standard (Design rule for Camera File system) cannot be displayed.

In Phone Folder and miniSD Files Options

When you are viewing the In Phone folder or miniSD, press **Options** (right softkey) to display the following options:

- **Play** to play your videos.
- **Send to Contacts** to send your pictures and videos. (See page 222 for details.)
- **Upload** to upload pictures and videos from the In Phone folder or miniSD to the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail).
- **Order Prints** to order prints of the pictures. You can select receive prints by mail or at retail store.
- **Post to Services** to access to the available services. Select **Update** to display the latest services.
- **Set as** to assign the picture or video. Select your desired option and press .
- **Delete** to delete pictures and videos.

Note: Deleting data will free up memory space to enable you to take more pictures and videos. Once deleted, the data cannot be uploaded your online Sprint PCS Picture Mail account or saved to miniSD card or your phone.

- **Copy/Move** to copy or move pictures and videos to your phone or miniSD.
- **Details/Edit** to display phone information or edit your pictures and videos.
- **Camera Mode** to activate camera mode.
- **Camcorder Mode** to activate video mode.

Assigned Media Folder

When you assign a picture or video, it will automatically be saved in the **Assigned Media** folder. The folder allows you to store copies of pictures on your phone and to assign pictures and videos to various phone tasks.

To save a picture or video to the Assigned Media folder:

1. From the In Phone folder (see “In Phone Folder” on page 218), select a picture or video you wish to save to the Assigned Media folder and press .
2. Press **Options** (right softkey).
3. Select **Set as**.
4. Select your desired option. (A copy of the picture will automatically be saved to the Assigned Media folder.)

To view pictures and videos stored in the Assigned Media folder:

1. Press  to access the main menu.
2. Select **Tools**.
3. Select **Assign. Media** (.
4. Select **Picture** or **Video**. (Thumbnails will display, up to nine at a time.)
5. Use your navigation key to view and scroll.

Sending Sprint PCS Picture MailSM

Once you've taken a picture or video, you can use the messaging capabilities of your phone to instantly share it with family and friends. You can send it to up to 25 people at a time using their email addresses or their Sprint PCS Phone Numbers.

Sending Pictures and Videos From the In Phone Folder

To send pictures and videos from the In Phone folder:

1. Press   to access the Picture and Video menu.
2. Select **My Albums**.
3. Select **In Phone**.
4. Highlight a picture or video you wish to send and press . (You can select multiple pictures and videos.)
5. Press **Options** (right softkey) to display options.
6. Highlight **Send to Contacts** and press .
7. Select **Phone Book Entry**, **Mobile**, or **Email** to select or enter recipients

Tip: Press **Others** (right softkey) to select recipients from your desired list during step 7 above (if applicable).

8. Press **Next** (left softkey) when you are finished adding recipients. (You may include up to 25 recipients per message.)

9. Follow the system prompts to add data, such as title, message, etc.
10. Press the appropriate softkey to send the pictures and videos.

Tip: If a message fails, you are prompted to send it manually. If you choose to send it later, the message goes to the Pending Picture Mail Folder. To access the folder, from the main menu select **Pictures > Picture Mail > Pending**.

Sending Pictures From Messaging

You can also send Sprint PCS Picture Mail from your phone's Messaging menu.

To send pictures from the Messaging menu:

1. Press  to access the main menu.
2. Select **Messaging** to access the Messaging menu.
3. Select **Send Message**.
4. Highlight **Picture Mail** and press .
5. Highlight **Send to Contacts** and press .
6. Select **Phone Book Entry**, **Mobile**, or **Email** to select or enter recipients.
7. Press **Next** (left softkey).
8. Select **In Phone**, **In miniSD**, or **Online Albums**.
9. Use the navigation key to select the picture you wish to send and press . (You can select multiple pictures.)
10. Press **Next** (left softkey).
11. Follow the system prompts to add data, such as title, message, etc.
12. Press the appropriate softkey to send the pictures and videos.

Tip: To take and send a new picture or a video from Messaging, select **Take New Picture** or **Take New Video** during step 8 above. Then take the new picture or video, and follow steps 9-12 above.

Managing Sprint PCS Picture Mail

Using the Sprint PCS Picture Mail Web site

Once you have uploaded pictures and videos from your phone to your online Sprint PCS Picture Mail account at www.sprint.com/picturemail (see “In Phone Folder and miniSD Files Options” on page 220), you can use your personal computer to manage your pictures. From the Sprint PCS Picture Mail Web site (www.sprint.com/picturemail), you can share pictures and videos, edit album titles, add captions, and organize images. You can even send your pictures to be printed at participating retail locations.

You will also have access to picture management tools to improve and customize your pictures. You'll be able to lighten, darken, crop, add antique effects, add comic bubbles and cartoon effects, and use other features to transform your pictures.

To access the Sprint PCS Picture Mail Web site:

- ▶ From your computer's Internet connection, go to www.sprint.com/picturemail.

Viewing Sprint PCS Picture Mail

When you receive Sprint PCS Picture Mail, its summary is automatically saved to your Picture Mail folder. The entire message is saved on the Sprint PCS Picture Mail server.

To view the entire message:

1. Press  to access the main menu.
2. Select **Pictures** or **Messaging**.
3. Select **Picture Mail**.
4. Select **Inbox**, **Sent Mail**, or **Saved Mail**.
5. Highlight the message you want to display and press . (To display the message options, press **Options** [right softkey].)

Note: Your received and sent messages on the server are deleted for a certain fixed time. The  icon appears three days before it is deleted. To prevent deletion, save the message on the server or in your phone from the message options.

Managing Online Pictures and Videos From Your Phone

You can use your phone to manage, edit, or share pictures and videos you have uploaded to the Sprint PCS Picture Mail Web site at www.sprint.com/picturemail.

To view your online pictures and videos from your phone:

1. Press  to access the main menu.
2. Select **Pictures** to access the Picture and Video menu.

Shortcut: Instead of steps 1 and 2 above, press  .

3. Select **My Albums**.
4. Select **Online Albums**.
5. Highlight an album title and press  to display.
6. Press **Options** (right softkey) to display your online picture or video options.

Uploading Pictures and Videos

To upload pictures and videos:

1. Press   to access the Picture and Video menu.
2. Select **My Albums**.
3. Select **In Phone**. (Thumbnails will display.)
4. Select the picture(s) and video(s) you wish to upload and press **Options** (right softkey).
5. Highlight **Upload** and press .
6. Highlight **This, Selected, or All** and press .
7. Highlight **“Uploads” Area** and press .
– or –
Highlight **Other Albums**, press , and then select your desired album and press .

Downloading Your Online Pictures and Videos

From your online Sprint PCS Picture Mail albums display at www.sprint.com/picturemail, you can select pictures and videos to download to the selected folder.

To download from the Sprint PCS Picture Mail Web site:

1. From the online pictures display, select the pictures and videos you wish to download and press **Options** (right softkey). (See “Managing Online Pictures and Videos From Your Phone” on page 227.)
2. Highlight **Save to..** and press .
3. Highlight **To Phone** or **To miniSD** and press .

Using Sprint PCS Ready LinkSM

In This Section

- ◆ Getting Started With Sprint PCS Ready Link
 - ◆ Making and Receiving a Sprint PCS Ready Link Call
 - ◆ Adding and Editing Ready Link Contacts
 - ◆ Erasing Ready Link List Entries
 - ◆ Updating Sprint PCS Ready Link Lists
 - ◆ Managing Sprint PCS Ready Link Settings
-

Your MM-9000 by Sanyo gives you the ability to quickly connect with other Sprint PCS Ready Link users for “walkie-talkie-style” communication from anywhere, to anywhere on the nationwide Sprint PCS network.

This section explains the features and options of your Sprint PCS Vision Ready Link Phone and Service.

Getting Started With Sprint PCS Ready Link

Sprint PCS Ready Link allows you to enjoy quick, two-way, “walkie-talkie-style” communication with your friends, family, and co-workers. You can make one-to-one or one-to-many calls (up to five others on the same call) to any other Sprint PCS Ready Link user, anywhere on the nationwide Sprint PCS network. You can make and receive Sprint PCS Ready Link calls when your phone displays the Ready Link icon.

Setting Sprint PCS Ready Link Mode

To enable or disable Sprint PCS Ready Link mode:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Ready Link** (.
4. Select **Enable/Disable** (.
5. Select **Enable**. (The default is Disable.)
 - **Enable:** Lets you make or receive Sprint PCS Ready Link calls any time your phone is not in use.
 - **Disable:** Disables your phone’s Sprint PCS Ready Link service; you will not be able to make or receive Sprint PCS Ready Link calls or access your Ready Link contacts.

Tip: If you haven’t signed up for the Sprint PCS Ready Link service and Sprint PCS Ready Link mode is set to **Disable**, or the Sprint PCS Ready Link service is locked, you can use the Ready Link/Recorder Button as a Voice Recorder button in standby mode.

Preparing Your Phone for Sprint PCS Ready Link Service

Every time you turn on your phone, your phone will identify itself and make itself available to the Ready Link network. When the Ready Link icon appears on the display, your phone is ready to make and receive Sprint PCS Ready Link calls.

Ready Link Call Alerts

There are several ways your phone alerts you during Sprint PCS Ready Link calls.

When you make or receive a Sprint PCS Ready Link call:


- The phone sounds (depending on the Ringer Type and Ringer Volume setting).
- The backlight illuminates.
- The screen displays a Sprint PCS Ready Link call message.
- The other party's Sprint PCS Ready Link number and name (if available) are displayed.
- The screen displays who has the floor.

The status of a Sprint PCS Ready Link call is displayed as follows:


- The Green LED On indicates you have the floor and may speak.
- The Red LED On indicates another contact has the floor.
- The LED Off indicates the floor is open. (You can take the floor and speak by pressing and holding )

Main LCD Display during a Ready Link Call

Sprint PCS Ready Link Main Screen

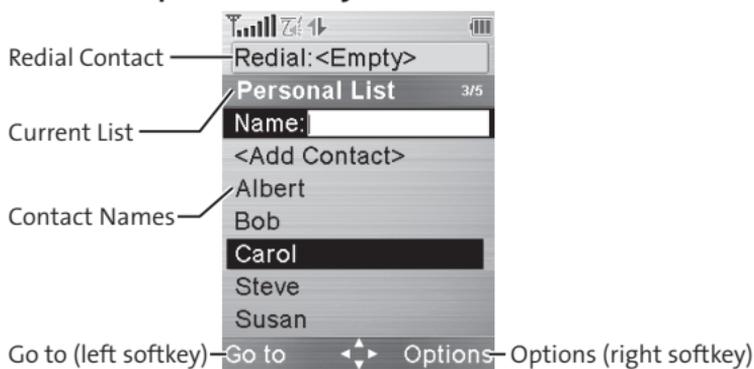

Sprint PCS Ready Link In-Call Screen

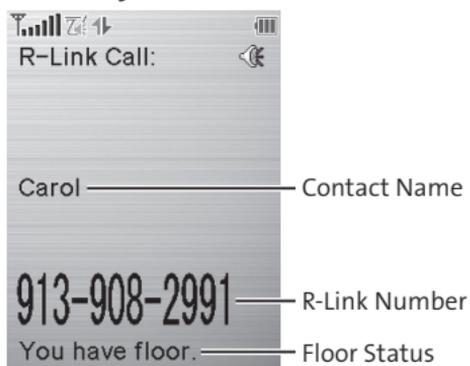

Making and Receiving a Sprint PCS Ready Link Call

Displaying the Sprint PCS Ready Link List

- ▶ From standby mode, press the Ready Link/Recorder button on the side of your phone () to access the Sprint PCS Ready Link List.

Tip: The first time you access the list, the Sprint PCS Ready Link Help message will appear. Press **Yes** (left softkey) and **Next** (left softkey) to read a brief introduction to Sprint PCS Ready Link.

Selecting a Contacts List

When your phone displays a Sprint PCS Ready Link List, the left softkey is labeled **Go to**. To switch to another Contacts list, press **Go to** (left softkey), highlight your desired list, and press .

- **Company List/Company Grps.** contain company-provided contacts (up to 200 entries each). Your company list can only be created and modified by an authorized administrator on the Sprint PCS Ready Link server. When the lists are empty, Company List/Company Groups will not appear on the display.
- **Personal List/Personal Grps.** contain your personal Ready Link contact names and numbers, separately or in groups. You can create and edit your own Personal List. Your phone can store a total of 200 entries (you may include up to five contacts per group).
- **Outgoing** shows the last 20 different Sprint PCS Ready Link calls you placed.

- **Incoming** shows the last 20 different Sprint PCS Ready Link calls you accepted.
- **Missed** shows the last 20 Sprint PCS Ready Link calls you missed.

Note: The  icon next to the group name indicates a group.

Making a Sprint PCS Ready Link Call (One-to-One Call)

You can place a one-to-one Sprint PCS Ready Link call by selecting a contact from the Sprint PCS Ready Link List.

To place a Sprint PCS Ready Link call by selecting a contact:

1. Press .
2. Press **Go to** (left softkey), highlight the list from which you want to place a call (**Company List, Personal List, Outgoing, Incoming, or Missed**), and press .

Tip: You can also select **Enter R-Link#** from the Go to option to enter a Sprint PCS Ready Link number directly. (See page 237 for details.)

3. Scroll to the contact you want to call, and press and hold  to place the call and take the floor. (You will see “R-Link calling...” and “Connecting...” followed by “You have floor.” You can now begin speaking.)
— or —
Scroll to the contact you want to call and press and release  to place the call. (The call will connect as described above, but “Floor is open.” will appear on the screen and either you or your contact may press and hold  to take the floor and speak.)

Note: During a Sprint PCS Ready Link call, the “floor” is the right to speak. When you see “Floor is open,” the first person to press the Ready Link/Recorder button can speak (while holding the button). Only the person who has the floor can speak. The phone beeps if you press the Ready Link button when another contact has the floor.

4. Continue holding  as you speak. (When you are finished speaking, release  to allow the other contact to speak. When the other party takes the floor, you will see the speaker’s name and phone number and the text “has floor.”)
5. When you are finished, press .

Note: When neither party has the floor during a Sprint PCS Ready Link call, “Floor is open.” appears on the display. If no one takes the floor for 20 seconds, the Sprint PCS Ready Link call ends automatically.

Tip: If you press  or  during step 3, you can make a standard voice call.

Making a Sprint PCS Ready Link Call (Group Call)

You can make a Sprint PCS Ready Link call to all members in a Group entry, which you have in your Sprint PCS Ready Link List. You can communicate with up to five members at a time.

To place a Sprint PCS Ready Link Group call:

1. Press .
2. Press **Go to** (left softkey), highlight the list from which you want to make a Group call (**Company Grps.** or **Personal Grps.**), and press .
3. Scroll to the group you want to call, and press and hold  to place the call and take the floor. (You will see “R-Link calling...” and “Connecting...” followed by “You have floor.” Continue with the Sprint PCS Ready Link call as described previously.)
 - To make a Sprint PCS Ready Link call to a group member, select your desired group, highlight your desired group member, and press and hold .
4. When the call is finished, press .

Tip: The phone beeps if you press the Ready Link button when another contact has the floor.

Tip: To redial your last Sprint PCS Ready Link call, highlight **Redial** and press  from the Sprint PCS Ready Link List.

Making a Sprint PCS Ready Link Call by Entering a Number

To place a Sprint PCS Ready Link call by entering a number:

1. From standby mode, enter the Sprint PCS Ready Link number you want to dial.
2. Press  to place the Sprint PCS Ready Link call. Continue holding  to take the floor and speak.
3. Continue with the Sprint PCS Ready Link call, pressing and holding  to speak and releasing it to allow others to reply.
4. When the call is finished, press .

— or —

1. Press .
2. Press **Go to** (left softkey), highlight **Enter R-Link#** and press .
3. Enter the Sprint PCS Ready Link number you want to dial.
4. Follow steps 2-4 above.

Note: Sprint PCS Ready Link numbers must contain ten digits (area code + phone number). Your Sprint PCS Ready Link number is the same as your Sprint PCS Phone number.

Missed Call Notification for Sprint PCS Ready Link Calls

When an incoming Sprint PCS Ready Link call is not answered, the Missed Call Notification and the  icon are displayed on your screen.

To call the last Missed Sprint PCS Ready Link call:

- ▶ Simply press  while the Missed Call Notification is displayed. (Continue with the Sprint PCS Ready Link call as described previously.)

To erase the Missed Call log:

- ▶ Press **Dismiss** (right softkey).

Receiving a Sprint PCS Ready Link Call

To receive a Sprint PCS Ready Link call:

1. Make sure your phone's Sprint PCS Ready Link mode is enabled (see "Setting Sprint PCS Ready Link Mode" on page 230).
2. When you receive a Sprint PCS Ready Link call from a contact, "R-Link Call," the contact's name, and the Sprint PCS Ready Link number appear on the display. (You do not need to take any action to answer the call.)
 - When you receive a group call, "Group Call," the group member's name, and the Sprint PCS Ready Link number appear.
3. If the person placing the call has kept the floor (held the Ready Link/Recorder button), you will see the contact name and Sprint PCS Ready Link number along with "has floor," and you will hear the caller speaking.
4. When the caller finishes speaking and releases , you will see "Floor is open." on the display screen. Press and hold  to take the floor and reply to the caller. (You will see "You have floor." and hear a tone confirming that you may speak.)
5. When the conversation is finished, press .

Tip: You can also receive a Sprint PCS Ready Link call with the flip closed. Press and hold the Ready Link button to take the floor when the floor is open.

Note: You can change the volume and the speaker setting during a Sprint PCS Ready Link call. **Volume:** Adjust the voice volume by using the Side Volume key or by pressing the navigation key up or down except when you are pressing and holding the Ready Link button. **Speaker:** Switch the speaker on or off by pressing the Speaker button (.

Sprint PCS Ready Link Options

When you use Sprint PCS Ready Link, several user options are available by pressing **Options** (right softkey). To select an option, highlight it and press .

- **Edit** to edit a Sprint PCS Ready Link number and/or name.
- **Send Message** to send a text or voice message, picture, or video.
- **Copy to Personal** to copy a contact to the Personal List. **Copy Group** appears when you copy a Company Group to the Personal Group List.
- **Copy to Ph. Book** to copy a contact to the Contacts list.
- **Erase** to erase a contact. **Erase Group** appears when you highlight a group.
- **Add Contact** to add a new contact. **Add Group** appears when you highlight a group list. (See page 243 for details.)
- **Erase R-Link List** to erase entries saved in the Sprint PCS Ready Link List (except Company List/Company Groups).
- **Help** to see the Sprint PCS Ready Link instruction page.

Adding and Editing Ready Link Contacts

Copying an Entry to Your Personal List or Personal Group List

You can copy an entry to your Personal Lists from several different sources. If the selected entry is already stored in the Personal Lists, the “copy” option does not appear.

To copy an entry from the Sprint PCS Ready Link List:

1. Press *********.
2. Press **Go to** (left softkey), highlight the list from which you want to copy an entry (**Company List**, **Company Grps.**, **Personal Grps.**, **Outgoing**, **Incoming**, or **Missed**), and press .
3. Select the entry you want to copy and press **Options** (right softkey). Highlight **Copy to Personal** or **Copy Group**, and press .
4. If the entry has no name, enter a name.
5. Press **Yes** (left softkey) to copy and save the entry to your Personal List or Personal Group List.

Note: Your Company Lists can only be set up and edited by an administrator on the Sprint PCS Ready Link server. You cannot add or edit contacts/groups to your Company Lists.

Saving a Sprint PCS Ready Link Number

You can save a Sprint PCS Ready Link number from the ending display to your Personal Lists.

To save the number:

1. From the end display, press **Save** (right softkey).
2. Enter a name and press **OK** (left softkey).
3. Press **Save** (left softkey).
4. Press **Yes** (left softkey).

Note: If the number is already stored in the Personal List or Personal Groups, the “Save” softkey does not appear.

Finding an Entry in the Sprint PCS Ready Link List

You can find your desired entry by entering a few letters.

To find a Sprint PCS Ready Link entry:

1. Press **XXXX**.
2. Press **Go to** (left softkey), highlight your desired list (**Company List**, **Company Grps.**, **Personal List**, or **Personal Grps.**), and press .
3. Enter the first letter or the first few letters of the name.
 - The display shows the list beginning with the letter(s) you entered.
4. Scroll through the list and press  to select your desired entry.

Adding a New Contact to Your Personal List

You can store a total of 200 entries in the Personal Lists.

To add a new Sprint PCS Ready Link contact:

1. Press .
2. Press **Go to** (left softkey), highlight **Personal List**, and press .
3. Select **<Add Contact>**.
4. Enter a name for the new contact and press .
(This is the name you will see when calling or receiving a call from the contact.)
5. Select **R-Link Number**, enter the contact's 10-digit Sprint PCS Ready Link number (their Sprint PCS Phone number) and press **OK** (left softkey).
6. Press **Save** (left softkey) to save the new contact to your Personal List.

Tip: You are not allowed to use the following symbols during step 4:
@ : ; / *) (

Adding a New Group to Your Personal Group List

You can add new groups to the Personal Group List. Each group can include up to five members. You can enter a group member directly or select the member from the Company List or Personal List.

To add a new Sprint PCS Ready Link group entry:

1. Press **OK**.
2. Press **Go to** (left softkey), highlight **Personal Grps.**, and press **MENU OK**.
3. Select **<Add Group>**.
4. Enter a Group Name, press **MENU OK**, and press **Next** (left softkey).
5. To add contacts to the group, press **Add** (right softkey).
6. Highlight one item from the following and press **MENU OK**:
 - **New** to add a new contact. (See page 243 for details.)
 - **from Company** to add a contact from your Company List (if applicable).
 - **from Personal** to add a contact from your Personal List.
7. Scroll to the contacts you want to add and press **MENU OK** or **Pick** (right softkey) to include the entries.
8. Press **Done** (left softkey) when you are finished selecting contacts, then press **Update** (left softkey) to update your Personal Group List with the new group entry.

Tip: To add members directly, select **<Add Members>** during step 5.

Editing a Contact in Your Personal List

To edit a Personal List contact:

1. Press .
2. Press **Go to** (left softkey), highlight **Personal List**, and press .
3. Scroll to the entry you want to edit and press **Options** (right softkey).
4. Highlight **Edit** and press .
5. Select the field you want to edit (**Name** or **R-Link Number**), and press .
6. Edit the entry, press **OK** (left softkey), and press **Save** (left softkey) to save your changes.

Editing a Group in Your Personal Group List

To edit a group name:

1. Press **GO**.
2. Press **Go to** (left softkey), then highlight **Personal Grps.** and press **MENU OK**.
3. Scroll to the group entry you want to edit and press **Options** (right softkey).
4. Highlight **Edit** and press **MENU OK**.
5. Edit the group name and press **OK** (left softkey).

Tip: If you don't need to edit the group name, press **Next** (left softkey) during step 5 above and skip step 6.

6. Press **Save** (left softkey) to save your changes.
7. To edit a group member, scroll to the contact you want to edit and press **Options** (right softkey).
 - **Edit** to edit a group member's name and phone number.
 - **Erase** to erase the group member.
 - **Add New** to add a new group member.
 - **Add (Company)** to add a new group member from the Company List (if applicable).
 - **Add (Personal)** to add a new group member from the Personal List.
 - **Details** to display a group member's information.

8. Highlight **Edit** and press .
9. Select the field you want to edit (**Name** or **R-Link Number**) and press .
10. Edit the entry, press **OK** (left softkey), and press **Save** (left softkey) to save your changes.
11. Press **Update** (left softkey) to update your Personal Group List.

Erasing Ready Link List Entries

Erasing an Entry in Your Personal List or Personal Group List

To erase a contact or a group:

1. From the Sprint PCS Ready Link List, press **Goto** (left softkey), then highlight **Personal List** or **Personal Grps.** and press .
2. Scroll to the entry you want to erase and press **Options** (right softkey).
3. Highlight **Erase** and press 
 - **Erase Group** appears when you select Personal Groups.
4. Select **Yes**.

To erase a group member:

1. From the Sprint PCS Ready Link List, press **Goto** (left softkey), then highlight **Personal Grps.** and press .
2. Scroll to your desired group and press  to display the group members.
3. Select the contact you want to erase and press **Options** (right softkey).
4. Highlight **Erase** and press .
5. Select **Yes**.
6. Press **Update** (left softkey) to update your Personal Group List.

Erasing a Sprint PCS Ready Link List

You can erase all entries saved in the Sprint PCS Ready Link List (except Company List/Company Groups).

To erase a Sprint PCS Ready Link List:

1. From the Sprint PCS Ready Link List, press **Options** (right softkey).
2. Highlight **Erase R-Link List** and press .
3. Select your desired option and press 
 - **Outgoing** to erase all outgoing Sprint PCS Ready Link calls.
 - **Incoming** to erase all incoming Sprint PCS Ready Link calls.
 - **Missed** to erase all missed Sprint PCS Ready Link calls.
 - **All Calls** to erase all Sprint PCS Ready Link call history, except redial.
 - **All Personal Ent.** to erase all entries in Personal List and Personal Groups. You are prompted to enter your 4-digit lock code.
4. Select **Yes**.

Tip: The Redial number will not be erased.

Updating Sprint PCS Ready Link Lists

Updating the Company List and Personal List

To update your Company List and Personal List manually through the Sprint PCS Ready Link server:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Ready Link** (.
4. Select **List Update** (.

Managing Sprint PCS Ready Link Settings

Assigning Speed Dialing for Sprint PCS Ready Link Entries

To assign Speed Dialing for Sprint PCS Ready Link entries:

1. Press  to access the main menu.
2. Select **Contacts**.
3. Select **Speed Dial #s** (.
4. Select an unassigned number.
 - When you highlight an assigned number and press , you'll be asked whether you want to overwrite the assigned number. Select **Yes** or **No**, or you can also select **Reset** to cancel the stored speed dial.

5. Press **Go to** (left softkey), highlight the list from which you want to set a speed dial (**Company List**, **Company Grps.**, **Personal List**, or **Personal Grps.**), and press .
6. Select the contact.
— or —
Select the group and press , then highlight an option and press .
 - **Assign** to assign the selected group as a speed dial.
 - **Details** to display the group details. You can select the group member from the group list.

To use Speed Dial for a Sprint PCS Ready Link entry:

- ▶ From standby mode, press the appropriate speed dial key (locations 2-9) and press .

Restarting the Ready Link Service

To restart the Sprint PCS Ready Link service:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Ready Link** (.
4. Select **Restart** (.

Setting Ready Link Guard

This feature enables you to display the warning message when you cannot receive Sprint PCS Ready Link calls. The warning message will appear when you are launching a Web or Java application or sending or uploading your pictures and videos.

To set the Ready Link Guard:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Ready Link** (.
4. Select **R-Link Guard** (). (A message will appear.)
5. Press **OK** (left softkey) to continue.
6. Select **On**. (Select **Off** to deactivate this feature.)

Setting Ringer Types for Sprint PCS Ready Link Calls

Your Sprint PCS Phone provides a variety of ringer types that allow you to customize your ringer.

To select a ringer type for Sprint PCS Ready Link calls:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Ready Link** (.
4. Select **Sounds** (.
5. Select **Ringer Type** (.
6. Select **Ready Link Calls, R-Link Missed, or R-Link Floor Tone**.
7. Scroll to your desired ringer type and press .

Setting Vibrate Pattern for Sprint PCS Ready Link Calls

You can select your favorite vibrate pattern for Sprint PCS Ready Link calls.

To select the vibrate pattern for Sprint PCS Ready Link calls:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Ready Link** (.
4. Select **Sounds** (.
5. Select **Vibrate Pattern** (.
6. Select **Ready Link Calls** or **R-Link Missed**.
7. Scroll to your desired vibrate type and press .

Setting an Alert Notification for Sprint PCS Ready Link Calls

Your phone can alert you with an audible tone when you receive a Sprint PCS Ready Link call.

To set alerts for Sprint PCS Ready Link calls:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Ready Link** (.
4. Select **Sounds** (.
5. Select **Alerts** (.
6. Select an option from the following.
 - **Ready Link Calls** to notify you when you receive a Ready Link call.
 - **R-Link Missed** to notify you when you missed a Ready Link call.
 - **Headset Alert** to notify you when you take the floor during Ready Link call with your headset.
7. Use the navigation key to select your desired option.

Tip: **Headset Alert** setting is available when the Turbo Button setting is Ready Link. See “Headset Mode” on page 85.

Setting the Speakerphone for Sprint PCS Ready Link Calls

You can set the speakerphone on or off when Sprint PCS Ready Link is activated. By default, the speakerphone is set to on.

To set the speakerphone on or off:

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Ready Link** (**GH 4**).
4. Select **Speakerphone** (**GH 4**).
5. Select **On** or **Off**.

Note: If the phone's ringer volume is set to Vibrate, Ringer off, or Silence All, the speakerphone turns off. Press **SPEAKER** to turn the speakerphone mode on.

Setting the Default View of the Sprint PCS Ready Link List

You can select the default Sprint PCS Ready Link List when Sprint PCS Ready Link is launched.

To select the default view of the Sprint PCS Ready Link List:

1. Press **MENU OK** to access the main menu.
2. Select **Settings**.
3. Select **Ready Link** (**GH 4**).
4. Select **Default View** (**JKL 5**). (The default setting is **Personal List**.)
5. Select your desired list.

Setting the Floor Display of the Sprint PCS Ready Link Calls

With this feature, you can select the floor display during Sprint PCS Ready Link calls.

To select the floor display:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Ready Link** (.
4. Select **Floor Display** (.
5. Select your desired display.

Using Your Phone's Built-In Media Player

In This Section

- ◆ Your Multimedia Channel Options
 - ◆ Accessing Your Media Player's Channel Listings
 - ◆ Playing a Video or Audio Clip
 - ◆ Multimedia FAQs
-

Your Sprint Power Vision Multimedia Phone's built-in media player gives you the ability to listen to audio clips and view video clips right from your phone's display. It's a great way to stay up-to-date with news, weather, and sports information while also enjoying the latest blockbuster movie trailers or music videos – anywhere, anytime on the nationwide Sprint PCS network. Just access your media player from your phone's main menu, scroll to your choice of channel, and select one of the videos or audio clips to play. It's like having a TV in the palm of your hand.

This section explains the features and options of your phone's built-in media player.

Your Multimedia Channel Options

Sprint PCS Vision Multimedia Service offers a variety of accessible audio or video channels, depending on your Sprint PCS Service Plan and multimedia subscriptions. Your subscription options include a comprehensive basic service as well as a full menu of a variety of additional channel options.

- **Preview Channel:** This free channel lets you sample clips from all of the available channels before you make a decision to subscribe. It's like viewing the movie preview before deciding whether you want to spend the money to go see the full motion picture.
- **Sprint TV™:** This comprehensive basic service gives you access to a variety of content from familiar brands. Think of it as “basic cable” for your phone. It allows you unlimited access to this content as long as you continue to pay the monthly subscription fee.
- **Available Individual Channel Options:** You also have the option of subscribing to individual channels from an extensive menu offering. These channels are available for a monthly subscription fee and allow you unlimited access as long as you continue to pay your monthly subscription fee.

You can always visit www.sprint.com to view a comprehensive up-to-date Channel Guide, giving you an explanation of the available channels as well as information on subscription rates.

Accessing Your Media Player's Channel Listings

It's easy to access and view the multimedia Channel Listings on your MM-9000 by Sanyo from the phone's main menu.

To access your media player and Channel Listings:

1. Press  from standby mode to display the phone's main menu.
2. Select **Media Player**.
3. Select **Channel Listing**. Your Channel Listings will display, divided into the following two sections:
 - **My Channels:** These include the complimentary Previews channel that Sprint provides, as well as any available individual channels for which you have purchased access. If you have purchased Sprint TV, either through a Sprint TV Vision Plan subscription or by purchasing it separately, it will be displayed here.
 - **Available Channels:** These are channels that have not yet been purchased but are available to access for a monthly subscription fee. Use your navigation key to scroll through and select a channel, and follow the onscreen instructions to purchase access to it. Upon purchasing access to one of these channels, the channel will be listed, along with its corresponding channel number, in the **My Channels** section of your media player's Channel Listings. You will see it displayed in this section the next time you access your phone's media player.

Playing a Video or Audio Clip

To select and play a media clip:

1. Press  from standby mode to display the phone's main menu.
2. Select **Media Player**. (The selection menu will display.)
 - **Channel Listing** to display your channel Listing.
 - **miniSD** to access the Media folder in the miniSD (see page 188 for details).
3. Select **Channel Listing**.
4. Use your keypad to enter a channel number (or use your navigation key to scroll to a channel and press ).
 - **My Channels:** If you have selected a channel that you've already signed up for (or if it's a channel with no monthly fee), you will see a list of available clips.
 - **Available Channels:** If you have selected a channel you have not yet signed up for, you will be prompted to accept the corresponding monthly charge. Follow the onscreen prompts to subscribe to the selected channel. (A list of available clips will display.)
5. Scroll to the clip you would like to play and press **Select** (left softkey) or . (The clip will automatically load and begin playing.)

Note: The first time you access one of your Available Channels, you will be prompted to accept the corresponding monthly fee (unless it's a channel that doesn't have an associated monthly fee). Accepting the charge gives you access to the channel for as long as you continue to pay the monthly fee. If you accept the fee, the next time you access your phone's media player, this channel will appear in the My Channels section of your Channel Listings.

Tip: When entering the specific channel number, channels 01 - 09 do not require you to enter a “0.” For example, to access channel “07,” just press the “7” key.

Multimedia FAQs

1. How does my phone’s Multimedia Service differ from Video Mail?

Multimedia Service lets you access high-quality video and audio clips provided by external sources. Video Mail lets you capture, upload and share videos that you personally create with your phone’s built-in camcorder.

2. Will I know if I’m receiving an incoming call while I’m viewing or listening to an audio clip?

No. Incoming calls will roll into voicemail while you are playing a clip. If the caller leaves a voicemail, the voicemail icon will appear on the screen.

3. How long are the clips? Will I know the estimated time it will take to play the clip prior to accessing it?

Once you have selected a channel, you will see a listing of the available clips, with the clip’s length appearing after the clip’s title (if available). In general, a clip’s duration will depend on the story or content being provided, and can be fairly short or as long as a few minutes.

4. Can I access a multimedia clip wherever I am, as long as I have my phone?

As long as you are on the nationwide Sprint PCS network, you will have access to the audio and video clips.

Note: Multimedia Service does not work where service is unavailable.

5. Are the videos that I'm viewing "live" videos?

It depends on the content provider. Some of the channels available through Sprint TV stream live content. Others provide media on demand with video and audio clips that are refreshed throughout the day, but that are not "live."

6. After purchasing access to an Available Channel for a monthly fee, do I receive any confirmation? That is, how do I know it has been purchased?

The next time you access your media player's Channel Listings, the purchased channel title and corresponding number will appear in the My Channels section.

7. Why are some channels already pre-loaded into the My Channels section?

Some channels, such as Previews, are offered free of charge as a customer courtesy. These channels automatically appear in the My Channels section of your Channel Listings.

8. If I don't subscribe to Sprint PCS Vision Plan, am I still able to view the multimedia clips?

Yes; for information about service access charges, please visit www.sprint.com.

9. How can I easily access a channel without having to scroll through all the channels in my Channel Listings?

Each channel will have a number to the left of it. You can simply press this number to quickly access the clips located within that channel.

Tip: When entering the specific channel number, channels 01 - 09 do not require you to enter a "0." For example, to access channel "07," just press the "7" key.

10. What does it mean when the video pauses and I see the word “loading” at the bottom of the screen?

This happens when the media player is in the process of loading the data necessary to play the clip. It typically occurs when there is heavy traffic on the network.

11. How can I cancel service if I decide I don’t want it?

To cancel your Multimedia Service, visit www.sprint.com and sign on to **My PCS** with your account number and password. From this page you have the ability to cancel the service and/or any Available Channels to which you subscribe.

12. If I place my stereo headphones on and insert them into the phone’s headset jack, can I close the flip while I am playing an audio (or video) clip without interrupting the clip?

Yes. When you insert your stereo headset into the phone’s headset jack, the phone automatically goes into “headset mode,” allowing you to close the flip and continue playing the clip (likewise, if your phone is in “headset mode,” a phone call will not become disconnected by closing the flip).

13. Can I surf to a different channel while I am playing a clip?

Yes; while you are playing a clip, you can use the up and down navigation key to surf to a different channel. A small pop-up screen will appear that tells you which channel you are watching as well as other channels you have access to. Use the navigation key to scroll through the different channels. Once you find a channel that you want to watch, scroll to it and press  (or simply wait approximately three seconds) and the channel will begin loading.

Sprint PCS Service Features



Sprint PCS Service Features: The Basics

In This Section

- ◆ Using Voicemail
 - ◆ Using Text SMS Messaging
 - ◆ Using Voice SMS Messaging
 - ◆ Using Caller ID
 - ◆ Responding to Call Waiting
 - ◆ Making a Three-Way Call
 - ◆ Using Call Forwarding
-

Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your Sprint PCS Service. This section outlines your basic Sprint PCS Service features.

Using Voicemail

Setting Up Your Voicemail

All unanswered calls to your Sprint PCS Phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint PCS Voicemail and personal greeting as soon as your phone is activated.

To set up your voicemail:

1. Press and hold  1.
2. Follow the system prompts to:
 - Create your pass code
 - Record your greeting
 - Record your name announcement
 - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding  1, bypassing the need for you to enter your pass code).

Note: If you are concerned about unauthorized access to your voicemail account, Sprint recommends you enable your voicemail pass code.

Voicemail Notification

There are several ways your Sprint PCS Phone alerts you of a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- ▶ Press .

To display your Missed Log:

1. Press  to access the main menu.
2. Select **Missed Alerts**.

Important: When you are roaming off the nationwide Sprint PCS network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your Sprint PCS Phone number. When your voicemail answers, press  and enter your pass code. You will be charged roaming rates when accessing voicemail while roaming off the nationwide Sprint PCS network.

Note: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a Sprint PCS Service Area.

Retrieving Your Voicemail Messages

You can review your messages directly from your Sprint PCS Phone or from any other touch-tone phone. To dial from your Sprint PCS Phone, you can either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

- ▶ Press and hold . (Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Voicemail**.
4. Select **Call Voicemail** () or **Call:Speaker On** () to listen to your messages.

Note: You are charged for airtime minutes when you are accessing your voicemail from your Sprint PCS Phone.

Using a Phone Other Than Your Sprint PCS Phone to Access Messages

1. Dial your Sprint PCS Phone number.
2. When your voicemail answers, press **Shift X**.
3. Enter your pass code.

Tip: When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press **GHI 4** during the header.

VoiceMail Button Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 276.

1	ABC 2	DEF 3
Date/Time	Send Reply	Advance
GHI 4	JKL 5	MNO 6
Replay	Rewind	Forward
 PQRS 7	TUV 8	WXYZ 9
Erase	Call Back	Save
Shift X	+ 0	Space #
Cancel	Help	Skip

Voicemail Options

Your Sprint PCS Phone offers several options for organizing and accessing your voicemail.

Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

To turn Expert Mode on or off:

1. Press and hold **☒ 1** to access your voicemail. (If your voicemail box contains any new or saved messages, press **Shift ✕** to access the main voicemail menu.)
2. Press **DEF 3** to change your Personal Options, following the system prompts.
3. Press **GHI 4** for Expert Mode.
4. Press **☒ 1** to turn Expert Mode on or off.

Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 customers.

1. Press and hold **☒ 1** to access your voicemail. (If your voicemail box contains any new or saved messages, press **Shift ✕** to access the main voicemail menu.)
2. Press **DEF 3** to change your Personal Options, following the system prompts.
3. Press **ABC 2** for Administrative Options.

4. Press **JKL 5** for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.

Sprint PCS Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press **TUV 8** after listening to a message. (Once the call is complete, you're returned to the voicemail main menu.)

Voicemail-to-Voicemail Message

Record and send a voice message to other Sprint PCS Voicemail users.

1. From the main voicemail menu, press **ABC 2** to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.

Voicemail-to-Voicemail Message Reply

Reply to a voice message received from any other Sprint PCS Voicemail user.

1. After listening to a voice message, press **ABC 2**.
2. Follow the voice prompts to record and send your reply.

Vicemail-to-Vicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other Sprint PCS Vicemail users.

1. After listening to a message, press **MNO 6**.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

Vicemail-to-Vicemail Receipt Request

Receive confirmation that your voice message has been listened to when you send, forward, or reply to other Sprint PCS users.

1. After you have recorded a message, press **EN 1** to indicate you are satisfied with the message you recorded.
2. Press **GHI 4** to mark receipt requested.
3. Press **EN 1** to send your voicemail message.

Continue Recording

When leaving a voice message, you can choose to continue recording even after you’ve stopped.

- ▶ Before pressing **EN 1** to indicate that you are satisfied with the message you recorded, press **GHI 4** to continue recording.

Extended Absence Greeting

When your phone is turned off or you are off the nationwide Sprint PCS network for an extended period, this greeting can be played instead of your normal personal greeting.

1. From the main voicemail menu, press **DEF 3** for Personal Options.
2. Press **DEF 3** for Greetings.
3. Press **DEF 3** to record an Extended Absence Greeting.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your text and voice messages.

To clear the icon from the display screen:

1. Press **MENU OK** to access the main menu.
2. Select **Messaging**.
3. Select **Voicemail**.
4. Select **Clear Count** (**GHI 4**).
5. Select **Yes**.

Note: If a voicemail is not checked, the message icon will not be erased with the Clear Count step above.

Voicemail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines your phone's voicemail menu structure.

1 Listen

 1 Envelope Information

 2 Reply

 3 Advance 8 Seconds

 4 Replay

 5 Rewind

 6 Forward Message

 7 Erase

 8 Callback

 9 Save

 0 Options

2 Send a Message

3 Personal Options

 1 Notification Options

 1 Phone Notification

 2 Numeric Paging to a Sprint PCS Phone

 Return to Personal Options Menu

 2 Administrative Options

 1 Skip Pass code

 2 Autoplay

 3 Message Date & Time On/Off

 4 Change Pass code

 5 Group Distribution List

 Return to Personal Options Menu

DEF 3 Greetings

1 Personal Greetings

2 Name Announcement

3 Extended Absence Greeting

Shift **X** Return to Personal Options Menu

GHI 4 Expert Mode (On/Off)

TUV 8 Place a Call

Shift **X** Disconnect

Using Text SMS Messaging

With Text SMS Messaging, you can use a person's wireless phone number to send instant text messages from your Sprint PCS Phone to their messaging-ready phone – and they can send messages to you. When you receive a new message, it will automatically display on your phone's screen. (See “Displaying Pop-up Messages” on page 70.)

In addition, Text SMS Messaging includes a variety of preset messages, such as “Can't talk right now. Send me a message.” that make composing messages fast and easy. You can also customize your own preset messages (up to 50 characters) from your Sprint PCS Phone.

Displaying a Text Message

To display a Text SMS message from the main menu:

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Text**.
4. Select **Inbox**, **Sent Mail**, **Pending**, **Drafts**, or your defined folder and press . ( indicates an unread message.)
5. Highlight the message you want to display and press . (To display the message options, press **Options** [right softkey].)

Composing Text SMS Messages

To compose a Text SMS message:

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Send Message**.
4. Select **Text**.
5. Select **Phone Book Entry**, **Mobile** or **Email** to select or enter recipients.

Tip: Press **Others** (right softkey) to select recipients from your desired list during step 5 above (if applicable).

6. Press **Next** (left softkey) when you are finished selecting and entering recipients. (You may include up to 25 recipients per message.)
7. Select **Message** and compose a message or use the preset messages or smileys (icons).
 - Press **Mode** (right softkey) for different character input mode. (See “Entering Text” on page 42.)
8. To set the message priority, scroll to **Priority** and press .
9. Select **Ordinary** or **Urgent** and press .
10. Review your message and press **Send** (left softkey). (You may also select additional messaging options by pressing **Options** [right softkey] to set the callback number or change the recipients, etc.)

Accessing Text SMS Messages

To read a Text SMS message:

- ▶ When you receive a text message, it will automatically appear on your phone's main display screen. Press **View** (left softkey) to read the message. Use your navigation key to scroll down and view the entire message.

To reply to a Text SMS message:

1. While the message is open, press **Reply** (left softkey).
2. Select **Text**.
3. Compose your reply or press **Mode** (right softkey) to select a character input mode. (See "Entering Text" on page 42.)
4. Review your reply and press **Send** (left softkey).

Editing Preset (Canned) Messages

Preset messages make sending text messages to your friends, family, and co-workers easier than ever.

To edit Preset messages:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Messaging** (.
4. Select **Preset Msgs** (.
5. Highlight a message you wish to edit and press .
6. Enter your new message or changes and press **OK** (left softkey). (See “Entering Text” on page 42.)

To reset Preset messages:

1. Follow steps 1-4 above.
2. Press **Options** (right softkey).
3. Highlight **Reset All Msgs** and press .
4. Select **Yes**.

Using Voice SMS Messaging

In addition to sending and receiving Text SMS messages, your phone is enabled with Voice SMS Messaging. With Voice SMS Messaging, you can quickly and easily send a voice message to other SMS-enabled Sprint PCS Phones or working email addresses without making a phone call. Just record a message and send it directly to the recipient's phone messaging inbox.

Playing a Voice SMS Message

To play a Voice SMS message from the main menu:

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Voice SMS**.
4. Select **Inbox**. ( indicates an unplayed message.)
5. Select the message you want to play.
6. Press  to display the message detail.
7. Press **Play** (left softkey) to play the message. (To display the message options, press **Options** [right softkey].)

Composing Voice SMS Messages

To compose a Voice SMS message:

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **Send Message**.
4. Select **Voice SMS**.
5. Select **Phone Book Entry**, **Mobile**, or **Email** to select or enter recipients.
6. Press **Next** (left softkey) when you are finished selecting and entering recipients. (You may include up to 25 recipients per message.)
7. Start recording after the beep. (You can record up to 2 minutes.)
8. To finish recording, press .
9. Press **Send** (left softkey) to send the voice message.

Accessing Voice SMS Messages

To play a Voice SMS message:

- ▶ When you receive a voice message, it will automatically appear on your phone's main display screen. Use your softkeys to view and play the voice message.

To reply to a Voice SMS message:

1. From the Voice SMS inbox, press **Reply** (left softkey).
2. Select **Voice SMS**.
3. Record your reply, then press **Send** (left softkey).

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press **Shift** **X** **MNO** **6** **PQRS** **7**.
2. Enter the number you want to call.
3. Press **TALK**.

To permanently block your number, call Sprint Customer Service.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you of incoming calls by sounding beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if available).

To respond to an incoming call while you're on a call:

- ▶ Press **TALK**. (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Press **TALK** again.

Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing **Shift** **X** **PQRS** **7** **+ 0** before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

To make a Three-Way Call:

1. Enter a number you wish to call and press **TALK**.
2. Once you have established the connection, press **TALK**. (This puts the first caller on hold.)
3. Dial the second number you wish to call and press **TALK**.
4. When you're connected to the second party, press **TALK** again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Note: Call Waiting and Three-Way Calling are not available while roaming off the nationwide Sprint PCS network.

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To activate Call Forwarding:

1. Press **Shift** **X** **PCS** **7** **ABC** **2** .
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press **TALK** . (You will hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press **Shift** **X** **PCS** **7** **ABC** **2** **+** **0** .
2. Press **TALK** . (You will hear a tone to confirm the deactivation.)

Note: You are charged a higher rate for calls you have forwarded.

Sprint PCS VisionSM

In This Section

- ◆ Getting Started With Sprint PCS Vision
 - ◆ Accessing Messaging
 - ◆ Downloading Premium Services Content
 - ◆ Exploring the Web
 - ◆ Sprint PCS Vision FAQs
-

Sprint PCS VisionSM brings you clarity you can see and hear with advanced multimedia services. These features – including Sprint PCS Messaging, games, downloadable ringtones and screen savers, and portable Web access – are easy to learn and use. Clearly, it's a whole new way to look at wireless.

This section introduces these advanced services and walks you through the necessary steps to start taking advantage of Sprint PCS Vision Services. For complete details and instructions, see the Sprint PCS Vision User's Guide online at www.sprint.com.

Getting Started With Sprint PCS Vision

With your Sprint PCS Vision Phone and Sprint PCS Service, you are ready to start enjoying the advantages of Sprint PCS Vision. This section will help you learn the basics of using your Sprint PCS Vision services, including managing your User name, launching a Vision connection, and navigating the Web with your Sprint PCS Vision Phone.

Your User Name

When you buy a Sprint PCS Vision Phone and sign up for service, you're automatically assigned a User name, which is typically based on your name and a number, followed by "@sprint.com." (For example, the third John Smith to sign up for Sprint PCS Vision services might have jsmith003@sprint.com as his User name.)

When you use Sprint PCS Vision services, your User name is submitted to identify you to the nationwide Sprint PCS network. The User name is also useful as an address for Sprint PCS Mail, as a way to personalize Web services, and as an online virtual identity.

Your User name will be automatically programmed into your Sprint PCS Vision Phone. You don't have to enter it.

Updating Your User Name

When you change the programmed User Name and select a new one, you have to update your User Name through your Sprint PCS Phone.

To update your User Name:

1. Press **MENU** **OK** to access the main menu.
2. Select **Settings**.
3. Select **Power Vision** (**DEF 3**).
4. Select **Update Profile** (**DEF 3**).

Finding Your User Name

If you aren't sure what your Sprint PCS Vision User name is, you can easily find it online or on your Sprint PCS Vision Phone.

To find your User Name:

- **At www.sprint.com.** Sign on to your account using your Sprint PCS Phone number and Password. To display your User name, click on the **My Personal Information** menu, then click on **PCS Vision User Name**.
- **On your Sprint PCS Vision Phone.** You can find your User name under the **Phone Info** option in your phone's **Settings** menu (**Menu > Settings > Phone Info > Phone#/User ID**).

Launching a Sprint PCS Vision Connection

To launch a Sprint PCS Vision connection:

1. Press **MENU** to access the main menu.
2. Select **Web**. (Your Sprint PCS Vision connection will launch and the Sprint PCS Vision home page will display.)

The Sprint PCS Vision Home Page



Shortcut: You can also press **Web** (right softkey) to launch the Web in standby mode.

Note: If Net Guard is enabled and displayed (see page 293), press **OK** (left softkey) to continue and launch the Web.

While connecting, the following will appear on the screen:
Connecting... Please wait.

If you had a previous Sprint PCS Vision connection, the last page you visited will display when you launch your browser. When this occurs, you may not see the “Connecting...” message when you launch the session.

Though the browser is open, you are not currently in an active data session - that is, no data is being sent or received. As soon as you navigate to another page, the active session will launch and you will see the “Connecting...” message.

Net Guard

When you first connect to the Web, the Net Guard will appear to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

To change your Net Guard settings:

1. Press  to access the main menu.
2. Select **Settings**.
3. Select **Power Vision** (.
4. Select **Net Guard** () and choose an option:
 - **On** to activate the Net Guard.
 - **Off** to deactivate the Net Guard.

Note: When enabled, the Net Guard appears only once per session. The Net Guard does not appear if the phone is merely re-connecting due to a time-out.

Sprint PCS Vision Connection Status and Indicators

Your phone's display lets you know the current status of your Sprint PCS Vision or Sprint Power Vision connection through indicators which appear at the top of the screen.

The following symbols are used:

-  Your Sprint PCS Vision connection is active (data is being transferred); the transmit/receive symbol will blink to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the Sprint PCS Vision connection will terminate.
-  Your Sprint PCS Vision connection is dormant (no data is being sent or received). Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.
-  Your phone is not currently able to access Sprint PCS Vision service features.
-  Your Sprint Power Vision service is active (data is being transferred); the transmit/receive symbol will animate to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the Sprint Power Vision connection will terminate.
-  Your Sprint Power Vision service is dormant (no data is being sent or received). Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.

If no indicator appears, your phone does not have a current Sprint PCS Vision connection. To launch a connection, see “Launching a Sprint PCS Vision Connection” on page 292.

Navigating the Web

Navigating through menus and Web sites during a Sprint PCS Vision session is easy once you've learned a few basics. Here are some tips for getting around:

Softkeys

During a Sprint PCS Vision session, the bottom line of your phone's display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkey buttons directly below the phone's display screen.

Tip: Depending on which Web sites you visit, the labels on the softkeys may change to indicate their function.

To use softkeys:

- ▶ Press the desired softkey button. (If an additional pop-up menu appears when you press the softkey button, select the menu items using your keypad [if they're numbered] or by highlighting the option and pressing .)

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

To scroll line by line through Web sites:

- ▶ Press the navigation key up and down.

To scroll page by page through Web sites:

- ▶ Press the volume buttons on the side of the phone.

Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

To select on-screen items:

- ▶ Use the navigation key to highlight the desired item, then press the desired softkey button (or press ).

Tip: You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "Go."

Tip: If the items on a page are numbered, you can use your keypad (number keys) to select an item. (The tenth item in a numbered list may be selected by pressing the  key on your phone's keypad, even though the number 0 doesn't appear on the screen.)

Links, which appear as underlined text, allow you to jump to different Web pages, select special functions, or even place phone calls.

To select links:

- ▶ Highlight the link and press the appropriate softkey.

Going Back

To go back one page:

- ▶ Press the  key on your phone.

Note: The **BACK** key is also used for deleting text (like a BACKSPACE key) when you are entering text.

Going Home

To return to the Sprint PCS Vision home page from any other Web page:

- ▶ Press and hold  Back .
- or –
- Press the right softkey and select Home ( 1).



Sprint PCS Messaging

Accessing Messaging

Now you can send and receive emails and text messages and participate in Web-based chatrooms right from your Sprint PCS Vision Phone. Messaging allows you to stay connected to friends, family, and co-workers 24 hours a day anywhere on the nationwide Sprint PCS network.

Message Types

There are many types of text messaging available on your phone. These include Text SMS Messaging (page 278), Instant Messaging, Email, and Chat.

(Sprint PCS Voicemail provides voicemail-to-mailbox messaging. For information on using your phone's voicemail feature, see “Using Voicemail” on page 268.)

Accessing Sprint PCS Mail

Sprint PCS Mail allows you to perform many of the typical email functions from your Sprint PCS Vision Phone that you can from your personal computer. You can manage your Sprint PCS Mail account from your Sprint PCS Vision Phone or from your personal computer at www.sprint.com.

To access Sprint PCS Mail from your phone:

1. Press  to access the main menu.
2. Select **Messaging**.
3. Select **IM & Email**. (If you're a first-time user, your phone will prompt you to set up your Sprint PCS Mail account by establishing a User name and password.)
4. To view your messages, press **Inbox** (left softkey).
5. Scroll to select the message you wish to read and press **Go** (left softkey).
6. Once you've read a message, use the quick actions at the end of each message (**Reply**, **Reply All**, **Forward**, **Erase**, **Add to Folder**, or **Main**).

For information and instructions about reading, replying to, and composing Sprint PCS Mail, please see the Sprint PCS Vision User's Guide at www.sprint.com.

Accessing Additional Email Providers

With Sprint PCS Vision, you can use popular email services such as AOL® Mail, Yahoo!® Mail, MSN Hotmail and EarthLink® to keep in touch, even while you're on the go.

To access email providers from your Sprint PCS Vision Phone:

1. From the Sprint PCS Vision home page, select **Messaging**.
2. Select **Email**.
3. Select an email provider, such as **AOL Mail**, **MSN Hotmail**, **Yahoo! Email**, or **Earthlink**.
4. Use your keypad to enter the required sign in information for the selected provider, such as user name, email address, and/or password, and select **Sign In**. (Your mailbox for the selected provider will display.)

Note: The information required for sign in will vary depending on the email provider you are accessing.

5. Follow the onscreen instructions to read, reply to, compose, send, and manage your email account.

Accessing Instant Messaging

Sprint PCS Vision also provides you with access to popular instant messaging (IM) clients, including AOL® Instant Messenger™, MSN® Messenger, and Yahoo!® Messenger.

To access instant messaging clients from your Sprint PCS Vision Phone:

1. From the Sprint PCS Vision home page, select **Messaging**.
2. Select **Instant Messaging**.
3. Select an email provider, such as **AOL Instant Messenger, MSN Messenger, or Yahoo! Messenger**.
4. Use your keypad to enter the required sign in information for the selected provider, such as user name and/or password, and select **Sign In**. (Your IM screen for the selected provider will display.)

Note: The information required for sign in will vary depending on the instant messaging provider you are accessing.

5. Follow the onscreen instructions to read, reply to, compose, send, and manage your IM account.

Accessing Wireless Chatrooms

Sprint PCS Vision gives you the ability to join wireless chatrooms from your Sprint PCS Vision Phone, to send text messages and icons to chatroom participants, or to launch a one-on-one (private) chatroom.

To access a chatroom from the browser:

1. From standby mode, press **Web** (right softkey) to launch the browser.
2. Select **Messaging**.
3. Select **Chat**.
4. Select **Enter**. (You will see a disclaimer for Wireless Chat.)
5. Press **Go** (left softkey) to accept the disclaimer.
6. Use your keypad to enter a nickname and select **Enter**. (The chat menu will display.)
7. Select a chatroom from the menu (for example, “Friends” or “Singles”) and press **Go** (left softkey) to enter.
8. Once in the chatroom, you may scroll through the postings to read messages from other chatroom participants and use your keypad to enter your own messages.

Note: For information about posting to chatrooms or setting up one-on-one sessions, please see the Sprint PCS Vision User’s Guide at www.sprint.com.

Downloading Premium Services Content

With Sprint PCS Vision and your new Sprint PCS Vision Phone, you have access to a dynamic variety of Premium Service content, such as downloadable Games, Ringers, Screen Savers, and other applications. (Additional charges may apply.) The basic steps required to access and download Premium Service content are outlined below.

Accessing the Download Menus

To access the Sprint PCS Vision download menus:

1. Press  to access the main menu.
2. Select **My Content**.
3. Select the type of file you wish to download (**Games**, **Ringers**, **Screen Savers**, **Applications**, or **IM & Email**) and press .
4. Select **Get New** and press . (The browser will launch and take you to the corresponding download menu.)

To access the Sprint PCS Vision download menus from the Web browser:

1. From the Sprint PCS Vision home page, select **Downloads** (.
2. Select **Games** () , **Ringers** () , **Screen Savers** () , or **Applications** () to go to the corresponding download menu. (For more information on navigating the Web, see “Navigating the Web” on page 295.)

Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Featured** displays a rotating selection of featured items.
- **Categories** allows you to narrow your search to a general category, such as Movie/TV Themes for Ringers or College Logos for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search (for example, entering “goo” returns “Good Ol’ Boy,” “The Good, the Bad, and the Ugly,” and “Goofy - Club”).

Downloading an Item

Once you’ve selected an item you wish to download, highlight it and press  or press **Go** (left softkey). You will see a summary page for the item including its title, the vendor, the download detail, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download, and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy**. (The item will download automatically. When the **New Download** screen appears, the item has been successfully downloaded to your phone.)

Note: If you have not previously purchased an item, you will be prompted to create your purchasing profile.

Note: If you download an item that cannot be deleted, the  icon will be displayed.

2. Select an option to continue:

- Once the item has been successfully downloaded and the Completed screen appears, select your desired option to assign the ringer or screen saver, run the application, listen to music, play the game, etc.
- Press **END/⓪** to quit the browser and return to standby mode.

Using My Content Manager

Whether you purchase your Premium Services content from your Sprint PCS Phone or from your online account management page at www.sprint.com, all of your purchases are stored in **My Content Manager** and may be downloaded to your phone from there.

My Content Manager is a storage area on the nationwide Sprint PCS network that is assigned specifically to your account. It allows you to store all of your Premium Service downloadable files. The files remain in My Content Manager until their license terms have expired – even after you have downloaded the content to your phone. This provides you with a convenient place to access information about your downloaded files without having to store the information in your phone's memory.

To access My Content Manager:

1. From the Sprint PCS Vision home page, select **Downloads** (ABC **Z**).
2. Select **My Content Manager**. (A list of your purchased items will display.)

To download purchased content from My Content Manager:

1. From the **My Content Manager** display (see above), highlight the item you wish to download and press **MENU** **OK**. (The information page for the selected item will display.)
2. Scroll to highlight **Downloads** and press **MENU** **OK**. (The item will download automatically. When the **New Download** screen appears, the item has been successfully downloaded to your phone.)
3. Select an option to continue:
 - Once the item has been successfully downloaded and the Completed screen appears, select your desired option to assign the ringer or screen saver, run the application, listen to music, play the game, etc.
 - Press **END/⓪** to quit the browser and return to standby mode.

Selecting Call Tones

Call Tones allow you to select ringback tones heard by the calling party.

To select call tones:

1. Press  to access the main menu.
2. Select **My Content**.
3. Select **Call Tones** and press . (The browser will launch and take you to the corresponding URL.)

For complete information and instructions on downloading **Games, Ringers, Screen Savers, and Applications**, see the Sprint PCS Vision User's Guide at www.sprint.com.



Web

Exploring the Web

With Web access on your Sprint PCS Vision Phone, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores and breaking news and weather and shop on your Sprint PCS Vision Phone anywhere on the nationwide Sprint PCS network.

In addition to the features already covered in this section, the Sprint PCS Vision home page offers access to these colorful, graphically rich Web categories, including **News, Weather, Entertainment, Sports, Finance, Travel, Shopping, Tools,** and **Business Links**, as well as useful management options including **My Account** and **Search**. Many sites are available under more than one menu – choose the one that’s most convenient for you.

Using the Browser Menu

Navigating the Web from your phone using the Sprint PCS Vision home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 295.

Although the Sprint PCS Vision home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific Web sites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional functionality to expand your use of the Web on your Sprint PCS Vision Phone.

Opening the Browser Menu

The browser menu may be opened anytime you have an active Sprint PCS Vision session, from any page you are viewing.

To open the browser menu:

- ▶ Press the right softkey. (The browser menu will display in a drop-down list.)

Options available under the browser menu include:

- **Home** (Ⓜ 1). Returns the browser to the Sprint PCS Vision home page.
- **Forward** (ABC 2). Returns you to a previously viewed page (after having used the  Back key).
- **Mark this page** (DEF 3). Allows you to bookmark the current site and edit your bookmarks.
- **View Bookmarks** (GHI 4). Allows you to view and access bookmarked sites.
- **Search** (JKL 5). Launches a Google search.
- **Send Page** (MNO 6). Allows you to send the current URL as a text message.
- **Go to URL...** (PQRS 7). Allows you to navigate directly to a Web site by entering its URL (Web site address).
- **History** (TUV 8). Keeps a list of links to your most recently visited sites. To navigate to a site, highlight it and press , then select **Connect** (left softkey).

- **Refresh this page** (**WXYZ 9**). Reloads the current Web page.
- **More...** (**+ 0**). Displays additional options:
 - **Show URL**. Displays the URL (Web site address) of the site you're currently viewing.
 - **Restart Browser**. Refreshes the current browser session.
 - **Script Log** Allows you to display the script log.
 - **About Browser** Allows you to display your browser's information.
 - **Preferences**. Allows you to configure and manage your browser settings. (Edit Home Page, Revert Home Page, Launch Page, Font Size, Color Setting, Show Images, Delete Cookies, Send Referrer, Title Tag, and Sound Volume.)

Creating a Bookmark

Bookmarks allow you to store the address of your favorite Web sites for easy access at a later time.

To create a bookmark:

1. Go to the Web page you want to mark.
2. Press the right softkey to open the browser menu.
3. Select **Mark this page** (**DEF 3**) and press **OK** (left softkey) twice to save the bookmark.

Note: Bookmarking a page does not store the page contents, just its address.

Note: Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

Accessing a Bookmark

To access a bookmark:

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks** (**GHI 4**).
3. Scroll to highlight the bookmark you'd like to access and press **OK** (left softkey) to go to the Web site (or press the number corresponding to the bookmark you wish to access).

Deleting a Bookmark

To delete a bookmark:

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks** (**GHI 4**).
3. Scroll to highlight the bookmark you'd like to delete and press the right softkey.
4. Select **Delete** (**JKL 5**) from the menu. (A confirmation screen will display.)
5. Select **Yes** (right softkey) to remove the bookmark.

Going to a Specific Web site

To go to a particular Web site by entering a URL (Web site address):

1. Press the right softkey to open the browser menu.
2. Select **Go to URL...** (PQRS 7).
3. Select **Address** and press **OK** (left softkey).
4. Use your keypad to enter the URL of the Web site you wish to go to and press **MENU OK**.

Note: Not all Web sites are viewable on your phone.

Reloading a Web Page

To reload (refresh) a Web page:

1. Press the right softkey to open the browser menu.
2. Select **Refresh this page** (WXYZ 9). (The browser will reload the current Web page.)

Restarting the Web Browser

If the Web browser appears to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

To restart the Web browser:

1. Press the right softkey to open the browser menu.
2. Select **More...** ()
3. Select **Restart Browser** and press **OK** (left softkey).

Adjusting the Browser Sound Volume

To adjust the browser sound volume:

1. Press the right softkey to open the browser menu.
2. Select **More...** ()
3. Select **Preferences** and press **OK** (left softkey).
4. Select **Sound Volume** and press **OK** (left softkey).
5. Select your desired volume level by pressing the navigation key up or down and press .

Sprint PCS Vision FAQs

How will I know when my phone is ready for Sprint PCS Vision service?

Your User name (for example, bsmith001@sprint.com) will display in the Phone#/UserID menu.

Go to **Settings > Phone Info > Phone#/User ID**.

How do I sign-in for the first time?

You are automatically signed in to access Sprint PCS Vision services when you turn on your phone.

How do I know when my phone is connected to Sprint PCS Vision services?

Your phone automatically connects when Sprint PCS Vision service is used or an incoming message arrives. Your phone will also display the  icon. When you enter a Sprint Power Vision service area, your phone will display the  icon. (Connecting takes about 10-12 seconds.)

Can I make calls and use data services at the same time?

You cannot use voice and Sprint PCS Vision services simultaneously. If you receive a call while Sprint PCS Vision or Sprint Power Vision service is active, the call will be forwarded to voicemail. You can place an outgoing call anytime, but it will interrupt any in-progress data session.

When is my data connection active?

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When Sprint PCS Vision service is active, the  (Sending) or  (Receiving) indicator flashes; when Sprint Power Vision service is active, the  (Sending) or  (Receiving) indicator animates on your phone's display screen.

When is my data connection dormant?

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period of time, the connection will terminate.

Can I sign out of data services?

You can sign out without turning off your phone; however, you will not be able to browse the Web or use other Sprint PCS Vision or Sprint Power Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to **Settings > PowerVision > Disable Vision** in your phone's menu.

Sprint Power VisionSM

In This Section

- ◆ Getting to Know Sprint Power Vision
 - ◆ Exploring the Sprint Music StoreSM
 - ◆ Personalizing Your Service With On Demand
 - ◆ Using Your Sprint PCS Phone as a Modem
-

With Sprint Power VisionSM enjoy the next generation wireless data experience. Sprint Power Vision offers an enhanced, always-on experience, including rich, clear video and audio clips (up to five minutes in length), live interactive 3-D games, and Broadband-like download speeds. In addition, you can experience all of the latest messaging, imaging and browsing enhancements currently available to Sprint PCS users.

Features such as the Sprint Music StoreSM, On Demand personalized data services, and the option to use your phone as a modem make Sprint Power Vision your key to total connectivity. This section introduces these advanced high-speed services and walks you through the necessary steps to start taking advantage of Sprint Power Vision. For an updated listing of the latest products and services (which are subject to change) and for more information, visit us online at www.sprint.com.

Getting to Know Sprint Power Vision

Sprint Power Vision combines unmatched visual and sound clarity with Broadband-like speeds on your wireless phone. Utilizing the fastest commercially available wireless network technology (1xEV-DO) and leveraging continued investment in handset and application development, Sprint Power Vision offers the ultimate in wireless entertainment, real imaging solutions, instant communication, and a personalized information experience at Broadband-like speeds. Your MM-9000 is equipped with the latest in multimedia, imaging and processing technology, and offer exclusive services not available on current Sprint PCS Vision Phones, such as access to the Sprint Music Store and On Demand.

Note: The MM-9000's data services work anywhere on the nationwide Sprint PCS network. These services will perform at enhanced speeds and with improved quality in areas with high-speed data coverage. Go to www.sprint.com or see our coverage map brochure for coverage details and more information.

Enabling Sprint Power Vision

Since Sprint Power Vision is an enhancement to your phone's Sprint PCS Vision capabilities, you don't need to take any extra action to make Sprint -Power Vision available. As long as your phone's Sprint PCS Vision setting is enabled (see "Enabling and Disabling Sprint PCS Vision Services" on page 98), your phone is ready to access Sprint Power Vision services where available.

When your phone has a Sprint Power Vision connection, the status indicator (📶) will display on the screen. (For details, see "Sprint PCS Vision Connection Status and Indicators" on page 294.)

Exploring the Sprint Music StoreSM

Your Sprint Power Vision service allows you to access the Sprint Music Store, an online music distribution site that lets you purchase and download digital music files to play on your Sprint Power Vision Multimedia Phone.

Accessing the Sprint Music Store

You can access the Sprint Music Store right from your phone's main menu, anywhere on the nationwide Sprint PCS network. When you enter the store for the first time, you will be prompted to set up your user identification and password.

To access the Sprint Music Store:

1. Press  to access the main menu.
2. Select **Music**.
3. Follow the onscreen instructions to establish your User ID and password.

Tip: Your User ID for the Sprint Music Store is your 10-digit Sprint PCS Phone number. The password may be any 4-6 digit number. The recommended password is the last four digits of your Social Security number.

4. Use your keypad and navigation key to explore the store.

Purchasing and Downloading Music

Now that you're in the store, you can shop for songs to purchase and download to your phone's miniSD card.

To find and download music files from the Sprint Music Store:

1. From the Sprint Music Store opening page, select an option to browse the store:
 - **Featured** offers a revolving selection of highlighted songs and artists.
 - **Categories** allows you to choose from categories such as What's Hot, New Releases, and specific musical genres.
 - **Search** gives you the option of searching for specific songs or artists. Just use your keypad to enter your search criteria in the available fields.
2. Highlight the song you want and press . (The song information screen will display.)
3. Select an option and press :
 - **Preview** to play an audio clip of the selected song.
 - **Buy Song** to purchase the song and download it to your phone's miniSD card.
 - When you select **Buy Song**, the file will automatically download to your phone's miniSD card. (If there is no miniSD card installed or if there is not enough free memory space on the card, you will see an alert.)
 - Once the song has been downloaded to your miniSD card, you will see options allowing you to listen to the song, add it to a playlist, continue shopping, or download it to your PC.

Backing Up Your Downloaded Music Files

When you purchase and download a music file from the Sprint Music Store, you get two versions of the song: one to download and play on your MM-9000 (file type: AAC+), and another to download from www.sprint.com and play on your PC (file type: WMA). The AAC+ files downloaded to your phone can only be played on your phone and on your account, and once they have been downloaded, they cannot be downloaded again without being re-purchased.

Sprint recommends you back up your AAC+ music files to your PC so you may access the files in case your miniSD card is lost or damaged, or if you install a new miniSD card.

To back up your downloaded music files:

1. Connect your MM-9000 to your PC using the USB cable that came with your phone.
2. Use your PC to navigate to the miniSD's Music folder.
3. Select and copy the music files to a folder on your PC's hard drive.

Note: Although you can store AAC+ files on your PC, they will only be playable on your phone and on your account. If you copy the files back to another miniSD card, you will need to reauthenticate your account through your phone to be able to play the music files.

Playing Music From the Sprint Music Store

The Sprint Music Store not only gives you access to great music, it also gives you a place to listen to and organize your music library.

Accessing the Music Player

1. From the Sprint Music Store opening page, use your navigation key to select the **Player** tab.
2. From the Player display, select an option:
 - **All My Music** to browse through all of your downloaded music.
 - **<playlist>** to select a customized playlist you've created to organize your music.
 - **Create Playlist...** to set up a custom playlist of songs you like to hear together. Follow the onscreen instructions to create a name for the playlist, select songs by artist, genre, and title, and create an order for the playlist.
3. Once you've displayed a list of songs, you can browse through your available titles by Song, Artist, or Genre to select a specific song.
 - To play a song, select it and press **Play** (MENU OK).
 - To listen to a playlist, select it and press **Play** (MENU OK).

For more information about using the Sprint Music Store, visit the Sprint Web site at www.sprint.com/musicstore.

Personalizing Your Service With On Demand

The On Demand feature from Sprint Power Vision makes it easier than ever to retrieve the most popular Web information and categories instantly. On Demand uses your home ZIP code to customize the content it retrieves to your area, so you can get the information you want, when you want it.

On Demand acts like a PC browser's customized home page, displaying a variety of top categories such as News, Sports, Weather, Money, Movies, and more, tailored to your home area. These categories and the associated information are updated continuously throughout the day, so you'll always be up-to-date and in-the-know. In addition to presenting a number of fixed categories, On Demand also offers additional categories you can select (for an additional monthly charge), allowing you faster access to the information you really want.

Initializing Your On Demand Service

To initialize your phone's On Demand service:

1. Press  to access the main menu.
2. Select **On Demand**.
3. Enter your home ZIP code and press **Done** (left softkey). (The On Demand service will customize itself to your location and the On Demand menu screen will display.)

Accessing On Demand Information

Finding the information you're looking for with On Demand is as easy as navigating a Web browser on your PC. (The following examples will illustrate how to access News and Movies information.)

To access News information using On Demand:

1. Press  to access the main menu.
2. Select **On Demand**. (The On Demand menu screen will display.)
3. From the On Demand menu screen, highlight a category (in this case, **News**) and press .
4. Depending on which category you select, you will see a menu with additional options (for this example, you would be able to select from such sub-categories as "Top Stories," "USA News," "World News," and "Politics").
5. Select a subcategory, then select an article you would like to view and press . (The article will display.)
6. Use your navigation key to scroll through the article. If applicable, the left and right softkeys will offer additional options:
 - **Left Softkey** - If there is a related story or a picture accompanying the article, that link will be available by pressing your left softkey. The left softkey functions as an action key in the On Demand service.
 - **Right Softkey** - Your right softkey will be a **Menu** button, allowing you to return to the main On Demand menu and offering additional navigation options.

To access Movies information using On Demand:

1. From the On Demand menu screen, highlight **Movies** and press . (A list of current movie titles will display.)
2. Select a movie title and press .
3. From the Movie Title display, select an option and follow the onscreen instructions. Options available may include:
 - **Date** to select a date for the movie.
 - **Details** to view the movie's details, which may include cast, running time, plot synopsis, MPAA rating, reviews, etc.
 - **<theater listing>** to view the movie's showtimes at a number of selected movie theaters in your area. Follow the onscreen instructions to purchase will-call tickets (may not be available for all theaters or for all showtimes).

Additional permanent On Demand categories such as Money (which features a customizable stock ticker [delayed 20 minutes]), Weather, and Sports (which allows you to select your top teams), along with optional categories such as Maps and TV Guide, bring the information you want right to your screen – all without having to go through a traditional Web search.

Using Your Sprint PCS Phone as a Modem

Your Sprint Power Vision Multimedia Phone's data capabilities enable you to use your phone's high-speed data connection as a modem for your desktop or laptop PC. You'll be able to send and receive email, browse the Internet, and access your company's network anywhere on the nationwide Sprint PCS network.

Note: To use this service, you are required to sign up on a Sprint Power Vision with Phone as Modem plan. Go to www.sprint.com or visit a Sprint Store for phone as modem plan details and more information.

Setting Up a Data Connection With Your PC

In order to use your phone as a modem, you'll first need to load the Sprint Power Vision Connection Manager software on your PC, then use the supplied USB cable to connect your phone to your PC.

To set up your phone-to-PC data connection:

1. From your computer's traditional Internet connection, go to www.sprint.com/downloads and download the Sprint Power Vision Connection Manager software. (The software and drivers can be downloaded free of charge.)
2. Double-click on the downloaded file and follow the onscreen instructions to install the Sprint Power Vision Connection Manager software and drivers to your PC.
3. Once the software has been fully installed, connect your phone to your PC using the supplied USB cable. (Your PC will detect the connection and an icon will appear in your system tray.)

4. Launch the Sprint Power Vision Connection Manager software, select a profile, and click **Connect**.
5. Once the connection is established, launch an Internet session, check your email, or do anything else you would do using a traditional data connection.
6. When you're ready to terminate the data connection, double-click on the Sprint Power Vision Connection Manager icon in the system tray, then click **Disconnect** to end the session.
7. Disconnect the USB cable from your phone and your PC.

Note: While your data connection is active, you will not be able to receive incoming calls; all incoming calls will be forwarded to your Sprint PCS Voicemail. Placing an outgoing call during a data session terminates the data connection.

Note: Sprint PCS Vision services are available on the nationwide Sprint PCS network. Sprint Power Vision services work anywhere on the nationwide Sprint PCS network, but Broadband-like download speeds are only available in areas with high-speed data coverage.

Sprint PCS Voice CommandSM

In This Section

- ◆ **Getting Started with Sprint PCS Voice CommandSM**
 - ◆ **Creating Your Own Address Book**
 - ◆ **Making a Call with Sprint PCS Voice Command**
 - ◆ **Accessing Information Using Sprint PCS Voice Command**
-

With Sprint PCS, reaching your friends, family, and co-workers has never been easier – especially when you're on the go. You can even listen to Web-based information, such as news, weather, and sports. Your voice does it all with Sprint PCS Voice Command.

This section outlines the Sprint PCS Voice Command service.

Getting Started With Sprint PCS Voice Command

With Sprint PCS Voice Command:

- You can store all your contacts' phone numbers, so you can simply say the name of the person you want to call.
- There's no need to punch in a lot of numbers, memorize voicemail passwords, or try to dial while you're driving.
- You can call anyone in your address book – even if you don't remember their phone number.
- You don't need to worry about losing your contacts or address book. This advanced service is network-based, so if you switch or happen to lose your Sprint PCS Phone, you won't lose your contacts or address book.

It's Easy to Get Started

There are two easy ways to sign up for Sprint PCS Voice Command:

- ▶ Sign up when you purchase and activate your phone.
- ▶ Just dial **Shift** **✕** **ABC 2** **TALK** from your Sprint PCS Phone to contact Sprint Customer Service and sign up.

There is a monthly charge for Sprint PCS Voice Command.

Creating Your Own Address Book

You can program up to 500 names into your personal address book, with each name having up to five phone numbers. That's 2,500 phone numbers, and with the advanced technology of Sprint PCS Voice Command, you can have instant access to all of them.

There are four ways to update your address book:

- **On the Web.** Go to www.talk.sprintpcs.com and sign on with your Sprint PCS Phone Number and password to access a fully functional Web-based address book to create and update your contacts.
- **Use an Existing Address Book.** Automatically merge address books from desktop software applications with Sprint SyncSM Services for no additional charge. Simply click on the “Click to synchronize” button within your Sprint PCS Voice Command personal address book at www.talk.sprintpcs.com.
- **Use Voice Recordings.** Simply dial **Shift** **X** **TALK** and say, “Add name.” You will then be asked to say the name and number you want to add to your personal address book. Your address book can store up to 20 voice recorded names at once.
- **Call Directory Assistance.** If you don't have a computer or Internet access handy, you can have Sprint PCS Directory Assistance look up phone numbers for you and automatically add them to your address book. Just dial **Shift** **X** **TALK** and say “Call operator” and we'll add two names and all the numbers associated with those names to your address book for our standard directory assistance charge.

Making a Call With Sprint PCS Voice Command

To make a call with Sprint PCS Voice Command:

1. Press **Shift**  **TALK** and you'll hear the "Ready" prompt.
2. After the "Ready" prompt, simply say, in a natural voice, "Call" and the name of the person or the number you'd like to call. (For example, you can say, "Call Jane Smith at work," "Call John Baker on the mobile phone," "Call 555-1234," or "Call Bob Miller.")
3. Your request will be repeated and you will be asked to verify. Say "Yes" to call the number or person. (The number will automatically be dialed.) Say "No" if you wish to cancel.

Tip: Keep in mind that Sprint PCS Voice Command recognizes not only your voice, but any voice, so that others can experience the same convenience if they use your phone.

For more helpful hints on Sprint PCS Voice Command, including a list of recognized commands and an interactive tutorial, visit www.talk.sprintpcs.com.

Accessing Information Using Sprint PCS Voice Command

To access information using Sprint PCS Voice Command:

1. Press **Shift** **TALK**.
2. Say “Call the Web” and choose from a listing of information categories like news, weather, and sports.
– or –
Simply say “Call news room,” “Call the weather,” “Call Sports Central,” etc.

Note: Sprint PCS Voice Command is not available while roaming off the nationwide Sprint PCS network.

Safety and Warranty Information



Safety

In This Section

- ◆ Getting the Most Out of Your Reception
 - ◆ Maintaining Safe Use of and Access to Your Phone
 - ◆ Caring for the Battery
 - ◆ Acknowledging Special Precautions and the FCC Notice
 - ◆ Owner's Record
 - ◆ Phone Guide Proprietary Notice
-

Part of getting the most out of your Sprint PCS Phone is learning how the phone works and how to care for it. This section outlines performance and safety guidelines that help you understand the basic features of your phone's operation.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability; you can also check it yourself by pressing any key. Anytime the Power Save feature is activated, a message is displayed on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radiofrequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your Sprint PCS Phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended, and over your shoulder.
- Try not to hold, bend, or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.

Note: For the best care of your phone, only Sprint authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Tip: Purchase an optional hands-free accessory at your local Sprint Store, or call the Sprint PCS Accessory Hotline™ at 1-800-974-2221 or by dialing   

  on your Sprint PCS Phone.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radiofrequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint PCS Invoice.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Sprint-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest Sprint authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking Lilon battery.

Acknowledging Special Precautions and the FCC Notice

FCC Notice

This phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated. This device has been tested and found to comply with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

Vehicles using liquefied petroleum gas (propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protections Association, One Batterymarch Park, Quincy, MA 02269, Attn.: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 1.9 centimeters from your body when transmitting. Use of non-Sprint approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the MM-9000 are:

Cellular CDMA mode (Part 22):

Head: 0.380 W/kg; Body-worn: 0.851 W/kg

PCS CDMA mode (Part 24):

Head: 0.766 W/kg; Body-worn: 0.635 W/kg

FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines.

FCC ID number: AEZSCP-90H. More information on the phone's SAR can be found from the following FCC Website: <http://www.fcc.gov/oet/fccid>.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Sprint Power Vision™ Multimedia Phone MM-9000 by Sanyo

Serial No.:

Phone Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Phone Guide template version 5A_int (July 2005)

Manufacturer's Warranty

In This Section

◆ Manufacturer's Warranty

Your Sprint PCS Phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your Sprint PCS Phone, please visit www.sprint.com and click on the "Terms & Conditions" link at the bottom or call Sprint Customer Service at 1-888-211-4PCS.

Manufacturer's Warranty

Customer Limited Warranty

SPRINT SPECTRUM, L.P., (Sprint) offers you a limited warranty that the enclosed subscriber unit (Product), including accessories in the product package, will be free from defects in material or workmanship as follows:

SUBSCRIBER UNIT:

A. SPRINT ONE (1) YEAR LIMITED WARRANTY: For a period of one (1) year from the date of purchase, Sprint will, at its option, either pay the parts and labor charges to any authorized PCS' Phone service facility to repair or replace a defective product (with new or rebuilt parts/replacements). After this one (1) year period, you must pay all parts, shipping and labor charges.

B. REPAIRS: For a period equal to the remainder of the original limited warranty period on an original Product or for the 180 days after the date of repair/replacement, whichever is longer, Sprint will repair or replace (with new or rebuilt replacement) defective parts or Product used in the repair or replacement of the original Product under this Limited Warranty.

Proof of purchase in the form of a bill of sale or receipted invoice warranty repair document which is evidence that the Product is within the warranty period must be presented to obtain warranty service. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Products.

Transfer or resale of a Product will automatically terminate warranty coverage with respect to the Products.

This limited warranty does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or used with accessories not supplied by Sprint), abuse accident, physical damage, abnormal operation, improper handling and storage, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature, (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, removal or reinstallation; (viii) signal reception problems (unless caused by defect in

material and workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of Sprint and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as fuses); or (xi) any Products which have been opened, repaired, modified or altered by anyone other than Sprint or a Sprint authorized service center.

This warranty does not cover customer education, instruction, installation, set up adjustments, or signal reception problems.

This warranty is valid only in the United States.

USE WITH ACCESSORIES NOT SUPPLIED BY SPRINT OR OTHERWISE NOT EXPRESSLY AUTHORIZED BY SPRINT MAY BE DANGEROUS.

SPRINT SPECIFICALLY DISCLAIMS LIABILITY, AND SHALL HAVE NO OBLIGATION TO PROVIDE TO BUYER ANY OTHER REMEDY, FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT), DAMAGE DUE TO IMPROPER OPERATION OR MAINTENANCE, INSTALLATION, CONNECTION TO IMPROPER VOLTAGE SUPPLY. OR ATTEMPTED REPAIR OF THE PRODUCT BY ANYONE OTHER THAN A FACILITY AUTHORIZED BY SPRINT. THIS WARRANTY DOES NOT COVER PRODUCTS SOLD AS IS OR WITH ALL FAULTS, OR CONSUMABLES, (SUCH AS FUSES). THIS WARRANTY DOES NOT APPLY WHEN THE MALFUNCTION RESULTS FROM USE OF THE PRODUCT IN CONJUNCTION WITH ACCESSORIES, PRODUCTS OR ANCILLARY OR PERIPHERAL EQUIPMENT NOT SUPPLIED BY OR EXPRESSLY AUTHORIZED FOR USE BY SPRINT, AND WHERE IT IS DETERMINED BY SPRINT THAT THERE IS NO FAULT WITH THE PRODUCT ITSELF.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, SPRINT MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCTS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT WITHIN THE TIME PERIOD SPECIFIED IN THE LIMITED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty last, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State.

For other Warranty Service Information, please call SPRINT CUSTOMER SERVICE at 1- 888- 211- 4727.

Copyright(c) 2005 ACCESS Systems America Inc. ACCESS, NetFront are registered trademarks or trademarks owned by ACCESS Co., Ltd. in Japan and selected countries worldwide. NetFront is a registered trademark of NetFront Communications, Inc. in the United States and is used under a license. Portions of this software are based in part on the work of the Independent JPEG Group.

Copyright (c) 2005 InnoPath Software. All rights reserved.

© 2005 Sprint Nextel. All rights reserved. No reproduction in whole or in part without prior written approval. Sprint, the "Going Forward" logo and other trademarks are trademarks of Sprint Nextel. Sanyo is a registered trademark of Sanyo Electric Co., Ltd.

Index

A

- Abbreviated Dialing 41, 84
- Airplane Mode 76
- Alarm Clock 147
- Alert Notification 57
- Animation 61
- Answering Calls 27
- Any Key Answer 82
- AOL Instant Messenger 300
- AOL Mail 299
- Area Name Display 62
- Auto Answer Mode 80
- Automatic Speech
 - Recognition (ASR) 154-165
 - Activating 154
 - ASR Help 165
 - Digit Training 164
 - Making a Voice Call 156
 - Making International Calls 161
 - Making Sprint PCS Ready Link Calls 162

B

- Backlight 60
- Battery
 - Capacity 22
 - Charging 23
 - Disposal 340
 - Installing 22
 - Removing 23

- Bookmarks 309
- Browser Menu 307

C

- Calculator 150
- Calendar 136-144
- Call Alarms 139
- Call Forwarding 287
- Call Guard 103
- Call History 113-119
 - Erasing 119
 - Making a Call From 116
 - Options 115
 - Prepending a Number From 118
 - Saving a Phone Number From 117
 - Viewing 114
- Call Waiting 285
- Callback Number 72
- Caller ID 285
- Camera 199-228
 - Camera Mode Options 203
 - Flash 205
 - Self-Timer 205
 - Settings 209
 - Stitch Shot 206
 - Taking Pictures 200
 - Zoom 207
- Chat 301

- Contacts Directory 121-134
 - Adding an Entry 123
 - Assigning Images 131
 - Dialing From 39
 - Displaying 122
 - Editing Entries 129
 - Entry Options 127
 - Finding Entries 124
 - Secret Entries 133
- Countdown Timer 148

D

- Digital Print Order Format (DPOF) 192
- Display Language 80
- Display Settings 59-68
 - Area Name 62
 - Background 66
 - Font Size 67
 - Incoming Calls 61
 - LED 63
 - Menu Style 65
 - My Buddy 66
 - Screen Saver 65
 - Standby Display 64
- Downloading Premium Services Content 302-306

E

- EarthLink 299
- Email 299
- Entering Text 42-47
 - Alphabet Mode 46
 - Input Mode 42
 - T9 Text Input 43

- Erasing
 - Contacts Directory 93
 - Downloads 94
 - Sprint PCS ReadyLink Lists 249
 - Voice Tags 93
- Event Alerts 138

F

- Flash 205
- Font Size 67

H

- Headset Mode 85

I

- Icon Definitions 145
- Instant Messaging 300

K

- Key Press Echo 54

L

- LED Indicator 63
- Location Settings 69
- Locking Your Phone 88

M

- Macro/Normal Switch 204
- Making Calls 25
- Media Player 189, 257-263
 - Channel Listings 259
 - Channel Options 258
 - FAQs 261
 - Playing a Clip 260
- Menu Diagram 108
- Menu Navigation 106

Menu Style 65
Messaging
 Pop-up Messages 70
 Settings 70
Mini-Flashlight 207
miniSD Card 181-197
 Adapter 185
 Icon Indications 184
 Inserting 182
 Removing 183
 Settings 186
MSN Hotmail 299
MSN Messenger 300
Multimedia - See Media
 Player
My Buddy 66
My Content Manager 304
My Favorites 79

N

Net Guard 293

O

On Demand 321-323
Open/Close Flip Option 81

P

Phone as Modem 324-325
Phone Number
 Displaying 24
 Finding 37
 Saving 36
 With Pauses 37
PictBridge 194

Pictures

Digital Print Order Format
 192
Downloading 228
In Phone Folder 218
Printing Directly From
 Your Phone 194
Sending 222
Storing 217
Taking 200
Uploading 228
Plus (+) Code Dialing 38
Power On to Alert 86
Preset Messages 281

R

ReadyLink - See Sprint PCS
 ReadyLink
ReadyLink Guard 252
Resetting Your Phone 95
 Through SMS 96
Restricting Calls 91
Return to Standby 68
Ringer Types 50
 Calendar/Alarm 52
 Messaging 52
 Roaming Calls 51
Sprint PCS ReadyLink Calls
 51, 252
Voice Calls 50
Voicemail 52
Roaming 99-104
 Call Guard 103
 Setting Roam Mode 102

S

Safety Information 335-343

Screen Call 176

Screen Saver 65

Security 87-98

 Calling in Lock Mode 90

 Changing the Lock Code
 90

 Locking Your Phone 88

 Menu 88

 Unlocking Your Phone 89

Self-Timer 205

Side Key Guard 82

Silence All 58

Sleep Mode 68

SMS Messaging - See Text

 SMS Messaging and Voice

 SMS Messaging

Special Numbers 92

Speed Dialing 40

 Assigning Numbers 130

Sprint Customer Service 7

Sprint Music Store 317-320

Sprint PCS Mail 298

Sprint PCS Picture Mail

 Sending From In Phone
 222

 Sending From Messaging
 224

 Viewing 226

 Web site 225

Sprint PCS ReadyLink
229-256

 Adding a Group 244

 Adding and Editing
 Contacts 241

 Alert Notification 254

 Call Alerts 231

 Erasing Entries 248

 Erasing Lists 249

 Making a Call by Entering a
 Number 237

 Making a Group Call 236

 Making a One-to-One Call
 234

 Missed Call Notification
 238

 Options 240

 ReadyLink List 233

 Receiving a Call 239

 Ringer Types 252

 Setting ReadyLink Mode
 230

 Settings 250

 Updating the Lists 250

Sprint PCS Service

 Account Password 6

 Dialing From Contacts 134

 Directory Assistance 8

 Operator Services 9

Sprint PCS Vision 289-314

 Chat 301

 Connection Status and
 Indicators 294

- Downloading Premium Services Content 302
- Email 299
- FAQs 313
- Instant Messaging 300
- Launching a Connection 292
- My Content Manager 304
- Navigating the Web 295
- Net Guard 293
- Password 6
- Sprint PCS Mail 298
- User Name 290
- Sprint PCS Voice Command 327-331
 - Accessing Information 331
 - Address Book 329
 - Making a Call 330
- Sprint Power Vision 315-325
 - Data Connection 324
 - Enabling 316
 - On Demand 321
 - Phone as Modem 324
 - Sprint Music Store 317
- Standby Mode Display 64
- Start-up/Power-off Tone 53
- Stitch Shots 206
- Stop Watch 149

T

- T9 Text Input 43
- Text Greeting 59
- Text SMS Messaging 278-281
 - Accessing 280
 - Composing 279
- Three-Way Calling 286
- To Do List 142
- Tone Length 53
- TTY Use 77

U

- Unlocking Your Phone 89
- Updating Your Phone 151
- USB Connection 196
- User Address 145

V

- Vibrate Patterns 56
- Videos
 - Downloading 228
 - Options 213
 - Recording 211
 - Sending 222
 - Storing 217
 - Uploading 228
- Voice Memos 166
- Voice Prompt 54
- Voice Recorder 166
- Voice SMS Messaging 282-284
 - Accessing 284
 - Composing 283

- Voice Tags
 - Erasing 160
 - Making a Call With 158
 - Programming 159
 - Reviewing 159
- Voicemail
 - Clearing the Icon 275
 - Menu Key 276
 - Message Alerts 269
 - Notification 269
 - Options 272
 - Password 6
 - Retrieving 270
 - Setting Up 5, 268
- Volume Settings 55

W

- Warranty 346
- Web 307
- World Clock 150

Y

- Yahoo! Mail 299
- Yahoo! Messenger 300

