

Sprint PCS[®]

The clear alternative to cellular.SM

Table of Contents

Welcome to Sprint PCS	1
Getting Started With Sprint PCS Service	3
Getting Started With Sprint PCS Service	4
Setting Up Your Voicemail	5
Getting Help	6
Understanding This User Guide	9
Getting to Know Your Sprint PCS Phone™	11
Highlights	12
Front View of Phone	14
Viewing the Display Screen	16
Turning Your Phone ON and OFF	17
Using the KeyGuard	18
Using the Battery	18
Understanding Roaming	21
Understanding How Roaming Works	22
Setting Your Phone's Roam Mode	24
Setting an Alert When Roam Charges Apply (Call Guard)	25
Setting the Time and Date in Analog Mode	26
Making and Answering Calls	27
Making Calls	28
Answering Calls	28
Missed Call Notification	29
Using the Speakerphone	29
Using Sprint PCS Voice Command	30
Dialing Options	32
In-Call Options	33
Incoming Call Notification	34
End-of-Call Options	35
Saving a Phone Number	36
Finding a Phone Number	36
Dialing and Saving Phone Numbers With Pauses	37

4-Digit Dialing	37
Calling Emergency Numbers	38
Using One-Touch Speed Dialing	38
Displaying Your Phone Number	38
Redialing Last Outgoing Number	38
Using Any Key Answer	38
Using Auto Answer	39
Dialing from an Internal Phone Book Memory Location	39
Navigating Through Menus and Entering Text	41
Menu Navigation	42
Shortcuts	42
Working Within the Menu Structure	43
Viewing the Menus	44
Selecting a Character Input Mode	46
Entering Characters by Tapping the Keypad	46
Entering Characters Using T9 Text Input	47
Adding a Word to the T9 Database	48
Using Smart Punctuation	48
Entering Symbols and Numbers	49
Adjusting Volume	51
Changing Ringer Volume	52
Silencing the Ringer	52
Adjusting Volume During a Conversation	53
Muting a Call	53
Using Sprint PCS Service Features	55
Using Caller ID	56
Responding to Call Waiting	56
Three-Way Calling	57
Forwarding Your Calls	58
Managing Messaging	59
Setting Up Voicemail	60
Knowing When You Have Messages	60
Message Types	60

New Voicemail Message Alerts	61
Retrieving Your Voicemail Messages	61
Clearing the Voicemail Message Icon	62
Sending Web Messages	62
New Web Messages	63
Web Message Storage	63
Displaying Web Messages	64
Web Message Options	65
Prepending a Phone Number From a Web Message	66
Extracting Phone Numbers or Email/Web Addresses From Sprint PCS Web Messages	66
Adding a Folder To the Sprint PCS Web Message	68
Moving a Sprint PCS Web Message Into the Other Folder	68
Erasing Individual or All Old Sprint PCS Web Messages	68
Classifying Sprint PCS Web Messages	69
Sprint PCS Wireless Web Update Options	70
New Web Alerts	70
Displaying Web Alerts	70
Managing Call History	71
Viewing Call History (Incoming Outgoing and Missed)	72
Call History Options	73
Making a Call From Call History	73
Prepending a Phone Number From Call History	74
Saving a Phone Number From Call History	75
Erasing Call History	75
Using Your Internal Phone Book	77
Adding a New Internal Phone Book Entry	78
Finding Internal Phone Book Entries	79
Internal Phone Book Entry Options	80
Adding a Phone Number or Address to an Internal Phone Book Entry	80
Adding a Call Alarm From the Internal Phone Book	81
Call Alarm Alerts	81
Call Alarm Menu	82
Editing an Internal Phone Book Entry	82

Secret Internal Phone Book Entries	83
Dialing Sprint PCS Services	84
My Sprint PCS Phone Number	84
Storing Special Numbers in the Phone Book	85
Using Different Dialing Methods	86
Changing Your Phone's Settings	89
Changing the Greeting	90
Adjusting the Ringer Volume	90
Ringer Types	91
Selecting Ringer Types for Voice Calls	91
Selecting Ringer Types for Messages	91
Setting Alerts	92
Setting Tone Length	92
Setting Melody Tempo	92
Setting Start-up Tone	93
Setting Headset Mode	93
Changing the Menu Language	93
Changing the Backlight Time Length	94
Changing the Contrast	94
Displaying the Version Information	94
Data/Fax Mode	95
Receiving a Fax	95
Receiving Data	95
Returning to Voice Mode	95
Setting Your Phone's Security	97
Accessing the Security Menu	98
Locking Your Phone	98
Unlocking Your Phone	98
Changing the Lock Code	98
Restricting Calls	99
Unrestricting Calls	99
Locking the Keypad	100
Unlocking the Keypad	100

Using Special Numbers	100
Erasing the Internal Phone Book	100
Resetting Your Phone	101
Resetting and Locking Your Phone through SMS	101
Changing the Passcode	102
Personal Information Management	103
Adding an Event to the Scheduler	104
Event Alerts	105
Event Alert Menu	105
Adding a Call Alarm to the Scheduler	106
Call Alarm Menu	107
Viewing Events and Call Alarms	108
Editing Events	109
Editing Call Alarms	109
Adding To Do Items	110
Viewing To Do Items	110
Editing To Do Items	111
Deleting To Do Items	111
Viewing and Clearing Memory	112
Setting Environment	112
Editing the Environment Setting	113
Using the Calculator	113
Playing Games	114
Using the Voice Services of Your Sprint PCS Phone	115
Using Voice-Activated Dialing	116
Programming Voice - Activated Dialing Tag to Your Phone	116
Erasing Voice- Activated Dialing Entries	117
Recording Memos	117
Erasing Recorded Voice Memo	117
Memo Options	118
Voice- Activated Dialing Options	118
Using Voice Ringer	119
Using Voice Prompt	119

Experiencing Sprint PCS Wireless Web™	121
The Sprint PCS Wireless Web	122
The Sprint PCS Wireless Web Browser	123
Launching the Sprint PCS Wireless Web Browser	124
Using the Sprint PCS Wireless Web Browser	126
Using Sprint PCS Wireless Web Mail	132
Using AOL Instant Messenger Service	133
Using Sprint PCS Wireless Web Short Mail	134
Signing Up for Sprint PCS Wireless Web Updates	135
Setting Up a Sprint PCS Wireless Web Connection	136
Selecting Your Accessories	139
Accessory Options	140
How to Order	141
Knowing Performance and Safety Guidelines	143
Getting the Most Out of Your Reception	144
Maintaining Safe Use of and Access to Your Phone	146
Caring for the Battery	149
Acknowledging Special Precautions and the FCC Notice	150
Owner's Record	153
User Guide Proprietary Notice	153
Terms and Conditions & Warranty Information	155
Terms and Conditions of Services	156
Manufacturer's Warranty	170
Index	175

Welcome to Sprint PCS

Sprint PCS built the only all-digital, all-PCS nationwide network from the ground up for clearer calls, serving more than 300 major metropolitan areas. We built our network to give you what we believe you really want from a wireless phone: clear sound, private conversations and time-saving features.

And Sprint Personal Communications Services® can do something even more far-reaching – simplify your life. Our advanced technology is designed to grow with your communications needs so that one day you'll be able to rely entirely on your Sprint PCS Phone™ to stay connected.

This guide will introduce you to our technology and your new Sprint PCS Phone through simple, easy-to-follow instructions. Since you're probably anxious to start using your phone, we encourage you to immediately flip to Section One – Getting Started With Sprint PCS Service. This section provides all the information you need to quickly activate your phone, set up your voicemail and much more. It also contains information on how to contact Sprint PCS should you have questions about service, want to purchase additional products or services, or just check your account balance.

Thank you for choosing Sprint PCS.

Getting Started With Sprint PCS Service

In This Section

- ▶ **Activating Your Phone**
 - ▶ **Setting Up Your Voicemail**
 - ▶ **Getting Help**
 - ▶ **Understanding This User Guide**
-

This section walks you through the step-by-step basics of setting up service for your Sprint PCS Phone™, including activating or unlocking your phone, selecting your Sprint PCS Service Plan, receiving your new Sprint PCS Phone Number, and setting up your voicemail.

Once you have completed this section, you're ready to explore the advanced features of your new phone.

Getting Started With Sprint PCS Service

Determine if Your Phone is Already Activated

If you received your phone in the mail or purchased it at a Sprint® Store, it probably has been activated. All you need to do is unlock your phone.

If your phone is not activated, please refer to your “Quick-Start Guide to Activating” for easy step-by-step instructions.

Unlocking Your Phone

Follow these steps to unlock your phone:

1. Press and hold **POWER** to turn the phone on.
2. Highlight **Unlock** and press **OK**.
3. Enter your four-digit lock code. For security purposes, the code is not visible as you type.

Activating Your Phone

To activate your phone, follow the directions in the “Quick-Start Guide to Activating” that was included with your phone.

Setting Up Your Voicemail

All unanswered calls to your Sprint PCS Phone are automatically transferred to voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint PCS voicemail box and personal greeting as soon as your Sprint PCS Phone is activated.

To set up **Voicemail**:

1. Press and hold **1**.
2. Follow the system prompts to create your passcode, record your greeting, record your name announcement and choose whether to activate One-Touch Message Access (a feature that lets you press one key to access messages and bypasses the need for you to enter your passcode).

Note:

The voicemail setup process may vary in certain affiliate areas.

Getting Help

Visiting Our Web Site

Stop by www.sprintpcs.com to get up-to-date information on Sprint PCS. You can also:

- ▶ Review coverage maps
- ▶ Learn how to use voicemail
- ▶ Access your customer account
- ▶ Purchase accessories
- ▶ Add additional options to your service plan
- ▶ Check out frequently asked questions

Sprint PCS Customer Care

Sprint PCS Customer Advocates are available to assist you 24 hours a day, seven days a week. Simply dial 1-888-211-4PCS (4727) from any phone or press ***** **2** **TALK** or **SPEAKER** from your activated Sprint PCS Phone while on the Sprint PCS Nationwide Network.

To call the Customer Care from the main menu:

1. From the main menu, highlight **Phone Book** and press **OK**.
 2. Highlight **Services** and press **OK**.
 3. Highlight **Customer Care** and press **OK**.
 4. Press **TALK** or **SPEAKER**.
- or
- Highlight **Call** or **Call:Speaker On** and press **OK**.

Once you dial Sprint PCS Customer Care, you can access a number of helpful account services through our automated Customer Care line. By following the voice prompts, you'll be able to learn more about Sprint PCS Products and Services, get Sprint PCS coverage by zip code, or request a copy of your invoice.

Sprint PCS Directory Assistance

Sprint PCS Directory Assistance provides a variety of services, including: residential, business and government listings; assistance with local or long-distance calls; movie listings; hotel, restaurant and shopping information and major local event information. There is a per call charge and you will be billed for airtime.

- ▶ Press **4** **1** **1** **TALK** or **SPEAKER**.

To call the Directory Assistance from the main menu:

1. From the main menu, highlight **Phone Book** and press **OK**.
 2. Highlight **Services** and press **OK**.
 3. Highlight **Dir Assist** and press **OK**.
 4. Press **TALK** or **SPEAKER**.
- or
- Highlight **Call** or **Call:Speaker On** and press **OK**.

Dialing Sprint PCS Roadside Rescue

If you need emergency service on the road, you can get help from Sprint PCS Roadside Rescue. Follow these steps:

- ▶ Press **SPACE#** **7** **6** **2** **3** **TALK** or **SPEAKER**.

To call the Roadside Rescue from the main menu:

1. From the main menu, highlight **Phone Book** and press **OK**.
 2. Highlight **Services** and press **OK**.
 3. Highlight **Road Assist** and press **OK**.
 4. Press **TALK** or **SPEAKER**.
- or
- Highlight **Call** or **Call:Speaker On** and press **OK**.

Note:

This service may not be available in all affiliate markets.

Receiving Automated Billing Information

For your convenience, your phone gives you free access to billing information on your Sprint PCS Account. This information includes balance due, payment received, billing cycle and the amount of minutes used since your last billing cycle. Follow these steps to access this information:

1. Press ***** **4** **TALK** or **SPEAKER**.
2. Follow the voice prompts to receive the information you want.

To call the Automated Billing Information from the main menu:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **Services** and press **OK**.
3. Highlight **Account Info.** and press **OK**.
4. Press **TALK** or **SPEAKER**.
or
Highlight **Call** or **Call:Speaker On** and press **OK**.

Sprint PCS Operator Services

Sprint PCS Operator Services can provide assistance in placing collect calls or calls billed to a local telephone calling card or a third party.

- ▶ Press **0** **TALK** or **SPEAKER**.

For more information or to see the latest in products and services, visit us online at www.sprintpcs.com.

Sprint PCS Voice Command

Sprint PCS Voice Command lets you dial with your voice. See pages 30-31 for detailed information.

- ▶ Press ***** **TALK** or **SPEAKER**.

Understanding This User Guide

This user guide introduces you to our technology and all the advantages of your new Sprint PCS Phone – through easy-to-follow instructions.

- ▶ Sections break down categories of information to progressively take you all the way from learning the basics to using the most advanced phone features.
- ▶ Tips highlight special shortcuts and timely reminders to help you make the most of your new phone.
- ▶ The Index helps you find specific information quickly.

We know that your time is valuable and that's why we've designed this guide to be used in a building block format or in stand-alone sections. You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, you'll be able to locate the specific section using the colored tabs. Follow the instructions in that section and you'll be ready to use your phone in no time.

Getting to Know Your Sprint PCS Phone™

In This Section

- ▶ **Your Phone's Highlights and Features**
 - ▶ **Front View of Phone**
 - ▶ **Viewing the Display Screen**
 - ▶ **Turning Your Phone ON and OFF**
 - ▶ **Using the Battery**
-

Your Sprint PCS Phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. We know that you're anxious to start using it, so this section will give you a quick introduction to your new phone. The easy-to-follow instructions will guide you through the basics of the most common features of your phone and you'll be on your way to using it in no time.

Don't forget the other chapters in this guide. They're filled with information about the capabilities and benefits of your new Sprint PCS Phone. They include detailed step-by-step instructions that familiarize you with all the features and explain how to customize your phone to meet your specific needs.

Highlights

Congratulations on the purchase of your Sprint PCS Phone™ (SCP-4700). This phone is lightweight, easy-to-use, reliable, and offers many significant features:

- ▶ Dual-Band capability provides access to other PCS CDMA and analog cellular where Sprint PCS has implemented roaming agreements. (pages 22-23)
- ▶ Sprint PCS Wireless WebSM Browser provides access to the wireless Internet in digital mode. (pages 124-125)
- ▶ Sprint PCS Wireless Web MailSM, AOL Instant MessengerSM Service and Sprint PCS Wireless Web Short MailSM provide quick and convenient text messaging capabilities. (pages 132-134)
- ▶ Sprint PCS Wireless WebSM Connection offers wireless modem capabilities for your personal computer in digital mode. (pages 136-138)
- ▶ Sprint PCS Voice CommandSM lets you dial phone numbers by speaking someone's name or the digits in their phone number. (pages 30-31)
- ▶ Voice Dialing lets you call the phone numbers of the Phone Book entry by saying the programmed names into the phone (pages 116-118).
- ▶ Speed Dialing lets you call the phone number stored in the Phone Book by one touch dialing (pages 86-87).
- ▶ Phone Book can store up to 300 names, 300 phone numbers, 100 e-mail addresses and 20 web addresses. Each entry can contain 7 phone numbers, 1 Email, 1 Web. (section 10)
- ▶ Calendar function helps control your schedules conveniently and make you remember to call someone by displaying the phone number (pages 104-113).
- ▶ Tegic T9 text input decrease the time of entering characters and gives you the easier way to edit the text messages (pages 46-49).

Front View of Phone



1. **Red Light:** Illuminates when **POWER** is pressed and when you have incoming calls or messages.
2. **Headset Jack:** Insert the plug of the headset (must be purchased separately) for hands-free listening.
3. **Volume Key:** Lets you adjust the sound level during a call, or ring volume in Standby mode.
4. **OK:** Lets you place a call, receive a call and select menu options.
5. **Navigation Key:** Lets you navigate quickly and easily through the menu options.
6. **TALK:** Lets you place a call, receive a call, answer Call Waiting, use Three-Way Calling and Voice Dial.
7. **POWER:** Turns the phone on and off.
8. **END:** Lets you disconnect a call and return to Standby mode. Lets you mute ringer when ringing.
9. **CLR:** Allows you to clear characters from the screen or back up menu levels.
10. **SPEAKER Key:** Lets you set the Speaker Phone Mode to on and off (Speaker is backside of the phone.) or use Voice Dial.
11. **Antenna:** The voice on the other end sounds clearest when the antenna is all the way up.

Viewing the Display Screen

This list identifies the symbols you'll see on your display screen.

- ▶  shows your current signal strength. The more lines you have, the stronger your signal.
- ▶  means your phone cannot find a signal.
- ▶  tells you a call is in progress.
- ▶  indicates you are "roaming" off the Sprint PCS Nationwide Network.
- ▶  indicates you have voicemail, text, numeric messages or Sprint PCS Web Alert waiting. Press  to call your voicemail box.
- ▶  indicates the vibrate mode.
- ▶  indicates the Speaker Phone mode is set to ON.
- ▶  shows your current battery charge strength. (Icon shown fully charged.)

Turning Your Phone ON and OFF

Turning Your Phone ON

To turn your phone on, press  for approximately two seconds.

Once your phone is ON, it displays "Looking for Service..." indicating that your phone is searching for a signal. When your phone finds a signal, it automatically enters Standby mode – the phone's idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In power save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS Service by pressing any key (when your phone is turned ON).

Turning Your Phone OFF

Press  for two seconds until you see "Powering off" on the display screen.

Your screen remains blank while your phone is off.

Using the KeyGuard

The Key Guard feature helps avoid accidental key presses without blocking incoming calls or messages. Key Guard is disabled when you receive an incoming call and is reactivated when the call is complete.

1. To activate the KeyGuard, highlight **KeyGuard** in the main menu and press **OK**.
2. To disable the KeyGuard, press and hold **CLR**.

Using the Battery

Battery Capacity


Your Sprint PCS Phone is equipped with a Lithium Ion (LiIon) battery. It allows you to recharge your battery before it is fully drained. The battery provides approximately 4 hours of continuous digital talk time (1.25 hours in analog) or approximately 12 days of continuous digital standby time (10 hours in analog).

When there are approximately five minutes of talk time left, the battery icon blinks and the phone sounds an audible alert every 30 seconds and then powers down.

Installing the Battery

Your Sprint PCS Phone comes with a LiIon battery. Follow these steps to install it:


1. Place the battery into the space beneath the antenna with the metal contacts at the bottom, facing downward.
2. Gently press down until it's in place and the battery release latch snaps.

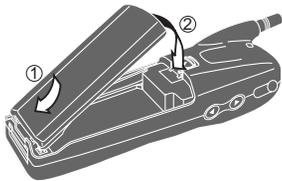

Removing the Battery

To remove your battery for charging, or for another reason, follow these easy steps:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Press up on the battery release latch and hold the battery, then pull it up and out at a 45-degree angle.

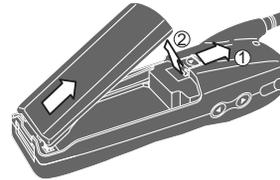

Charging the Battery

Your Sprint PCS Phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon (☐) blinks and the phone sounds a warning tone.

Always use the Sprint PCS-approved Desktop Charger, Travel Charger or Vehicle Power Adapter to charge your battery.

Warning!

Using the wrong battery charger could cause damage to your phone and void the warranty.

Using the Travel Charger

When you are ready to charge your battery, it is vital that you use only Sprint PCS-approved Travel Charger and AC adapter chargers. To use the travel charger provided with your phone:

1. Plug the travel charger into a wall outlet.
2. Plug the other end of the travel charger into the bottom of your phone, with the battery installed.

- ▶ Charging when your phone is turned on:

The battery icon  is blinking while charging. The battery icon  stops blinking when charging is complete.

- ▶ Charging when your phone is turned off:

The battery icon  is blinking, and the message “BATTERY CHARGING -Power Off” is shown on the display while charging. When the battery is completely discharged, you may wait for several minutes until the message is shown on the display. The battery icon  stops blinking, and message changes to “CHARGING COMPLETE--Power Off--” when charging complete.

It generally takes about 3 hours to fully recharge a completely rundown battery. With the Sprint PCS-approved LiIon battery, it is okay to recharge the battery before it becomes completely run down.

3

Understanding Roaming

In This Section

- ▶ Understanding How Roaming Works
 - ▶ Understanding the Difference Between Roaming and Sprint PCS Network Calls
 - ▶ Setting Your Phone's Roam Mode
 - ▶ Setting and Using Call Guard
-

Roaming is the ability to make or receive calls while you're off the Sprint PCS Nationwide Network. Your new dual-band Sprint PCS Phone™ works anywhere on the Sprint PCS Nationwide Network and allows you to roam on analog cellular and CDMA digital networks virtually anywhere in the U.S. where competitive wireless service is available.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding How Roaming Works

Recognizing Icons on the Display Screen

Your phone's display screen always lets you know when you're off the Sprint PCS Network and whether your phone is operating in analog cellular or digital mode. The following chart indicates what you'll see depending on where you're using your phone.

	Roaming Indicator	Analog Indicator
Sprint PCS Nationwide Network		
Other CDMA Networks		
Analog Cellular Networks		

Roaming on Other CDMA Networks

When you're roaming on other CDMA networks, your call quality will be similar to the quality you receive when making calls while on the Sprint PCS Network. You may not be able to access certain calling features, such as Sprint PCS Wireless Web, however, all of your calls are still private and secure.

Roaming on Analog Cellular Networks

When you roam on analog cellular networks, you will experience the identical quality provided by analog cellular carriers today. Although some calling features, such as Sprint PCS Wireless Web, may be unavailable, you can still make and receive calls. You will experience a few differences:

- ▶ You are more likely to experience static, cross-talk, fade-out and dropped calls.
- ▶ Some calling features that are standard on the Sprint PCS Network are unavailable.
- ▶ There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog cellular services today.
- ▶ Your battery needs recharging sooner when you use your phone for analog cellular roaming.

Setting Your Phone's Roam Mode

Your Sprint PCS Phone allows you to control your ability to roam. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode

Choose from three different settings on your dual-band phone to control your roaming experience:

1. From the main menu, highlight **Roaming** and press **OK**.
2. Highlight **Set Mode** and press **OK**.
3. To select an option, highlight it and press **OK**.
 - ▶ **Sprint PCS:** This setting allows you to select the Sprint PCS Nationwide Network only and prevents roaming on other networks.
 - ▶ **Automatic:** This setting seeks Sprint PCS Service. When Sprint PCS Service is unavailable, the phone searches for an alternative system.
 - ▶ **Analog:** This setting forces the phone to seek an analog roaming system. The previous setting is restored the next time the phone is turned on.

Setting an Alert When Roam Charges Apply (Call Guard)

In addition to the roaming icon, Call Guard alerts you when roaming charges apply. This feature makes it easy to manage your roaming charges by reminding you when you make or receive roaming calls. It also requires you to take additional steps before placing or answering a roaming call. These additional steps are not required when you make or receive calls while on the Sprint PCS Nationwide Network.

To Turn the Call Guard Feature On or Off:

1. From the main menu, highlight **Roaming** and press **OK**.
2. Highlight **Call Guard** and press **OK**.
3. Highlight **Yes** or **No** and press **OK**.

To Place Roaming Calls With Call Guard On:

1. From the main menu, dial 1 + area code + the seven-digit number. (You can also initiate a call from the Internal Phone Book, Call History or Sprint PCS Web Messages.)
2. Press **TALK** or **SPEAKER**.
or
Highlight **Call** or **Call: Speaker On**, and press **OK**.
3. Highlight **Roam Call** or **Roam: Speaker On**, and press **OK**.

To Answer Incoming Roaming Calls With Call Guard On:

- ▶ From the main menu, highlight **Answer** or **Answer: Speaker** and press **OK**.

Remember if the Call Guard feature is set to **Yes**, you need to take extra steps to make and receive roaming calls even if you have selected the **Analog** setting (see page 24).

Note:

While the **Auto Answer** setting is activated, the extra step will be omitted.

Setting the Time and Date in Analog Mode

If the time has not been set since the battery was installed and you turn your phone on while roaming off the Sprint PCS Network, you are prompted to enter the current time and date.

To enter the time and date when the Set Time and Date menu displays, press the appropriate keys on your keypad. Fields must be two digits, for example “05:07a 01/01/99.”

4

Making and Answering Calls

In This Section

- ▶ Making Calls
 - ▶ Answering Calls
 - ▶ Using the Speakerphone
 - ▶ Using Sprint PCS Voice Command
 - ▶ Dialing Options
 - ▶ In-Call and End-of-Call Options
 - ▶ Using One-Touch Speed Dialing
-

Your Sprint PCS Phone™ gives you different options for placing calls so that you can use the method that works best for you. Once you learn the basics here, the possibilities are endless.

Making Calls

Your Sprint PCS Phone™ offers many different ways to make calls, including Sprint PCS Voice Commands (page 30) Speed Dialing (page 87) and using Call History (page 73).

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number. (If you make a mistake while dialing, press **CLR** to erase one digit at a time. Or, press and hold **CLR** to erase the entire number.)
3. Press **TALK** or **SPEAKER**. (To make calls when you are roaming and Call Guard is enabled, highlight **Roam Call** or **Roam: Speaker On** and press **OK**. See “Call Guard” on page 25.)
4. When you're finished, press **END**.

Answering Calls

1. Make sure your phone is on. If your phone is off, incoming calls go to voicemail.
2. When your phone rings, press **TALK** or **SPEAKER**. (To answer incoming calls when you are roaming and Call Guard is enabled, highlight **Answer** or **Answer: Speaker** and press **OK**. See “Call Guard” on page 25.)
3. To disconnect the call, press **END**.

Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To display the Missed Call entry:

- ▶ Highlight the entry and press **OK**.

To dial the Missed Call entry's phone number:

- ▶ Highlight the entry and press **TALK** or **SPEAKER**.

Using the Speakerphone

The speakerphone feature lets you hear audio through the speaker and talk without holding the phone. When the speakerphone is activated, use the volume control keys on the side of the phone to adjust the volume.

To activate the speakerphone during a call:

- ▶ Highlight **Speaker On** and press **OK**.

To turn the speakerphone off:

- ▶ Highlight **Speaker Off** and press **OK**.

Warning!

Due to higher volume levels, do not place the phone near your ear during speakerphone use.

Using Sprint PCS Voice Command

With Sprint PCS, the first wireless provider to offer innovative Voice Command technology, reaching your friends, family, coworkers and teammates has never been easier – especially when you're on the go.

With Sprint PCS Voice Command:

- ▶ You can store all your contact's phone numbers, so you can simply say the name of the person you want to call.
- ▶ There's no need to punch in a lot of numbers, memorize voicemail passwords or try to dial while you're driving.
- ▶ You can call anyone in your address book – even if you don't remember their phone number.

It's Easy to Start

Just dial *** 2 TALK** or **SPEAKER** from your Sprint PCS Phone™ to activate the service. You can dial *** TALK** or **SPEAKER** to go through a Sprint PCS Voice Command tutorial directly from your phone.

Create Your Own Address Book

You can program up to 500 names into your address book, with each name having up to five phone numbers. That's 2,500 phone numbers – and with the advanced technology of Sprint PCS Voice Command – you can have instant access to all of them.

There are four ways to update your address book:

- ▶ **On the Web:** Go to www.talk.sprintpcs.com and receive a fully functional Web-based address book to create and update your contacts.
- ▶ **Use an Existing Address Book:** Upload your contacts from Microsoft Outlook®, Microsoft Excel® and other personal information software into your address book for no additional charge.

- ▶ **Call Directory Assistance:** If you don't have a computer or Internet access handy, you can have Sprint PCS Directory Assistance look up phone numbers for you and automatically add them to your address book. Just say, "Call operator," and we'll add two names and numbers to your address book for our standard directory assistance charge.

- ▶ **Use Voice Recordings:** Simply dial *** TALK** or **SPEAKER** and say, "Add name." You will then be asked to say the name and number you want to add to your personal address book. Your address book can store up to 20 Voice Recordings at once.

How It Works

1. Once you've signed up for Sprint PCS Voice Command and created your address book, all you do is press *** TALK** or **SPEAKER**. You'll hear a tone followed by the prompt "Ready."
2. After the "Ready" prompt, simply say, in a natural voice, the name of the person or the number you'd like to call. For example, you can say, "Call Jane at work," "Call John on his wireless phone," "Call 555-1234" or "Look up Bob."
3. The number will automatically be dialed. Keep in mind that Sprint PCS Voice Command recognizes not only your voice, but any voice, so that others can experience the same convenience if they use your phone.

For more helpful hints on Sprint PCS Voice Command, visit www.talk.sprintpcs.com.

Dialing Options

Dialing options are displayed when you enter numbers in the main menu.

To select an option, highlight it and press **OK**.

- ▶ **Call** to dial the phone number. (If you are roaming and have the Call Guard feature activated, select **Roam Call**. See “Call Guard” on page 25.)
- ▶ **Call: Speaker On** to dial the phone number with Speaker Phone mode. (If you are roaming and have the Call Guard feature activated, select **Roam: Speaker On**. See “Call Guard” on page 25.)
- ▶ **Save** to save the phone number in your Internal Phone Book. (See “Saving a Phone Number” on page 36.)
- ▶ **Find** to display Internal Phone Book entries that contain the entered numbers. (See “Finding a Phone Number” on page 36.)
- ▶ **Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 37.)
- ▶ **2-Second Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 37.)
- ▶ **Hyphen** to insert a hyphens manually where you like, however they are mainly for show. Some options are displayed as you enter numbers. To select an option, highlight it and press **OK**.
- ▶ **Exit** to return to the main menu.

Some options are displayed as you enter numbers. To select an option, highlight it and press **OK**.

- ▶ **Abbrev. Dial** to dial the phone number in your Internal Phone Book that ends with the four digits you enter. (See “4-Digit Dialing” on page 37.)

In-Call Options

During a call, your phone displays menu options in addition to the main menu.

To select a menu option, highlight it and press **OK**.

- ▶ **Mute or Unmute**
Select **Mute** to mute your phone’s microphone. Select **Unmute** to reactivate the microphone.
- ▶ **Speaker On or Speaker Off**
Select **Speaker On** to route the phone’s audio through the speaker. You can adjust the speakerphone volume using the volume keys on the side of the phone. Select **Speaker Off** to route the phone’s audio through the earpiece.
- ▶ **3-Way Call** to call a third party. (See “Three-Way Calling” on page 57.)
Flash to answer an incoming Call Waiting call or connect a third party during Three-Way Calling.
Send Tones to send the next set of numbers after a Hard Pause. Send Tones is displayed when you dial a phone number with a Hard Pause in it. (See “Dialing and Saving Phone Numbers With Pauses” on page 37.)
- ▶ **Call History** to use like a main menu. (See “Managing Call History” section 9 on pages 72-75.)
- ▶ **Messages** to use like a main menu. (See “Experiencing Sprint PCS Wireless WebSM” section 15 on pages 122-138.)
- ▶ **Phone Book** to use like a main menu. (See “Using Your Internal Phone Book” section 10 on pages 78-88.)
- ▶ **Calendar** to use like a main menu. (See “Calendar” menu instructions on pages 104-112.)
- ▶ **Sounds** to use like a main menu. (See pages 90-93.)
- ▶ **Display** to use like a main menu. (See pages 90, 94.)
- ▶ **Setup** to use like a main menu. (See pages 93, 95.)
- ▶ **Voice Service** to use like a main menu. (See pages 116-119.)

Incoming Call Notification

Depending upon your settings, your Sprint PCS Phone notifies you of incoming calls in the following ways:

- ▶ The phone rings and/or vibrates.
- ▶ The LED flashes.
- ▶ The backlight illuminates.
- ▶ The screen displays an incoming call message.
- ▶ The phone number of the caller displays, if the phone number is available.
- ▶ If the phone number is in your Internal Phone Book, the name identified with that number displays.

The following options are also displayed. To select an option, highlight it and press **OK**.

- ▶ **Answer** to answer the call.
- ▶ **Answer: Speaker** to answer the call with Speaker Phone mode.
- ▶ **Quiet Ringer** to mute the ringer.

End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Internal Phone Book, the phone number, the duration of the call and the following menu options are displayed.

To select an option, highlight it and press **OK**.

- ▶ **OK** to return to the main menu. (You can also press **END**.)
- ▶ **Call Again** to dial the phone number.
- ▶ **Call: Speaker On** to dial the phone number with Speaker Phone mode.
- ▶ **Save Phone #** to save the phone number in your Internal Phone Book. (See “Saving a Phone Number” on page 36.)

After receiving a call from or making a call to a phone number that is in your Internal Phone Book, the Phone Book entry name and phone number, the duration of the call and the following menu options are displayed.

To select an option, highlight it and press **OK**.

- ▶ **OK** to return to the main menu. (You can also press **END**.)
- ▶ **Call Again** to dial the phone number.
- ▶ **Call: Speaker On** to dial the phone number with Speaker Phone mode.
- ▶ **Alternate #s** to save the other phone number into the same entry in your Internal Phone Book.

Saving a Phone Number

Your Sprint PCS Phone can store up to 300 Internal Phone Book entries. Phone Book entries can store up to a total of 300 phone numbers and the entry's name can contain 16 characters.

To save a number from the main menu:

1. Enter a phone number.
2. Highlight **Save** and press **OK**.
3. Select a label by highlighting **Home, Work, Mobile, Pager, Data, Fax** or **No Label** and press **OK**.

4. Enter a name.

► You can also select the entry option from

Save w/o Name--- save the number without name.

Mode > Alphabet--- you can select the entry mode from T9 Word, Alphabet, SYMBOL and NUMBER. (See page 46 for details.)

Phone book entry list--- you can select the name from the list.

5. Highlight **Next Step**, and press **OK**.

Finding a Phone Number

You can search for Internal Phone Book entries for phone numbers that contain a specific string of numbers.

To find a phone number:

1. Enter four or more digits. The more numbers you enter, the more specific the search becomes.
2. Highlight **Find** and press **OK**.
3. To display the Internal Phone Book entry that contains the phone number, highlight the entry and press **OK**. To dial the number, press **TALK** or **SPEAKER**.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. If you select a hard pause, the next set of numbers are sent when you select **Send Tone** and press **OK**. If you select a 2-second pause, your phone automatically sends the next set of numbers after two seconds.

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Highlight either **Hard Pause** or **2-Second Pause** and press **OK**. Hard Pauses are displayed as a "H" and 2-second pauses as a "T".
3. Enter additional numbers.
4. Highlight **Call, Call: Speaker On** or **Save** and press **OK**.

When dialing a number with a hard pause, highlight **Send Tone** and press **OK** to send the next set of numbers.

4-Digit Dialing

Enter four digits to display the Abbreviated Dialing option. If you select **Abbrev. Dial**, your phone dials the phone number in your Internal Phone Book that ends with the four digits you entered.

To use 4-Digit Dialing:

1. Dial the last four digits of an Internal Phone Book entry's phone number.
2. Highlight **Abbrev. Dial** and press **TALK** or **SPEAKER**.

Note:

4-Digit Dialing dials the first number in your Internal Phone Book that matches the four digits.

Calling Emergency Numbers

You can place calls to 911 (dial **9** **1** **1** and press **TALK** or **SPEAKER**), even if your phone is locked or your account is restricted.

Using One-Touch Speed Dialing

With this feature, you can dial Speed Dial entries using one key press for locations 2-9.

To use **One-Touch Dialing** for Speed Dial locations 2-9:

- ▶ Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows “Connecting.”

Displaying Your Phone Number

Just in case you forget your own phone number, your Sprint PCS Phone can remind you.

To display your phone number:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **My Phone#** and press **OK**.

Redialing Last Outgoing Number

Press **TALK** or **SPEAKER** twice.

Using Any Key Answer

This feature allows you to answer incoming calls by pressing any key (not including the **END**, **CLR**, **POWER**, Volume key and Navigation key).

To activate this feature:

1. Highlight **Setup** and press **OK**.
 2. Highlight **Any Key Answer** and press **OK**.
 3. Highlight **On** and press **OK**.
- ▶ To deactivate this feature, select **Off** at step 3 above.

Using Auto Answer

This feature sets the phone to automatically pick up after one ring or three rings. You can choose “Car/Headset Use” or “Speaker Phone”. This feature only works with the hands-free car kit and headset (must be purchased separately). You can also adjust the Headset Turbo Button if applicable. See “Setting Headset Mode” on page 93.

To activate this feature:

1. From the main menu, highlight **Setup**.
 2. Press **OK**.
 3. Highlight **Auto Answer**, and press **OK**.
 4. Highlight **Car/Headset Use** or **Speaker Phone**.
 5. Highlight **1 Ring** or **3 Rings**, and press **OK**.
- ▶ To deactivate this feature, select **Off** at step 5 above.

Dialing from an Internal Phone Book Memory Location

To dial directly from an Internal Phone Book memory location:

1. Press ▶ of the Navigation key.
2. Scroll to the Internal Phone Book entry you want to call, and press **OK**.
3. Highlight your desired phone number; and press **TALK** or **SPEAKER**.

Navigating Through Menus and Entering Text

In This Section

- ▶ Menu Navigation
 - ▶ Shortcuts
 - ▶ Viewing the Menus
 - ▶ Entering Characters by Tapping the Keypad
 - ▶ Entering Characters Using T9 Text Input
 - ▶ Entering Symbols and Numbers
-

This section is a road map to using your phone and also shows how to enter characters in your phone. Every function and feature can be accessed through a menu. Take a few moments to know your way around and how to enter text. You'll find that it makes your phone easier to use.

Menu Navigation

Your Sprint PCS Phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through the menu:

1. Highlight your desired menu by using ▲/▼ of the Navigation key.
2. Press **OK**.

As you navigate through the menu, menu options are highlighted. Select an option by highlighting it and pressing **OK**.

Shortcuts

- ▶ **Left Navigation key** (◀) to take a shortcut to the folder list of Messages menu.
- ▶ **Right Navigation key** (▶) to take a shortcut to the entry list of Phone Book menu.

Working Within the Menu Structure

Selecting Menu Items

As you navigate through a menu, the options are highlighted. Select an option by highlighting it and pressing **OK**.

For example, if you want to view your last incoming call:

1. From the main menu, highlight **Call History** and press **OK**. (It may already be highlighted.)
2. Highlight **Incoming Calls** and press **OK**. If you have received any calls, they are displayed on the screen.
 - ▶ If you have received any calls, they are displayed on the screen, if not, the screen will prompt: “Empty” for each call log.

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press **CLR**.

To go to the main menu:

- ▶ Press **END**.

Viewing the Menus

Menu Diagram

Menus let you check or change your phone settings. The following outline shows your phone's menu structure.

1. Call History

1. Outgoing Calls
2. Incoming Calls
3. Missed Calls
4. Erase History

2. Messages

1. Voice Mail
2. Page/Text
3. Browser Msgs

3. Phone Book

1. Find Name
2. Add New Entry
3. My Phone#
4. Speed Dial #s
5. Long Phone #s
6. Services

4. Roaming

1. Set Mode
2. Call Guard

5. Wireless Web

6. Calendar

7. Environment

1. Normal
2. Silent
3. Meeting
4. Outside
5. Custom

8. Sounds

1. Ringer/Key Vol.
2. Ringer Type
3. Alerts
4. Receiver Volume
5. Tone Length
6. Melody Tempo
7. Start-up Tone

9. Display

1. Backlight
2. Greeting
3. Contrast
4. Version

10. Security

1. Lock Phone
2. Change Lock
3. Limit Use
4. Special #s
5. Erase PhoneBook
6. Reset Phone
7. Found Me

11. Setup

1. Data/Fax (In)
2. Headset Mode
3. Any Key Answer
4. Auto Answer
5. Web Guard
6. Abbrev. Dial
7. Language

12. Special

1. Game
2. Calculator

13. Voice Service

1. Voice Memo
2. Voice Dial
3. Voice Ringer
4. Voice Prompt

14. KeyGuard

Selecting a Character Input Mode

Your Sprint PCS Phone™ by Sanyo provides convenient ways to enter words, letters, punctuation and numbers.

To change the character input mode:

1. In a text entry field (e.g. for entering a folder name on page 69 and an event description on page 104, etc.) highlight current selected mode, and press **OK**.
2. Highlight your desired mode from **T9 Word**, **Alphabet**, **SYMBOL** or **NUMBER**, and press **OK**.

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the **Alphabet** mode (see “Selecting a Character Input Mode” on page 46). Press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase.

Characters scroll in the following order:

- ▶ **1** . - ' / : @ , ; ? ! 1
- ▶ **2** ABC 2
- ▶ **3** DEF 3
- ▶ **4** GHI 4
- ▶ **5** JKL 5
- ▶ **6** MNO 6
- ▶ **7** PQRS 7
- ▶ **8** TUV 8
- ▶ **9** WXYZ 9
- ▶ **0** 0
- ▶ **SPACE#** Space
- ▶ **SHIFT*** One-character-shifted Caps Lock Unshifted

In Spanish mode, characters scroll in the following order:

- ▶ **1** . - ' / : @ , ; ? ! 1
- ▶ **2** AÁBC 2
- ▶ **3** DEÉF 3
- ▶ **4** GHIÍ 4
- ▶ **5** JKL 5
- ▶ **6** MNÑOÓ 6
- ▶ **7** PQRS 7
- ▶ **8** TUÚÜV 8
- ▶ **9** WXYZ 9
- ▶ **0** 0
- ▶ **SPACE#** Space
- ▶ **SHIFT*** One-character-shifted Caps Lock Unshifted

Entering Characters Using T9 Text Input

To enter characters using T9 Text Input, select the **T9 Word** mode (see “Selecting a Character Input Mode” on page 46.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press **NextO** to scroll through additional word selections. To accept a word and insert a space, press **SPACE#**.

If you make a mistake, press **CLR** to erase a single character, or press and hold **CLR** to delete an entire entry.

Tip:

You can shift the process of entering letters to upper/lower case by pressing **SHIFT***. It will change as follows:

- ▶ Word – One-character-shifted
- ▶ WORD – Caps Lock
- ▶ word – Unshifted

The current selecting mode is shown at the bottom center of the display.

Adding a Word to the T9 Database

If a word you want to enter does not display as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the database:

1. Switch to Alphabet mode (see “Selecting a Character Input Mode” on page 46).
2. Type the word using the multi-tap method.
3. Switch back to T9 (see “Selecting a Character Input Mode” on page 46).

For more information about T9 Text Input, visit their web site at www.T9.com.

Using Smart Punctuation

“Smart punctuation” is available using **1** in T9 mode.

It’s a quick and easy way to type e-mail domains, possessive forms and contractions. When you press **1**, T9 displays a period. However, as you continue to type, T9 determines the appropriate mark based on your word database.

For example, to type, “It’s easy.”

Press **4** **8** **1** **7** **SPACE#** **3** **2** **7**
9 **1**.

Entering Symbols and Numbers

To enter symbols, select the **SYMBOL** mode. (See “Selecting a Character Input Mode” on page 46.) To enter a symbol:

1. In a text entry field highlight current selected mode, and press **OK**.
2. Highlight **SYMBOL**, and press **OK**.
3. Find the character you want and press the corresponding key (1~9) with each symbol.

SYMBOL List

1/4	. - ' / : @ , ? !
2/4	() " \ ; % & * #
3/4	{ } ~ = ^ _ []
4/4	< > + \$ « » ° ÷ ì

To see the other list

- ▶ Highlight **Next Page**, and press **OK**.
- ▶ Press **▶** or **◀** of the Navigation key.

To return to the previous mode:

- ▶ Highlight **Previous Mode**, and press **OK**.
- ▶ Press **CLR**.

Shortcut:

You can also change to the Symbol mode from the other entering mode by pressing and holding **SHIFT***.

To enter numbers, select the **NUMBER** mode and press the appropriate key (see “Selecting a Character Input Mode” on page 46).

Shortcut:

You can also change to the Number mode from the other entering mode by pressing and holding **SPACE#**. Or press and hold the corresponding numeric key to enter the number directly.

Tip:

One symbol input reverts to the previous mode automatically.

Tip:

The beginning of the word after the space is changed to upper/lower case by the entry field. You can change the shift by pressing **SHIFT***.

Adjusting Volume

In This Section

- ▶ Changing Ringer Volume
 - ▶ Silencing the Ringer
 - ▶ Adjusting Volume During a Conversation
 - ▶ Muting a Call
-

With all the things that demand your attention in today's fast paced world, it's important to tune-in to what really matters. Your Sprint PCS Phone™ gives you the ability to control your phone's volume with the touch of a button. Not only you can control what you hear, you can also control what your caller hears.

Changing Ringer Volume

To change the ringer volume, adjust the volume keys on the side of your phone when the phone is in Standby mode.

To change the ringer volume from the main menu:

1. Highlight **Sounds** and press **OK**.
2. Highlight **Ringer/Key Vol** and press **OK**.
3. Highlight **Ringer** and press **OK**.
4. Highlight your desired volume level and press **OK**.

Silencing the Ringer

To silence the ringer on incoming calls:

1. When the phone rings, press volume key, **END** or **CLR**.
2. Press **TALK** or **SPEAKER** to answer the call.

OR

1. When the phone rings, highlight **Quiet Ringer** and press **OK**.
2. Press **TALK** or **SPEAKER** to answer the call.

Adjusting Volume During a Conversation

Whether you need to hear more or less of a conversation, adjust the volume keys on the side of your phone during a call.

To adjust receiver volume from the main menu:

1. Highlight **Sounds** and press **OK**.
2. Highlight **Receiver Volume** and press **OK**.
3. Highlight **Earpiece** and press **OK**.
▶ You can also select **Speaker** or **Car/Headset Use**.
4. Select your desired volume level and press **OK**.

Muting a Call

There are times when it's necessary to mute a call so that your caller does not hear you or certain background noise.

To use this function during a call:

1. Highlight **Mute**.
2. Press **OK**.

To unmute a call:

1. Highlight **Unmute**.
2. Press **OK**.
▶ When the phone is muted, "MUTE" appears on the display.

Using Sprint PCS Service Features

In This Section

- ▶ Using Caller ID
 - ▶ Responding to Call Waiting
 - ▶ Three-Way Calling
 - ▶ Forwarding Your Calls
-

Now that you've mastered the basics, you can begin to focus on where you want to go. This section guides you through the calling features that enhance your Sprint PCS Service. From Caller ID to Call Forwarding, using these features will help you make the most of your Sprint PCS Service.

Using Caller ID

Caller ID lets you know who's calling by displaying the number of the person calling when your phone rings. If the caller's name and number are already stored in your Internal Phone Book, the corresponding name appears with the number. In the same way, if you call someone who has this feature your phone number is displayed on their phone.

To block your phone number from being displayed for a specific outgoing call:

1. Press ***** **6** **7**.
2. Enter the number you want to call.
3. Press **TALK** or **SPEAKER**.

To permanently block your number, call Sprint PCS Customer Care.

Responding to Call Waiting

Call Waiting alerts you to incoming calls while you're on a call by sounding two beeps. The display screen informs you that a call is coming in and shows the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- ▶ Highlight **Flash** and press **OK**. This puts the first caller on hold and answers the second call.
- ▶ To switch back to the first caller, highlight **Flash** and press **OK** again.

Three-Way Calling

With Three-Way Calling, you can talk to two different people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press **TALK** or **SPEAKER**.
2. Once you have established the connection, highlight **3-Way Call** and press **OK** (**TALK** or **SPEAKER**) to put the first caller on hold.
3. Dial the second number you wish to call and press **TALK** or **SPEAKER**.
4. When you're connected to the second party, highlight **Flash** and press **OK** or **TALK** once more to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Note:

Three-Way Calling feature may not be available in certain affiliate areas.

Forwarding Your Calls

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone with Call Forwarding activated.

To Activate Call Forwarding

1. Press *** 7 2**.
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press **TALK** or **SPEAKER**. You will hear a tone to confirm the activation of **Call Forwarding**.

To Deactivate Call Forwarding

1. Press *** 7 2 0**.
2. Press **TALK** or **SPEAKER**. You will hear a tone to confirm the deactivation.

8

Managing Messaging

In This Section

- ▶ Message Types
 - ▶ New Message Alerts
 - ▶ Message Options
-

Your Sprint PCS Phone™ is always working to help you stay connected – even when you're unavailable. With three types of messaging, you can depend on being notified of important information. This section steps you through the messaging functions available on your Sprint PCS Phone.

Setting Up Voicemail

The first thing you'll want to do after activating your phone is set up your voicemail (see page 5 for instructions).

Knowing When You Have Messages

There are several ways your Sprint PCS Phone alerts you:

- ▶ By displaying a message on the screen.
- ▶ By sounding the assigned ringer type.
- ▶ By the LED blinking red.
- ▶ By displaying  at the top of your screen for voicemail messages, Sprint PCS Web Messages, Sprint PCS Web Alerts or numeric pages.

Message Types

There are three types of messaging features available from your Sprint PCS Phone's menu. You can receive voicemail, Sprint PCS Web Messages and Sprint PCS Web Alerts as long as your phone has enough memory locations to store them.

- ▶ **Voicemail** automatically captures calls when you can't answer your phone or it is turned off. The voicemail system sends a notification to your phone when you have new voice messages.
- ▶ **Web Messages** can come in the form of numeric pages, Sprint PCS Wireless Web Messages* and Updates*, as well as notification of new Sprint PCS Wireless Web MailSM*. (For more information, see "Sending Web Messages" on page 62 or "Signing Up for Sprint PCS Wireless Web Updates" on page 135.)
- ▶ **Web Alerts** let you know when you receive Sprint PCS Wireless Web Short MailSM* or an AOL Instant Message*. (For more information on each feature, see the appropriate chapter in Section 15: "Experiencing Sprint PCS Wireless WebSM.")

* You may need to subscribe to the Sprint PCS Wireless Web to use these features.

New Voicemail Message Alerts

When you receive a new voicemail message, your phone alerts you and displays the following options. To select an option, highlight it and press .

- ▶ **Call Voicemail** to dial your voicemail box.
- ▶ **Call: Speaker On** to dial your voicemail box with Speaker Phone mode.
- ▶ **Read** to see the details of the new voicemail.
- ▶ **Clear Count** to clear the voicemail message icon.

Retrieving Your Voicemail Messages

You can review your messages directly from your Sprint PCS Phone or from any other touch-tone phone. To dial from your Sprint PCS Phone, you can either speed dial your voicemail box or use the menu keys.

Using One-Touch Message Access:

- ▶ Press and hold  1. Follow the system prompts.

Using the Menu Keys on Your Sprint PCS Phone to Access your Messages:

1. From the main menu, highlight **Messages**, and press .
2. Highlight **Voicemail**, and press and hold  for approximately 2 seconds.

OR

1. Highlight **Messages**, and press .
2. Highlight **Voicemail New** or **Voicemail**.
3. Press .
4. Press  or .

or

Highlight **Call Voicemail** or **Call: Speaker On**, and press .

Using a Phone Other Than Your Sprint PCS Phone to Access Your Messages:

1. Dial your Sprint PCS Phone Number.
2. When your voicemail box answers, press .
3. Enter your pass code.

Note:

Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a Sprint PCS Service area.

Note:

You are charged for airtime minutes when you are accessing your voicemail from your Sprint PCS Phone.

Clearing the Voicemail Message Icon

Your phone may temporarily continue to display the icon after you have checked your voicemail messages.

To clear the icon from the display screen:

1. From the main menu, highlight **Messages** and press **OK**.
2. Highlight **Voicemail New** or **Voicemail** and press **OK**.
3. Highlight **Clear Count** and press **OK**.
4. Highlight **Yes** and press **OK**.

Sending Web Messages

Numeric Pages

Callers can send a numeric page to your phone when they reach your voicemail box. Numeric paging to a Sprint PCS Phone comes at no additional charge on any service plan that includes Sprint PCS Voicemail.

Sprint PCS Wireless Web Messages

There are three ways to send a Sprint PCS Wireless Web Message to a Sprint PCS Phone:

- ▶ E-Mail (your phone number@messaging.sprintpcs.com).
- ▶ Through the Sprint PCS Web site – www.sprintpcs.com. Select the wireless web messaging link.
- ▶ Using a messaging software.

Sprint PCS Wireless Web Updates

To have Sprint PCS Wireless Web Updates automatically sent to your phone, see “Signing Up for Sprint PCS Wireless Web Updates” on page 135.

New Web Messages

When you receive a new Web Message, your phone notifies you and displays the following options. To select an option, highlight it and press **OK**.

- ▶ **Read** to display the message.
- ▶ **Exit** to return to the main menu.

Web Message Storage

Your Sprint PCS Phone can store up to 200 Web Messages. When the message memory is 75% full, a warning message prompts you to erase messages to obtain additional memory space.

Displaying Web Messages

To display a Web Message from the message notification alert, see “New Web Messages” on page 63.

To display a Web Message from the main menu:

1. Highlight **Messages** and press **OK**.
2. Highlight **Page/Text**, and press **OK**.
3. Then the folder list appears.
- ▶ Press ◀ of the Navigation key to take a shortcut (steps 1 through 3).
4. Highlight **Unfiled** or your defined folder, and press **OK**.
5. Highlight the header of the message you want to see, and press **OK**.
- ▶ An icon appears at the left side of each header of the message.

The icons are as follows.

- * New message
- ! Urgent message
- ✓ Read message
- ▶ If the sender’s information has already been stored in the phone book, the corresponding name, phone number or e-mail address appears as the header of the message. If nothing has been stored, the phone number, e-mail address or text that was included in the message appears as the header of the message.

To read other message:

- ▶ Press ◀ of the Navigation key to read the previous message.
- ▶ Press ▶ of the Navigation key to read the next message.

Web Message Options

After you display a numeric page, press **OK** to display Web Message options. To select an option, highlight it and press **OK**.

- ▶ **Call Back** to dial the phone number of the sender. (If applicable.)
- ▶ **Call: Speaker On** to dial the phone number of the sender with Speaker Phone mode. (If applicable.)
- ▶ **Save Phone#** to save the sender’s phone number if it is not already in your Internal Phone Book. (If applicable.) Or if the sender’s phone number has already been stored in any Phone Book entry, **Alternate #s** appears instead of **Save Phone#**.
- ▶ **Display Phone#** to display the sender’s phone number.
- ▶ **Prepend** to add numbers to the beginning of the phone number. (If applicable.) (See “Prepending a Phone Number From a Web Message” on page 66.)
- ▶ **Extract** to extract phone numbers, e-mail or web addresses (if there are numbers or addresses contained in the text message). (See “Extracting Phone Numbers or Email/Web Addresses From Sprint PCS Web Messages” on pages 66-67.)
- ▶ **Erase Message** to erase the message. (See “Erasing Individual or All Old Sprint PCS Web Messages” on page 68.)
- ▶ **Add Folder** to add the folder and classify the message into it. (See “Adding a Folder To the Sprint PCS Web Message” on page 68.)
- ▶ **Move Message** to move a message to the other defined folder. (See “Moving a Sprint PCS Web Message Into the Other Folder” on page 68.)
- ▶ **Next** to select next message.
- ▶ **Previous** to select previous message.

Tip:

You can make 10 defined folders.

Tip:

“Move Message” feature needs at least one defined folder to move the message.

Prepending a Phone Number From a Web Message

After you display a Sprint PCS Web Message that contains call back number, press **OK** to display message options.

If you happen to be outside your local area code and need to add a prefix to a phone number:

1. Highlight **Prepend** and press **OK**.
2. Enter the digits or pauses (see below) you want to add to the number. If you want to save the number, select the **Save** option. If not, the changes only apply to the current call.
3. To select an option, highlight it and press **OK**.
 - ▶ **Call** to dial the phone number.
 - ▶ **Call: Speaker On** to dial the phone number with Speaker Phone mode.
 - ▶ **Save** to store the phone number in your Internal Phone Book.
 - ▶ **Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 37.)
 - ▶ **2-Second Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 37.)
 - ▶ **Exit** to return to the previous display.

Extracting Phone Numbers or Email/Web Addresses From Sprint PCS Web Messages

After you display a Sprint PCS Web Message, press **OK** to display message options.

To extract a phone number, e-mail or web address contained in the message:

1. Highlight **Extract**, and press **OK**.
2. Highlight **Phone#**, **E-mail Address** or **Web Address**, and press **OK**.

All the phone numbers, e-mail addresses or web addresses contained in the message are displayed. (If there is no appropriate information to extract from the message, the numbers or addresses do not display.)

3. Highlight the number or address you want to extract and press **OK**.
4. To select an option, highlight it and press **OK**.

“Phone#” options:

- ▶ **Call** to dial the phone number.
- ▶ **Call: Speaker On** to dial the phone number with Speaker Phone mode.
- ▶ **Save Phone#** to save the phone number if it is not already in your Internal Phone Book. Or if the phone number has already stored in the Phone Book entry, **Alternate #s** appears instead of **Save Phone#**.
- ▶ **Prepend** to add numbers to the beginning of the phone number. (See “Prepending a Phone Number From a Web Message” on page 66.)
- ▶ **Next** to extract next phone number.
- ▶ **Previous** to extract previous phone number.

“Email Address” options:

- ▶ **Send E-mail** to send e-mail.
- ▶ **Save E-mail** to save the e-mail address if it is not already in your Internal Phone Book. Or if the e-mail address has already stored in the Phone Book entry, **Alternate** appears instead of **Save Email**.

“Web Address” options:

- ▶ **Visit Site** to visit the web site (if applicable).
- ▶ **Save Web** to save the web address if it is not already in your Internal Phone Book. Or if the web address has already stored in the Phone Book entry, **Alternate** appears instead of **Save Web**.

Tip:

If the message has more than two phone numbers to extract, these features are available.

Adding a Folder To the Sprint PCS Web Message

After you display a Sprint PCS Web Message, press **OK** to display message options.

If you want to classify the message to your defined folder:

1. Highlight **Add Folder**, and press **OK**.
2. Select a folder name from the message, and press **OK**.
3. If you want the message to be filed into the folder automatically, highlight **Yes** and press **OK**.
4. Highlight the ringer type which alerts you to receive the message, and press **OK**.

Moving a Sprint PCS Web Message Into the Other Folder

After you display a Sprint PCS Web Message, press **OK** to display message options.

If you want to move the message into the other folder:

1. Highlight **Move Message**, and press **OK**.
2. Highlight your desired folder, and press **OK**.

Erasing Individual or All Old Sprint PCS Web Messages

After you display a Sprint PCS Web Message, press **OK** to display message options.

To erase a message:

1. Highlight **Erase Message** and press **OK**.
2. Highlight **Yes** and press **OK**.

To erase all old messages those were already read:

1. Press **◀** of the Navigation key.
2. Highlight **Unfiled** or folder name, and press **OK**.
3. Highlight **Erase Old Msgs** and press **OK**.
4. Highlight **Yes** and press **OK**.

Classifying Sprint PCS Web Messages

Your Sprint PCS Phone allows you to classify received messages into 10 User-defined Folders. If new messages contain the keyword set by you, they are stored into the folder. You can store up to 200 messages.

Creating a folder from the folder list display

1. Press **◀** of the Navigation key.
2. Highlight **Create Folder** and press **OK**.
3. Enter a folder name from 3 to 11 letters. (See pages 46-49 for entering method.)
4. Highlight **Next Step**, and press **OK**.
5. If you want the message to be filed into the folder automatically, highlight **Yes** and press **OK**. Then select the Ringer Type.

Editing the Folder

1. Press **◀** of the Navigation key.
2. Highlight **Edit Folder** and press **OK**.
3. Highlight the folder you want to edit.
4. Press **OK**.
5. Edit a folder name within 3 to 11 letters. (See pages 46-49 for entering method.)
6. Highlight **Next Step**, and press **OK**.
7. If you want the message to be filed into the folder automatically, highlight **Yes** and press **OK**. Then select the Ringer Type.

Erasing a Folder Including Messages

1. Press **◀** of the Navigation key.
2. Highlight **Erase Folder**, and press **OK**.
3. Highlight the folder you want to erase and press **OK**.
4. Highlight **Yes** and press **OK**.

Note:

If 10 user-defined folders exist, "Create Folder" menu disappears.

Note:

The messages within the folder are also erased. If the folder contains a new message, you are prompted to select **Erase** or **Don't Erase**.

Tip:

3-11 letters are required in the message to add a folder.

Note:

If 10 user-defined folders exist, "Add Folder" menu disappears.

Tip:

This feature needs at least one defined folder to move the message.

Sprint PCS Wireless Web Update Options

To have Sprint PCS Wireless Web Updates automatically sent to your phone, see “Signing Up for Sprint PCS Wireless Web Updates” on page 135.

After you display a Sprint PCS Wireless Web Update, press **OK** to display Sprint PCS Wireless Web Update options. Follow the system prompts to progress the options you need.

New Web Alerts

When you receive a new Web Alert, your phone notifies you and displays the following options. To select an option, highlight it and press **OK**.

- ▶ **View** accesses the Sprint PCS Wireless Web Inbox and displays the message.
- ▶ **Skip** returns to the previous menu.

Displaying Web Alerts

You are notified of new Web Alerts by the  icon.

To display an alert from the main menu:

1. Highlight **Messages** and press **OK**.
2. Highlight **Browser Msgs** and press **OK**.
- ▶ When a reminder of the charge appears, highlight **Yes** and press **OK**.
3. Select your desired one from the Sprint PCS Wireless Web Inbox.

Managing Call History

In This Section

- ▶ Viewing Call History (Incoming, Outgoing and Missed)
 - ▶ Call History Options
 - ▶ Making a Call From Call History
 - ▶ Saving a Phone Number From Call History
 - ▶ Erasing Call History
-

The call history helps you manage your time more effectively. It keeps track of incoming calls, calls made from your Sprint PCS Phone™ and missed calls. This section guides you through accessing and making the most of your call history.

Viewing Call History (Incoming Outgoing and Missed)

You'll find your call history invaluable. It is a list of the last 10 phone numbers or Internal Phone Book entries for calls you placed, accepted or missed. Call history makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Internal Phone Book entry name (if the phone number is in your Internal Phone Book). Duplicate calls (same number and type of call) may only appear once on the list.

To view a call history entry:

1. From the main menu, highlight **Call History** and press **OK**.
2. Highlight **Outgoing Calls**, **Incoming Calls** or **Missed Calls** and press **OK**.

Call History Options

For additional information and options on a particular call, highlight a call history entry and press **OK**. This feature gives you the option of selecting:

- ▶ **Call** to dial the phone number.
- ▶ **Call: Speaker On** to place a call in Speaker Phone Mode.
- ▶ **Save Phone#** to save the sender's phone number if it is not already in your Internal Phone Book (if applicable). (See "Saving a Phone Number From Call History" on page 75.) Or if the caller's phone number has already been stored in the any Phone Book entry, **Alternate #s** appears instead of **Save Phone#**.
- ▶ **Display Phone#** to see the number.
- ▶ **Time/Date** to see the time and date of the call.
- ▶ **Prepend** to add numbers to the beginning of the phone number. (See "Prepending a Phone Number From Call History" on page 74.)
- ▶ **Erase** to erase the entry.
- ▶ **Next** to display the next call history.
- ▶ **Previous** to display the previous call history.

Making a Call From Call History

To place a call from call history:

1. From the main menu, highlight **Call History**.
2. Press **OK**.
3. Highlight either **Outgoing Calls**, **Incoming Calls** or **Missed Calls**.
4. Press **OK**.
5. Scroll through the list to display the number you want to call.
6. Press **TALK** or **SPEAKER** to place the call.

Prepending a Phone Number From Call History

If you need to make a call from call history and you happen to be outside your local area code, you can add the appropriate prefix by following these steps:

1. Highlight a call history entry and press **OK**.
2. Highlight **Prepend** and press **OK**.
3. Enter the digits or pauses (see below) you want to add to the number. If you want to save the number, highlight **Save** and press **OK**. If not, the changes only apply to the current call.
4. To select an option, highlight it and press **OK**.
 - ▶ **Call** to dial the phone number.
 - ▶ **Call Speaker On** to place a call with Speaker Phone mode.
 - ▶ **Save** to store the phone number in your Internal Phone Book.
 - ▶ **Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 37.)
 - ▶ **2-Second Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 37.)
 - ▶ **Exit** to return to the previous display.

Saving a Phone Number From Call History

Your Sprint PCS Phone can store up to 300 Internal Phone Book entries. Phone Book entries can store up to a total of 300 phone numbers and the entry’s name can contain 16 characters.

To save a phone number from Call History:

1. Highlight the call history entry you want to save and press **OK**.
2. Highlight **Save Phone#** and press **OK**.
3. Highlight appropriate label (Home, Work, Mobile, Pager, Data, Fax or No Label), and press **OK**.
4. Enter a name, and press **OK**. Or you can also save the phone number without a name by highlighting **Save w/o Name** and press **OK**.

If you have any already stored entry in the Phone Book, you are prompted to select the name from the entry list.

Erasing Call History

To erase individual call history entries, see “Call History Options” on page 73.

To erase call history:

1. From the main menu, highlight **Call History** and press **OK**.
2. Highlight **Erase History** and press **OK**.
3. Highlight **Outgoing**, **Incoming**, **Missed**, or **All Calls** and press **OK**.
4. Highlight **Yes** and press **OK**.

Note:

Fax or Data can only be dialed through a personal computer.

Using Your Internal Phone Book

In This Section

- ▶ Adding a New Internal Phone Book Entry
 - ▶ Finding Internal Phone Book Entries
 - ▶ Internal Phone Book Entry Options
 - ▶ Adding a Call Alarm From the Internal Phone Book
 - ▶ Dialing Sprint PCS Services
-

Now you know the basics that help make it easier to stay in touch with people and information. This section helps you make the most of your contacts and use your time more efficiently when you are trying to connect with the important people in your life.

Adding a New Internal Phone Book Entry

Your Sprint PCS Phone can store up to 300 Internal Phone Book entries. Phone Book entries can store up to a total of 300 phone numbers and the entry's name can contain 16 characters.

To add a new entry:

1. From the main menu, highlight **Phone Book**, and press **OK**.
2. Highlight **Add New Entry**, and press **OK**.
3. Enter a name.
 - ▶ You can also select the entry option from **Save w/o Name**---save the number without name.
 - Mode > Alphabet**---you can select the entry mode from T9 Word, Alphabet, SYMBOL and NUMBER. (See page 46 for details.)
4. Highlight **Next Step**, and press **OK**.
5. Enter the number, highlight **Next Step**, and press **OK**.
6. Select the appropriate label, and press **OK**.

After you have saved the number, the new Internal Phone Book entry is displayed. (See "Internal Phone Book Entry Options" on page 80.)

Finding Internal Phone Book Entries

There are several ways to display your Internal Phone Book entries. Follow the steps outlined in the sections below to display entries from the Internal Phone Book menu.

Finding Names

You can review all the entries stored in your Internal Phone Book or find an entry quickly by following these simple steps:

1. Highlight **Phone Book** and press **OK**.
2. Highlight **Find Name** and press **OK**.
 - ▶ Press **▶** of the Navigation key for the shortcut (step 1 through 2).
3. Use your Navigation key to scroll through the Phone Book entry list.
4. Select one of the appropriate entry, and press **OK**.
5. Highlight your desired feature, and press **OK**.

Finding Entries

1. Press **▶** of the Navigation key.
2. Enter the first letter of the name or part of a name using multi-tap method.
3. Select your desired entry by scrolling through the phone book entry.
 - ▶ If you enter a single letter, the display shows the list that begins with that letter.

OR

1. Enter the four digits.
2. Highlight **Find**, and press **OK**.
3. The phone book entry list that includes the numbers you dialed appears.
4. Scroll through the list to select your desired entry.
5. Press **TALK** or **SPEAKER** to make a call.

Tip:

Each entry has capability of storing 7 phone numbers, 1 e-mail address and 1 web address.

Internal Phone Book Entry Options

When you display an Internal Phone Book entry, the following options are displayed. To select an option, highlight it and press **OK**.

- ▶ **Add Phone#** to add a phone number to the entry. (See “Adding a Phone Number or Address to an Internal Phone Book Entry” on page 80.)
- ▶ **Add E-mail Addr** to add an e-mail address to the entry. (See “Adding a Phone Number or Address to an Internal Phone Book Entry” on page 80.)
- ▶ **Add Web Address** to add a web address to the entry. (See “Adding a Phone Number or Address to an Internal Phone Book Entry” on page 80.)
- ▶ **Edit** to edit the entry. (See “Editing an Internal Phone Book Entry” on page 82.)
- ▶ **Erase Entry** to erase the entry.
- ▶ **Next** to display the next entry.
- ▶ **Previous** to display the previous entry.

Adding a Phone Number or Address to an Internal Phone Book Entry

1. Select the entry you wish to add phone numbers/ e-mail/web addresses to, and press **OK**. (See “Finding Internal Phone Book Entries” on page 79 for finding an existing entry.)
2. Highlight **Add Phone#**, **Add E-mail Addr** or **Add Web Address** and press **OK**.
3. Enter the number or address, highlight **Next Step**, and press **OK**.
4. Select the appropriate label for the phone number entry. E-mail and Web Address are labeled automatically.

Adding a Call Alarm From the Internal Phone Book

A call alarm reminds you when you need to make an important phone call. (See “Call Alarm Alerts” on page 81.)

To add a call alarm from the Internal Phone Book:

1. Press **▶** of the Navigation Key.
2. Highlight your desired name and press **OK**.
3. Highlight your desired number and press **OK**.
4. Highlight **Call Alarm** and press **OK**.
5. Enter the time and date using your keypad.
6. You can also select the options. Highlight it and press **OK**.

Options:

- ▶ **Save** to save the entry.
 - ▶ **AM/PM** to select a (AM) or p (PM) in the time setting.
 - ▶ **Edit Repeat** to repeat the Call Alarm. Select **None**, **Daily**, **Weekly**, **Monthly** or **Yearly**.
 - ▶ **Exit** to return to the previous display.
7. Highlight **Save**, and press **OK**.

Call Alarm Alerts

There are several ways your Sprint PCS Phone alerts you of call alarms:

- ▶ By sounding beeps.
- ▶ By blinking the LED red.
- ▶ By displaying the Internal Phone Book entry name or phone number, and the time and date of the alarm, etc.

Press any key to stop blinking LED and sounding beeps.

Tip:

You can also add a call alarm from the Calendar menu (see “Adding a Call Alarm to the Scheduler” on page 106).

Call Alarm Menu

When your phone is turned on and you have a call alarm scheduled, your phone alerts you and displays the following options. To select an option, highlight it and press **OK**.

- ▶ **Call** lets you place a call.
- ▶ **Call:Speaker On** lets you place a call with Speaker Phone mode.
- ▶ **Snooze** notifies again after 10 minutes.
- ▶ **View Details** display the details of the call alarm.
- ▶ **Alternate #s** when you stored some other numbers into the same entry in.
- ▶ **Erase** deletes the Call Alarm, even if it is a repeating one.
- ▶ **Edit Time/Date** enables you to edit the call alarm time setting.
- ▶ **Exit** to return to the main menu.

Editing an Internal Phone Book Entry

To make changes to an entry:

1. Press **▶** of the Navigation key.
 2. Highlight your desired entry and press **OK**.
 3. Highlight **Edit**, and press **OK**.
 4. To select an option, highlight it and press **OK**.
- ▶ **Phone#** to change the entry's number. Enter the new number and press **OK**.
 - ▶ **E-mail Address** to change the entry's e-mail address. Enter the new address and press **OK**.
 - ▶ **Web Address** to change the entry's web address. Enter the new address and press **OK**.
 - ▶ **Name** to change the entry's name. Enter the new name and press **OK**. (See pages 46-49 for entering method.)
 - ▶ **Set Secret** to make an entry secret.

Secret Internal Phone Book Entries

You can hide an entry's phone number(s) and require your lock code to change it by making the entry secret. The entry name is still displayed, but the number is replaced by "(Secret)."

To make an entry secret:

1. Display an Internal Phone Book entry.
2. Highlight **Edit** and press **OK**.
3. Highlight **Set Secret** and press **OK**.
4. Enter 4 digits lock code.
5. Highlight **Yes** and press **OK**.

To make an entry not secret:

1. Display an Internal Phone Book entry.
2. Highlight **Edit** and press **OK**.
3. Highlight **Set Secret** and press **OK**.
4. Enter 4 digits lock code.
5. Highlight **No** and press **OK**.

Dialing Sprint PCS Services

You must be in digital mode to access Sprint PCS Services.

To dial a service:

1. From the main menu, highlight **Phone Book**, and press **OK**.
2. Highlight **Services**, and press **OK**.
3. Highlight **Customer Care, Dir Assist, Road Assist, Account Info.**, and press **OK**.
4. Press **TALK** or **SPEAKER**.
or
Highlight **Call or Call: Speaker On**, and press **OK**.

My Sprint PCS Phone Number

To display your phone number:

1. From the main menu, highlight **Phone Book** and press **OK**.
2. Highlight **My Phone #** and press **OK**.

Storing Special Numbers in the Phone Book

Using pause feature

Generally, when you call an automated system like voicemail boxes or credit card companies, you are required to enter a password or calling card number. Rather than entering the numbers manually each time, you can store the numbers in your Internal Phone Book, separated by special characters called “pauses”.

Using two different types of pauses

There are two different types of pauses that you can use when storing a number in your Internal Phone Book.

- ▶ **Timed pauses** wait two seconds before sending the next string of digits.
- ▶ **Hard pauses** cause the phone to stop dialing until you select **Send Tone** and press **OK**.

To insert pauses into a number:

1. Enter the number you want to dial.
2. Highlight:
 - ▶ **Hard Pause** for a hard pause.
 - ▶ **2-Second Pause** for a timed pause.
 - ▶ **Hyphen** for a hyphen (see following section).
3. Press **OK** to insert a pause or manual hyphen.
4. Finish entering the rest of the numbers, then dial or save the entered number.

Using hyphens

You can add hyphens to your Internal Phone Book numbers, however they are mainly for show. You can insert hyphens manually where you like, or choose automatic hyphenation, which inserts hyphens according to the North American Numbering Plan. Entering a manual hyphen suspends any automatic hyphenation for that number.

Using Different Dialing Methods

Prepend Dialing

Prepend dialing allows you to alter a phone number in your Phone Book by adding additional numbers. For example, if your Internal Phone Book entry was entered without an area code and you are out of town, you can prepend that entry with the appropriate area code.

1. Highlight the phone number stored in Phone Book entry or call history using one of the previously described methods, and press **OK**.
2. Highlight **Prepend**, and press **OK**.
3. Enter the digits you wish to prepend.
4. Press **TALK** or **SPEAKER**.

or

Highlight **Call** or **Call: Speaker On**, and press **OK**.

Using speed dial

With this feature you can dial Internal Phone Book entries with one key press for locations 2-9. Save your memory locations 2-9 for speed dialing or your most commonly used phone numbers. Speed dial numbers must be stored in your Phone Book to use this feature.

To store a speed dial number:

1. Press **▶** of the Navigation key.
2. Select the Internal Phone Book entry for which want to set a speed dial number and press **OK**.
3. Highlight the phone number you want to set a speed dial and press **OK**.
4. Highlight **Set Speed Dial**, and press **OK**.
5. To select a corresponding speed dial number from 2-9, highlight an unassigned number and press **OK**.

OR

1. From the main menu, highlight **Phone Book**, and press **OK**.
2. Highlight **Speed Dial #s**, and press **OK**.
3. To select a corresponding speed dial number from 2-9, highlight an unassigned number and press **OK**.
4. Highlight the entry from the list.
 - ▶ Press **▶** or **◀** of the Navigation key to change the stored label per entry name.
5. Press **OK**.

To use speed dial:

1. From the Standby mode, press and hold the appropriate key that corresponds to the memory location for approximately two seconds.

OR

1. From the Standby mode, press the appropriate key.
2. Press **TALK** or **SPEAKER**.
 - or
 - Highlight **Call** or **Call: Speaker On**, and press **OK**.
 - ▶ The display confirms that the number has been dialed when it shows **Connecting**.

Abbreviated Dialing

Abbreviated Dialing is another form of speed dialing. If the last four digits you entered do not match any entry's phone number in your phone book, the four digits are prepended with the digits specified by you and a call to the prepended number is initiated without further input.

To activate this feature:

1. From the main menu, highlight **Setup**.
2. Press **OK**.
3. Highlight **Abbrev. Dial**, and press **OK**.

4. Highlight **Edit**, and press **OK**.
 5. Enter a string of digits (up to six), and press **OK**.
 6. Highlight **Save**, and press **OK**.
- ▶ To use this feature, see “4-Digit Dialing” on page 37.

Changing Your Phone's Settings

In This Section

- ▶ Changing the Greeting
 - ▶ Adjusting the Volume
 - ▶ Ringer Types
 - ▶ Selecting Ringer Types
 - ▶ Changing the Contrast and Backlight Setting
 - ▶ Data/Fax Mode
-

This section describes how you can change your phone's settings to best suit your requirements. Take a few moments to review these options and add or adjust the settings that are right for you.

Changing the Greeting

The greeting can be up to 16 characters and is displayed on the first line of your phone's display screen in Standby mode.

To change your greeting:

1. From the main menu, highlight **Display** and press **OK**.
2. Highlight **Greeting** and press **OK**.
3. Highlight **Change** and press **OK**.
4. Enter characters. (See pages 46-49 for entering method.)
5. Highlight **Save** and press **OK**.

Adjusting the Ringer Volume

To adjust the ringer volume:

- ▶ Use **▲** or **▼** of the volume key in the Standby mode.

OR

1. From the main menu, highlight **Sounds** and press **OK**.
2. Highlight **Ringer/Key Vol** and press **OK**.
3. Highlight **Ringer** and press **OK**.
 - ▶ **Key Beep** for adjusting key beep volume.
 - ▶ **Car/Headset Use** for adjusting **Headset** for the Key volume and **Car Kit** for the Car Kit Ringer/Key volume can also be selected.
4. Select your desired volume level.

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Internal Phone Book entries, types of calls and types of messages.

- ▶ **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- ▶ **Vibrating Ringer** alerts you to calls or messages without disturbing others.

Selecting Ringer Types for Voice Calls

To select a ringer type for voice calls so you can tell what kind of call is coming in by the ringer:

1. From the main menu, highlight **Sounds** and press **OK**.
2. Highlight **Ringer Type** and press **OK**.
3. Highlight **Voice Calls** and press **OK**.
4. Highlight one of items within **With Caller ID, Restricted ID, No Caller ID or Roaming**.
5. Press **OK**.
6. Highlight your desired ringer type and press **OK**.

Selecting Ringer Types for Messages

To select a ringer type for message:

1. From the main menu, highlight **Sounds** and press **OK**.
2. Highlight **Ringer Type** and press **OK**.
3. Highlight **Messages** and press **OK**.
4. Highlight one of items within **Voicemail, Page/Text or Browser Msgs** and press **OK**.
5. Highlight your desired ringer type, and press **OK**.

Setting Alerts

Your phone comes with several different options to keep you aware of what's going on by sounding the alert tone.

- ▶ **Service** sets alert On or Off for network services parameter changes.
- ▶ **Messages** sets alert for Messages (page/text) receiving. Settings are: "Once", "+ Reminder" (every 2 minutes for 20 minutes that a message is waiting) and "Off"
- ▶ **Minute Beep** sets a minute reminder that beeps ten seconds before the end of each minute during a call.

To set the alerts:

1. From the main menu, highlight **Sounds** and press **OK**.
2. Highlight **Alerts** and press **OK**.
3. Highlight your desired option from **Service**, **Messages** or **Minute Beep** and press **OK**.
4. Highlight your desired setting and press **OK**.

Setting Tone Length

To adjust the key beep length and touch tone playback speed.

1. From the main menu, highlight **Sounds** and press **OK**.
2. Highlight **Tone Length** and press **OK**.
3. Select **Short** or **Long** and press **OK**.

Setting Melody Tempo

Your phone allows you to change the tempo of melodies that are selected as the ringer at "Ringer Type".

1. From the main menu, highlight **Sounds** and press **OK**.
2. Highlight **Melody Tempo** and press **OK**.
3. Highlight a melody title, and press **OK**.
4. Select your desired melody tempo and press **OK**.

Setting Start-up Tone

To adjust the phone to sound when you turn the phone on and off.

1. From the main menu, highlight **Sounds** and press **OK**.
2. Highlight **Start-up Tone** and press **OK**.
3. Highlight your desired option, and press **OK**.

Setting Headset Mode

To turn the Turbo Button of the Headset On or Off.

1. From the main menu, highlight **Setup** and press **OK**.
2. Highlight **Headset Mode** and press **OK**.
3. Highlight **Turbo Button On** or **Turbo Button Off** and press **OK**.

Changing the Menu Language

When you first turn your phone on, the menus are displayed in English. To change the menu language to Spanish, follow these steps.

1. From the main menu, highlight **Setup** and press **OK**.
2. Highlight **Language** and press **OK**.
3. Highlight **Español**, and press **OK**.

Note:

Long backlight settings affect the battery's talk and standby times.

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any key press is made.

To change the backlight setting:

1. From the main menu, highlight **Display** and press **OK**.
2. Highlight **Backlight** and press **OK**.
3. Select your desired time length, and press **OK**.

Changing the Contrast

To adjust the contrast on the phone's display:

1. From the main menu, highlight **Display** and press **OK**.
2. Highlight **Contrast** and press **OK**.
3. Select your desired setting, and press **OK**.

Displaying the Version Information

Display the version number of the software, hardware, PRL (Preferred Roaming List), etc., installed on your Sprint PCS Phone.

1. From the main menu, highlight **Display** and press **OK**.
2. Highlight **Version** and press **OK**.

Data/Fax Mode

The Sprint PCS Wireless Web™ Connection Kit (purchased separately) lets you link your laptop PC to your Sprint PCS Phone so you can send and receive data and faxes. Before starting this feature, connect your PC to SCP-4700 by using the serial data cable.

Receiving a Fax

To receive a fax with your phone:

1. From the main menu, highlight **Setup** and press **OK**.
2. Highlight **Data/Fax (In)** and press **OK**.
3. Highlight **Incoming Fax** and press **OK**.

Receiving Data

To receive data with your phone:

1. From the main menu, highlight **Setup** and press **OK**.
2. Highlight **Data/Fax (In)** and press **OK**.
3. Highlight **Incoming Data** and press **OK**.

Returning to Voice Mode

To return to Standby mode at the end of a data or fax transmission, follow these steps.

To return to Standby mode from Data/Fax mode:

1. From the main menu, highlight **Setup** and press **OK**.
2. Highlight **Data/Fax (In)** and press **OK**.
3. Highlight **Disable** and press **OK**.

Note:

When your phone is in data/fax mode, you cannot make or receive voice calls.

Setting Your Phone's Security

In This Section

- ▶ Accessing the Security Menu
 - ▶ Locking Your Phone
 - ▶ Unlocking Your Phone
 - ▶ Restricting Calls
 - ▶ Using Special Numbers
-

By using the security setting on your Sprint PCS Phone™, you receive peace of mind without sacrificing flexibility. With several options available, you can customize your phone to meet your personal needs

Accessing the Security Menu

You must enter your lock code to view the Security menu. If you forget your lock code, try using the last four digits of your Social Security number, the last four digits of your Sprint PCS Phone Number, or 0000.

To access the Security menu:

1. From the main menu, highlight **Security** and press **OK**.
2. Enter lock code.

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint PCS Customer Care or special numbers.

To lock your phone:

1. From the **Security** menu, highlight **Lock Phone** and press **OK**.
2. Highlight **Lock Now** and press **OK**.

Unlocking Your Phone

To unlock your phone:

1. Highlight **Unlock Phone** and press **OK**.
2. Enter your lock code.

Changing the Lock Code

To change your lock code:

1. From the **Security** menu, highlight **Change Lock** and press **OK**.
2. Enter your new lock code.
3. Re-enter your new lock code.

Restricting Calls

You can restrict which phone numbers you can receive calls from or dial. (The Restrict Calls setting does not apply to 911 or Sprint PCS Customer Care.)

To restrict calls:

1. From the **Security** menu, highlight **Limit Use** and press **OK**.
2. Highlight **Outgoing** or **Incoming** and press **OK**.
3. Select your desired option and press **OK**.

Options:

- ▶ **Allow All:** You can make or receive all calls.
- ▶ **Phone Book Only:** Only Phone Book entries or special numbers (see the next page) are available to make or receive calls.
- ▶ **Special #s Only:** Only three special number's entries are available to make or receive calls.

Unrestricting Calls

To unrestrict all calls:

1. From the **Security** menu, highlight **Limit Use** and press **OK**.
2. Highlight **Off** and press **OK**.

Locking the Keypad

Locking the keypad helps avoid accidental key presses without blocking incoming calls or messages. This feature can only be activated when your phone is in Standby mode.

To lock your keypad:

1. From the main menu, highlight **KeyGuard** and press **OK**.

Unlocking the Keypad

1. Press and hold **CLR** for two seconds.

Using Special Numbers

You can save three special numbers in addition to your Internal Phone Book entries. (They can be the same number.) You can make and receive calls from special numbers even when your phone is locked.

To add or replace a special number:

1. From the **Security** menu, highlight **Special #s** and press **OK**.
2. Highlight the entry number where you would like to store the number, and press **OK**.
3. Enter the Phone number.
4. Highlight **Save** and press **OK**.

Erasing the Internal Phone Book

To erase all the names and phone numbers in your Internal Phone Book:

1. From the **Security** menu, highlight **Erase PhoneBook** and press **OK**.
2. Highlight **Yes**, and press **OK**.

Resetting Your Phone

1. From the **Security** menu, highlight **Reset Phone** and press **OK**.
2. Highlight **Yes**, and press **OK**.

Resetting and Locking Your Phone through SMS

When your phone is lost or stolen, you can erase your important personal information (such as phone book entries, call history and messages) and lock your phone by sending a special formatted SMS message to your phone.

Send the following format from your computer:

```
\\RESET**<Passcode>**RESET
```

- ▶ <Passcode> – your defined passcode.
Default Passcode is 11-digit ESN (Electronic Serial Number) which is described on the package or phone itself.

The locked phone will display the following message: "If found, please call Sprint PCS Customer Care 1-888-217-4727."

To activate this feature, the following presetting is required:

1. From the **Security** menu, highlight **Found Me** and press **OK**.
 2. Highlight **Reset/Lock**, and press **OK**.
 3. Highlight **Enable**, and press **OK**.
- ▶ To unlock a phone that has been locked through SMS, bring the phone to Sprint PCS Retail Store.

Changing the Passcode

To change the passcode for the special formatted SMS messages:

1. From the **Security** menu, highlight **Found Me** and press **OK**.
2. Highlight **Change Passcode** and press **OK**.
3. Enter new passcode (11 digits).
4. Re-enter new code and then your new code will be saved.

13

Personal Information Management

In This Section

- ▶ Adding an Event to the Scheduler
 - ▶ Event Alerts
 - ▶ Adding a Call Alarm to the Scheduler
 - ▶ Adding To Do Items
 - ▶ Viewing the Scheduler Calendar
-

Your Sprint PCS Phone™ has been equipped with several personal information management features to help you manage your busy lifestyle. These features turn your phone into a time management planner that helps you keep up with your contacts, schedules and commitments. It takes productivity to a whole new level.

Adding an Event to the Scheduler

Your scheduler helps organize your time and reminds you of important events.

To add an event:

1. From the main menu, highlight **Calendar**.
2. Press **OK**.
3. Highlight the day you want to add an event by using the Navigation key and press **OK**.
4. Highlight **Add Event**, and press **OK**.
5. Highlight **Event**, and press **OK**.
6. Enter a description and highlight **Next Step**.
7. Press **OK**.
8. Enter the time and date using your keypad.
9. You can also select the options. Highlight it and press **OK**.

Options:

- ▶ **Save** to save the entry.
 - ▶ **AM/PM** to select a (AM) or p(PM) in the time setting.
 - ▶ **Set Location** to edit the location of your event.
 - ▶ **Edit Alarm** to enter the number of hours or minutes before the event starts. Highlight **Beep** or **Voice Alarm**, and press **OK**. If you do not want to be reminded, highlight **No Alarm**, and press **OK**.
 - ▶ **Edit Repeat** to repeat the event, highlight one of **None**, **Daily**, **Weekly**, **Monthly** or **Yearly**, and press **OK**.
 - ▶ **Edit End Time** to schedule an end time. Enter the time and date.
 - ▶ **Exit** to return to the previous display.
10. To schedule the event, highlight **Save** and press **OK**.

Event Alerts

There are several ways your Sprint PCS Phone alerts you of scheduled events:

- ▶ By sounding the Beep or Voice Alarm.
- ▶ By blinking the LED.
- ▶ By displaying event's description, time and date, and location, etc.

Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the following options. To select an option, highlight it and press **OK**.

- ▶ **OK** returns to the main menu.
- ▶ **Snooze** notifies again after 10 minutes.
- ▶ **View Details** returns to the display of detailed information.
- ▶ **Erase** deletes the event that you are checking, even if it is a repeating event.
- ▶ **Edit Time/Date** lets you edit the time and date of the event.

Tip:

If you have To-Do memory, you can extract the description from them.

Adding a Call Alarm to the Scheduler

Tip:

You can also add a call alarm from the Phone Book menu. (See “Adding a Call Alarm From the Internal Phone Book” on page 81.)

To add a call alarm from the Scheduler:

1. From the main menu highlight **Calendar**.
2. Press **OK**.
3. Highlight the day you want to schedule a Call Alarm and press **OK**.
4. Highlight **Add Event** and press **OK**.
5. Highlight **Call Alarm** and press **OK**.
6. Highlight the Phone Book entry by selecting **From Phone Book** or **Voicemail** and press **OK**.
or
Enter the phone number directly.
7. Highlight **Next Step**, and press **OK**.
8. Enter the time using your keypad.
9. You can also select the options. Highlight it and press **OK**.

Options:

- ▶ **Save** to save the entry.
 - ▶ **AM/PM** to select a (AM) or p (PM) in the time setting.
 - ▶ **Edit Repeat** to repeat the Call Alarm. Select **None**, **Daily**, **Weekly**, **Monthly**, or **Yearly**.
 - ▶ **Exit** to return to the previous display.
10. Highlight **Save**, and press **OK**.

For call alarm alerts, see “Call Alarm Alerts” on page 81.

Call Alarm Menu

When your phone is turned on and you have an call alarm scheduled, your phone alerts you and displays the following options.

To select an option, highlight it and press **OK**.

- ▶ **Call** lets you place a call.
- ▶ **Call: Speaker On** lets you place a call with setting the speaker phone mode to on.
- ▶ **Snooze** notifies again after 10 minutes.
- ▶ **View Details** returns to the previous display.
- ▶ **Alternate #s** saves the other phone number into the same entry in your Internal Phone Book.
or
Save Phone # stores the number into Phone Book.
- ▶ **Erase** deletes the alarm.
- ▶ **Edit Time/Date** lets you reschedule the time and date of the alarm.
- ▶ **Exit** returns to the main menu.

Viewing Events and Call Alarms

To view your scheduled events and call alarms:

1. From the main menu, highlight **Calendar** and press **OK**.
2. A weekly calendar is displayed. An asterisk is displayed under days with events or call alarms scheduled.
3. To view an individual day, highlight the day by pressing the Navigation key and press **OK**.
4. Highlight an event from the list, and press **OK**. The event or call alarm details display appears.
5. Press **OK** to display options. (See “Editing Events” on page 109.)

To view a future or past day’s scheduled events, follow these steps:

1. From the main menu, highlight **Calendar** and press **OK**.
2. Press **OK** to display the Calendar menu.
3. Highlight **Go To Date** and press **OK**.
4. Enter the date using your keypad.
5. Highlight **Go** and press **OK**. Press **OK** again to view the day’s events.

Editing Events

To change an event:

1. From the event list display, highlight one of events, and press **OK**.
2. The event details appear.
3. Press **OK**.
4. Highlight an option and press **OK**.

Options:

- ▶ **Erase** deletes the event.
- ▶ **Edit** edits the event description and time/date.
- ▶ **Next** displays the next scheduled event or Call Alarm for the selected day.
- ▶ **Previous** displays the previous scheduled event or Call Alarm for the selected day.
- ▶ **Exit** returns to previous display.

Editing Call Alarms

To change a call alarm:

1. From the event list display, highlight one of events, and press **OK**.
2. The call alarm details appear.
3. Press **OK**.
4. Highlight an option and press **OK**.

Options:

- ▶ **Erase** deletes the event.
- ▶ **Edit** edits the phone number and time/date.
- ▶ **Next** displays the next scheduled event or Call Alarm for the selected day.
- ▶ **Previous** displays the previous scheduled event or Call Alarm for the selected day.
- ▶ **Exit** returns to previous display.

Adding To Do Items

Your phone can store and manage 20 To Do items.

To add an entry to your To Do List:

1. From the main menu, highlight **Calendar** and press **OK**.
2. Press **OK** to display the Calendar menu.
3. Highlight **To Do List** and press **OK**.
4. Highlight **Add Item** and press **OK**.
5. Enter a description.
6. Highlight **Next Step** and press **OK**.
7. Highlight **Normal**, **! Urgent** or **✓ Done**.
8. Press **OK**.

Viewing To Do Items

To view your To Do List:

1. Follow the above steps 1-3.
2. Highlight an item from the To Do List and press **OK**.
The details display appears.

Editing To Do Items

To change a To Do item:

1. From the To Do List display, highlight the item you want to edit and press **OK**.
2. Press **OK** to display the options.
3. Highlight an option and press **OK**.

Options:

- ▶ **Erase** deletes the item.
- ▶ **Edit** edits the item's priority or identifies it as Done (✓) and Urgent (!) and the description.
- ▶ **Add To Schedule** extracts the item from the To Do list and makes it a scheduled event.
- ▶ **Next** displays the next scheduled To Do.
- ▶ **Previous** displays the previous scheduled To Do.
- ▶ **Exit** returns to the previous display.

Deleting To Do Items

1. Display the To Do List by using the above method.
2. Highlight one of items and press **OK**.
3. Press **OK** for options.
4. Highlight **Erase** and press **OK**.
5. Highlight **Yes** and press **OK**.

To erase all To Do items:

1. Display the To Do List by using the above method.
2. Highlight **Erase All Items** and press **OK**.
3. Highlight **Yes** and press **OK**.

Viewing and Clearing Memory

To view available and used memory space:

1. From the main menu, highlight **Calendar**.
2. Press **OK**.
3. Press **OK** to display the Calendar menu.
4. Highlight **View Memory**, and press **OK**.
5. Highlight **Schedule**, **Call Alarm** or **To Do List**, and press **OK**.
6. Highlight an option, and press **OK**.

Options:

- ▶ **OK** returns to previous display.
- ▶ **Erase Old** deletes the old events or call alarms.
- ▶ **Erase Done** deletes the To Do that were done.
- ▶ **Erase All** deletes the all events, call alarms or To Do.
- 7. Highlight **Yes** or **No**, and press **OK**.
- ▶ You can also select **Erase Memory** at step 4 above to erase the data.

Setting Environment

This feature provides you with a convenient method of setting volume and backlight of the display depends on the environments as Normal, Silent, Meeting, Outside or Custom.

1. From the main menu, highlight **Environment**.
2. Press **OK**.
3. Highlight the appropriate environment **Normal**, **Silent**, **Meeting**, **Outside** or **Custom** and press **OK**.
4. Highlight **Set**, and press **OK**.

Once you have set the sounds or backlight for the environment except “Normal”, the environment title is shown as banner on the standby mode display.

If you change the setting afterwards, “*” is marked with the banner.

Editing the Environment Setting

To change the default sounds or backlight setting of each environment except “Normal”:

1. Select an environment except “Normal”.
 2. Highlight **Edit**, and press **OK**.
 3. Highlight the desired feature **Ringer/Key Vol**, **Ringer Type**, **Alerts** or **Backlight** and press **OK**.
 4. Select the desired setting using your Navigation key scroll through the list of each setting, and press **OK**.
- ▶ If you choose **Custom** at the step 1, you can also change the title. Follow these steps.
1. Highlight **Edit** and press **OK**.
 2. Highlight **Edit Title** and press **OK**.
 3. Enter the title, then highlight **Save** and press **OK**.

Using the Calculator

Your phone comes with a built-in calculator function.

To use this tool, follow these easy steps:

1. From the main menu, highlight **Special**.
 2. Press **OK**.
 3. Highlight **Calculator**, and press **OK**.
 4. Enter numbers using your keypad. Press **#** to insert a decimal point.
 5. Press the appropriate Navigation key for an arithmetic option. (**▲** for addition, **▼** for subtraction, **◀** for multiplication, **▶** for division)
 6. Enter numbers, and press **OK** for the result.
- ▶ To clear the numbers, press **CLR**.
- ▶ To end calculation, press **END**.

Crab Catch Game:

1. From the main menu, highlight **Special**.
2. Press **OK**.
3. Highlight **Game**, and press **OK**.
4. Select **Backlight On** or **Backlight Off** for the backlight of the display, and press **OK**.
5. Highlight **Crab Catch**, and press **OK**.
6. Press **OK** or wait a second.
7. Press **◀** or **▶** of the Navigation key (or use ***** or **#**) to move the crab to left or right to catch apples into the crab's claw.

The game is over when three apples are not caught with the crab's claw.

8. To end the game, press **END**.

Slot Machine Game:

1. At the step 5 above, highlight **Slot Machine**.
2. Press **OK**.
3. Select how many coin(s) you bet by pressing **1**, **3** or **5**.

It decides the line(s) that the same numbers/marks should be in.

- ▶ 1 coin: Middle line only.
- ▶ 3 coins: Upper, Middle or Lower line.
- ▶ 5 coins: Upper, Middle, Lower or Diagonal lines.

4. To start the slot, press **TALK**.
5. To stop the slot, press **TALK** again or leave it for five seconds.

If you win/lose, your coins increase/decrease.

If you have lost all coins, the game is over.

You can continue the game by pressing **OK** (Yes) from default amount.

6. To end the game, press **END**.

Using the Voice Services of Your Sprint PCS Phone

In This Section

- ▶ Using Voice-Activated Dialing
- ▶ Recording Memos
- ▶ Using Commands

This section explains the features associated with your phone's Voice Services. The easy-to-follow instructions explain how to make calls or go to a menu by simply speaking a command. You'll also learn how to record memos and personal ringers.

Using Voice-Activated Dialing

You can use a Voice Dial tag to automatically dial a phone number in your Internal Phone Book and you entered.

To use a Voice Dial tag to call a phone number:

1. Press **TALK** or **SPEAKER**.
2. At the prompt, say the name into the phone.

Programming Voice - Activated Dialing Tag to Your Phone

To program a voice dial tag:

1. From the main menu, highlight **Voice Service** and press **OK**.
2. Highlight **Voice Dial** and press **OK**.
3. Highlight **Program** and press **OK**.
4. The phone will prompt you to say the name you want to program. Wait for the beep and then say the name.
5. Respond to the prompt by repeating the name after the beep.
6. Enter the Phone number directly, highlight **Next Step** and press **OK**.
7. Enter the name, highlight **Next Step** and press **OK**.
(If you want to save the entry without name, select **Save w/o Name**.)
8. Highlight **Save** and press **OK**.

OR

1. From the step 6 above, highlight **From Phone Book** and press **OK**.
2. Select your desired entry and press **OK**.
3. Select a phone number and press **OK**.
4. Highlight **Save** and press **OK**.

Erasing Voice- Activated Dialing Entries

To erase an individual Voice Dial entry:

1. Display the entry and press **OK**. (To display the voice dial entry list, see “Voice-Activated Dialing Options” on page 118.)
2. Highlight **Erase** and press **OK**.
3. Highlight **Yes** and press **OK**.
▶ To erase all Voice Activated Dialing entries, see “Voice-Activated Dialing Options” on page 118.

Recording Memos

To record a memo:

1. From the main menu, highlight **Voice Service** and press **OK**.
2. Highlight **Voice Memo** and press **OK**.
3. Highlight **Memo Record** and press **OK**.
4. Press **OK** again for start, and follow the system prompts.

Shortcut:

Press and hold **TALK** or **SPEAKER** when the phone is in Standby mode.

Erasing Recorded Voice Memo

To erase an individual Voice Memo:

1. After playing a Voice Memo.
(To play the voice memo, see “Memo Options” on page 118.)
2. Highlight **Erase** and press **OK**.
3. Highlight **Yes** and press **OK**.
▶ To erase all Voice Memos see “Memo Options” on page 118.

Memo Options

To select a memo option:

1. From the main menu, highlight **Voice Service** and press **OK**.
2. Highlight **Voice Memo** and press **OK**.
3. Highlight one of the options and press **OK**.

Options:

- ▶ **Memo Record** to record Voice Memo (see “Recording Memos” on page 117).
- ▶ **Play** to play the recorded Voice Memo.
- ▶ **Play Speaker** to play the recorded Voice Memo with Speaker Phone mode.
- ▶ **Erase All Memos** to erase all recorded Voice Memo.

Voice- Activated Dialing Options

To use a Voice Dial tag, see “Using Voice- Activated Dialing” on page 116. To display Voice Dial tag options:

1. From the main menu, highlight **Voice Service** and press **OK**.
2. Highlight **Voice Dial** and press **OK**.

Options:

- ▶ **Program** to program the phone for Voice Dial. (See “Programming Voice-Activated Dialing Tag to Your Phone” on page 116.)
- ▶ **Review** to display the stored voice dial entry.
- ▶ **Review Speaker** to hear the stored voice dial entry through the Speaker. To hear the entry, highlight your desired one and press **OK**.
- ▶ **Erase All** to erase all entries.

Using Voice Ringer

Your Sprint PCS Phone allows you to set the voice prompt (instead of sound) for ringer which is heard when you receive an incoming call or new message. To activate this feature:

1. From the main menu, highlight **Voice Service** and press **OK**.
2. Highlight **Voice Ringer** and press **OK**.
3. Highlight **Voice Calls** or **Messages** depending on your preference to set the Voice Ringer for incoming calls or new Text messages.
4. Press **OK**.
5. Highlight **On** and press **OK**.

- ▶ When you have a call from the person whose name is stored in the Voice Dial function, your recorded voice (caller’s name) is heard, for example, “Call from XXX”.

“Voice Ringer” does not apply to the following cases:

- ▶ When Ringer Volume is set to off or vibrate.
- ▶ When Ringer Type is set to vibrate or None.
- ▶ When the phone is in analog mode.
- ▶ While talking in digital mode.

Using Voice Prompt

At the following four features your Sprint PCS Phone allows you to hear the Voice prompts (Default setting is On): Voice Alarm, Auto Answering, Voice Memo and Voice Dial.

To deactivate this feature:

1. From the main menu, highlight **Voice Service** and press **OK**.
2. Highlight **Voice Prompt** and press **OK**.
3. Highlight **Off** and press **OK**.

Experiencing Sprint PCS Wireless WebSM

In This Section

- ▶ Launching and Using the Sprint PCS Wireless Web Browser
 - ▶ Creating Bookmarks
 - ▶ Using Sprint PCS Wireless Web MailSM
 - ▶ Using AOL Instant MessengerSM Service
 - ▶ Using Sprint PCS Wireless Web Short MailSM
 - ▶ Signing Up for Sprint PCS Wireless Web Updates
 - ▶ Setting Up a Sprint PCS Wireless Web Connection
-

By now you've discovered the great features that come with your Sprint PCS PhoneTM. Now it's time to experience the Sprint PCS Wireless Web. Let the adventure begin.

The Sprint PCS Wireless Web

With the Sprint PCS Wireless Web and your wireless Internet-ready phone, you have access to many features via the wireless Internet:

- ▶ **The Sprint PCS Wireless Web Browser** allows you to view specially-designed versions of popular web sites.
- ▶ **Sprint PCS Wireless Web Mail** lets you send and receive e-mail quickly and easily.
- ▶ **The AOL Instant Messenger Service** lets you keep in touch with family and friends via two-way instant messaging.
- ▶ With **Sprint PCS Wireless Web Short Mail**, you can use a person's Sprint PCS Phone Number to send instant text messages from your Internet-ready Sprint PCS Phone to their Internet-ready Sprint PCS Phone – and they can send messages to you.
- ▶ **The Sprint PCS Wireless Web Connection** lets you connect to the Internet or your company's network with a laptop PC or hand-held computing device, and a Sprint PCS Wireless Web™ Connection Kit.
- ▶ **Sprint PCS Wireless Web Updates** let you receive daily information updates, including weather, stock quotes and sports scores.

The Sprint PCS Wireless Web Browser

Your phone comes equipped with a Browser, which allows you to access up-to-the minute information through the Sprint PCS Wireless Web.

You can view specially-designed text versions of popular Internet sites, including Yahoo!®, Amazon.com®, The Weather Channel®, and more. Browsing the Sprint PCS Wireless Web using your phone is rather different from using a home computer because sites display specialized text and reduce their graphics.

The Browser connects to the Internet by placing a call. Note that  appears on the display whenever a call is in progress, just as with a regular voice call. Service charges vary depending on your service option.

Setting Web Guard

When you launch the Sprint PCS Wireless Web Browser, a message on your display screen reminds you that you are billed for the airtime.

To set Web Guard:

1. From the main menu, highlight **Setup** and press **OK**.
2. Highlight **Web Guard** and press **OK**.
3. Highlight **Prompt** and press **OK**.
4. Select one of the options.

Options:

- ▶ **To start** sets the reminder when you launch the Browser.
- ▶ **To exit** sets the reminder when you exit the Browser.
- ▶ **Both** sets the reminder both of when you start and exit the Browser.
- ▶ **None** disables the reminder.

Launching the Sprint PCS Wireless Web Browser

To launch the Sprint PCS Wireless Web Browser:

- ▶ From the main menu, highlight **Wireless Web** and press **OK**. You'll see a few introductory messages as the browser launches.

The first time you use the Browser, you'll be prompted to enable the security feature. This automatic process will take 3–6 minutes to complete and it occurs just once. When the process is complete, you're ready to start using the Sprint PCS Wireless Web.

Following the security setup, you'll see the Sprint PCS Wireless Web Home Page. This is the main page for the Browser and it gives you access to all the sites in the Sprint PCS Wireless Web. The next time you use the Browser, you may not see the home page at first because the Browser will display the page you were viewing when you last exited the Browser.



The Sprint PCS Wireless Web Home Page

You may notice that sometimes the Browser will launch without placing a call. This is because the phone stores recently viewed pages in its memory cache. The Browser will connect automatically when you access a page that's not stored in the cache.

If the phone has been inactive for a while and a new wireless Internet site has not been requested, the Browser will automatically disconnect. The Browser will remain active – only the connection will end. The Browser will automatically reconnect when you go to a wireless Internet site that's not stored in the phone's memory cache. For this reason, you may find that you are billed for several network connections within a single session. This is normal and is designed to minimize airtime charges.

When launching the Browser, you may need to take an extra step or see a reminder that Browser calls will be charged. (See "Setting Web Guard" on page 123.)

Note:

The Sprint PCS Wireless Web Home Page is subject to change.

Using the Sprint PCS Wireless Web Browser

Using the Browser is easy once you've learned a few basics. Here are some tips for navigating the Sprint PCS Wireless Web:

Softkeys

The bottom line of the Browser contains a row of softkeys. These are your main controls for getting around.

To activate a softkey:

- ▶ Press the Navigation key left or right to highlight the desired softkey, then press **OK**.

Press the Navigation key right a few times and you'll see more softkeys. Depending on the wireless Internet site you're using, the first two softkeys may change names and functions, but the other softkeys are always available and give you access to these special features:

- ▶ **Home** accesses the Sprint PCS Wireless Web Home Page.
- ▶ **Help** opens the Browser Menu (see "The Browser Menu" on page 129).
- ▶ **Mark** creates a bookmark for the current page.

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some wireless Internet sites.

- ▶ Press the Navigation key up or down to scroll line by line. You can also use the keys on the side of your phone to quickly scroll one page at a time rather than one line at a time.

Selecting

Once you've learned how to activate softkeys, you can start navigating wireless Internet sites.

- ▶ Select on-screen items by using the Navigation key to highlight the desired item, then activate the desired softkey by pressing **OK**.

You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK," but don't confuse it with the **OK** on your phone, which always activates the highlighted softkey.

- ▶ If the items on a page are numbered, you can also use your keypad (number keys) to select an item.

Links, which appear [in brackets], allow you to jump to different wireless Internet pages, select special functions or even place phone calls.

- ▶ Select links by highlighting the link, and then activating the appropriate softkey, which is usually, (but not always), the left softkey.

Going Home

- ▶ To return to the Sprint PCS Wireless Web Home Page, highlight the **Home** softkey and press **OK**.

Going to a Wireless Web Internet Site

From the Sprint PCS Wireless Web Home Page, you can go to a wireless Internet site simply by highlighting the desired site name and activating the **OK** softkey. Note that the list of wireless Internet sites extends beyond one page.

- ▶ Select **More...** to see additional site listings.
- ▶ To access a site that does not appear on the Home Page, use the **Go To...** function (on page 3 of the Home Page). You'll be required to enter the URL (site address) for the site you want to visit. It is not necessary to enter "http://" before the site name. Only HDML and WML sites are accessible.

Note:

Some links do not display other pages.

Note:

Only specially-designed wireless Internet sites are available via the Go To function.

Going Back

- ▶ To go back one page, press **CLR**.

Entering Text

Some wireless Internet sites require that you enter text using your phone's keypad. See "Entering Characters Using T9 Text Input" on page 47 or "Entering Characters by Tapping the Keypad" on pages 46-47.

Creating a Bookmark

Bookmarks allow you to store the address of favorite wireless Internet pages for easy access at a later time.

To create a bookmark:

1. Go to the page you want to mark.
 2. Highlight the **Mark** softkey and press **OK**.
 3. A title for the bookmark may already be displayed. You can change the title or enter one of your own.
 4. Highlight **Save** and press **OK** to save the name and add the page to your list of bookmarks. A message appears confirming the bookmark was added to the list.
 5. Select **OK** to return to the screen that you marked and resume navigation within the Sprint PCS Wireless Web Browser.
- ▶ The new bookmark is added to your bookmark list.

Accessing a Bookmark

To access a bookmark from the Sprint PCS Home Page:

1. Highlight **My Wireless Web** and press **OK**.
2. Highlight **Bookmarks** and press **OK**.
3. Highlight the bookmark you want to display and press the number associated with the bookmark in the bookmark list.

Deleting a Bookmark

1. From the bookmark list, highlight the bookmark you want to delete.
2. Highlight **Menu** softkey and press **OK**.
3. Select **Erase** from the list and press **OK**.
4. Select **Erase** and press **OK**.

The Browser Menu

The Browser Menu contains several special functions. To access the Browser Menu, use the Navigation key to highlight the **Help** softkey, then press **OK**.

- ▶ **Reload** to return to a display just before the Browser Menu.
- ▶ **Home** to access the Sprint PCS Wireless Web home page.
- ▶ **Bookmarks** to access the wireless Internet pages that you bookmarked.
- ▶ **Mark Site** to create a bookmark for the current wireless Internet site.
- ▶ **About Openwave** to display information about the Phone.com browser.
- ▶ **Advanced...** to display advanced options for your Sprint PCS Wireless Web Browser. (You should only use when instructed by Sprint PCS Customer Care.)

Ending a Browser Session

To end a browser session and disconnect from the Sprint PCS Wireless Web, press **END**.

Troubleshooting

If you're having trouble using the Sprint PCS Wireless Web Browser, use the following troubleshooting guide:

Problem You can't escape from a particular site.

Recommendation Go to the Sprint PCS Wireless Web home page by using the Navigation key to highlight the Home softkey, then press **OK**.

Problem You continue to receive errors when using a certain site.

Recommendation Try again later. Sites are sometimes temporarily inaccessible due to high traffic volume. If the problem persists, there may be a problem with the site.

Problem The Browser appears to be malfunctioning or stops responding.

Recommendation Reset the Browser by going to the Browser Menu and selecting the "Restart" option. If that doesn't work, turn your phone off then on again. If that also fails, try removing the battery and then replacing it.

If none of these solutions work, please contact Sprint PCS Customer Care.

Problem An error message says that my phone is not yet registered for Sprint PCS Wireless Web services.

Recommendation Sprint PCS Wireless Web services can take longer to activate than voice services. Please try again later. If the problem persists for more than one day, please contact Sprint PCS Customer Care.

Problem The message "Service Not Available" appears.

Recommendation Your phone can't acquire a signal or you are in an area that does not yet support Sprint PCS Wireless Web services. If possible, try to find an area that supports Sprint PCS Wireless Web services. If you continue to receive this message, please contact Sprint PCS Customer Care.

Problem The message "Data Server Unavailable" appears.

Recommendation Sprint PCS Wireless Web services are temporarily unavailable. Please try again later. If this problem persists, contact Sprint PCS Customer Care.

Problem The message "IP Address Missing" appears.

Recommendation Your phone's factory settings have been altered. Please contact Sprint PCS Customer Care for assistance.

Using Sprint PCS Wireless Web Mail

With Sprint PCS Wireless Web Mail, you can set up a Sprint PCS e-mail account at no additional charge and perform many of the typical e-mail functions from your Sprint PCS Phone that you can from your personal computer at www.sprintpcs.com. Or, if you prefer, you can access other select e-mail providers, including America Online®.

To set up and use your Sprint PCS Wireless Web Mail:

1. From the main menu screen, scroll to **Wireless Web** and press **OK**.
2. If the Sprint PCS Wireless Web Home Page is not displayed, highlight **Retry** and press **OK**.
3. Scroll to **Messaging** and press **OK**.
4. Scroll to **Sprint PCS Mail** and press **OK**. If you are a first-time user, follow the prompts to set up your Sprint PCS Wireless Web account. A user name and password must also be established.
5. To view your messages, scroll to **Inbox** and press **OK**.
6. Scroll to the message you want to read and press **OK**.
7. After you have read the message, you can select a quick action at the end of the message, such as **Erase**, **Reply**, **Reply All** or **Next Message**, or select the **Menu** softkey for a full list of options.

Using AOL Instant Messenger Service

The AOL Instant Messenger Service lets you keep in touch with family and friends via two-way instant messaging. Simply type a message using your Sprint PCS Phone or personal computer, send it off to friends and family on your Buddy List® group, and they'll receive your message in an instant. Messages can be sent from Sprint PCS Phone to Sprint PCS Phone, personal computer to Sprint PCS Phone and Sprint PCS Phone to personal computer. When you receive a new message, you will be informed by a Sprint PCS Wireless Web Alert – even when you are not logged on to the Sprint PCS Wireless Web.

To sign up for AOL Instant Messenger service, visit the AOL Instant Messenger page from your personal computer at www.sprintpcs.com. Or visit www.aol.com and register for an AOL Instant Messenger screen name and password by downloading the software as instructed. You do not have to be an AOL member to utilize this service.

To access AOL Instant Messenger from your Sprint PCS Phone:

1. From the main menu, scroll to **Wireless Web** and press **OK**.
2. If the Sprint PCS Wireless Web Home Page is not displayed, highlight **Retry** and press **OK**.
3. Scroll to **Messaging** and press **OK**.
4. Scroll to **AOL IM** and press **OK**.
5. When the AOL Instant Messenger screen is displayed, highlight the **OK** softkey and press **OK**.
6. Enter your AOL Instant Messenger screen name and press **OK**. (Use the screen name you created when you signed up for the AOL Instant Messenger Service.)
7. Enter the password associated with your screen name and press **OK**. The AOL Instant Messenger menu is displayed.

Using Sprint PCS Wireless Web Short Mail

With Sprint PCS Wireless Web Short Mail, you can use a person's Sprint PCS Phone Number to send instant text messages from your Internet-ready Sprint PCS Phone to their Internet-ready Sprint PCS Phone – and they can send messages to you. When you receive a new message, you'll automatically be notified with a Sprint PCS Web Alert.

To send a Short Mail message:

1. From the main menu screen, scroll to **Wireless Web** and press **OK**.
2. If the Sprint PCS Wireless Web Home Page is not displayed, highlight **Retry** and press **OK**.
3. Scroll to **Messaging** and press **OK**.
4. Scroll to **Short Mail** and press **OK**.
5. Scroll to **Compose** and press **OK**.
6. Enter a Sprint PCS Phone Number and press **OK**.
7. Select **Type Msg** (to enter a message up to 100 characters), **Pre-Set Msgs** (to select a preset message) or **Icons** and press **OK**.
8. Enter your text or select a preset message or icon and press **OK**.
9. To send the message, select the **SEND** softkey and press **OK**.

Signing Up for Sprint PCS Wireless Web Updates

With Sprint PCS Wireless Web Updates, you can have the Internet-based information sent directly to your Sprint PCS Phone at the times you choose. When you select the Sprint PCS Wireless Web option, up to 50 updates can be sent to your phone each month at no additional charge.

To select the Internet-based information you want sent to your Sprint PCS Phone:

1. From your computer, log on to the Internet.
2. Go to the site from which you want to receive information. A few of the sites you can visit are America Online®, amazon.com®, eCompare!®, ebay®, FoxSports.com® and FTD.com®. (The location where you request updates within each site will vary.)
3. Where indicated on the site, input your Sprint PCS 10-digit phone number followed by “@messaging.sprintpcs.com.” For example: 5551234567@messaging.sprintpcs.com.

Upon completing the registration process, you should begin receiving your updates on your Sprint PCS Phone as requested.

Setting Up a Sprint PCS Wireless Web Connection

Getting Started

Your wireless Internet-ready Sprint PCS Phone allows you to connect to a laptop PC, hand-held or palm-sized computing device to send and receive e-mail, access the Internet or your company's network and more, without searching for a wall-mounted telephone jack. In just three steps, you can use your connectivity:

1. First, you'll need a Sprint PCS Wireless Web Connection Kit (sold separately). For purchase information, see page 141 in the Accessories section.
2. Connect your laptop PC to your Sprint PCS Phone by using the serial data cable. The cable adapter will connect to a handheld or palm-sized computing device.
3. Finally, take a few minutes to install the Sprint PCS DialerSM software onto your computer using the CD.
 - ▶ For complete details on how to install and use the software, refer to the user guide in the Sprint PCS Wireless Web Connection Kit you purchased.

Placing a Data Call

To place a data call when you're connected to the Sprint PCS Wireless Web:

1. First, make sure the cable is connected properly.
2. Open the Sprint PCS Dialer application on your computer and place the call.
 - ▶ The phone displays the number your computer is calling and a "connecting" message is displayed.
 - ▶ Once the call successfully connects, your phone's display shows you information on the status of the data call.

Receiving Sprint PCS Wireless Web Calls

Most users use the Sprint PCS Wireless Web Connection to place outgoing data/fax calls. But you can also set up your Sprint PCS Phone to receive (host) data and fax calls. Because each phone model is different, the Sprint PCS Wireless Web Connection Kit doesn't include instructions for how to set up your phone to receive data and fax calls. Here's the procedure to set up your Sprint PCS Phone to receive a (mobile-terminated) data or fax call:

Data/Fax Mode

The Sprint PCS Wireless WebTM Connection Kit (purchased separately) lets you link your laptop PC to your Sprint PCS Phone so you can send and receive data and faxes. Before starting this feature, connect your PC to SCP-4700 by using the serial data cable.

Receiving a Fax

To receive a fax with your phone:

1. From the main menu, highlight **Setup** and press **OK**.
2. Highlight **Data/Fax (In)** and press **OK**.
3. Highlight **Incoming Fax** and press **OK**.

Receiving Data

To receive data with your phone:

1. From the main menu, highlight **Setup** and press **OK**.
2. Highlight **Data/Fax (In)** and press **OK**.
3. Highlight **Incoming Data** and press **OK**.

Returning to Voice Mode

To return to Standby mode at the end of a data or fax transmission, follow these steps.

To return to Standby mode from Data/Fax mode:

1. From the main menu, highlight **Setup** and press **OK**.
2. Highlight **Data/Fax (In)** and press **OK**.
3. Highlight **Disable** and press **OK**.

Note:

When your phone is in data/fax mode, you cannot make or receive voice calls.

Using Special Features During a Sprint PCS Wireless Web Call

Your phone gives you the ability to use special features while you're on a Sprint PCS Wireless Web call. They are outlined below:

- ▶ **Caller ID:** Just like your phone stores regular Caller ID numbers, it also stores the numbers of incoming Sprint PCS Wireless Web Connection calls. To distinguish between the two types of calls, "Data" or "Fax" displays along with the number of the caller when you view your Caller ID records.
- ▶ **Call Waiting:** If someone tries to reach you while you're connected to the Sprint PCS Wireless Web, your phone behaves like it is turned OFF. Depending on your service, callers may get your voicemail. Call Waiting is automatically deactivated whenever you place or receive a Sprint PCS Wireless Web Connection call.
- ▶ **Accessing Features:** You can still access most of your phone's features while you're connected on a Sprint PCS Wireless Web Connection Call. You can navigate the phone's menu system to change or view your phone's features or phone book entries. You can also read messages or view the Caller ID records that you received before placing the call.

Ending a Sprint PCS Wireless Web Call

It's important to note that some of the normal ways to end a call won't work with the Sprint PCS Wireless Web Connection calls. You should always close the connection through the application on your computer. Your phone will then return to Standby mode.

Selecting Your Accessories

In This Section

- ▶ Overview of Available Accessories for This Phone
 - ▶ How to Order
-

We offer a variety of accessories for your new Sprint PCS Phone™. Choose from chargers, batteries and hands-free devices – all designed to give you more flexibility and convenience.

Accessory Options

Standard Battery

The standard battery provides approximately 4 hours of continuous talk time in digital mode and 1.25 hours of continuous talk time in analog mode or approximately 12 days of continuous standby time in digital mode and 10 hours continuous standby time in analog mode. The battery charges in about 3 hours using any of the charging accessories available with this phone.

Extended Battery

The extended battery provides approximately 7.5 hours of continuous talk time in digital mode and 2.5 hours of continuous talk time in analog mode or 18 days continuous standby time in digital mode and 20 hours continuous standby time in analog mode. The battery charges in about 5 hours using any of the charging accessories available with this phone.

Vehicle Power Adapter

You can charge your phone (even during a call) in your vehicle using the vehicle power adapter.

Desktop Charger

The Desktop Charger uses an AC adapter and is provided with your phone for convenient charging.

Travel Charger

Compact and lightweight, this is a convenient way to charge your phone while on the road.

Sprint PCS Wireless Web Connection Kit

This convenient connectivity kit connects to the serial port and contains Sprint PCS Dialer software, a serial data cable and a cable adapter to connect your Sprint PCS Phone to your mobile computing device. The Sprint PCS Wireless Web Connection Kit is designed for Apple® Macintosh® portables, PC laptops and Windows® CE devices.

How to Order

Most Sprint PCS Accessories found at local Sprint PCS Centers can also be purchased through the Sprint PCS Accessory HotlineSM by calling 1-800-974-ACC1 (2221) from your Sprint PCS Phone. Next day delivery is offered in select areas. You can also visit our web site at www.sprintpcs.com.

Knowing Performance and Safety Guidelines

In This Section

- ▶ Getting the Most Out of Your Reception
 - ▶ Maintaining Safe Use and Access to Your Phone
 - ▶ Caring for the Battery
 - ▶ Acknowledging Special Precautions and the FCC Notice
-

Part of getting the most out of your Sprint PCS Phone™ is knowing where and how it works at optimum efficiency. This section outlines performance and safety guidelines that ensure you experience the full quality that your Sprint PCS Phone was designed to give to you.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.003 μ watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your Sprint PCS Phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- ▶ Hold the phone with the antenna raised, fully-extended and over your shoulder.
- ▶ Try not to hold, bend or twist the phone's antenna.
- ▶ Don't use the phone if the antenna is damaged.
- ▶ Speak directly into the phone's receiver.
- ▶ Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a Sprint PCS Center or call Sprint PCS Customer Care for service.

Note:

For the best care of your phone, only Sprint PCS authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using Your Phone While Driving

Talking on your phone while driving is illegal in some states. Even where it's not, it can divert your attention from driving. Remember that safety always comes first.

When using your phone in the car:

- ▶ Get to know your phone and its features, such as speed dial and redial.
- ▶ When available, use a hands-free device.
- ▶ Position your phone within easy reach.
- ▶ Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- ▶ Do not take notes or look up phone numbers while driving.
- ▶ Dial sensibly and assess the traffic; if possible, place calls when you are stationary or before pulling into traffic.
- ▶ Do not engage in stressful or emotional conversations that may divert your attention from the road.
- ▶ Dial **9 1 1** to report serious emergencies. It's free from your wireless phone.
- ▶ Use your phone to help others in emergencies.
- ▶ Call roadside assistance or a special non-emergency wireless number when necessary.

Tip:

Purchase an optional Hands-Free Car Kit.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Note:

Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off.

Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- ▶ Fueling areas such as gas stations.
- ▶ Below deck on boats.
- ▶ Fuel or chemical transfer or storage facilities.
- ▶ Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- ▶ Any other area where you would normally be advised to turn off your vehicle's engine.

Restricting Children's Access to your Phone

Your Sprint PCS Phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- ▶ Use only Sprint PCS-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- ▶ In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- ▶ Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- ▶ Never dispose of the battery by incineration.
- ▶ Keep the metal contacts on top of the battery clean.
- ▶ Don't attempt to disassemble or short-circuit the battery.
- ▶ The battery may need recharging if it has not been used for a long period of time.
- ▶ It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- ▶ Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

4° F to 140° F (-20° C to 60° C)

More than one month:

4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (LiIon) Batteries

For safe disposal options of your LiIon batteries, contact your nearest Sprint PCS-authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Acknowledging Special Precautions and the FCC Notice

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint PCS supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure that the antenna is at least 0.6 inches (1.5 centimeters) from your body when transmitting. Use of non-Sprint PCS approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, please visit the FCC website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of SCP-4700 are:

AMPS mode (Part 22) - Head: 1.34 W/kg; Body-worn: 1.27 W/kg

PCS mode (Part 24) - head: 1.39 W/kg; Body-worn: 1.15 W/kg.

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines. FCC ID number: AEZSCP-47H

More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/fccid>

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SCP-4700

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Terms and Conditions & Warranty Information

In This Section

- ▶ Terms and Conditions of Services
 - ▶ Manufacturer's Warranty
-

This section contains the Terms and Conditions of Services and the manufacturer's warranty for your Sprint PCS Phone™.

Terms and Conditions of Services

(Effective as of November 24, 2003 until replaced)

Thanks for choosing Sprint. These terms and conditions are part of your agreement with Sprint for PCS Services.

The terms and conditions included with your PCS Phone may not be the most current version. For the most current version of the terms and conditions, please visit our website at www.sprintpcs.com or call PCS Customer Service Solutions at 1-888-211-4PCS. If you activated PCS Services before the effective date of these terms and conditions, these terms and conditions replace and supersede any previous terms and conditions.

If you have questions about your PCS Services, please visit our website at www.sprintpcs.com or call PCS Customer Service Solutions at 1-888-211-4PCS (4727).

Para solicitar esta literatura en español, por favor contactar a 1-888-211-4PCS(4727).

Agreement. Your agreement ("Agreement") with Sprint Spectrum L.P. and any of its affiliates doing business as Sprint providing PCS Services ("Services") to you is made up of these Terms and Conditions of Service ("Terms") and the Service Plan that we agree to provide you. Your "Service Plan" is described in our marketing materials, and includes the terms, rates and features we set for that Service Plan. In the agreement, we use the words "we," "us," "our" or "Sprint" to refer to Sprint Spectrum L.P. and its affiliates doing business as Sprint. You accept the agreement when you activate PCS Services or make any attempt to use our PCS Services (for example, attempting to place any call while on or roaming off the Sprint Nationwide PCS Network, using data services, etc.). We may change the Agreement at any time by giving you prior notice. Any changes to the Agreement are effective when we publish them. If you use our Services or make any payment to us on or after the effective date of the changes, you accept the changes. If we change a material term of the Agreement and that change has a material adverse effect on you, you may terminate the Agreement without an early termination fee by calling 1-888-211-4727 within 30 days after the invoice date of the first invoice you receive after the changes go into effect. You understand and agree that taxes, Universal Service fees and other charges imposed by the government or based on government calculations may increase or decrease on a monthly basis, and that this paragraph does not apply to any increases in such taxes, Universal Service fees and other charges.

Provision of Service. Your purchase of a PCS Phone or other equipment does not mean that we must provide Services to you. We may decide not to provide Services to you for any lawful reason. We may request that you provide us with any information we reasonably require to determine whether you qualify for Services. Services in some areas are managed and provided under contract with Sprint by independent affiliates with access to the Sprint Nationwide PCS Network. Some

Services may not be available or may operate differently in certain affiliate markets or other areas.

Credit Verification. You must have and maintain satisfactory credit to receive and continue to receive Services. We will verify your credit before agreeing to provide Services to you and we may verify your credit at any time while we provide Services to you. Credit verification may include a review of credit reports that we receive from credit bureaus. If at any time we determine, in our sole discretion, that payment for Services may not be made when due, we may suspend Services and require that you provide payment on account or a guarantee of payment before we resume Services.

Service Plan. You may be eligible for a fixed length PCS Service Plan ("Term Service Plan") or for a month-to-month Service Plan ("Non-Term Service Plan"). We determine the Service Plan for which you qualify. Except as permitted by the Agreement, you must maintain service with us on your Term Service Plan for the minimum term associated with that Term Service Plan. We may offer non-identical Service Plans to different individuals or entities. Services and coverage under some Service Plans may be more limited than available under other Service Plans. Your Service Plan sets out the charges for Services and is your Service Plan until that Service Plan is changed, you switch to a different Service Plan, or your Services terminate. Based on your credit rating or other factors, we may require that you make a deposit, prepayment, or a series of deposits or prepayments, or be subject to an account spending limit, before Services are activated or maintained.

Changing Service Plans. If you are on a Non-Term Service Plan, you may change to a different Service Plan for which you qualify. Any change is effective at the start of your next full invoicing cycle unless otherwise specified by us at the time that you place your change order. If you change or add a different Service Plan or service feature and the change is effective prior to the start of your next full invoicing cycle, you will be invoiced a prorated amount. We may require a service charge for implementing any change directed by you in addition to the charges associated with the Service Plan or optional service features you select. If you are on a Term Service Plan and you want to change your service plan, you may be required to accept a new Term Service Plan and we may require you to pay the early termination fee set out in your Service Plan or other fee.

Termination. Non-Term Service Plan. If you are on a Non-Term Service Plan, you may terminate Services at any time by giving us notice. Subject to the terms of this Agreement, we may terminate Services at any time, with or without notice. If your Service has been suspended due to non-payment, you may be charged a reactivation fee. We may deactivate any Number before you receive notice of termination without liability to you. Termination by either of us may be with or without cause.

Termination. Term Service Plan. EXCEPT AS PERMITTED BY THE AGREEMENT, IF YOU TERMINATE YOUR TERM SERVICE PLAN BEFORE THE END OF THE TERM, OR IF WE TERMINATE SERVICES FOR CAUSE BEFORE THE END OF THE TERM, YOU WILL BE REQUIRED TO PAY THE EARLY TERMINATION FEE ASSOCIATED WITH YOUR TERM SERVICE PLAN. No early termination fee is charged if you

terminate a Term Service Plan in accordance with the return policy associated with your Term Service Plan. After the expiration of the term, the Terms relating to Non-Term Service Plans apply.

Termination. General. Regardless of whether you have a Non-Term or a Term Service Plan, we may terminate or suspend Services to you without liability if: (1) you breach any provision of this Agreement (including if you fail to pay any charges for Services); or (2) you fail to pay any charges due us for equipment or otherwise. If Services are terminated before the end of your current invoicing cycle, we will not prorate the monthly recurring charge to the date of termination, and you will not receive a credit or refund for any unused minutes in your Service Plan.

Use of Services and Equipment; Availability. You must be at least 18 years old to subscribe to our Services. We may require you to provide proof of your age and identity. If you are under 18 years old you may be eligible for certain Services that have Account Spending Limits if a person 18 years or older is also named as a subscriber on the Account. Your PCS Phone will not accept the services of any wireless provider other than Sprint (but see Roaming). Services and equipment may not be used for any unlawful, fraudulent or abusive purpose. By requesting Services, you agree that you will not use Services and equipment in any unlawful, fraudulent or abusive manner. You may not resell or lease Services or equipment to anyone.

Coverage. Most services are only available within the operating range of the Sprint Nationwide PCS Network (also see Roaming). Coverage is not available everywhere. Coverage and quality of Services may be affected by conditions within or beyond our control, including network problems, signal strength, your equipment, and atmospheric, geographic, or topographic conditions. We do not guarantee service availability or that there will be no interruptions or delays in Services (e.g., dropped calls, blocked calls, etc.).

Number. We may change the phone number ("Number") assigned to your PCS device without compensation by giving you prior notice. You do not own the Number. You may not modify the Number we program into any phone or other equipment, duplicate the Number to any device other than that authorized by us or, except as allowed for by law, transfer (port) the Number to any other individual or entity. If you transfer the Number to another carrier, the terms of the Agreement (including the rights and obligations set forth in the Termination paragraphs) still apply. In certain instances, you may transfer a Number from another carrier to Sprint. Sprint does not in any way guarantee that such transfers to (or from) Sprint will be successful. If a transfer to Sprint is not successful, you will be responsible any discounts provided to you with the purchase of your PCS device. See our printed in-store materials or visit www.sprintpcs.com for additional important information on Number transfers.

Phone Activation Fee. You may be required to pay a non-refundable phone activation fee when you activate a new Number, have us switch a Number to a different phone, have your current Number changed, we activate a different phone on your existing account or your Service Plan says so.

Charges. For most forms of wireless Service, your usage will be charged from the time you first initiate contact between your phone or other wireless device and the network until the network connection is broken, whether or not you are successful in connecting with the service with which you seek to connect, even if the connection is later broken or dropped. An exception is that you are not charged for voice calls that are not completed. You are charged for completed calls to your Number from the time shortly before the phone starts ringing until the call is terminated. You will be charged peak rates for the entire duration of calls initiated during the peak time periods applicable to your Service. You will be charged off-peak rates for the entire duration of calls initiated during the off-peak time periods applicable to your Service. In addition to these usage charges, you may be charged for recurring monthly service charges, applicable local and long-distance toll charges, other usage charges, (including voicemail access, call waiting, call forwarding, etc.), connection fees, roaming charges, directory assistance, call completion charges, account review and management charges, optional features you select at an extra cost, surcharges related to government programs, and taxes. Charges for most Services are incurred in one-minute increments, with partial minutes of use rounded up to the next highest minute. You must pay, by each invoice due date, all charges for Services provided to the Number for each phone or other equipment that our records show you activated, no matter who actually uses or has possession of the phone or other equipment at the time Services are provided.

PCS Vision (Third Generation) Wireless Charges. For PCS Vision wireless services, you will be charged on a per kilobyte basis for data used, rather than for airtime used. As long as your PCS Vision device is connected to the Sprint Nationwide PCS Network ("PCS Vision network"), you will be incurring data usage charges. You are responsible for all data activity from and directed to your PCS Phone, regardless of who initiates the activity. We will invoice you for all data directed to the internet address (or "IP address") assigned to your device in a given PCS Vision session, regardless of whether your device actually receives the data. You will be charged for data usage initiated by others as well as those you initiate. You will be charged for additional data used in transporting and routing on the network. You will be charged for partial and interrupted data downloads or other use, including re-sent data, and for unsuccessful attempts to reach websites and use other applications and services, including those resulting from dropped network connections. If you use a Premium Service (including services provided by third parties but for which you are billed on your PCS Invoice), you will be charged for data used in transport and routing in addition to the charge for the Premium Service. The amount of data used and charged to you will vary widely, depending upon the specific PCS Vision wireless application or other service you use, the amount of data used in the specific application or service, and network congestion and other matters. For this and other reasons, estimates of data usage - for example, the size of downloadable files - will vary from what you actually use. You cannot receive incoming calls while using third generation services. Data usage will be rounded up to the next whole kilobyte. Kilobyte usage will be rounded up to the next full cent. Rounding up will occur at the end of each separate session or each clock hour (at the top of

each hour), if the session spans more than 1 clock hour. When traveling on our PCS Vision network, a session may be ended and new session initiated, although no interruption to the actual data session will occur. Your invoice will not separately identify the number of kilobytes attributable to your use of specific sites, sessions or services used.

PCS Vision Premium Services. Your PCS Vision wireless services may allow you to access or download premium content for an additional charge. Certain PCS Vision services (e.g., games, ringers and screen savers) primarily contain premium services content. Access to and downloading of premium content is not included with PCS Vision services. The additional charges for this premium content will be billed to you on your PCS Invoice. You will be charged for this content (at rates and charges specified at the time of access or download) that will be in addition to data usage charges you will incur while connected to the enhanced PCS Vision network. We provide no warranties and make no representations or claims with regard to third-party Premium Services. In certain instances, subject to the terms of the content purchased, we may delete premium and non-premium items downloaded to available storage areas (e.g., your vault), including any pictures, games and other content. We may limit the amount of Premium Services you may purchase in a specific timeframe (month, week, day, or other time period). We may suspend your use of Premium Services without prior consent or notice if we have reason to suspect fraudulent or unauthorized use of your Premium Services account, but we make no assurances that we will suspend your account.

Other Terms Applicable to PCS Vision Usage. Use of PCS Vision wireless services requires the purchase of a separate third generation wireless compatible phone or other device and is subject to any software, memory, storage or other limitation in the phone or other equipment. Not all applications and services work, or work the same, on all third generation wireless phones and devices. Check the materials accompanying your phone or device to determine which applications and services it will support. PCS Vision wireless services are not available while off the PCS Vision network. PCS Vision services are not available for server devices or host computer applications, other systems that drive continuous heavy traffic or data sessions, or as substitutes for private lines or frame relay connections. Unlimited PCS Vision plans/options are only available with phones and PCS smart phones where the device is not being used as a modem in connection with other equipment (e.g., computers, PDAs, etc.) through use of connection kits or other phone-to-computer/PDA accessories, or Bluetooth or other wireless technology. Sprint reserves the right to deny or to terminate service without notice for any misuse. Sprint is not responsible for any opinions, advice, statements, services applications or other information provided by third parties and accessible through PCS Vision wireless services. Neither Sprint nor its vendors or licensors guarantees the accuracy, completeness or usefulness of information that is obtained through the PCS Vision wireless services. You are responsible for evaluating such content. Use of certain PCS Vision wireless services, including some messaging services, may result in the disclosure to others of your email address and other information about you in connection with your internet usage. Your accessing of, or use of, third party sites or services accessible PCS Vision wireless services may require the

disclosure of information about you, subject to the policies of those sites and services. You consent to receiving advertising, warnings, alerts and other messages, including broadcast messages. Your access to PCS Vision wireless services is controlled by a password.

Voice Command. PCS Voice Command is an optional service that allows you to place calls by using speech recognition technology. Calls to 911 or similar emergency numbers cannot be placed through the Voice Command feature. Airtime and applicable long distance charges for a call completed from your Number using the Voice Command feature begin when you press or activate the TALK or similar key(s) and end when your call is terminated by hitting the END key or by returning to the Voice Command platform. If you initiate and complete another call without leaving the Voice Command platform, a separate charge for that call will begin from the time the previous call was terminated. Airtime and applicable long distance charges will be applied to the entire length of a completed call initiated from Voice Command. Using Directory Assistance to input names into your Voice Command address book will incur additional charges.

Invoicing. Invoicing cycles are approximately 30 days in length. Invoicing cycles and dates may change from time to time. Except as otherwise provided in your Service Plan, monthly recurring charges (MRCs) are invoiced one invoicing cycle in advance. Charges for Services are usually invoiced as soon as possible after the charges accrue. We may, however, invoice you for usage and charges occurring before the invoicing cycle being invoiced, if they were not previously invoiced. If you are invoiced for usage incurred during a prior invoicing cycle, those minutes will be applied to your Service Plan minutes for the current invoicing cycle. However, if you change your PCS Service Plan between the time the usage was incurred and the beginning of the current invoicing cycle, those minutes from the prior invoicing cycle will be charged at the rate per minute for usage over included minutes provided in the Service Plan in effect at the time the usage was incurred.

Payment. If you have authorized payment for Services or equipment by credit card or by debiting a bank account, no additional notice or consent is required before we invoice the credit card or debit the bank account for all amounts due to us or billed by us on behalf of a third party. You must promptly notify us of any change in your invoicing address or of the credit card or bank account used for payment. We reserve the right to require payment by money order, cashier's check or other secured form of payment. If we take action to receive payment beyond invoicing you for charges for Services or equipment, you must pay our costs and expenses of collection, including attorneys' fees and expenses, the fees of any collection agency and court costs. If we act as an invoicing agent for a third-party service provider, payments received are first applied to amounts due and owing to us and any remaining amounts are applied to sums due and owing to the third-party service provider. We may immediately charge an additional fee for any check or other negotiable instrument endorsed by you and returned unpaid by a financial institution for any reason. You may be charged fees for certain methods of payment.

Late Payment Charges. Payment is past due if we do not receive it by the due date shown on your invoice. Any payment for Services and equipment not made when due accrues late charges until paid at the rate of 5% per month or at the highest rate allowed by law. Acceptance of late or partial payments (even if marked "paid in full") does not waive our right to collect all amounts that you owe us. If your Service has been suspended due to non-payment, you may be charged a reactivation fee.

Disputed Charges. You must raise any dispute that you have about any charges invoiced to you within 15 days of the date of the invoice or you have accepted the invoice. You may notify us of any dispute by notifying PCS Customer Service Solutions. Calls to our sales or general business offices are not notice of a dispute. If disputed invoice procedures are described on the invoice, you must follow them.

Account Spending Limit. If we agree to provide Services to you on an Account Spending Limit basis, we will tell you your Account Spending Limit before we start Services to your Number, or as reasonably practicable after the limit is imposed. If we require a deposit for you to establish or keep Services on an Account Spending Limit basis, we will hold the deposit as partial guarantee of payment for Services (see Deposits). Charges for Services accrue against your Account Spending Limit as they are incurred. We may charge an initial ASL start up fee. We may charge a monthly ASL service fee, in addition to your recurring monthly service charge. We may suspend Services to your Number without prior notice to you when your account balance reaches your Account Spending Limit. Services are restored when you have paid any past due balance and pay a specified minimum amount to reduce your account balance below your Account Spending Limit. We may change this minimum amount at any time upon notice to you. You may pay any past due balance and the minimum amount by any method authorized by Sprint. Contact PCS Customer Service Solutions for information about authorized methods of making these payments. We may charge you a fee for calls that involve our live customer care services. If we provide Services to you on an Account Spending Limit basis, Services and coverage may be limited in certain ways. You must pay all charges for Services even if they exceed the amount of your Account Spending Limit.

Clear Pay. If we agree to provide Services to you as a Clear Pay customer, we may suspend Services to your Number without prior notice to you immediately when your bill becomes past due. Even if your bill is not past due, we may suspend services if your unpaid usage exceeds \$125 or another amount to be determined by your past credit or usage history. If we require a deposit for you to establish or keep Services as a Clear Pay customer, we will hold the deposit as partial guarantee of payment for Services (see Deposits, below). Contact PCS Customer Service Solutions for information about authorized methods of making these payments. We may charge you a fee for calls that involve our live customer care services. If we provide Services to you on as a Clear Pay basis, Services and coverage may be limited in certain ways. You must pay all charges for Services whether or not your Services are suspended or terminated.

Deposits. If we require a deposit for you to establish or keep Services, we will hold the deposit as partial guarantee of payment for Services. We may change the deposit amount at any time to reflect revised estimated monthly charges based upon your usage. A deposit may not be used to pay any invoice (unless it is used to pay a final invoice) or delay payment. The deposit amount, the length of time we hold the deposit and changes to the deposit amount are determined based on your credit and payment history. The rate of interest, if any, on the deposit is subject to change. We may mix deposits with our other funds. If Services are terminated for any reason, we may, without notice to you, apply your deposit toward payment of outstanding charges and return any excess to you at your last known address within 75 days after termination of Services. If the U.S. Postal Service cannot deliver the money to you and returns it to us, we will hold it for you for one year from the date of return and, during that period, we may charge a servicing fee against the deposit balance. Any money held during this one-year period will not accrue interest for your benefit. You forfeit any portion of the money left after the one-year period.

Wireless Web and Voice Portal Services. Wireless Web Services are part of the Services that can be obtained through Sprint. Wireless Web Services are not available in all markets or while roaming off the Sprint Nationwide PCS Network. Use of Wireless Web Services requires an Internet-ready PCS Phone or certain other equipment (or both) and is subject to any memory, storage or other limitation in the phone or other equipment. Wireless Web Services are not available on PCS Vision phones or devices. The Caller ID blocking feature is not available when using Wireless Web Services. Any use of Wireless Web Services deducts from your Service Plan minutes. For data calls (including Wireless Web and Voice Portal calls) that are attempted, but not completed, you are charged for the time during which the network attempts to connect the call. You are charged for time spent connected to the Wireless Web or Voice Portal, including time spent browsing on the Internet or Voice Portal and reviewing or scrolling through Internet information on-line while still connected to the Sprint Nationwide PCS Network. Not all Internet sites can be accessed and you may receive an error message if you attempt to access a site that cannot be accessed through Wireless Web Services. You are also charged for Wireless Web connections to review your PCS account information. Wireless Web Services are not available with all Service Plans. Sprint is not responsible for any opinions, advice, statements, services or other information provided by third-parties and accessible through Wireless Web Services or Voice Portal Services. Neither Sprint nor its vendors or licensors guarantees the accuracy, completeness or usefulness of information that is obtained through the Wireless Web Services or Voice Portal Services. You are responsible for evaluating such content.

Taxes and Surcharges. We invoice you for taxes, fees and other charges levied by or remitted directly to federal, state or local authorities, or foreign government on Services including, without limitation, sales, gross receipts, use, and excise taxes. If you claim any tax exemption, you must provide us with a valid tax-exempt document. Any tax exemption applies only from the date we receive a valid tax-exempt document. We also invoice you for fees that we collect and remit to the government such as Universal Service, and for surcharges that we collect and keep to pay for the costs of complying with government mandates such as number pooling and portability, and Enhanced 911 service. These charges are neither taxes nor government imposed assessments.

Roaming. Calls made while off the Sprint Nationwide PCS Network are "roaming" calls. Your PCS Phone is specifically designed and engineered to work only on the Sprint Nationwide PCS Network. It works on another CDMA PCS provider's system only when a roaming agreement is in place between Sprint and the other providers. If your PCS Phone is a dual-mode phone, it works on both a CDMA PCS provider's system (in addition to the Sprint Nationwide PCS Network) and a wireless analog telecommunications provider's system only when roaming agreements are in place between Sprint and the other providers. If we do not have a roaming agreement in place, you may be able to place roaming calls "manually" by using a valid credit card. If there is a gap or other interruption of coverage within a PCS coverage area that prevents connection with the Sprint Nationwide PCS Network and your dual-band phone is set to roam automatically when outside PCS coverage, you may incur roaming fees within a PCS coverage area. Certain features and services may not be available when roaming (including PCS Vision, voicemail, call waiting, call forwarding, etc.).

Phones and Other Equipment. Phones and other equipment may be purchased and returned as provided in the purchase documents. We are not the manufacturer of the phones or other equipment. The only warranties on the phones or other equipment are any limited warranties extended by the manufacturers. We have no liability in connection with the phones and other equipment or for the manufacturers' acts or omissions.

Lost or Stolen Equipment. If your phone or other equipment is lost or stolen, you must notify us by calling PCS Customer Service Solutions. You are responsible for all charges for Services provided to the Number for the lost or stolen equipment before you notify us of the loss or theft. We will deactivate Services to the Number upon notification to us of any loss or theft. You may be required to provide evidence of the loss or theft (for example, a police report or sworn statement). If the equipment is later found, we may require that you exchange it for another phone or other equipment before we reactivate Services (if we do reactivate Services), as well as require you to pay a reactivation fee. We will deactivate Services to any Number without prior notice to you if we suspect any unlawful or fraudulent use of the Number. You agree to cooperate reasonably with us in investigating suspected unlawful or fraudulent use.

Messages. You will incur airtime usage charges when accessing your voicemail from your PCS Phone. You may also incur charges in accessing text messages from your PCS Phone. You may access your voicemail without incurring airtime usage charges by checking your voicemail from a wireline phone. We may impose limits on the number of voicemail or text message that can be retained through your PCS account. Audible or visual indicators of text or voicemail messages, including mailbox icons on your PCS Phone, may not always provide an up to date indication of new messages. In certain instances, you may be required to manually reset or clear your mailbox indicator.

Caller ID. If you do not want people you call to receive the Number assigned to your phone, you must call PCS Customer Service Solutions for information about automatic Caller ID blocking. The Number assigned to your phone can be blocked on a per-call basis by dialing *67 + Destination Number + TALK (or similar key), but Caller ID delivery resumes on the next call you make. Caller ID display on incoming calls to your Number depends on receiving the information from the calling party.

TTY Access. A TTY (also known as TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. TTY doesn't work with all PCS Phones. If you have a PCS TTY-capable phone, it may not function effectively, or at all, when attempting 911 calls due to the equipment or software of the answering agency. Therefore, a TTY device should not be relied on for 911 calls.

Pay-Per-Call Service. We will not complete calls from your Number to 900, 976 and similar numbers for pay-per-call services.

International Calling. You may be limited in the international destinations that you can call with Services. You should contact PCS Customer Service Solutions for information about international destinations that you cannot call.

Limitation of Liability. Except as otherwise provided in this section, our sole liability to you for any loss or damage arising out of providing or failing to provide Services (including mistakes, omissions, interruptions, delays, errors, or defects) does not exceed (1) in cases related to a specific piece of equipment, the prorated MRC for Services to the piece of equipment during the affected period, or (2) in cases not related to a specific piece of equipment, the prorated MRCs for Services to you during the affected period. Neither we nor our vendors, suppliers or licensors are liable for any damage arising out of or in connection with:

- a) any act or omission of any telecommunications service or other service provider other than us;
- b) any directory listing;
- c) any dropped calls or inability to place or receive calls;
- d) any interruption of Services, including interruptions caused by equipment or facilities failure or shortages, transmission limitations or system capacity limitations;

e) traffic or other accidents, or any health-related claims allegedly arising from the use of Services, phones, equipment or accessories used in connection with the Services;

f) the use of Wireless Web Services and PCS Vision applications and services, including the accuracy or reliability of any information obtained from the Internet using Wireless Web Services or from Voice Portal Services, PCS Vision wireless services or Internet services, content or applications not supported by Sprint PCS;

g) any late or failed message delivery;

h) any interruption or failure of 911 or E911 emergency services or identification of the Number, address or name associated with any person accessing or attempting to access emergency services from your phone;

i) the installation or repair of any products or equipment by parties who are not our authorized employees or agents;

j) events due to factors beyond our control, including acts of God (including, without limitation, weather-related phenomena, fire or earthquake), war, riot, strike, or orders of governmental authority;

k) any act or omission of any third party or independent contractor that offers products or services in conjunction with or through the Services; or

l) your negligent or intentional act or omission.

NO CONSEQUENTIAL OR OTHER DAMAGES. UNDER NO CIRCUMSTANCES ARE WE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR SPECIAL DAMAGES OF ANY NATURE WHATSOEVER ARISING OUT OF OR IN CONNECTION WITH PROVIDING OR FAILING TO PROVIDE SERVICES, PHONES OR OTHER EQUIPMENT USED IN CONNECTION WITH THE SERVICES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS, LOSS OF BUSINESS, OR COST OF REPLACEMENT PRODUCTS AND SERVICES. THIS SECTION SURVIVES TERMINATION OF THIS AGREEMENT.

Indemnification. You indemnify and defend us, our partners, directors, officers, employees and agents from and against any claim, action, damage, liability and expense arising out of or in connection with: (1) your acts or omissions that occur in connection with your use of the Services or equipment used in connection with the Services, and (2) any communications you make or receive using the Services. This indemnification extends to and includes any attorney's fees and costs incurred by us arising from any actions or claims to which this indemnification applies, or from the contesting of the applicability of this provision. This section survives termination of this Agreement.

MANDATORY ARBITRATION OF DISPUTES. ANY CLAIM, CONTROVERSY OR DISPUTE OF ANY KIND BETWEEN THE CUSTOMER AND THE COMPANY AND/OR ANY OF ITS EMPLOYEES, AGENTS, AFFILIATES OR OTHER REPRESENTATIVES, WHETHER SOUNDING IN CONTRACT, STATUTE, OR TORT, INCLUDING FRAUD, MISREPRESENTATION, FRAUDULENT INDUCEMENT, OR ANY OTHER LEGAL OR EQUITABLE THEORY AND REGARDLESS OF THE DATE OF ACCRUAL OF SUCH CLAIM, CONTROVERSY OR DISPUTE SHALL BE RESOLVED BY FINAL AND BINDING ARBITRATION AS PRESCRIBED IN THIS SECTION. THE FEDERAL ARBITRATION ACT, NOT STATE LAW, GOVERNS THE QUESTION OF WHETHER A CLAIM IS SUBJECT TO ARBITRATION. HOWEVER, NOTHING CONTAINED IN THIS ARBITRATION PROVISION SHALL PRECLUDE THE CUSTOMER FROM RESOLVING ANY CLAIM, CONTROVERSY OR DISPUTE IN SMALL CLAIMS COURT HE OR SHE OTHERWISE WOULD HAVE THE RIGHT TO PURSUE.

A single arbitrator engaged in the practice of law will conduct the arbitration. The arbitrator will be selected according to the rules of CPR or, alternatively, may be selected by agreement of the parties, who shall cooperate in good faith to select the arbitrator. The arbitration will be conducted by, and under the then-applicable rules of the CPR Institute for Dispute Resolution. All expedited procedures prescribed by the applicable rules will apply. Any required hearing fees and costs shall be paid by the parties as required by the applicable rules or as required by applicable law, but the arbitrator shall have the power to apportion such costs as the arbitrator deems appropriate. The arbitrator's decision and award will be final and binding (subject to the appeal clause below), and judgment on the award rendered by the arbitrator may be entered in any court with jurisdiction.

An appeal may be taken under the CPR Arbitration Appeal Procedure from any final award of any arbitral panel in any arbitration arising out of or related to this agreement that is conducted in accordance with the requirements of such Appeal Procedure. Unless otherwise agreed by the parties and the appeal tribunal, the appeal shall be conducted at the place of the original arbitration.

If any party files a judicial or administrative action asserting a claim that is subject to arbitration and another party successfully stays such action or compels arbitration, the party filing that action must pay the other party's costs and expenses incurred in seeking such stay or compelling arbitration, including attorney's fees.

Notices. You may get our current address for written notice by calling PCS Customer Service Solutions. Written notice to you is sent to your last known address in our invoicing records. Written notice is effective three days after deposit in the U.S. mail, postage prepaid, and properly addressed. Unless required by this Agreement or Applicable Laws, (1) you may notify us by calling PCS Customer Service Solutions, and (2) we may notify you by leaving a message for you on your PCS Phone, answering machine or with your answering service. Notice addresses may be changed by giving notice as provided in this section.

Choice of Law; Jurisdiction. This Agreement is governed by and must be construed under federal law and the laws of the State of Kansas, without regard to choice of law principles.

General. If either of us does not enforce any right or remedy available under this Agreement, that failure is not a waiver of the right or remedy for any other breach or failure by the other party. Our waiver of any requirement in any one instance is not a general waiver of that requirement and does not amend this Agreement. This Agreement is subject to any applicable federal and state law (collectively, "Applicable Laws"). If any part of this Agreement is held invalid or unenforceable, that part is interpreted consistent with Applicable Laws as nearly as possible to reflect the original intentions of the parties and the rest of this Agreement remains in full force and effect. Section headings are for descriptive purposes only and are not used to interpret this Agreement. You may not assign this Agreement to any other person or entity without our prior written approval. This Agreement (including any referenced documents and attachments) makes up the entire agreement between you and us and replaces all prior written or spoken agreements, representations, promises or understandings between you and us. The provisions of this Agreement that are contemplated to be enforceable after the termination of this Agreement survive termination of this Agreement. If there is a conflict, the Service Plan (including any Term Service Plan) controls over the Terms.

Manufacturer's Warranty

Customer Limited Warranty

SPRINT SPECTRUM, L.P., (Sprint PCS) offers you a limited warranty that the enclosed subscriber unit (Product), including accessories in the product package, will be free from defects in material or workmanship as follows:

SUBSCRIBER UNIT:

A. **SPRINT PCS ONE (1) YEAR LIMITED WARRANTY:** For a period of one (1) year from the date of purchase, Sprint PCS will, at its option, either pay the parts and labor charges to any authorized Sprint PCS Phone™ service facility to repair or replace a defective product (with new or rebuilt parts/replacements). After this one (1) year period, you must pay all parts, shipping and labor charges.

B. **REPAIRS:** For a period equal to the remainder of the original limited warranty period on an original Product or for the 180 days after the date of repair/replacement, whichever is longer, Sprint PCS will repair or replace (with new or rebuilt replacement) defective parts or Product used in the repair or replacement of the original Product under this Limited Warranty.

Proof of purchase in the form of a bill of sale or receipted invoice warranty repair document which is evidence that the Product is within the warranty period must be presented to obtain warranty service. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Products. Transfer or resale of a Product will automatically terminate warranty coverage with respect to the Products.

This limited warranty does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with

hardware electrically or mechanically incompatible or used with accessories not supplied by Sprint PCS), abuse accident, physical damage, abnormal operation, improper handling and storage, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature, (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, removal or reinstallation; (viii) signal reception problems (unless caused by defect in material and workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of Sprint PCS and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as fuses); or (xi) any Products which have been opened, repaired, modified or altered by anyone other than Sprint PCS or a Sprint PCS authorized service center.

This warranty does not cover customer education, instruction, installation, set up adjustments, or signal reception problems.

This warranty is valid only in the United States.

USE WITH ACCESSORIES NOT SUPPLIED BY SPRINT PCS OR OTHERWISE NOT EXPRESSLY AUTHORIZED BY SPRINT PCS MAY BE DANGEROUS.

SPRINT PCS SPECIFICALLY DISCLAIMS LIABILITY, AND SHALL HAVE NO OBLIGATION TO PROVIDE TO BUYER ANY OTHER REMEDY, FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE,

WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT), DAMAGE DUE TO IMPROPER OPERATION OR MAINTENANCE, INSTALLATION, CONNECTION TO IMPROPER VOLTAGE SUPPLY OR ATTEMPTED REPAIR OF THE PRODUCT BY ANYONE OTHER THAN A FACILITY AUTHORIZED BY SPRINT PCS. THIS WARRANTY DOES NOT COVER PRODUCTS SOLD AS IS OR WITH ALL FAULTS, OR CONSUMABLES, (SUCH AS FUSES). THIS WARRANTY DOES NOT APPLY WHEN THE MALFUNCTION RESULTS FROM USE OF THE PRODUCT IN CONJUNCTION WITH ACCESSORIES, PRODUCTS OR ANCILLARY OR PERIPHERAL EQUIPMENT NOT SUPPLIED BY OR EXPRESSLY AUTHORIZED FOR USE BY SPRINT PCS, AND WHERE IT IS DETERMINED BY SPRINT PCS THAT THERE IS NO FAULT WITH THE PRODUCT ITSELF.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, SPRINT PCS MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCTS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT WITHIN THE TIME PERIOD SPECIFIED IN THE LIMITED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty last, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State.

For other Warranty Service Information, please call SPRINT PCS CUSTOMER CARE at 1-888-715-4590.



Index

Numerics

4-Digit Dialing 37

A

Access the Security Menu 98

Accessories 139

Accessory Options 140-141

Account Spending Limit 164-165

Adjusting Volume 51-53

Analog Mode -

Setting the Time and Date 26

AOL

Instant Messenger Service 122, 133

Automated Billing Information 8

B

Battery 18-20

Battery - Charging 19

Battery - Installing 18

Battery - Removing 19

Battery - Travel Charger 20

Battery Capacity 18

Battery Care 149

C

Call - Muting a Call 53

Call Log -

Making a Call 73

Options 73

Prepending a Phone Number 74

Saving a Phone Number 75

Viewing 72

Erasing 75

Call Waiting - Responding 56

Caller ID 56

Calling Emergency Numbers 38

Calls -

Answering 28

Making 28

Missed Call Notification 29

Speakerphone 29

Change Your Lock Code 98

Changing Service Plan 158

Changing the Contrast 94

Character Input Mode -

Selecting 46

Charges 160

D

Dangerous Areas 148

Deposits 165

Desktop Charger 140

Determine If Your Phone

Is Already Activated 4

Dialing Options 32

Dialing Phone Numbers

With Pauses 37

Displaying

Wireless Web Alerts 70

Disputed Charges 163

E

Edit Event 109

Empty Battery 19

End-of-Call Options 35

Extracting Phone Numbers

From Web Messages 66

F

FCC Notice 150-151

Finding a Phone Number 36

Flying 147

Forwarding Your Calls 58

Front View of Phone 14

G

Getting Started With

Sprint PCS Service 3, 4

Getting to Know Your

Sprint PCS Phone 11

Greeting - Changing 90

H

Hands-Free Car Kit 39

Help 6-8

I
In-Call Options 33
Incoming Call Notification 34
Indemnification 172
International Calling 170
Interruption of Service 168
Invoicing 161

K
Key Guard 100

L
Late Payment Charges 162
Limitation of Liability 170-171
Lost or Stolen Equipment 169

M
Making and Answering Calls 28
Managing Call History 71
Managing Messaging 59
Menu Items 43
Menu Structure 44-45
Menus - Viewing 42

N
Navigating Through Menus
and Entering Text 41
New Events 104
New Wireless Web Alerts 70
Notices 173
Numeric Page Options 65

O
Owner's Record 153

P
Payment 162
Pay-Per-Call Service 170
Peak Performance 145
Performance and
Safety Guidelines 143
Personal Information
Management 103

Phone -
On and Off 17
Activation Fee 159
Settings 89-95
While Driving 146
Power Save Feature 144
Prepending a Phone Number
From a Sprint PCS
Web Message 66
Protecting Your Battery 149

R
Radio Frequency 152
Reception 144-145
Red Light 15
Ringer - Silencing 52
Ringer Types 91
Ringer Types for Messages 91
Ringer Types for Voice Calls 91
Ringer Volume 52
Roaming 21-25
Roaming -
Answer Incoming Calls
With Call Guard On 25
How It Works 22-23
On Analog Networks 23
Place Calls With
Call Guard On 25
Setting an Alert 92
Setting Roam Mode 24
On Other Networks 23

S
Safe Use of and
Access to Your Phone 146-148
Safety Guidelines 143-153
Saving a Phone Number 36
Security -
Erasing the
Internal Phone Book 100
Resetting Your Phone 101
Sending Numeric Pages 62
Service Plan 158
Setting Up Your Voicemail 5

Signal Strength 16, 144
Special Precautions 150-152
Sprint PCS Customer Care 6
Sprint PCS Directory
Assistance 7
Sprint PCS Service Features 55-58
Sprint PCS Voice Command 8, 30-31
Sprint PCS Wireless Web
Connection Kit 141
Standard Battery 140

T
T9 - Entering Words 46, 47, 48
Taxes 167
Termination -
General 164
Non-Term Service Plan 163
Term Service Plan 163
Terms and Conditions 155-178
Three-Way Calling 57
To Do List 110
To Edit a Today Event 109
To Edit or Erase
A Programmed Alarm 109
To Erase an Event 109
To View, Add, Edit or Erase
An Event on Your Calendar
104-105, 108-109
Travel Charger 20, 140
TTY Access 169
Turning Your Phone
ON and OFF 17

U
Understanding This
User Guide 9
Unlocking Your Phone 4
User Guide
Proprietary Notice 153
Using One-Touch
Speed Dialing 38
Using Secret Numbers 83

V
Vehicle Power Adapter 140
Viewing the Display Screen 16
Voice Command 8, 30-31
Voice Dialing 116
Voice Services of Your
Sprint PCS Phone 115-119
Voicemail -
Displaying a Notification 60
Message Icon 60
Setting Up 5

W
Warranty Information 155-178
Web Message -
Erasing 65, 68
Messages 63
Options 65
Storage 63
What Are the Schedule
Options? 104
Wireless Web -
Alerts 70
Browser 122-135
Connection 136-138
Messages 59-70
Services 166-167
Short Mail 134
Update Options 70
Updates 135