



## ***User Guide***

***KATANA® Eclipse by SANYO®***

***[www.sprint.com](http://www.sprint.com)***

© 2008 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are the property of their respective owners. SANYO is a registered trademark of SANYO Electric Co., Ltd. and used under license.

# Table of Contents

---

<b>Introduction</b>	<b><i>i</i></b>
<b>Your Phone's Menu</b>	<b><i>ii</i></b>
<b>Section 1: Getting Started</b>	<b>1</b>
<b>1A. Setting Up Service</b>	<b>2</b>
Setting Up Your Phone	2
Activating Your Phone	3
Setting Up Your Voicemail	4
Sprint Account Passwords	4
Getting Help	5
<b>Section 2: Your Phone</b>	<b>7</b>
<b>2A. Phone Basics</b>	<b>8</b>
Your Phone	8
Viewing the Display Screen	11
Features of Your Phone	13
Turning Your Phone On and Off	15
Using Your Phone's Battery and Charger	16
Navigating Through Phone Menus	18

Displaying Your Phone Number	19
Making and Answering Calls	20
Entering Text	29
Using Maps	34
<b>2B. Settings</b>	<b>35</b>
Sound Settings	35
Display Settings	39
Location Settings	43
Messaging Settings	43
Airplane Mode	47
TTY Use With Sprint Service	47
Phone Setup Options	49
<b>2C. Security</b>	<b>53</b>
Accessing the Security Menu	53
Using Your Phone's Lock Feature	54
Restricting Calls	55
Using Special Numbers	56
Deleting Phone Content	56
Resetting Phone Content	57
Security Features for Sprint Power Vision	58

<b>2D. Roaming</b>	<b>60</b>
Understanding Roaming	60
Setting Your Phone's Roam Mode	61
Using Call Guard	62
Using Data Roam Guard	63
<b>2E. History</b>	<b>64</b>
Viewing History	64
History Thread	65
History Details	65
History Menu Options	66
Making a Call From History	66
Saving a Phone Number From History	67
Prepending a Phone Number From History	67
Deleting History	68
<b>2F. Contacts</b>	<b>69</b>
About Contacts	69
Creating a New Contacts Entry	69
Finding Contacts Entries	70
Contacts Entry Options	72
Editing a Contacts Entry	73

Secret Contacts Entries	76
Dialing Sprint Services	77
Wireless Backup	77
<b>2G. Calendar and Tools</b>	<b>80</b>
Using Your Phone's Calendar	80
Using Your Phone's Alarm Clock	84
Using Your Phone's Tools	84
<b>2H. Voice Services</b>	<b>86</b>
Using Automatic Speech Recognition (ASR)	86
Voice and Call Recording	89
Setting Up Screen Call	91
<b>2I. microSD Card</b>	<b>94</b>
Using Your Phone's microSD Card and Adapter	94
File Manager	97
microSD Settings	99
microSD Folders	100
Backing Up Your Contacts Data to the microSD Card	100
Setting Up the Digital Print Order Format	101
Connecting Your Phone to Your Computer	102

## **2J. Camera .....104**

Taking Photos .....104

Recording Videos .....110

Storing Photos and Videos .....113

Sending Sprint Picture Mail .....115

Managing Sprint Picture Mail .....117

Printing Photos Directly From Your Phone ....119

## **2K. Bluetooth .....121**

Turning Bluetooth On and Off .....121

Using the Bluetooth Menu .....122

Using the Bluetooth Settings Menu .....124

Bluetooth Profiles .....124

Pairing Bluetooth Devices .....126

Using the Trusted Devices Options .....126

Printing Data via Bluetooth .....127

Sending Data via Bluetooth .....128

## **Section 3: Sprint Service .....129**

### **3A. Sprint Service Features: The Basics ...130**

Using Voicemail .....130

Using SMS Text Messaging .....136

Using SMS Voice Messaging .....137

Using Caller ID .....138

Responding to Call Waiting .....139

Making a Three-Way Call .....139

Using Call Forwarding .....140

### **3B. Sprint Power Vision .....141**

Sprint Power Vision Applications .....141

Getting Started With Sprint Power Vision ....142

Accessing Messaging .....146

Downloading Content .....149

Exploring the Web .....151

Phone as Modem .....154

Sprint Power Vision FAQs .....156

### **3C. Entertainment: Sprint TV and Sprint Music .....158**

Sprint TV .....158

The Sprint Music Store .....162

Streaming Music .....165

<b>Section 4: Safety and Warranty Information</b>	<b>167</b>
<b>4A. Important Safety Information</b>	<b>168</b>
General Precautions	168
Maintaining Safe Use of and Access to Your Phone	169
Using Your Phone With a Hearing Aid Device	170
Caring for the Battery	172
Radio Frequency (RF) Energy	173
Owner's Record	175
User Guide Proprietary Notice	175
<b>4B. Manufacturer's Warranty</b>	<b>176</b>
Manufacturer's Warranty	177
<b>Index</b>	<b>180</b>



# Introduction

---

This **UserGuide** introduces you to Sprint® service and all the features of your new phone. It's divided into four sections:

- ◆ **Section 1:** Getting Started
- ◆ **Section 2:** Your Phone
- ◆ **Section 3:** Sprint Service
- ◆ **Section 4:** Safety and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

## User Guide Note

*Because of updates in phone software, this printed guide may not be the most current version for your phone. Visit [www.sprint.com](http://www.sprint.com) and log on to **My Sprint Wireless** to access the most recent version of the user guide.*

## WARNING

*Please refer to the **Important Safety Information** section on page 168 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death, or property damage.*

## Your Phone's Menu

The following table outlines your phone's list menu structure. For more information about using your phone's menus, see "Navigating Through Phone Menus" on page 18.

<b>1: Web</b>
<b>2: Maps</b>
1: Navigation
2: Family Locator
3: Live Local Search
<b>3: Entertainment</b>
1: Music
2: TV
3: Games
<b>4: History</b>

<b>5: Missed Alerts</b>
<b>6: My Stuff</b>
1: Games
1: Get New                      2: My Content Manager
2: Ringers
1: Get New                      2: My Content Manager
3: Screen Savers
1: Get New                      2: My Content Manager
4: Applications
1: Get New                      2: My Content Manager
5: IM & Email
1: Get New                      2: My Content Manager
6: Call Tones

<b>7: Photos</b>	
<b>1: Camera</b>	
Press the right softkey for the following options:	
1. Picture Mode	2. Zoom
3. Self-Timer	4. Fun Tools
5. Image Controls	6. Camera Settings
7. Review Media	8. Camcorder Mode
9. Key Guidance	0. User Settings
<b>2: Camcorder</b>	
Press the right softkey for the following options:	
1. Video Mode	2. Zoom
3. Self-Timer	4. Color Tone
5. Image Controls	6. Video Settings
7. Review Media	8. Camera Mode
9. Key Guidance	0. User Settings
<b>3: Picture Mail</b>	
<b>4: My Albums</b>	
1: In Phone	2: In microSD
3: Online Albums	
<b>5: PictBridge</b>	
<b>6: Order Prints</b>	

<b>7: Settings &amp; Info</b>	
1: Auto Save to	2: Location
3: Status Bar	4: Slideshow Intvl
5: Account Info	6: Help
<b>8: Messages</b>	
<b>1: Voicemail</b>	
1: Call Voicemail	2: Call: Speaker On
3: Details	4: Reset Indicator
<b>2: Send Message</b>	
1: Text Message	2: Picture Mail
3: VoiceSMS	4: Email
<b>3: Text</b>	
<b>4: Picture Mail</b>	
<b>5: Email</b>	
<b>6: IM</b>	
<b>7: VoiceSMS</b>	
<b>8: Chat &amp; Dating</b>	

<b>9: Settings</b>	
<b>1: Notification</b>	
1: Msgs and Icon	2: Icon Only
<b>2: Msg Reminder</b>	
1: Text Message	2: Picture Mail
3: Voicemail	3: VoiceSMS
5: Email	
<b>3: Callback Number</b>	
1: None	2: My Phone#
3: Other	
<b>4: Auto-Delete</b>	
<b>5: Signature</b>	
<b>6: Preset Msgs</b>	
<b>7: Drafts Alert</b>	
<b>8: VoiceSMS Options</b>	
1: Speakerphone	2: From Name
3: Connect. Alert	

<b>9: Contacts</b>	
<b>0: Settings</b>	
<b>1: Display</b>	
<b>1: Main Screen</b>	
1: Screensaver	2: Animation
3: Backlight	4: Input Font
5: Foreground	6: Sleep Mode
<b>2: Outer Screen</b>	
1: Screensaver	2: Animation
3: Backlight	4: Background
5: Foreground	6: Sleep Mode
7: Next Schedule	
<b>3: Contrast</b>	
<b>4: Font Size</b>	
1: Main Screen	2: Outer Screen
<b>5: Keypad Light</b>	
<b>6: Language</b>	
1: English	2: Español
<b>7: Pwr Save Mode</b>	

<b>8: Return to Idle</b>	
1: Automatically	2: End Key
<b>2: Sounds</b>	
<b>1: Volume</b>	
1: Ringer 3: Headset 5: Applications 7: Advanced...	2: Earpiece 4: Speakerphone 6: StartUp/PwrOff
<b>2: RingerType</b>	
1: Incoming Calls 3: Alarm 5: Power Off	2: Messages 4: Power On 6: Schedule
<b>3: Alerts</b>	
1: Beep Each Minute 3: Connect 5: Messages	2: Out of Service 4: Signal Fade/Call Drop
<b>4: Keytones</b>	
1: Tone Length 3: Tone Type	2: Tone Volume
<b>5: Voice Guide</b>	

<b>6: Vibrate Type</b>	
1: Incoming Calls 3: Alarm	2: Messages 4: Schedule
<b>3: Illumination</b>	
<b>1: On/Off</b>	
<b>2: Incoming Calls</b>	
<b>3: Messages</b>	
<b>4: Calendar/Alarm</b>	
<b>5: Active Call</b>	
<b>6: Playing Music</b>	
<b>7: Numeric Keypad</b>	
<b>8: Demo</b>	
<b>4: Bluetooth</b>	
<b>1: On/Off</b>	
<b>2: Visibility</b>	

3: Device Name	
4: Device Info	
5: Trusted List	
6: Voice Priority	
7: Exchange Folder	
5: Messages	
1: Notification	
1: Msgs and Icon	2: Icon Only
2: Msg Reminder	
1: Text Message	2: Picture Mail
3: Voicemail	4: VoiceSMS
5: Email	
3: Callback Number	
1: None	2: My Phone#
3: Other	
4: Auto-Delete	
5: Signature	
6: Preset Msgs	
7: Drafts Alert	

8:VoiceSMS Options	
1: Speakerphone	2: From Name
3: Connect. Alert	
6:Text Entry	
1: Auto-Capital	2: Auto-Space
3: Input Language	4: My Words
5: T9 Settings	6: Default Input
7: Add Word	8: Auto-Complete
9: Help	
7:Phone Info	
1: Phone#/User ID	2: Icon Glossary
3: Version	4: Advanced
5: My Account	
8:More...	
1: Accessibility	
1: TTY	2: Input Font
3: Font Size	4: Vibrate Type
2: Airplane Mode	
3: Browser	
1: Bookmarks	2: Delete Web Cache
3: Delete Web Cookies	4: Edit Home Page

<b>4: Call Setup</b>	
1: Call Answer 3: Abbrev. Dial	2: Auto-Answer 4: Contacts Match
<b>5: Contacts</b>	
1: Speed Numbers 3: My Name Card 5: Wireless Backup	2: Show Secret/Hide Secret 4: Services
<b>6: Data</b>	
1: Enable/Disable Data 3: Update Profile	2: Net Guard
<b>7: Headset Mode</b>	
1: Turbo Button 3: Ringer Sound	2: Earpiece
<b>8: Location</b>	
<b>9: Power On to Alert</b>	
<b>0: Restrict and Lock</b>	
1: Voice 3: Camera/Pictures	2: Data 4: Lock My Phone
<b>*: Roaming</b>	
1: Set Mode 3: Data Roaming	2: Call Guard

<b>#: Security</b>	
1: Lock My Phone 3: Special Numbers 5: Delete/Reset	2: Change Code 4: Edit Contacts List
<b>: Navigation Keys (Default Settings)</b>	
1: Left Navigation (Sprint TV) 2: Right Navigation (Web) 3: Up Navigation (Send Text) 4: Down Navigation (My Stuff)	
<b>: Key Guard</b>	
<b>: Wireless Backup</b>	
(Before subscribing) 1: Subscribe (After subscribing) 1: Alert 3: Troubleshoot 5: Unsubscribe	2: Learn More  2: View Status 4: Learn More
<b>*: Tools</b>	
<b>1: Alarm Clock</b>	
<b>2: Assigned Media</b>	

<b>3: Bluetooth</b>	
1: Handsfree Pairing	2: Send Contact
3: Print Picture	4: Add to Trusted
5: Trusted List	6: Send Biz Card
7: More...	
<b>4: Calculator</b>	
<b>5: Calendar</b>	
<b>6: Countdown</b>	
<b>7: File Manager</b>	
1: Phone	2: microSD
3: microSD Options	
<b>8: Mass Storage</b>	
<b>9: Stopwatch</b>	
<b>0: Update Firmware</b>	
<b>*: Voice Memo</b>	
1: Record	2: List
3: Screen Call	
<b>#: World Clock</b>	

## **#: Get Stuff**

### **In Use Menu**

Press **Options** (right softkey) to display the following options:

- |                   |                         |
|-------------------|-------------------------|
| 1. Three-Way Call | 2. Save/Contact Details |
| 3. Contacts       | 4. Call Memo Rec.       |
| 5. Phone Info     | 6. Main Menu            |

*Section 1*  
***Getting Started***



## Section 1A

# Setting Up Service

---

- ◆ *Setting Up Your Phone (page 2)*
- ◆ *Activating Your Phone (page 3)*
- ◆ *Setting Up Your Voicemail (page 4)*
- ◆ *Sprint Account Passwords (page 4)*
- ◆ *Getting Help (page 5)*

*Setting up service on your new phone is quick and easy.* This section walks you through the necessary steps to set up and turn on your phone, set up your voicemail, establish passwords, and contact Sprint for assistance with your Sprint service.

## Setting Up Your Phone

---

1. Install the battery.
  - Press the release button and remove the battery cover from the back of the phone.
  - Insert the battery into the opening, making sure the connectors align. Gently press down to secure the battery.
  - Replace the battery cover and slide it upward until you hear a click.
2. Press **END** to turn the phone on.
  - If your phone is activated, it will turn on, search for Sprint service, and enter standby mode.
  - If your phone is not yet activated, see “Activating Your Phone” on page 3 for more information.
3. Make your first call.
  - Use your keypad to enter a phone number.
  - Press **TALK**.

**Note**

*Your phone's battery should have enough charge for your phone to turn on and find a signal, set up your voicemail, and make a call. You should fully charge your battery as soon as possible. See "Charging the Battery" on page 17 for details.*

## Activating Your Phone

There are three basic scenarios for activating your new phone:

- A. You purchased your phone at a Sprint Store.** It is probably activated and ready to use.
- B. You received your phone in the mail, and it is a new Sprint account or a new phone number.** Your phone is designed to activate automatically when you first turn it on. To confirm your activation, make a phone call.
- C. You received your phone in the mail and you are switching numbers from a previous Sprint phone to the new phone.** You need to contact Sprint to activate the number on your new phone. There are two options for activation in this instance:

- From your computer's Web browser, go to [www.sprint.com/activate](http://www.sprint.com/activate) and complete the onscreen instructions to activate your phone. Contact Sprint Customer Service at 1-888-211-4727 for assistance with activation.

When you have finished, make a phone call to confirm your activation.

**Tip**

*Do not press END while the phone is being activated. Pressing END cancels the activation process.*

**Note**

*If you are having difficulty with activation, contact Sprint Customer Service by dialing 1-888-211-4727 from any other phone.*

## Setting Up Your Voicemail

---

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, Sprint recommends that you set up your voicemail and personal greeting as soon as your phone is activated.

1. From standby mode, press and hold **[1☒]**.
2. Follow the system prompts to:
  - Create your passcode.
  - Record your name announcement.
  - Record your greeting.
  - Choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding **[1☒]**, bypassing the need for you to enter your passcode).

### Note

#### Voicemail Passcode

*If you are concerned about unauthorized access to your voicemail account, Sprint recommends that you enable your voicemail passcode (do not activate One-Touch Message Access).*

For more information about using your voicemail, see “Using Voicemail” on page 130.

## Sprint Account Passwords

---

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your Sprint Power Vision® account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

### Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to [www.sprint.com](http://www.sprint.com). (Click **Need to register for access?** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at [www.sprint.com](http://www.sprint.com).

## Voicemail Password

You will create your voicemail password (or passcode) when you set up your voicemail. See “Setting Up Your Voicemail” on this page or on page 4 for more information on your voicemail password.

## Sprint Power Vision Password

With your Sprint Power Vision phone, you may elect to set up an optional Sprint Power Vision password to control Vision access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at 1-888-211-4727.

## Getting Help

---

### Managing Your Account

Online: [www.sprint.com](http://www.sprint.com)

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about Sprint Power Vision and other great products like Sprint Picture Mail, games, ringers, screen savers, and more.

## From Your Sprint Phone

- Press **[★ SHFT] [4 GHI] [TALK]** to check minute usage and account balance.
- Press **[★ SHFT] [3 DEF] [TALK]** to make a payment.
- Press **[★ SHFT] [2 ABC] [TALK]** to access a summary of your Sprint service plan or get answers to other questions.

## From Any Other Phone

- Sprint Customer Service: **1-888-211-4727**.
- Business Customer Service: **1-800-927-2199**.

## Sprint 411

Sprint 411 gives you access to a variety of services and information through your phone, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

*To call Sprint 411:*

▶ Press **[4 GHI] [1] [1] [TALK]**.

## Sprint Operator Services

Sprint Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

*To access Sprint Operator Services:*

▶ Press **[0+NEXT] [TALK]**.

For more information or to see the latest in products and services, visit us online at [www.sprint.com](http://www.sprint.com).

*Section 2*  
***Your Phone***



## Section 2A

### Phone Basics

- ◆ *Your Phone (page 8)*
- ◆ *Viewing the Display Screen (page 11)*
- ◆ *Features of Your Phone (page 13)*
- ◆ *Turning Your Phone On and Off (page 15)*
- ◆ *Using Your Phone's Battery and Charger (page 16)*
- ◆ *Navigating Through Phone Menus (page 18)*
- ◆ *Displaying Your Phone Number (page 19)*
- ◆ *Making and Answering Calls (page 20)*
- ◆ *Entering Text (page 29)*
- ◆ *Using Maps (page 34)*

*Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.*

## Your Phone



## Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Main Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
3. **Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode.
4. **MENU/OK Key** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
5. **Camera Key** lets you access the Photos menu and take pictures and videos.
6. **TALK Key** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
7. **SPEAKER Key** lets you place or receive calls in speakerphone mode or turn the speakerphone on and off during a call.
8. **Microphone** allows other callers to hear you clearly when you are speaking to them.
9. **Internal Antenna** facilitates reception and transmission. To maximize performance, do not obstruct the internal antenna while using the phone. (See page 20.)
10. **Keypad** lets you enter numbers, letters, and characters and navigate within menus. You can use the numeric keypad for speed dialing. (See "Using Speed Dialing" on page 29.)
11. **microSD Slot** lets you use the included microSD card to expand the memory of your phone. (See "Using the microSD Card" on page 94.)

**Note**

*Your phone comes with the microSD card preinstalled.*

12. **END/POWER Key** lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input.

13. **BACK Key** deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu. This key also allows you to return to the previous screen in a Sprint Power Vision session.
14. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
15. **Softkeys** let you select softkey actions or menu items corresponding to the bottom left and right lines on the Main Screen.
16. **Camera Lens**, as part of the built-in camera, lets you take pictures and videos.
17. **Speaker** lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing **[BACK]** or any of the side keys. The speaker also lets you hear the caller's voice in speakerphone mode.
18. **LED Indicator** shows your phone's connection and charging status at a glance.
19. **Outer Screen** lets you monitor the phone's status and see who's calling without opening the phone.
20. **External Keys** allow you to access the Music Store and music stored on your microSD card, as well as navigate through your music while playing a song. (See page 160.)
21. **Micro-USB Connector** allows you to connect a USB cable (included). **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
22. **Volume Key** allows you to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options.
23. **Side Camera Key** lets you activate the camera and video mode and take pictures and videos.

## Viewing the Display Screen

Your phone's display screen provides information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

### Tip

To view a list of your phone's icons and descriptions, from the main menu select **Settings > Phone Info > Icon Glossary**.



indicates your current signal strength. The more lines you have, the stronger your signal.



indicates you are "roaming" off the Sprint National Network.



indicates your phone cannot find a signal.



indicates the call is on hold.



indicates that a call is in progress.



indicates your Sprint Vision connection is active (data is being transferred).



indicates your Sprint Vision connection is dormant (no data is being sent or received).



indicates your phone is not currently able to access Sprint Vision service features.



indicates Sprint PowerVision status. (The icon is animated while service is active.)



indicates Sprint PowerVision service is available.



indicates Sprint PowerVision service is dormant.



indicates you have missed voice calls.



indicates you have scheduled events or call alarms.



indicates you have alarm clock or countdown notifications.



indicates you have new SMS Voice messages.



indicates you have new SMS Text messages.






















indicates you have new picture messages.



indicates you have new voicemail messages.



indicates you have new email messages.

	indicates you have more than two different kinds of messages.		indicates the phone is connected to or communicating with a Bluetooth device via both Hands-free Profile (HFP) and Advanced Audio Distribution Profile (A2DP).
	indicates you have urgent messages.		indicates access to a secure site.
	indicates you have two or more different types of missed calls, scheduled events, call alarms, or alarm clock or countdown notifications.		indicates the level of your battery charge. The more black you see, the more power you have left. (The icon is animated while the battery is charging.)
	indicates you have a new wireless backup alert.		indicates your battery is charging in “Power Off” state.
	indicates the Bluetooth feature is enabled (black icon).		indicates volume level 1 to 8 and vibrate feature are set.
	indicates the phone is discoverable by another Bluetooth device.		indicates 1-beep feature is set.
	indicates the phone is connected to a Bluetooth device (dimmed icon).		indicates 1-beep and vibrate feature are set.
	indicates the phone is communicating with a Bluetooth device.		indicates all ringer settings are off.
	indicates the phone is connected to or communicating with a Bluetooth device via Hands-free Profile (HFP).		indicates all ringer settings are off and the vibrate feature is set.
	indicates the phone is connected to or communicating with a Bluetooth device via Advanced Audio Distribution Profile (A2DP).		



indicates all the sound settings except applications volume are off and the vibrate feature is set.



indicates all the sound settings are off.



indicates the Location feature of your phone is enabled.



indicates the Location feature of your phone is disabled.



indicates you have a new voice message when Screen Call is activated.



indicates the Screen Call Auto setting is on.



indicates your phone is in TTY mode.



indicates the alarm clock or countdown setting is on.



indicates the speakerphone mode is set to on.



indicates the car kit device is set to on.



indicates the wired headset device is set to on.



indicates a microSD card is inserted in your phone. (When the microSD card is being accessed, the icon dims.)

## Features of Your Phone

The KATANA® Eclipse by SANYO is lightweight, easy to use, and reliable, and it offers many features and service options. This list previews some of those features and provides page numbers where you can find out more:

- Digital dual-band capability allows you to make and receive calls while on the Sprint National Network and to roam on other 1900 and 800 MHz digital networks where Sprint has implemented roaming agreements (page 60).
- Sprint Power Vision provides access to the wireless Internet in digital mode (page 141).
- Sprint Mail (page 146), SMS Text Messaging (page 136), and SMS Voice Messaging (page 137) provide quick and convenient messaging capabilities.
- Games, ringers, screen savers, and other applications can be downloaded to make your phone as unique as you are (page 149). Additional charges may apply.
- Your Contacts list allows you to store up to 500 entries, with up to seven phone numbers per entry (page 69).

- The built-in Calendar offers several personal information management features to help you manage your busy lifestyle (page 80).
- The Location feature works in connection with available location-based services (page 43).
- T9 Text Input lets you quickly type messages with one keypress per letter (see page 30).
- Speed dial lets you dial phone numbers with one or two keypresses (see page 29).
- The built-in camera allows you to take full-color digital pictures and videos, view your pictures and videos using the phone's display, and instantly send them to family and friends using Sprint Picture Mail service (page 104).
- The File Manager allows you to manage multiple files in the phone and microSD card (page 97).
- PictBridge support lets you connect and print to any PictBridge compliant printer (page 119).
- Sprint TV and Sprint Music allow you to enjoy streaming video and audio with your phone (page 158).
- The included microSD memory card allows you to expand the phone's available memory (page 94).
- The built-in Bluetooth technology allows you to connect wirelessly to a number of Bluetooth devices to share information more easily than ever before (page 121).
- The Maps feature allows you to launch Sprint navigation services (page 34).

## Turning Your Phone On and Off

### Turning Your Phone On

- ▶ Press .

Once your phone is on and finds a signal, it automatically enters standby mode – the phone's idle state. At this point, you are ready to begin making and receiving calls.

 
If your phone is unable to find a signal after five seconds of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint service by pressing any key (when your phone is turned on).

**Tip**

*The Power Save feature conserves your battery power when you are in an area where there is no signal.*

### Turning Your Phone Off

- ▶ Press and hold  for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

## Using Your Phone's Battery and Charger

---

### **WARNING**

*Use only Sprint-approved or manufacturer-approved batteries and chargers with your phone. The failure to use a Sprint-approved or manufacturer-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.*

Sprint-approved or manufacturer-approved batteries and accessories can be found at Sprint Stores or through the manufacturer; or call 1-866-343-1114 to order. They're also available at [www.sprint.com](http://www.sprint.com).

## Battery Capacity

Your phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 4.6 hours of continuous digital talk time.

When there are approximately five minutes of talk time left, the phone sounds an audible alert and then turns off.

### **Note**


*Long backlight settings, searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.*

### **Tip**

*Watch your phone's battery level indicator and charge the battery before it runs out of power.*

## Installing the Battery

1. Insert the battery into the opening on the back of the phone, making sure the connectors align (1). Gently press down to secure the battery (2).
2. Replace the battery cover and slide it upward until you hear a click (3).

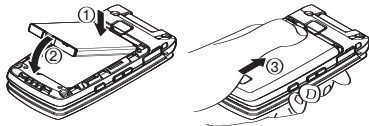


## Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Press the battery release latch (1) and slide the battery cover downward and remove it (2).
3. Lift up the battery and remove it from the phone (3).

### **WARNING**

*Do not handle a damaged or leaking Li-Ion battery as you can be burned.*

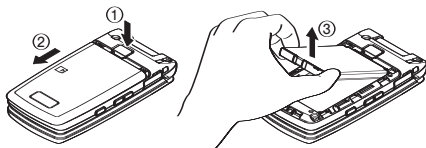

## Charging the Battery

Charge your battery as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off, and you will lose any information you were just working on. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon (■) blinks and the phone sounds a warning tone.

Always use a Sprint-approved or manufacturer-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

## Using the Phone Charger

1. Plug the phone charger into a wall outlet.
2. Open the micro-USB connector cover located on the upper left side of your phone.
3. Plug the other end of the phone charger into the micro-USB connector.
  - A **red indicator light** means the battery is charging.
  - A **green indicator light** means the battery charging is completed.

With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

## Navigating Through Phone Menus

---

The navigation key on your phone lets you scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

For a diagram of your phone's menu, please see "Your Phone's Menu" on page ii.

## Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any option by highlighting it and pressing **MENU OK**. If the option is numbered, you can select it by pressing the corresponding number on the phone's keypad.

For example, to view your text messages:

1. Press **MENU OK** to access the main menu.
2. Select **Messages** by highlighting it and pressing **MENU OK**.
3. Select **Text** by highlighting it and pressing **MENU OK**.
4. Select **Inbox** by highlighting it and pressing **MENU OK**.  
(If you have any text messages, they are displayed.)

### Note

*For the purposes of this guide, the above steps condense into "Press Menu > Messages > Text > Inbox."*

## Backing Up Within a Menu

*To go to the previous menu:*

- ▶ Press **BACK**.

*To return to standby mode:*

- ▶ Press **END**.


## Displaying Your Phone Number

- ▶ Press **Menu > Settings > Phone Info > Phone#/UserID**.  
(Your phone number and other information about your phone and account will be displayed.)

# Making and Answering Calls

## Holding Your Phone

To maximize performance, do not obstruct the internal antenna area.

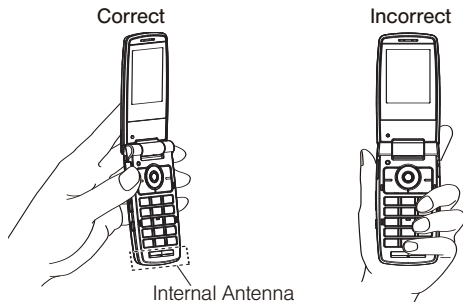

## Making Calls

Placing a call from your wireless phone is as easy as making a call from any landline phone. Enter the number, press **TALK**, and you're on your way to clear calls.

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press **BACK** to erase the numbers.)
3. Press **TALK**. (To make a call when you are roaming and Call Guard is enabled, see "Using Call Guard" on page 62.)
4. Press **END** or close the phone when you are finished.

### Tip

To redial your last outgoing call, press **TALK** twice.

When making calls off the Sprint National Network, always dial using 11 digits (1 + area code + phone number).

You can also place calls from your phone by speed dialing numbers from your Contacts (page 29) and by using your History listings (page 66).


## Dialing Options

When you enter numbers in standby mode, you will see a variety of dialing options by pressing **Options** (right softkey).

To initiate an option, highlight it and press .

- **Abbrev. Dial:** Place call using the abbreviated dialing feature. (See “Using Abbreviated Dialing” on page 27.)
- **Save:** Save the phone number in your Contacts. (See “Saving a Phone Number” on page 26.)
- **P Hard Pause:** Insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 26.)
- **T 2-Sec. Pause:** Insert a two-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 26.)

## Answering Calls

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call. (Depending on your settings, you may also answer incoming calls by opening the phone or by pressing any number key. See “Call Answer Mode” on page 49 for more information.)

*To answer an incoming call with the phone closed:*

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. When your phone rings or vibrates, press and hold the volume key on the left side of the phone. (The call will be answered in speakerphone mode.)  
– or –  
Open the phone to use the earpiece.

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

When receiving a call, the following options are also displayed by pressing **Options** (right softkey).

- **Call Guard** to answer the call when you are in roaming mode. (See "Using Call Guard" on page 62.)
- **Answer** or **Answer:Speaker** to answer the call.
- **Answer on Hold** to put the call on hold.
- **Screen Call** to answer the call by using a prerecorded announcement. (See "Setting Up Screen Call" on page 91.)
- **Quiet Ringer** to mute the ringer (if available).
- **Stop Vibration** to turn vibration off when your ringer setting is in vibrate mode.
- **Ignore with Text** to not answer the call and send a text message to the caller.

## Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Sprint National Network. Please see "Roaming" on page 60 for more information about roaming.

- ▶ To answer the call, press **TALK**, and then press **1** to proceed. (See "Using Call Guard" on page 62 for additional information.)

### Note

*When your phone is off, calls go directly to voicemail.*



## Ending a Call

- ▶ Close the phone or press **END**.


## Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.






*To display the Missed Call entry from the notification screen:*

- ▶ Select the entry and press . (To dial the phone number, press .)

*To display a Missed Call entry from standby mode:*

1. Press **Menu** > **Missed Alerts**.
2. Select the entry you wish to view and press .

## Calling Emergency Numbers

You can place calls to 911 (dial     ), even if your phone is locked or your account is restricted.

### Note

*When you place an emergency call, your phone automatically enters Emergency mode.*

During an emergency call, press **Options** (right softkey) to display your options. Select an option and press .

- **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option is displayed as **Speaker Off** to deactivate.)
- **Unlock MyPhone** to unlock your phone (appears only if the phone is locked).

### Tip

*Press **MyPhone** (left softkey) to display your phone number during an emergency call.*

To exit Emergency mode:

1. Press **END** to end a 911 call.
2. Press **Options** (right softkey) to display the options menu.
3. Select **Exit Emergency** and press **MENU OK**.

**Note**

When you are in Emergency mode, you can exit from the options menu.

To select Emergency mode options:

1. Press **END** to end a 911 call.
2. Press **Options** (right softkey).
  - **Call 911** to call 911.
  - **Call 911: Speaker** to call 911 in speakerphone mode.
  - **Exit Emergency** to exit Emergency mode.
3. Select an option and press **MENU OK**.

## Enhanced 911 (E911) Information


This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

**IMPORTANT**

Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

## In-Call Options

Pressing **Options** (right softkey) during a call displays a list of available in-call features. To select an option, press the corresponding keypad number or select the option and press . The following options may be available through the Options menu:

- **Three-Way Call** to open a call with two other parties.
- **Save** to save the current call's phone number in your Contacts.
- **Contact Details** to display information about a caller who is already in your Contacts.
- **Contacts** to display your Contacts list.
- **Call Memo Rec.** to record the other party.
- **Phone Info** to access the Phone Info menu.
- **Transfer Audio** to switch the call to an external device.
- **Main Menu** to display the phone's main menu.

### Note

You can return to the in-call screen by pressing the **TALK** during a phone call.

### WARNING

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Press either the left softkey or the side camera key during a call to mute the microphone. Press either again to unmute the microphone.

### Note

You can turn the speakerphone on or off by pressing the **SPEAKER** key during a phone call.

## End-of-Call Options




After you have finished your call, the phone will display the Recent History. From the Recent History, you can view the date and time of the call, the phone number (if available), the entry name (if the number is already in your Contacts), and the duration of the call.

- ▶ Press **Options** (right softkey) to display the Recent History options. (See "History Menu Options" on page 66 for details.)
- ▶ Press **Send Msg** (left softkey) to send a text or an SMS Voice message.

## *Saving a Phone Number*


Your phone can store up to 500 Contacts entries. Contacts can store up to a total of 700 phone numbers, and each Contacts entry's name can contain up to 64 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see "Contacts" on page 69.)

*To save a number from standby mode:*

1. Enter a phone number and press **Options** (right softkey) > **Save**.
2. Select **New Entry** or **Existing Entry** and press .
3. If **New Entry** was selected, select a number type, and then use the keypad to enter the new entry name and press   
– or –  
If **Existing Entry** was selected, select an existing entry to which you want to save the number, and then select a number type and press .
4. Press **Done** (left softkey) to save the entry.

## *Finding a Phone Number*


You can search Contacts entries for phone numbers that contain a specific string of numbers.

1. Enter the last three or more digits of the number in standby mode. (The more numbers you enter, the more specific the search becomes.)
2. All Contacts entries matching the entered numbers will be displayed. Select an entry and press  to dial the number.

## *Dialing and Saving Phone Numbers With Pauses*

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** sends the next set of numbers when you press .
- **2-Sec. Pause** automatically sends the next set of numbers after two seconds.

**Note** You can have multiple pauses in a phone number and combine two-second and hard pauses.

*To dial or save phone numbers with pauses:*

1. Enter all or part of a number.
2. Press **Options** (right softkey) > **Hard Pause** or **2-Sec. Pause**.
3. Enter additional numbers.
4. Press **TALK** to dial the number.  
– or –  
Press **Options** (right softkey) > **Save** to save the number in your Contacts.

**Note** When dialing a number with a hard pause, press **TALK** to send the next set of numbers.

## Using Abbreviated Dialing

Abbreviated Dialing is similar to speed dialing. You can use either of the following abbreviated dialing features.

- **Contacts Match** – Retrieve any number saved in your Contacts by entering only the last three to six digits of the number. Press **TALK** to dial the retrieved number. (See “To activate the Contacts Match feature” on page 50.)
- **Prepend** – Prepend the first five or six digits (for example, the area code and prefix) to any four or five digits you enter. Press **TALK** to dial the resulting number. (See page 50 to activate the Prepend feature.)

*To place a call using Contacts Match Abbreviated Dialing:*

1. Enter the last three to six digits of a Contacts entry's phone number.
2. Press **TALK** to call the displayed number. (If there is more than one matched number in your Contacts, the Abbrev. Dial list is displayed. Select the name you want to call from the list, and then press **TALK** to place a call.)

*To place a call using Prepend Abbreviated Dialing:*

1. Enter the last four or five digits of the number.
2. Press **TALK**.

## ***Dialing From the Contacts List***

1. Press *Menu > Contacts*.
2. Select the entry you want to call and press **TALK** to dial the entry's default phone number.

– or –

To dial another number from the entry, select the name and press **MENU OK**, and then select a number and press **TALK**.

## ***Plus (+) Code Dialing***

When placing international calls, use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls made from the United States). This feature is subject to network availability.

1. Press and hold **0+NEXT** until a “+” is displayed on your phone screen.
2. Dial the country code and phone number you're calling, and press **TALK**. (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)

## Using Speed Dialing

You can store up to 98 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a button or two. With this feature, you can dial speed dial entries using one keypress for locations 2–9 or two keypresses for locations 10–99.

*To use One-Touch Dialing for speed dial locations 2–9:*

- ▶ Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows “Connecting...”.

*To use Two-Touch Dialing for speed dial locations 10–99:*

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows “Connecting...”.

### Note

*Speed dialing may not be available when you are roaming; when you are roaming off the Sprint National Network, you must always dial using eleven digits (1 + area code + number).*

## Entering Text

### Selecting Text Input Options

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using Sprint Mail and SMS Text Messaging).

1. From a screen where you can enter text, press **Text Mode** (right softkey) to change the text input mode.
2. Select one of the following options:
  - **T9 Word** to enter text using a predictive text system that reduces the number of keypresses required while entering a word. (See page 30.)
  - **Alphabet** to enter characters by using the Alphabet mode. (See page 32.)
  - **SYMBOL** to enter symbols. (See page 33.)
  - **SMILEYS** to enter smile icons. (See page 33.)
  - **Emoticons** to enter “emoticons.” (See page 33.)
  - **Web Shortcuts** to enter Web shortcuts (for example, www., http://, or .com).

- **Preset Msgs** to enter preprogrammed messages. (See page 33.)
- **Recent Msgs** to enter messages used recently.
- **Paste List** to paste copied or cut text.
- **From Schedule** to extract schedule items you have added to your Calendar. (See page 80.)
- **From To Do** to extract task items you added in your Calendar as To Do.
- **NUMBER** to enter numbers. (See page 33.)
- **Signature** to enter your signature. (See page 45.)
- **Select Lang.** to select the language (English or Spanish).
- **Delete All** to delete all text.
- **Select Text** to select stored text for copying or cutting.
- **Add Word** to store words that you frequently use. (See page 31.)
- **Text Options** to display the Text Entry settings menu. (See page 34.)

### Tip

When entering text, press the **\*** (Shift) key to change letter capitalization (ABC > abc > Abc).

## Entering Text Using T9 Text Input

T9 Text Input lets you enter text by pressing keys just once per letter. (To select the **T9 Word** mode when entering text, see “Selecting Text Input Options” on page 29.)

T9 Text Input uses an intuitive word database to analyze the letters you enter and create a suitable word. (The word may change as you type.)


1. Select the **T9 Word** text input mode. (See “Selecting Text Input Options” on page 29.)
2. Press the corresponding keys once per letter to enter a word. (For example, to enter the word “Bill,” press **2 ABC** **4 GHI** **5 JKL** **5 JKL**.) (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to erase an entire word.)
3. Use your navigation key to scroll through the list (when applicable), and then select a word.
4. To accept a word and insert a space, press **# SPACE**.

## Adding a Word to the T9 Database


If a word you want to enter is not displayed as an option when you are using T9 Text Input, add it to the database.

1. Select the **Add Word** text input option. (See “Selecting Text Input Options” on page 29.)
2. Enter the word using Alphabet Mode and press **Save** (left softkey). (See “Entering Text Using Alphabet Mode” on page 32.) The word will appear as an option the next time you scroll through options during T9 Text Input.

*To edit or delete the words you have added:*

1. Press **Menu > Settings > Text Entry > My Words**.
2. Highlight a word and press **Options** (right softkey).
3. Select an option and press .
  - **Edit** to edit a word in My Words.
  - **Delete** to delete a word in My Words.

## Customizing T9 Settings

1. Press **Menu > Settings > Text Entry > T9 Settings**.
2. Select an option and press .
  - **Word Prediction** to automatically display the word that may follow the current text input.
  - **Word Complete** to show the completed words that match the keys you have entered without entering the whole word.
  - **Word Scan** to allow T9 text input to recognize words by searching Contacts and messages.
  - **Word ChoiceList** to display the word choice list.
  - **Show aft enter** to select when (after 1–3 digits) to display the word list. The word list will be displayed based on the number of digits you selected.
  - **Show after wait** to select how many seconds the phone should wait to display the word list.

For more information about T9 Text Input, visit the Nuance Web site at [www.nuance.com/t9/textinput/](http://www.nuance.com/t9/textinput/).

## Entering Text Using Alphabet Mode

1. Select the **Alphabet** mode. (See “Selecting Text Input Options” on page 29.)
2. Press the corresponding keys repeatedly until the correct letter appears. (For example, to enter the word “Bill,” press **2** ABC twice, **4** GHI three times, **5** JKL three times, and **5** JKL three times again.) (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to erase an entire word.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
<b>1</b> <small>1</small>	., @ 1 ? ! * # /	
<b>2</b> <small>ABC</small>	A B C 2	a b c 2
<b>3</b> <small>DEF</small>	D E F 3	d e f 3
<b>4</b> <small>GHI</small>	G H I 4	g h i 4
<b>5</b> <small>JKL</small>	J K L 5	j k l 5
<b>6</b> <small>MNO</small>	M N O 6	m n o 6
<b>7</b> <small>PQRS</small>	P Q R S 7	p q r s 7
<b>8</b> <small>TUV</small>	T U V 8	t u v 8
<b>9</b> <small>WXYZ</small>	W X Y Z 9	w x y z 9
<b>+</b> <b>0</b>	0	
<b>Space</b> <b>#</b>	Space	
<b>Shift</b> <b>X</b>	One-character-shifted Caps Lock Unshifted	

### Tip

The initial letters of words following spaces can be either upper - or lowercase depending on the capitalization setting. Press the \* (Shift) key to change letter capitalization (ABC > Abc > abc).

## Entering Numbers, Symbols, Smileys, Emoticons, and Preset Messages

### To enter numbers:

- ▶ Select the **NUMBER** mode and press the appropriate key. (See “Selecting Text Input Options” on page 29.)

### To enter symbols:

- ▶ Select the **SYMBOL** mode. (See “Selecting Text Input Options” on page 29.) To enter a symbol, press the appropriate key indicated on the display.


### To enter “smileys”:

- ▶ Select the **SMILEYS** mode and press the appropriate key. (See “Selecting Text Input Options” on page 29.)

### To enter “emoticons”:

- ▶ Select the **Emoticons** mode and press the appropriate key. (See “Selecting Text Input Options” on page 29.)


### To enter preset messages:

1. Select the **Preset Msgs** mode. (See “Selecting Text Input Options” on page 29.)
2. Select a message and press .

#### Note

*Preset messages make composing text messages easier by allowing you to enter quick messages, such as “Meet me at,” “Let’s get lunch,” or a customized message of your own. (For more information on preset messages, please see “Managing Preset Messages” on page 45.)*

## Setting Text Entry Options


1. Press *Menu* > *Settings* > *Text Entry*.
2. Select an option and press .
  - **Auto-Capital** to turn auto-capitalization on or off.
  - **Auto-Space** to turn auto-spacing on or off after T9 words you enter.
  - **Input Language** to select the language (English or Spanish).
  - **My Words** to add or edit a word in the T9 database (see page 31).
  - **T9 Settings** to customize the T9 settings (see page 31).
  - **Default Input** to select T9 word, Alphabet, or Retain Mode for the initial entry mode.
  - **Add Word** to store words that you use frequently (see page 31).
  - **Auto-Complete** to automatically display words that may follow the current text input.
  - **Help** to see the T9 instructions page.

## Using Maps

---

### Activating Maps

You can access Maps from your phone's main menu, anywhere on the Sprint network.

1. Press *Menu* > *Maps*.
2. Select an option and press .
  - **Navigation** to provide audible and visual driving directions with full-color moving maps.
  - **Family Locator** to locate your children or other family members from your phone or from a computer.
  - **Live Local Search** to search for businesses in your area using Live Search.

## Section 2B

# Settings

- ◆ *Sound Settings (page 35)*
- ◆ *Display Settings (page 39)*
- ◆ *Location Settings (page 43)*
- ◆ *Messaging Settings (page 43)*
- ◆ *Airplane Mode (page 47)*
- ◆ *TTY Use With Sprint Service (page 47)*
- ◆ *Phone Setup Options (page 49)*

*You can customize your phone to sound, look, and operate just the way you want it to.* This section describes how to change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.


## Sound Settings

### Ringer Types


Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

### Selecting Ringer Types for Incoming Calls


Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

1. Press *Menu > Settings > Sounds > RingerType > Incoming Calls*.
2. Select *Default Ringer*, *Contact Entries*, or *Unknown #s*.
  - If you select *Contact Entries*, select *All Contacts* or *One Contact*.
3. Select a category, and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign a ringer.

## Selecting Ringer Types for Messages


1. Press *Menu > Settings > Sounds > Ringer Type > Messages*.
2. Select *Text Message*, *Picture Mail*, *Voicemail*, *VoiceSMS*, or *Email*. (A list of ringer type categories will be displayed.)
3. For Voicemail and Email, skip to step 4. Otherwise, select *Default (Text Message, Picture Mail, or VoiceSMS)*, *Contact Entries*, or *Unknown #s*.
  - If you select *Contact Entries*, select *All Contacts* or *One Contact*.
4. Select a category, and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
5. Press  to assign a ringer.

## Selecting a Ringer Type for Alarms, Power On/Off Tone, or Scheduled Events

1. Press *Menu > Settings > Sounds > Ringer Type*.
2. Select *Alarm*, *Power On*, *Power Off*, or *Schedule*.
3. Select a category, and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign a ringer.


## Selecting Vibrate Types

With this feature, you can select vibrate types for incoming calls, messages, alarms, and scheduled events.

1. Press *Menu > Settings > Sounds > Vibrate Type*.
2. Select *Incoming Calls*, *Messages*, *Alarm*, or *Schedule*.
  - *Incoming Calls*: select *Default Vibrate* or *Unknown #s*.
  - *Messages*: select *Text Message*, *Picture Mail*, *Voicemail*, *VoiceSMS*, or *Email*.
3. Select a vibrate type and press .

## Selecting a Key Tone

Your phone offers a number of options for selecting the audible tones accompanying a keypress.

1. Press **Menu** > **Settings** > **Sounds** > **Keytones**.
2. Select an option and press .
  - **Tone Length** to select a key tone length. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)
  - **Tone Volume** to select a keypress volume level.
  - **Tone Type** to select the sound of a keypress.

## Setting Up Voice Guide

Voice Guide activates both voice prompt and keypress echo functions. With this feature on, you can hear voice prompts when using Automatic Speech Recognition (ASR), Voice Memo, Screen Call, etc. and hear a voice say the numbers that you press on the keypad. (The default setting is **Off**.)

1. Press **Menu** > **Settings** > **Sounds** > **Voice Guide**.
2. Select **On** or **Off**.

### Note

When the ringer volume is set to **Silence All** or **Vibrate All**, voice prompts cannot be heard.

The keypress echo function is available when you are in standby mode.

## Adjusting the Phone's Volume Settings

Adjust your phone's volume settings to suit your needs and your environment.

1. Press **Menu** > **Settings** > **Sounds** > **Volume**.
2. Select **Ringer**, **Earpiece**, **Headset**, **Speakerphone**, **Applications**, **StartUp/PwrOff** or **Advanced....**
3. Using the navigation key, choose a volume level and press **Done** (left softkey).

### Tip

You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume key on the left side of your phone.

When setting ringer volume, you can check **Always Vibrate** and your phone will vibrate regardless of the volume setting.

## Adjusting the Alert Volume

You can set the alert volume separately from the ringer volume setting.





1. Press *Menu* > *Settings* > *Sounds* > *Volume* > *Advanced...*
2. Select *Alarms*, *Text Message*, *Picture Mail*, *Voicemail*, *VoiceSMS*, or *Email*.
3. Using the navigation key, select *Separate Vol.*
4. Press the navigation key left or right to choose a volume level, and press *Done* (left softkey).

### Tip

You can make the ringer vibrate at any volume level by checking *Always Vibrate*.

## Alert Notification

Set your phone to alert you with an audible tone when you change service areas, once a minute during a voice call, or when a call has been connected.

1. Press *Menu* > *Settings* > *Sounds* > *Alerts*.
2. Select *Beep Each Minute*, *Out of Service*, *Connect*, *Signal Fade/Call Drop*, or *Messages* and press  .
- If you select *Messages*, select *Text Message*, *Picture Mail*, *Voicemail*, *VoiceSMS* or *Email* > *Repeat* or *RingerLength*.
3. Select *On*, *Off*, or an available option and press  .

## Silence All

The Silence All option allows you to mute all sounds without turning your phone off.

### To activate Silence All:

- ▶ With the phone open, press and hold the volume key down in standby mode. (The screen will display "Silence All.")

### To deactivate Silence All:

- ▶ Press the volume key up repeatedly to select a volume level.

## Display Settings

### Changing the Backlight Time Length

Select how long the display screen and keypad remain backlit after any keypress is made.

1. Press *Menu* > *Settings* > *Display* > *Main Screen* or *OuterScreen*.
2. Select *Backlight*.
3. Select *Dim Only*, *Always On*, or a preset length of time.

*To change the Keypad Light setting:*



1. Press *Menu* > *Settings* > *Display* > *Keypad Light*.
2. Select *Always Off* or a preset length of time.

**Note**

Long backlight settings reduce the battery's talk and standby times.



### Changing the Screen Saver

Your phone offers you the option of displaying a screen saver while in standby mode.

1. Press *Menu* > *Settings* > *Display* > *Main Screen* or *OuterScreen* > *Screensaver*.
2. Select an option and press .
3. Select a screen saver and press .


### Changing the Display Screen Animation

Your new phone offers options for what you see on the display screen during various phone functions.

1. Press *Menu* > *Settings* > *Display* > *Main Screen* or *OuterScreen* > *Animation*.
2. Select an option and press .
3. Select an animation display and press .


## Changing the Background

Customize your phone display's appearance by selecting a color scheme to reflect your personality.


1. Press **Menu > Settings > Display > OuterScreen > Background**.
2. Select a background and press .

## Changing the Illumination

Customize your phone display's appearance by selecting an illumination scheme to reflect your personality.


1. Press **Menu > Settings > Illumination**.
2. Select an option (**On/Off**, **Incoming Calls**, **Messages**, **Calendar/Alarm**, **Active Call**, **Playing Music**, **Numeric Keypad**, or **Demo**) and press .
  - **Incoming Calls** to select **Default Lighting**, **Contact Entries**, or **Unknown #s**.
    - If you select **Contact Entries**, select **All Contacts** or **One Contact**, and then select an option.
  - **Messages** to select **Text Message**, **Picture Mail**, **Voicemail**, **VoiceSMS**, or **Email**.
    - If you select **Text Message**, select **Default Text Msg**, **Contact Entries**, or **Unknown #s**.

- **Calendar/Alarm**, **Active Call**, or **Playing Music** to select an available option.
- **Demo** to select **Endless Play**, **1 time**, **3 times**, or **5 times**.

3. Select an illumination pattern and press . (If you selected **On/Off** or **Numeric Keypad** in step 2, you can select only **On** or **Off**.)

## Changing the Contrast

Adjust your screen's contrast (brightness) to suit your surroundings.

1. Press **Menu > Settings > Display > Contrast**.
2. Select an option and press .


## Changing the Phone's Menu Style

Choose how your phone's menu is displayed on the screen.

- ▶ Press **Menu > GridView** or **List View** (right softkey) to change the menu style.



## Changing the Clock Display

Choose whether you want your phone's clock to be displayed in analog mode, digital mode, or with time and date.

1. Press **Menu** > **Settings** > **Display** > **Main Screen** or **Outer Screen**.
2. Select **Foreground** > **Clock/Calendar**.
3. Select a display option and press .
4. Press **OK** (left softkey) to apply the setting.

## Changing the Text Font Size

This setting allows you to adjust the Main Screen font size to view a message and browse on the Web as well as the Outer Screen font size to view a name and phone number.


1. Press **Menu** > **Settings** > **Display** > **Font Size**.
2. Select an option and press .
  - **Main Screen** to select **Messages** or **Browser**.
  - **OuterScreen** to select **Name/Phone#s**.
3. Select a font size and press .

### Tip

From the font preview display, select a font size by pressing the navigation key right or left.


## Changing the Input Font Size

Adjust the font size when entering text (for example, when adding a Contacts entry).

1. Press **Menu** > **Settings** > **Display** > **Main Screen** > **Input Font**.
2. Select **Phone#s**, **Messages**, or **Others**.
3. Select an input font size and press .

## Setting Return to Standby Mode

This feature allows you to select the way to return to standby mode.

1. Press **Menu** > **Settings** > **Display** > **Return to Idle**.
2. A message appears. Press **OK** (left softkey) to continue.
3. Select **Automatically** or **End Key**.
  - **Automatically** to return to standby mode automatically when no key is pressed for 30 seconds.
  - **End Key** to return to standby mode by pressing .

### Note

The End Key setting affects the battery's talk and standby times.


## PowerSave Mode

This feature helps conserve your battery power by setting:

- Main Screen and Outer Screen backlight to *Dim Only*.
  - Key backlight to *Always Off*.
  - Main Screen sleep mode to *after 30 sec.*
  - Outer Screen sleep mode to *after 5 sec.*
1. Press **Menu** > **Settings** > **Display** > **Pwr Save Mode**.
  2. A message appears. Press **OK** (left softkey) to continue.
  3. Select *On*. (Select *Off* to deactivate this feature.)

## Sleep Mode

This feature helps conserve your battery power by restricting the display.

1. Press **Menu** > **Settings** > **Display**.
2. Select *Main Screen* or *Outer Screen*.
3. Select *Sleep Mode*.
4. Select a time interval before the phone goes into sleep mode and press  **OK**. (Select *Off* to deactivate this feature.)


## Setting the Next Schedule

You can display the next scheduled event on the Outer Screen.

1. Press **Menu** > **Settings** > **Display** > **Outer Screen** > **Next Schedule**.
2. Select *On*. (Select *Off* to deactivate this feature.)

## Changing the Text Greeting

A text greeting is displayed on your phone's screen in standby mode. Choose the phone's default greeting ("Sprint"), or enter your own custom greeting.

1. Press **Menu** > **Settings** > **Display** > **Main Screen** > **Foreground** > **Greeting**.
2. Select *Default* or *Custom*.
  - If you select *Custom*, enter a custom greeting and press **OK** (left softkey) > **Done** (left softkey). (See "Entering Text" on page 29.) (Use the  key to erase the existing greeting.)

## Location Settings



Your phone is equipped with a Location feature for use in connection with location-based services.



The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

### Note

*Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.*

To enable your phone's Location feature:

1. Press **Menu** > **Settings** > **More...** > **Location**.  
(The Location disclaimer will be displayed.)
2. Read the disclaimer and press .
3. Select **On** or **Off** and press .

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will be displayed.

## Messaging Settings

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages without placing a voice call. (For more information, see "Accessing Messaging" on page 146.)

Messaging settings make text messaging easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own preset messages.

## Setting Message Notification

When you receive a message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a message notification on your display screen.


1. Press *Menu > Settings > Messages > Notification*.
2. Select *Msgs and Icon* or *Icon Only*.

### Tip

To access the Messaging Settings menu, you can also press *Menu > Messages > Settings*.

## Setting Message Reminders



When new messages arrive, you can choose to have your phone notify you by playing an audible alert.

1. Press *Menu > Settings > Sounds > Alerts > Messages*.
2. Select *Text Message*, *Picture Mail*, *Voicemail*, *Voice SMS*, or *Email*.
3. Select *Repeat* or *Ring Length*.
4. Select a setting and press .

## SMS Text Messages


### Setting a Callback Number

With this feature, you can specify the callback number your recipients see when you send text messages.

1. Press *Menu > Settings > Messages > Callback Number*.
2. Select *None*, *My Phone #*, or *Other* and press .  
(If you select *Other*, enter a callback number and press .)

### Deleting Old Messages

With this feature, if the SMS Voice inbox becomes full, messages are automatically deleted starting with the oldest. (This feature is set to *On* by default.)

1. Press *Menu > Settings > Messages > Auto-Delete*.
2. Select *On* or *Off* and press .

## Adding a Customized Signature

Add a customized signature to each message you send.

1. Press **Menu > Settings > Messages > Signature**.
2. Press **MENU OK**, and then select **On**. (If you do not wish to attach a signature to your outgoing messages, select **Off**.)
3. Enter a signature and press **OK** (left softkey). (See “Entering Text” on page 29.)

## Managing Preset Messages

Your phone is loaded with 20 preset messages to help make sending text messages easier. Customize or delete these messages, such as “Where are you?” “Let’s get lunch,” and “Meet me at” to suit your needs, or add your own messages to the list.

*To edit or delete a preset message:*

1. Press **Menu > Settings > Messages > Preset Msgs**. (The list of preset messages will be displayed.)
2. To edit or delete a message, select it and press **Options** (right softkey).

3. Select **Edit**, edit the message (see “Entering Text” on page 29), and press **MENU OK**.  
– or –  
Select **Delete > Yes** (left softkey) to delete the message. (You can also reset all messages by selecting **Reset All Msgs > Yes** [left softkey].)

*To change the language of the preset message:*

1. Press **Menu > Settings > Messages > Preset Msgs**.
2. Press **Options** (right softkey) > **Select Lang**.
3. Select **English** or **Spanish**.

## Setting Drafts Alert

With this feature, when you try to send an SMS Text message, you are reminded if there are unsent messages in the Drafts folder.

1. Press **Menu > Settings > Messages > Drafts Alert**.
2. Select **On** or **Off**.

## SMS Voice Messages

### Setting the Speakerphone

You can set the speakerphone on or off for SMS Voice messaging. (The speakerphone is set to *On* by default.)

1. Press *Menu > Settings > Messages > VoiceSMS Options > Speakerphone*.
2. Select *On* or *Off*.

### Setting the Sender's Name

With this feature, you can identify yourself to people who receive your SMS Voice messages.

1. Press *Menu > Settings > Messages > VoiceSMS Options > From Name*.
2. Enter your name and press *OK* (left softkey).



### Setting an Alert Notification

SMS Voice Messaging uses your phone's data services. Your phone can alert that you are connecting to data services each time you send an SMS Voice message.

1. Press *Menu > Settings > Messages > VoiceSMS Options > Connect.Alert*.
2. Press *Check* (right softkey) to alert you each time you send an SMS Voice message.
3. Press *Done* (left softkey) to save the setting.

## Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games and Voice Memos, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online information.

 



1. Press **Menu > Settings > More... > Airplane Mode**.
2. Read the disclaimer and press .
3. Select **On** or **Off** and press .

While in Airplane Mode, your phone's standby screen will display "Phone Off."

## TTY Use With Sprint Service

ATTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Sprint service, please call Sprint Customer Service via the state Telecommunications Relay Service (TRS) by first dialing    . Then provide the state TRS with this number: 866-727-4889.

To turn TTY Mode on or off:

1. Press **Menu > Settings > More... > Accessibility > TTY**.  
(An informational message will be displayed.)
2. Read the disclaimer and press **OK** (left softkey).
3. Select **On** to turn TTY mode on.  
– or –  
Select **Off** to turn TTY mode off.

**Note**

*In TTY Mode, your phone will display the TTY access icon.*

*If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.*

**WARNING**



**911 Emergency Calling**

*Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.*


## Phone Setup Options


### Shortcuts

Your phone offers you the option of assigning shortcuts to favorite or often-used functions. Pressing the navigation key in the assigned direction in standby mode will launch your personal shortcuts.

1. Press *Menu* > *Settings* > *More...* > *Navigation Keys*.
2. Select a navigation key and press .
3. Using the navigation key or your keypad, select a shortcut and press **Assign** (left softkey). (If there are additional levels available, press  before selecting your shortcut.)


### Call Answer Mode

Select how to answer incoming calls on your phone: whether you want to be required to press , to press any number key, or simply to open the phone.

1. Press *Menu* > *Settings* > *More...* > *Call Setup* > *Call Answer*.
2. Select *Talk Key*, *Any Key*, or *Flip Open* and press .


### Auto-Answer Mode

Set your phone to automatically pick up incoming calls when connected to an optional hands-free device. Remember, your phone will answer calls in Auto-Answer mode even if you are not present.

1. Press *Menu* > *Settings* > *More...* > *Call Setup* > *Auto-Answer*.
2. Select an option and press .
  - **Hands-free** to answer calls automatically when the phone is connected to a hands-free device (sold separately).
  - **Speakerphone** to answer calls automatically in speakerphone mode.
3. Select *5 Seconds*, *15 Seconds*, or *Off*.

## Setting the Key Guard

This feature enables you to lock external keys while the phone is closed.

1. Press **Menu** > **Settings** > **More...** > **Key Guard**.
2. Select **On** or **Off** and press .

**Note** This feature does not apply when the phone is open.

**Tip** You can deactivate this feature temporarily by pressing and holding the volume key while the phone is closed.

## Display Language

You can choose to display your phone's onscreen menus in English or in Spanish.

1. Press **Menu** > **Settings** > **Display** > **Language**.
2. Select **English** or **Español** and press .

## Setting Abbreviated Dialing

To activate the **Contacts Match** feature:

1. Press **Menu** > **Settings** > **More...** > **Call Setup**.
2. Select **Contacts Match** > **On**.

To activate the **Prepend** feature:

1. Press **Menu** > **Settings** > **More...** > **Call Setup** > **Abbrev. Dial**.
2. Select **Prepend** > **On**.
3. Enter the first five- or six-digit prefix in the **Prepend#** field and then press **OK** (left softkey).
  - To deactivate this feature, select **Off** during step 2 above.

**Tip** To make an **Abbreviated Dial** call, see "Using **Abbreviated Dialing**" on page 27.

**Note** This setting does not apply to 911 or Sprint 411.


## Headset Options

Set up your phone for hands-free use, the type of headset (mono or stereo), and the ringer mode.

*To connect the headset:*

- ▶ Simply plug the headset into your phone's headset jack.

*To set the headset mode:*

1. Press **Menu** > **Settings** > **More...** > **Headset Mode**.
2. Select **Turbo Button**.
3. Select an option and press :
  - **On:** Press the Turbo Button (operation button on your headset) to redial the last call. Press and hold to activate ASR (automatic speech recognition). (See “Section 2H: Voice Services” on page 86 for more information.)
  - **Off:** Select **Off** if you do not wish to assign a Turbo Button setting or if your headset does not have a Turbo Button.

*To set the audio mode:*

1. Press **Menu** > **Settings** > **More...** > **Headset Mode**.
2. Select **Earpiece** > **Stereo** or **Mono**.

*To set the ringer mode:*


1. Press **Menu** > **Settings** > **More...** > **Headset Mode**.
2. Select **RingerSound** > **Normal** or **Headset Only**.

## Browser Settings

This feature enables you to customize the Browser settings through the phone's settings menu.

### Editing Bookmarks

You can edit the names or URLs of your bookmarks, sort them, or delete them from your phone. (See “See Exploring the Web” on page 151.)

1. Press **Menu** > **Settings** > **More...** > **Browser** > **Bookmarks**.
2. Highlight a bookmark and press **Options** (right softkey).
3. Select an option and press .
  - **Show Page** displays the Web page of the selected bookmark.
  - **Edit** to edit the title or address of the selected bookmark.

- **Set Home** to set the selected bookmark as your home page.
- **Delete** to delete the selected bookmark.
- **Delete All** to delete all bookmarks saved in the phone.
- **Reorder** to change the order of the bookmarks.

## Deleting Browser Cache Files and Cookies

With this feature, you can delete the browser cache (temporary files) and cookies (information used by Web sites you have visited) saved in the phone.

1. Press **Menu > Settings > More... > Browser**.
2. Select **Delete Web Cache** or **Delete Web Cookies**.
3. If you are certain you would like to delete, press **OK** (left softkey) > **Yes** (left softkey).

## Editing the Home Page

This feature allows you to edit the URL of the home page on your phone.

1. Press **Menu > Settings > More... > Browser > Edit Home Page**.
2. Use your keypad to edit the URL and press **Save** (left softkey) to save your changes.

## Section 2C

# Security

- ◆ *Accessing the Security Menu (page 53)*
- ◆ *Using Your Phone's Lock Feature (page 54)*
- ◆ *Restricting Calls (page 55)*
- ◆ *Using Special Numbers (page 56)*
- ◆ *Deleting Phone Content (page 56)*
- ◆ *Resetting Phone Content (page 57)*
- ◆ *Security Features for Sprint Power Vision (page 58)*

*By using the security settings on your phone, you receive peace of mind without sacrificing flexibility.* This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

## Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

1. Press **Menu > Settings > More... > Security**.
2. Enter your lock code to display the Security menu.

### Tip

*If you can't recall your lock code, try using the last four digits of your wireless phone number. If this doesn't work, call Sprint Customer Service at 1-888-211-4727.*

## Using Your Phone's Lock Feature

---

### Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint Customer Service, or special numbers. (See “Using Special Numbers” on page 56.)

1. Press **Menu > Settings > More... > Security** and enter your lock code.
2. Select **Lock My Phone > Lock Now**. (To set your phone to lock the next time it is turned on, select **On Power-up**.)
3. Select **Full Lock** or **Excp. Incom. Calls**.
  - **Full Lock** to prevent making or receiving calls except incoming calls from the special numbers.
  - **Excp. Incom. Calls** to allow incoming calls but not outgoing calls.

### Unlocking Your Phone

1. From standby mode, press **Unlock** (left softkey).
2. Enter your lock code.

### Changing the Lock Code


1. Press **Menu > Settings > More... > Security** and enter your lock code.
2. Select **Change Code**, and then enter and re-enter your new lock code.

### Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 56.)

- ▶ To call an emergency number, special number, or Sprint Customer Service, enter the phone number and press **TALK**.

## Locking the Camera/Photos Menus

1. Press **Menu > Settings > More... > Restrict and Lock**.
2. Select **Camera/Pictures**, and then enter your lock code.
3. Select an option and press .
  - **Unlocked** to unlock the current Camera/Photos lock feature.
  - **Lock Camera** to lock camera operation.
  - **Lock Photos** to lock access to files in My Albums.
  - **Lock All** to lock camera operation and access to files in My Albums.


## Locking Voice Services

This setting allows you to block incoming and outgoing calls (except 911 calls) and SMS Voice messages.

1. Press **Menu > Settings > More... > Restrict and Lock**.
2. Select **Voice**, and then enter your lock code.
3. Select **Lock > Locked**. (Select **Unlocked** to deactivate this feature.)

## Restricting Calls

There may be occasions when you want to limit the numbers your phone can call or from which it can receive calls. You can use the Restrict Calls setting to do just that. (The Restrict Calls setting does not apply to 911 or Sprint Customer Service.)

1. Press **Menu > Settings > More... > Restrict and Lock**.
2. Select **Voice**, and then enter your lock code.
3. Select **Restrict > Incoming Calls or Outgoing Calls**.
4. Select an option and press .
  - **Allow All** to make or receive all calls.
  - **Contacts Only** to make or receive calls to or from Contacts entries, voicemail, or special numbers only.
  - **Special #s Only** to make or receive calls to or from three special numbers only. (See “Using Special Numbers” on page 56.)

### Note

Restricted incoming calls are forwarded to voicemail.


## Using Special Numbers

---

Special numbers are important numbers that you have designated as being “always available.” You can call and receive calls from special numbers even if your phone is locked.

You can save up to three special numbers in addition to your Contacts entries (the same number may be in both directories).

*To add or replace a special number:*

1. Press **Menu > Settings > More... > Security** and enter your lock code.
2. Select **Special Numbers**.
3. Select a location for your entry.
4. Enter the number and press .
5. Press **Done** (left softkey) to return to the security menu.

### Note


*There are no speed dial options associated with special numbers.*

*You cannot make calls to or receive calls from special numbers if **Voice** is set to **Locked in Restrict and Lock**.*

## Deleting Phone Content

---


Use the Security menu to quickly delete all the content you have created or stored in your phone.

1. Press **Menu > Settings > More... > Security** and enter your lock code.
2. Select **Delete/Reset**.
3. Select an option and press .
  - **Delete Web Cookies** to delete all Web cookies (data saved in your phone by sites you have visited).
  - **Delete Web History** to delete all saved Web addresses of sites you have visited.
  - **Delete Web Cache** to delete all Web page information saved in your phone.
  - **Delete Contacts** to delete all of your Contacts entries.
  - **Delete My Stuff** to delete all items you have downloaded to your phone.
  - **Delete Photos** to delete all pictures saved in the phone.

- **Delete Voice Data** to delete all voice data and call memos saved in the phone.
  - **Delete Message** to delete all messages (including locked ones) in the Inbox, Sent Mail, Pending, and Drafts folders; all Recent Lists; and all user-created preset messages (text messages, SMS Voice messages, etc.).
  - **Delete Calendar Events** to delete all scheduled events (including secret ones).
4. Read the disclaimer and press **OK** (left softkey) > **Yes** (left softkey) to confirm the deletion.

## Resetting Phone Content

Resetting the phone restores all the factory defaults, including the ringtypes and display settings. Contacts, History, Scheduler, and Messages are not affected.

1. Press **Menu** > **Settings** > **More...** > **Security** and enter your lock code.
2. Select **Delete/Reset**.
3. Select an option and press .
  - **Reset Browser** to reset your Web browser's history, bookmarks, cookies, error log, auto-complete text, and URLs.
  - **Reset Favorites** to reset all shortcuts settings.
  - **Reset Pic. Mail** to reset your authentication ID for your Sprint Picture Mail account.
  - **Reset All Settings** to restore all the factory defaults, including ringtypes and display settings. Contacts, History, Calendar, and Messages are not affected.
  - **Reset Phone** to reset all settings and delete all data on your phone.

4. Read the disclaimer and press **OK** (left softkey).
5. If you are certain that you would like to reset your phone, press **Yes** (left softkey).

## ***Security Features for Sprint Power Vision***

---

### ***Enabling and Disabling Data Services***

You can disable data services without turning off your phone; however, you will not have access to all data services, including Web and messaging. Disabling data services will avoid any charges associated with these services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable data services again at any time.

*To disable data services:*

1. Press **Menu > Settings > More... > Data > Disable Data**. (A message will be displayed.)
2. Press **Disable** (right softkey) to confirm that you want to sign out.

*To enable data services:*

1. Press *Menu > Settings > More... > Data > Enable Data*.  
(A message is displayed.)
2. Press *OK* (left softkey) to enable Vision service.

## ***Locking Sprint Data Services***

You can lock access to Sprint data services without signing out.

1. Press *Menu > Settings > More... > Restrict and Lock*.
2. Select *Data > Off and Lock*, and then enter your lock code.
3. Select *Locked*. (Select *Unlocked* to deactivate this feature.)

# Roaming

---


- ◆ *Understanding Roaming (page 60)*
- ◆ *Setting Your Phone's Roam Mode (page 61)*
- ◆ *Using Call Guard (page 62)*
- ◆ *Using Data Roam Guard (page 63)*

**Roaming is the ability to make or receive calls when you're off the Sprint National Network.** Your new digital dual-band KATANA Eclipse by SANYO works anywhere on the Sprint National Network and allows you to roam on 1900 and 800 MHz digital networks. This section explains how roaming works as well as special features that let you manage your roaming experience.

## Understanding Roaming

---

### Recognizing the Roaming Icon on the Display Screen

Your phone's display screen always lets you know when you're off the Sprint National Network. Anytime you are roaming, the phone displays the roaming icon ().

#### Tip

*Remember, when you are using your phone off the Sprint National Network, always dial numbers using 11 digits (1 + area code + number).*

### Roaming on Other Digital Networks


When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the Sprint National Network. However, you may not be able to access certain features, such as Sprint Power Vision, depending on the available network.

## Note

If you're on a call when you leave the Sprint National Network, your call is dropped. If your call is dropped in an area where you think Sprint service is available, turn your phone off and on again to reconnect to the network.

## Checking for Voicemail Messages While Roaming

When you are roaming off the Sprint National Network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.


1. Dial 1 + area code + your phone number.
2. When you hear your voicemail greeting, press .
3. Enter your passcode at the prompt and follow the voice prompts.

When you return to the Sprint National Network, voicemail notification will resume as normal.

## Setting Your Phone's Roam Mode

Your phone allows you to control your roaming capabilities. By using the Roaming menu option, you can determine which signals your phone accepts.


Choose from two different settings on your phone to control your roaming experience.

1. Press **Menu** > **Settings** > **More...** > **Roaming** > **Set Mode**.
2. Select an option and press .
- **Sprint Only** to access the Nationwide Sprint PCS Network only and prevent roaming on other networks.
- **Automatic** to seek service on the Sprint National Network. When Sprint service is unavailable, the phone searches for an alternate system.

## Using Call Guard

Your phone has two ways of alerting you when you are roaming off the Sprint National Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Sprint National Network.)

*To turn Call Guard on or off:*


1. Press **Menu** > **Settings** > **More...** > **Roaming** > **Call Guard**.
2. Select **On** or **Off** and press .

### Note


Call Guard is turned off by default on your phone.

Voice dialing and speed dialing are not available when you are roaming with Call Guard enabled.

*To place roaming calls with Call Guard on:*

1. From standby mode, dial 1 + area code + the seven-digit number and press .
2. Press any key to delete the pop-up message, and press **Options** (right softkey) > **Roam Call**.

*To answer incoming roaming calls with Call Guard on:*

1. Press . (A message will be displayed notifying you that roaming charges will apply.)
2. Press any key to delete the pop-up message, and press **Options** (right softkey) > **Answer**.


### Note

If the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls.

## Using Data Roam Guard

Depending on service availability and roaming agreements, your phone may be able to access data services while roaming on certain digital systems. You can set your phone to alert you when you are roaming off the Sprint National Network and try to use data services such as messaging.

*To set your Data Roam Guard notification:*

1. Press **Menu** > **Settings** > **More...** > **Roaming** > **Data Roaming**.
2. Select an option and press .
  - **Always Ask** turns your phone's Data Roam Guard feature on. You will see a prompt and will be required to respond anytime you access data services while roaming.
  - **Never Ask** turns your phone's Data Roam Guard feature off. You will not be notified of your roaming status when accessing data services.

*To use data services when Data Roam Guard is active:*

- ▶ When a pop-up notification appears informing you that data roam charges may apply, press **Roam** (left softkey) to connect.

# History

---

- ◆ *Viewing History (page 64)*
- ◆ *History Thread (page 65)*
- ◆ *History Details (page 65)*
- ◆ *History Menu Options (page 66)*
- ◆ *Making a Call From History (page 66)*
- ◆ *Saving a Phone Number From History (page 67)*
- ◆ *Prepending a Phone Number From History (page 67)*
- ◆ *Deleting History (page 68)*

*The History keeps track of incoming calls, outgoing calls, and missed calls.* This section guides you through accessing and making the most of your History.


## Viewing History

---

History is a list of the last 60 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

*To display your History:*

- ▶ From standby mode, press .
- or –
- Press **Menu > History**.

The current day's history appears under **Today**, and the previous day's history appears under **Yesterday**. Other history includes date information.




**Note**

History records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in the phone's Incoming or Missed call logs.

If you return a call from the voicemail menu, it will not be included in your phone's Outgoing call log.

## History Icon Indication

You can determine the type of phone call that was placed, accepted, or missed from the icons shown below.

-  – Incoming Call
-  – Outgoing Call
-  – Missed Call

## History Thread

The History thread screen shows all history of a selected history entry.

*To display a History thread:*


- ▶ From the History list display, select the entry you wish to view and press .

**Tip**

SMS messages are included in the History thread.

## History Details

*To display History details:*

- ▶ From a History thread display, select an entry and press .

The History details screen shows the call type, phone number, and date and time of the call. An onscreen menu is also displayed according to the type of call. See “History Menu Options” on page 66.


To make a call from History details screen, press .

**Tip**

You can also view the next History entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

## History Menu Options

---

Select a History entry and press  to display the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts). Press **Options** (right softkey) to display the following options:

- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **New Group** to access a Group entry menu to create a new Group entry.
- **Contact Details** to display information about the entry if it has already been saved in your Contacts.
- **Save Contact** to save a phone number. (See “Saving a Phone Number From History” on page 67.)
- **Delete** to delete the entry.
- **Delete All** to delete all entries in the History. (See “Deleting History” on page 68.)
- **Rename** to change any entry's current name to Caller ID name.
- **Prepend** to add numbers to the beginning of the selected number. (See “Prepending a Phone Number From History” on page 67.)

## Making a Call From History

---

*To make a phone call from History:*



- ▶ From the History list display, use your navigation key to select an entry and press .

### Note

*You cannot make calls from History to entries identified as **No ID** or **Restricted**.*

## Saving a Phone Number From History

Your phone can store up to 500 Contacts entries. Contacts entries can store up to a total of 700 phone numbers, and each entry's name can contain 64 characters.

1. Select a History entry and press **Options** (right softkey) > **Save Contact**.
2. Select **New Entry** to create a new Contacts entry for the number or **Existing Entry** to save the number to an existing entry.
3. If **New Entry** was selected, select a number type, and then use the keypad to enter the new entry name and press .  
– or –  
If **Existing Entry** was selected, select an existing entry to which you want to save the number, and then select a number type and press .
4. Press **Done** (left softkey) to save the entry.

## Prepending a Phone Number From History

If you need to make a call from History and you are outside your local area code, you can add the appropriate prefix by prepending the number.

1. Select a History entry and press **Options** (right softkey) > **Prepend**.
2. Enter the prefix and press  to call the number.

## *Deleting History*

---

You can delete individual or all entries in your History using the Options menu.

1. Press **Menu** > **History** to display your History.
2. Select an entry you wish to delete and press **Options** (right softkey) > **Delete**. (Select **Delete All** if you wish to delete all entries in your History.)
3. If you are certain you want to delete the History, press **Delete** (left softkey).

## Section 2F

# Contacts

- ◆ *About Contacts (page 69)*
- ◆ *Creating a New Contacts Entry (page 69)*
- ◆ *Finding Contacts Entries (page 70)*
- ◆ *Contacts Entry Options (page 72)*
- ◆ *Editing a Contacts Entry (page 73)*
- ◆ *Secret Contacts Entries (page 76)*
- ◆ *Dialing Sprint Services (page 77)*
- ◆ *Wireless Backup (page 77)*



*Your phone's Contacts list helps you stay in touch with family, friends, and colleagues by keeping track of all their contact information.* This section explains how to use your phone's Contacts list.

## About Contacts

Your phone can store up to 500 Contacts entries. Contacts can store up to 700 phone numbers, 1000 email addresses, and 500 Web addresses. You can also add Contacts entries to **Groups**, allowing you to send the same text, picture, or voice message to up to 25 Contacts entries at one time.

## Creating a New Contacts Entry

### Creating a Contacts Entry

1. Press *Menu* > *Contacts* > *Add New* > *New Contact*.
2. Enter a name for the new entry and press the navigation key down.
3. Enter the phone number for the entry and press .
4. Select a number type for the entry (*Mobile*, *Home*, *Work*, *Pager*, *Fax*, or *Other*) and press .
5. Press *Done* (left softkey).

After you have saved the number, the new Contacts entry is displayed.

### Tip

#### ICE – In Case of Emergency

To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under “ICE” in your phone’s Contacts list. For example, if your mother is your primary emergency contact, list her as “ICE–Mom” in your Contacts list. To list more than one emergency contact, use “ICE1–\_\_\_,” “ICE2–\_\_\_,” etc.

## Creating a Group

You can create a group by assigning members to it and then giving it a name.

1. Press **Menu > Contacts > Add New > New Group**.
2. Read the message and press **Start** (left softkey).
3. Scroll through the list and press **MENU OK** after each selection. (A check mark will appear in the box next to the selected entry.)
4. When you’ve marked all the entries you want to add, press **Continue** (left softkey).
5. Enter a name for the new group and press **MENU OK**.
6. Press **Save** (left softkey) to save the group entry.

## Finding Contacts Entries

There are several ways to display your Contacts entries: by name, by speed dial number, and by group. Follow the steps outlined in the sections below to display entries from the Contacts menu.

### Finding Contacts by Name

1. Press **Menu > Contacts**.
2. Scroll through all the entries.  
– or –  
Enter the first letter of a name or part of a name. (The more letters you enter, the more your search narrows.)
3. To display an entry, select it and press **MENU OK**.
4. To dial the entry’s default phone number, press **TALK**.  
– or –  
To display additional Contacts entries, press the navigation key left or right.

## Finding Speed Dial Numbers

1. Press *Menu* > *Settings* > *More...* > *Contacts* > *Speed Numbers*.
2. Scroll through speed dial entries. Speed dial numbers are displayed in numeric order.
3. To dial the entry's displayed phone number, press **TALK**.

## Finding Group Entries

1. Press *Menu* > *Contacts*.
2. Scroll through the group titles using your navigation key. To display Contacts entries belonging to a group, highlight the group and press **MENU OK**.
3. To dial the entry's displayed phone number, press **TALK**.

## Viewing History from Contacts

You can view the history of a selected Contacts entry from the Contacts list.

- ▶ Highlight an entry and press *Options* (right softkey) > *Contact History*.

## Contacts Entry Options

---

To access a Contacts entry's options, highlight the entry and press Options (right softkey). Select an option and press .

Individual Contacts entry options:

- **New Group** to create a new group.
- **Edit Contact** to edit the selected Contacts entry.
- **Send Message** to send an SMS Text message, an SMS Voice message, an Email, or Picture Mail.
- **Delete Contact** to delete the selected Contacts entry.
- **Contact History** to display the selected Contacts entry's history.
- **Send Contact** to send the selected Contacts entry via Bluetooth.
- **Set as Secret** to make the selected entry secret. See "Secret Contacts Entries" on page 76.
- **Settings** to display the Settings menu.
- **Print** to print the selected Contacts entry's information.

Group options:

- **New Group** to create a new group.
- **Edit Group** to edit the selected group.
- **Delete Group** to delete the selected group.
- **Send Contact** to send the selected Contacts entry via Bluetooth.
- **Set as Secret** to make the selected Group secret. See "Secret Contacts Entries" on page 76.
- **Settings** to display the Settings menu.
- **Print** to print the selected Contacts entry's information.

### Tip

You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

## Editing a Contacts Entry

### Adding a Phone Number to a Contacts Entry

1. Display a Contacts entry. (See “Finding Contacts Entries” on page 70.)
2. Press **Options** (right softkey) > **Edit Contact**.
3. Scroll down to highlight <**Add Number**> and enter the new phone number and press **MENU OK**.
4. Select a number type for the number and press **MENU OK**.
5. Press **Done** (left softkey) to save the new number.

### Adding Members to a Group

1. From the Contacts list, highlight the group to which you want to add members and press **MENU OK**.
2. Press **Options** (right softkey) > **Edit Group** > **Add More**.
3. Read the message and press **Start** (left softkey).
4. Highlight each member you want to add and press **MENU OK** after each selection. (A check mark will appear in the box next to the selected member.)
5. Press **Continue** (left softkey) > **Save** (left softkey).

## Selecting an Illumination Pattern for a Contacts Entry


You can assign an illumination scheme to a Contacts entry so you can identify the caller by illumination pattern. (See “Changing the Illumination” on page 40.)

1. Display a Contacts entry and press **MENU OK**.
2. Select **Set Illuminations** and press **MENU OK** to display the illuminations menu.
3. Highlight an illumination patterns menu (**Incoming Calls**, **Text Message**, **Picture Mail**, **VoiceSMS**, or **Email**) and press **MENU OK**.
4. Select **Change**.
5. Select an illumination pattern and press **MENU OK**.

## Assigning Speed Dial Numbers


Your phone can store up to 98 phone numbers in speed dial locations. (For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 29.)

*To assign a speed dial number to a new phone number:*

1. Add a phone number to a new or to an existing Contacts entry. (See “Creating a New Contacts Entry” on page 69 or “Adding a Phone Number to a Contacts Entry” on page 73.)
2. Press **Options** (right softkey) > **Set Speed Dial**.
3. Select an available speed dial location and press . (A confirmation will be displayed.)

*To assign a speed dial number to an existing phone number:*


1. Display a Contacts entry. (See “Finding Contacts Entries” on page 70.)
2. Highlight the number you wish to set as a speed dial and press **Options** (right softkey) > **Set Speed Dial**.

3. Select an available speed dial location and press . (A confirmation will be displayed.)

### Note

*If you attempt to assign an already in-use speed dial location to a new phone number, a message will appear asking if you wish to replace the existing speed dial assignment. Press **Replace** (left softkey) to assign the location to the new phone number and delete the previous speed dial assignment.*

## Editing a Contacts Entry






1. Display a Contacts entry.
2. Press **Options** (right softkey) > **Edit Contact**.
3. Select the field you wish to edit, and then add or edit the information and press .
4. Press **Done** (left softkey) to save the new number.

## Editing a Group

1. Display the Contacts list and highlight the group you want to edit.
2. Press **Options** (right softkey) > **Edit Group**.
3. Change the group name or the assigned image.
4. Press **Save** (left softkey) to save your changes.






## Selecting a Ringer Type for a Contacts Entry

Assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 35.)

1. Display a Contacts entry and press .
2. Select the current ring type and press  to display the Ringer Type menu.
3. Highlight a ringer type menu (*Incoming Calls*, *Text Message*, *Picture Mail*, *VoiceSMS*, or *Email*) and press .
4. Select *Change*.
5. Select an option and press .
6. Select a ringer and press .

## Assigning an Image to a Contacts Entry

You can assign an image to a Contacts entry. The image is displayed when the entry calls you.

1. Display a Contacts entry and press .
2. Press the navigation key to highlight the  icon and press .
3. Select *Select Image*.
4. Select an option and press .
5. Select an image and press .

## Removing an Entry from a Group

1. Display the Contacts list and highlight a group from which you want to delete a member.
2. Press *Options* (right softkey) > *Edit Group*.
3. Highlight the member you want to delete and press *Options* (right softkey) > *Remove from Gr.* > *Yes* (left softkey).
4. Press *Save* (left softkey).

## Secret Contacts Entries

---

You can hide an entry by making it secret. The entry is not displayed in your Contacts. In History, a telephone number is displayed but the Contacts entry's name is not.

### *To make an entry secret:*

1. Highlight a Contacts entry and press **Options** (right softkey) > **Set as Secret**.
2. Select **On**.
3. From the Contacts list, press **Options** (right softkey) > **Settings** > **Hide Secret**.
4. Enter the four-digit lock code.

### *To make an entry public:*

1. From the Contacts list, press **Options** (right softkey) > **Settings** > **Show Secret**.
2. Enter the four-digit lock code.

#### **Note**

*If you make an entry secret, calls cannot be made to that entry if **Contacts Only** is selected in **Settings** > **More...** > **Restrict and Lock** > **Voice** > **Restrict** > **Incoming Calls** or **Outgoing Calls** (see page 55).*

#### **Tip**

*If you can't recall your lock code, try using the last four digits of your wireless phone number. If this doesn't work, call Sprint Customer Service at 1-888-211-4727.*

## Dialing Sprint Services

Your Contacts list is preprogrammed with contact numbers for various Sprint services.

*To dial a service from your Contacts:*

1. Press **Menu** > **Settings** > **More...** > **Contacts** > **Services**.
2. Select **CustomerService**, **Dir Assistance** (Sprint 411), **AccountInfo**, or **Sprint Operator**.

*To dial a service from standby mode using your keypad:*

1. Dial the appropriate service number:

■ **CustomerService** – **\*SHIFT** **2 ABC**

■ **Sprint 411** – **4 GH1** **1** **1**

■ **AccountInfo** – **\*SHIFT** **4 GH1**

■ **Sprint Operator** – **0+NEXT**

2. Press **TALK** to place the call.

## Wireless Backup

This feature allows you to back up all of your contacts to the Sprint Web site and restore them if your phone is lost, stolen, damaged, or replaced.

### Tip

*To use the wireless backup service, you are required to activate the service from your phone.*

To subscribe to the wireless backup service, you will need to purchase a license to use the wireless backup service through your phone's browser. The license expires after a set period of time and must be renewed regularly. As part of the initial subscription process, a random wireless backup password is generated. The randomly generated password will be sent to your phone as an SMS text message. (Subscribe launches the subscription process. If you are already subscribed to wireless backup service, Unsubscribe will be displayed.)

## Activating and Deactivating Wireless Backup Service

*To activate the wireless backup service:*

1. Press **Menu > Settings > More... > Wireless Backup > Subscribe**. (You will be prompted to confirm your license status.)
2. Press **Yes** (left softkey) and follow the onscreen instructions to purchase the license.
3. Please wait while registering the license. (You will see a confirmation screen if it has been registered.)

**Note** Once you have completed the registration, you will receive a message with your password, which you need to access the Wireless Backup Web site ([www.wirelessbackup.sprint.com](http://www.wirelessbackup.sprint.com)) in order to edit your contacts from your computer.

**Tip** Each time you edit the contacts on your phone, they are backed up at [www.wirelessbackup.sprint.com](http://www.wirelessbackup.sprint.com).

*To deactivate the wireless backup service:*

1. Press **Menu > Settings > More... > Wireless Backup > Unsubscribe**. (A message will be displayed.)
2. Follow the onscreen instructions to unsubscribe from the wireless backup service.

**Note** You can unsubscribe from the wireless backup service only through the Sprint Web site.

## Viewing Your Wireless Backup Status

1. Press **Menu > Settings > More... > Wireless Backup > View Status**.
2. Press **OK** (left softkey).

## Setting the Wireless Backup Alert

This feature turns the pop-up alert on or off when a Wireless Backup is in progress.

1. Press **Menu > Settings > More... > Wireless Backup > Alert**.
2. Select **Alert me** or **No alerts**.

### Tip

To display the wireless backup service information, press **Menu > Settings > More... > Wireless Backup > Learn More**. When the service is available, you can also select **Troubleshoot** to display the troubleshooting guide.

# Calendar and Tools

---

- ◆ *Using Your Phone's Calendar (page 80)*
- ◆ *Using Your Phone's Alarm Clock (page 84)*
- ◆ *Using Your Phone's Tools (page 84)*

*Your phone is equipped with several personal information management features that help you manage your busy lifestyle.* This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments.

## Using Your Phone's Calendar

---

### Adding a Schedule Event to the Calendar

Your Calendar helps organize your time and reminds you of important events up to 100 items.

1. Press **Menu** > **Tools** > **Calendar**.
2. Select the day to which you would like to add an event and press **Options** (right softkey) > **Add Schedule**.

#### Tip


To change the calendar display views, press the left softkey repeatedly to toggle **Monthly** or **Weekly** views. In the weekly view, you can easily add to or edit your own schedule.

3. Enter a description and press **MENU OK**.
4. Select the following items you want to set and press **MENU OK**.
  - **Category** to select an event category (**Appointment**, **Business**, **Meeting**, **Personal**, **Vacation**, **Travel**, or **Miscellaneous**).

- **Priority** to select an event priority (*None, High, or Low*).
  - **Start** to schedule a start time for the event. Use your keypad or navigation key to set the hours, minutes, and AM or PM.
  - **End** to schedule an end time for the event. Use your keypad or navigation key to set the hours, minutes, and AM or PM.
  - **Location** to add a location for the schedule.
  - **Alarm** to select a ringer type for the alarm.
  - **Alarm Time** to edit the alarm time (number of hours or minutes before the schedule starts). The default alarm time is 10 minutes before a schedule.
  - **Repeat** to select a repeating status for the schedule (*Once, Daily, Weekly, Monthly, or Yearly*).
5. Press **Save** (left softkey) to save the event.



## Adding a Call Alarm to the Calendar

You can set call alarms to notify you when you need to place a call. The call alarm will let you know when and to whom to place a scheduled call. You can set up to 15 call alarms.

1. Press **Menu > Tools > Calendar**.
2. Select a day and press **Options** (right softkey) > **Add Call Alarm**.
3. Enter the phone number directly or press **Options** (right softkey) > **From Contacts** or **Voicemail**.
  - **From Contacts** to select a number from your Contacts.
  - **Voicemail** to select the number for voicemail access.
4. Select the items to edit and press .
  - **Category** to select an event category (*Appointment, Business, Meeting, Personal, Vacation, Travel, or Miscellaneous*).
  - **Time/Date** to edit the start time and date.
  - **Alarm** to select the ringer alarm.
  - **Repeat** to set the Call Alarm's repeat status (*Once, Daily, Weekly, Monthly, or Yearly*).
5. Press **Save** (left softkey).

## Adding To Do List Items

Your phone can store and manage up to 40 To Do List items.

1. Press **Menu > Tools > Calendar**.
2. Select a day and press **Options** (right softkey) > **Add To Do**.
3. Enter a description and press .
4. Select an option you want to edit and press 
  - **Category** to select an event category (**Appointment, Business, Meeting, Personal, Vacation, Travel, or Miscellaneous**).
  - **Priority** to select an event priority (**None, High, or Low**).
  - **Due Time/Date** to schedule a due time and date.
  - **Status** to select a status for the To Do items (**Needs Action or Completed**).
5. Press **Save** (left softkey) to save the To Do items.

## Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. There are several ways your phone alerts you to scheduled events:


- By playing the assigned ringer type.
- By illuminating the backlight.
- By flashing the LED.

To silence the alarm and reset the schedule, press .

To view additional options, press the appropriate key:

- **Dismiss** (right softkey) clears the event alert.
- Press and hold the side camera key to cancel snooze mode.

## Viewing Events

1. Press **Menu > Tools > Calendar**.
2. Select the day for which you would like to view events and press . (If you have events scheduled for the selected day, they will be listed in chronological order.)

**Tip** In the monthly view, days with events scheduled are indicated by a small triangle just to the left of the date.

3. To display an event's details, highlight it and press **MENU OK**.

## Going to a Specified Date

1. Press **Menu > Tools > Calendar > Options** (right softkey) > **Go to Date**.
2. Enter a date and press **MENU OK**.

## Deleting a Day's Events

1. Press **Menu > Tools > Calendar**.
2. Select the day for which you would like to delete events and press **MENU OK**.

**Tip** In the monthly view, days with events scheduled are indicated by a small triangle just to the left of the date.

3. Press **Options** (right softkey) > **Delete**.
4. Select an option and press **MENU OK**.
  - **This** to delete a single event.

- **Select** to select and delete multiple events at one time.
  - **All on This List** to delete all events on the list.
  - **Completed** to delete completed **To Do Events**.
5. Press **Yes** (left softkey) to delete the event(s).

## Deleting Old Events

To delete events scheduled before a specific time and date:









- ▶ Press **Menu > Tools > Calendar > Options** (right softkey) > **Delete Memory > Delete Old > Yes** (left softkey).

## Deleting All Events

1. Press **Menu > Tools > Calendar > Options** (right softkey) > **Delete Memory > Delete All > Yes** (left softkey). (An alert will be displayed asking you to confirm the deletion.)
2. Press **Yes** (left softkey) to delete all events or **No** (right softkey) to cancel.

## Using Your Phone's Alarm Clock

Your phone comes with a built-in alarm clock that has multiple alarm capabilities.

1. Press **Menu > Tools > Alarm Clock**.
2. Select an alarm number and press .
3. Enter a description for the alarm and press .
4. Select a time for the alarm by selecting the **Time** field and pressing 
  - Using your keypad or navigation key, set the hours, minutes, and AM or PM and press .
5. Select a repeating status for the alarm by selecting the **Repeat** field and pressing 
  - Highlight **Once**, **Daily**, **Mon – Fri**, **Sat and Sun**, or a specific day, and press .
6. Turn the alarm on or off by selecting the **Alarm** field and pressing 
  - Select **On** or **Off** and press .
7. Press **Save** (left softkey) to save the alarm settings.

### Tip

Press the left softkey (**On** or **Off**) to toggle the alarm on and off.


To change the alarm settings, press **Settings** (right softkey) to set the ringer length and snooze options.

## Using Your Phone's Tools

In addition to helping you be more efficient and organized, your phone offers useful and entertaining tools.

### Using the Calculator

Your phone comes with a built-in calculator.

1. Press **Menu > Tools > Calculator**.
2. Enter numbers using your keypad.
  - Press the appropriate navigation key for an arithmetic option (+ – × ÷).
  - Press the left softkey to enter decimal points.
  - Press **CLR** (right softkey) to clear all numbers.
3. Press  for the result.



## Using the World Clock

To view the time in different locations:

1. Press **Menu > Tools > World Clock**.
2. Press the navigation key left or right to scroll through different time zones.

## Using the Countdown Timer

This feature allows you to use your phone as a countdown timer to alert when a specified period of time has elapsed. You can set up to five timers.

1. Press **Menu > Tools > Countdown**.
2. Select a countdown timer number and press .
3. Select items to edit and press .
  - **Description** to enter a description of the countdown.
  - **Time** to enter the countdown time.
  - **Alarm** to set the countdown alarm on or off.
4. Press **Save** (left softkey) to save the countdown settings.

### Tip

Press the left softkey (**On** or **Off**) to toggle the countdown alarm on and off.

To change the alert settings, press **Settings** (right softkey) to set the ringer length and snooze options.

## Using the Stopwatch

To use the stopwatch:

- ▶ Press **Menu > Tools > Stopwatch**.
  - Press the left softkey repeatedly to **Start**, **Stop**, or **Resume** the stopwatch.
  - While the stopwatch is running, press **Lap** (right softkey) to enter a lap time. You can record up to five lap times.

To display the stopwatch options:

- ▶ From the stopwatch display, press **Options** (right softkey).
  - **Go to Lap List** to display a saved Lap List. Press **Detail** (left softkey) to display the Lap List detail.
  - **Save to Lap List** to save recorded lap times.
  - **Reset** to reset the time to zero and clear any recorded lap times.

# Voice Services

---

- ◆ *Using Automatic Speech Recognition (ASR) (page 86)*
- ◆ *Voice and Call Recording (page 89)*
- ◆ *Setting Up Screen Call (page 91)*

*Your phone's Voice Services let you place calls using your voice, store voice reminders, and record memos right on your phone.* This section includes easy-to-follow instructions for using Automatic Speech Recognition (ASR) and managing voice and call memos.

## Using Automatic Speech Recognition (ASR)

---

You can use your phone's built-in automatic speech recognition (ASR) software to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone, and ASR will recognize your voice and complete tasks by itself.

### Activating ASR

- ▶ From standby mode, press and hold  or .

The screen displays "Say a command" and the phone prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts.

Available ASR commands are:

- **Call** <Name or #> to call an entry in your Contacts list or to the phone number you say. (See page 87 for details.)
- **Go To** <Menu> to jump directly to the menu items or applications. (See page 87 for details.)
- **Check** <Item> to check your phone's status. (See page 88 for details.)

**Note** Use ASR in a quiet environment so it can accurately recognize your commands.

**Tip** When you display a Command menu, say “More options” to display additional commands.

During ASR operation, press **Help** (left softkey) to get instructions using the software.

## Making a Voice Call Using ASR

With ASR, you can make a voice call by reciting a name or phone number.

1. Press and hold **TALK** or **[Mute]**.
2. If you hear “Say a command,” say “**Call**.”
3. If you hear “Say the name or number,” say a name or a phone number.
4. If you hear “Which location?,” say a number type (for example, “Mobile”).

**Tip** You can skip steps 3 and 4 by saying a name and location after “Call” without pausing (for example, “Call John Jones mobile”).

**Note** If ASR does not recognize the name or number, it will find the most likely matches and display a list of up to three names or numbers. You will hear “Did you say...” followed by the name or number. You can confirm by saying “Yes.” Say “No” to change the selection.

## Opening Menus Using ASR

You can jump directly to many menu items or applications by saying “Go to” followed by a menu option.


1. Press and hold **TALK** or **[Mute]**.
2. If you hear “Say a command,” say “**Go To**.”
3. If you hear “Which shortcut?,” say an application name (for example, “Messages”).
4. The menu you have chosen will open.

**Tip** Say “More options” to display additional commands.

## Checking Phone Status Using ASR


You can use ASR to obtain information about your phone:

- My Phone Number
- Network
- Signal Strength
- Battery
- Status (all of the previous except My Phone Number)


1. Press and hold **TALK** or .
2. If you hear “Say a command,” say “**Check**.”
3. If you hear “Which status item?,” say a command.

## ASR Options

*To change ASR confirmation:*

1. Press and hold **TALK** or .
2. Press **Settings** (right softkey) > **Confirmation** and select an option.
  - **Automatic** to ask for confirmation only when the system is not sure what you said.
  - **Always Confirm** to always ask for confirmation.
  - **Never Confirm** to never ask for confirmation.


*To adapt the system to your voice:*

1. Press and hold **TALK** or .
2. Press **Settings** (right softkey) > **Adaptation** > **Adapt Voice**.
3. Press **Start** (left softkey) and repeat each word, phrase, or telephone number you hear.



*To reset the adaptation:*

1. Press and hold **TALK** or .
2. Press **Settings** (right softkey) > **Adaptation** > **Reset Voice** > **Yes** (left softkey).

*To change the ASR mode:*

1. Press and hold **TALK** or .
2. Press **Settings** (right softkey) > **Modes** and select an option.
  - **Expert Mode** to sound a beep only.
  - **Prompt Mode** to prompt for required information.
  - **Readout Mode** to prompt for required information and to read aloud the content displayed on the main screen.

*To change the ASR dialing region:*

1. Press and hold  or .
2. Press **Settings** (right softkey) > **Dialing region** and select an option.
  - **North America** to recognize only numbers valid in North America.
  - **Other** to recognize any number regardless of location.

*To display the ASR software version:*

1. Press and hold  or .
2. Press **Settings** (right softkey) > **About**.

## Voice and Call Recording

Use your phone's voice recording to record brief memos to remind you of important events, phone numbers, or grocery list items and to record the other party's voice during a phone call.

*To record a voice memo:*

1. Press **Menu** > **Tools** > **Voice Memo** > **Record**.
2. Start recording after the beep.

*To stop recording:*

- ▶ Press , , or .

### Note

You can store up to 300 voice memos on your phone. Maximum recording time is up to eight hours.

*To record a phone conversation:*

1. During a call, press **Options** (right softkey) > **Call Memo Rec.**
2. Start recording after the beep.

*To stop the recording of the conversation:*

- ▶ Press **MENU OK** or **BACK**. (Recording will also stop when you disconnect.)

**Note** Only the other party's voice is recorded during this process.

## Voice and Call Recording Options

1. Press **Menu > Tools > Voice Memo > List**.
2. Select **Voice(Phone)** or **microSD** (if available).
3. Select a voice memo and press **Options** (right softkey).
4. Select an option and press **MENU OK**.
  - **Play** to play selected voice memos or all voice memos.
    - **This** to play the selected memo.
    - **Multiple** to play selected memos.
    - **All** to play all memos.

**Note** Press **Speed** (left softkey) to change playing speed.

- **Speaker On** or **Speaker Off** to activate or deactivate the speakerphone mode.
- **Edit Title** to edit the title of a voice memo.
- **Properties** to display information about a voice memo.
- **Type Filter** to display only voice memos or only call memos.
- **Sort by** to sort voice memos by time recorded, name, or file size.
- **Go to Time** to set the point from which the memo starts playing.
- **Go to microSD/Phone** to switch between voice memos recorded on the microSD card and in the In Phone folder.
- **Send via Bluetooth** to send voice memos via Bluetooth.
- **Copy to microSD/Phone** to copy selected voice memos to the microSD card or to the In Phone folder.
- **Move to microSD/Phone** to move selected voice memos to the microSD card or to the In Phone folder.
- **Delete** to delete either selected memos or all memos.

## Deleting Voice and Call Recordings

To delete an individual recording:

1. Press **Menu** > **Tools** > **Voice Memo** > **List**.
2. Select **Voice(Phone)** or **microSD** (if available).
3. Select the memo you want to delete and press **Options** (right softkey) > **Delete** > **This** > **Yes** (left softkey).

To delete all recordings:


1. Press **Menu** > **Tools** > **Voice Memo** > **List**.
2. Select **Voice(Phone)** or **microSD** (if available).
3. Press **Options** (right softkey) > **Delete** > **All** > **Yes** (left softkey).

To delete multiple selected recordings:

1. Press **Menu** > **Tools** > **Voice Memo** > **List**.
2. Select **Voice(Phone)** or **microSD** (if available).
3. Press **Options** (right softkey) > **Delete** > **Multiple**.
4. Select the memos you want to delete and press **Delete** (left softkey) > **Yes** (left softkey).

## Setting the Recording Mode

This feature allows you to match the sensitivity of the microphone to the type of recording you are making.

1. Press **Menu** > **Tools** > **Voice Memo** > **Settings** (left softkey) > **Recording Mode**.
2. Select an option and press :
  - **Dictation** to record a single voice.
  - **Conference** to record multiple voices.

## Setting Up Screen Call

You can screen incoming calls by using a recorded announcement, either a prerecorded one or one that you record. You can also record the caller's message.

### Activating Screen Call


To start Screen Call when you have an incoming call:

- ▶ When the phone rings or vibrates, press **Options** (right softkey) > **Screen Call**.

**Tip**

While the caller's message is being recorded, press **TALK** to answer the call, or press **END** to stop recording and disconnect the call.

*To screen calls automatically:*





1. Press **Menu > Tools > Voice Memo > Screen Call > Auto**.
2. Select **On**.
3. Set the answer delay.
4. Press **OK** (left softkey).  
(The  icon is displayed on the screen.)

## **Selecting an Announcement for Screen Call**





1. Press **Menu > Tools > Voice Memo > Screen Call > Announcement**.
2. Select **Pre-Recorded** or **Custom**.

## **Recording Your Name for a Prerecorded Announcement**

You can use a prerecorded announcement with or without your name. If you record your name, your phone adds it to the prerecorded announcement that you are not available to answer calls.

1. Press **Menu > Tools > Voice Memo > Screen Call > Announcement**.
2. Highlight **Pre-Recorded** and press **Edit** (right softkey) > **Record Name**.
3. Press  to start the first recording. (Press  to stop recording. The maximum recording time is 12 seconds.)
4. After the first recording, press  again to start the second recording.
5. Press  to stop recording.

## Recording a Customized Announcement

1. Press *Menu* > *Tools* > *Voice Memo* > *Screen Call* > *Announcement*.
2. Highlight *Custom* and press *Edit* (right softkey) > *Record*.
3. Press  to start the first recording. (Press  to stop recording. The maximum recording time is 12 seconds.)
4. After the first recording, press  again to start the second recording.
5. Press  to stop recording.

## Reviewing an Announcement

1. Press *Menu* > *Tools* > *Voice Memo* > *Screen Call* > *Announcement*.
2. Select *Pre-Recorded* or *Custom*, and press *Edit* (right softkey) > *Play* or *Play:Speaker*.

## Deleting an Announcement

1. Press *Menu* > *Tools* > *Voice Memo* > *Screen Call* > *Announcement*.
2. Select *Pre-Recorded* or *Custom*, and press *Edit* (right softkey).
3. Select *Delete Name* or *Delete*. (A confirmation will be displayed.)
4. Press *Yes* (left softkey).

### **microSD Card**

---

- ◆ *Using Your Phone's microSD Card and Adapter (page 94)*
- ◆ *File Manager (page 97)*
- ◆ *microSD Settings (page 99)*
- ◆ *microSD Folders (page 100)*
- ◆ *Backing Up Your Contacts Data to the microSD Card (page 100)*
- ◆ *Setting Up the Digital Print Order Format (page 101)*
- ◆ *Connecting Your Phone to Your Computer (page 102)*

*Your phone lets you use a microSD card and an adapter to expand the available memory space.* This highly secure digital card enables you to exchange images, music, and voice data between SD-compatible devices.

## **Using Your Phone's microSD Card and Adapter**

---

### **Using the microSD Card**


Your phone is equipped with a 256 MB microSD (Secure Digital) memory card and its adapter to expand the phone's available memory space. It allows you to store images, videos, music, and voice data in your phone.

**Note**

*Your phone comes with the microSD card preinstalled.*

### **Removing the microSD Card**


1. Open the microSD slot and, using your thumbnail or a flat, blunt object, push the card in slightly and then release.
2. Gently slide the card out of the slot.
3. Close the slot cover.

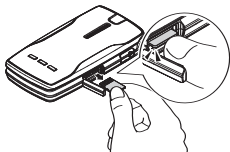

**Note** The microSD card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing, or handling them.

## Inserting the microSD Card


1. Open the microSD slot cover and insert a microSD card into the slot with the gold terminals facing up (see illustration below).
2. Gently press the card until it snaps into place.
3. Close the slot cover.

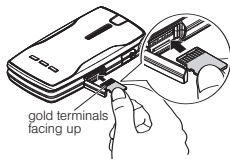

**Note** Be sure to use only recommended microSD cards (64MB-4GB). Using non-recommended microSD cards could cause data loss and damage your phone.

## microSD Icon Indicators

The following icon will be displayed on your phone's display screen when a microSD card is properly inserted into the microSD card slot:

Status Icon	Meaning
	This icon indicates a microSD card has been inserted into your phone. It turns dim while the microSD card is being accessed.

**Note** **DO NOT** remove a microSD card while files are being accessed or transferred. Doing so will result in loss or damage of data.


Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.

## Using the microSD Adapter

The supplied microSD adapter allows microSD cards to be used in SD-compatible devices. Before using, you will need to insert the microSD card into the microSD adapter.


*To insert the microSD card into the microSD adapter:*

- ▶ With the label side of the microSD card facing up, insert the card into the supplied microSD adapter, and gently slide the card until it is fully inserted.

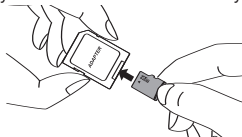

*To remove the microSD card from the microSD adapter:*


- ▶ Hold the front edge of the microSD card, and gently pull outward to remove it from the adapter.

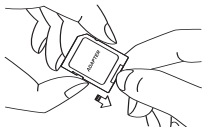

## Setting Write Protection

The included microSD adapter has built-in write protection to prevent accidental overwriting or erasure of your vital data.

 
- ▶ Slide the write-protect tab down to the “Lock” position to prevent overwriting data. To enable writing or reading data on the microSD card, slide the write-protect tab back up to the normal position.












# File Manager

File Manager allows you to manage files such as pictures, videos, music, and applications stored in your phone or on the microSD card.


## Accessing File Manager

1. Press *Menu* > *Tools* > *File Manager*.
2. Select an option and press .
  - **Phone** to access the files in your phone.  
(The following preset folders will be displayed: My Albums, Voice, and Bluetooth.)
  - **microSD** to access the files on your microSD card.  
(The following preset folders will be displayed: DCIM, VIDEO, MUSIC, VOICE, SD\_PIM and BLUETOOTH.)
  - **microSD Options** allows you to manage additional tools such as *DPOF Print*, *Format*, *Create Folders*, or *Save Contacts*.

## File Manager Icons

Content Type	Icon	File Extension
Picture		jpeg, jpg, wbmp, png, bmp, gif
Video		m4v, mp4, 3gp, 3gpp, 3gp2, 3g2, wmv, asf
Audio		mp3, aac, m4a, amr, wma
		qcp, uvo
		mid, midi
		pmd
Contacts		vcf
Calendar		vcs
Unknown		unsupported file format

## Opening Files in the File Manager

1. Press *Menu* > *Tools* > *File Manager* > *Phone* or *microSD*.
2. Select a folder and press .
3. Use your navigation key to select an item you wish to open.

## Using File Manager Options

When you are in the file manager, several user options are available by selecting **Options** (right softkey).

- **Move** to move a file from the current folder to another folder in your phone.
- **Copy** to copy a file from the current folder to another folder in your phone.
- **Delete** to delete a file or folder from File Manager.
- **Import** to import a Contacts file or a calendar file.
- **Play/Listen/View** to play a video, listen to audio, or view a picture.
- **Sort by** to sort folder contents by name, date, or size.
- **Properties** to view a selected file's properties.
- **Rename** to change the name of a selected file.



### Note

*You may not be able to use the file if you change the file name extension.*

- **Set as** to set images as your wallpaper, screen saver, or Caller ID for Contacts entries.
- **Move to microSD** to move a file to your microSD card.
- **Move to Phone** to move a file to your phone.

- **Copy to microSD** to copy a file to your microSD card.
- **Copy to Phone** to copy a file to your phone.
- **Go to microSD** to use File Manager with the microSD card.
- **Go to Phone** to use File Manager with your phone.
- **Send via Bluetooth** send a file via Bluetooth. (See page 128.)
- **Print** to print an image by using Bluetooth. (See page 127.)
- **Use Bluetooth** to play an audio file through a Bluetooth device.
- **List/Thumbnail** to switch between list view and thumbnail view.
- **Create Folders** to create preset folders on the microSD card. (See "Accessing File Manager" on page 97.)
- **View Memory** to view the used and available memory space.

## Sorting the Folder Contents

1. Press *Menu* > *Tools* > *File Manager* > *Phone* or *microSD*.
2. Select a folder and press .
3. Press *Options* (right softkey) > *Sort by*.
4. Select an item (*Name*, *Size*, or *Date*) and press .
5. Select *Ascending* or *Descending*.


## Viewing Memory in File Manager

1. Press *Menu* > *Tools* > *File Manager* > *Phone* or *microSD*.
2. Press *Options* (right softkey) > *View Memory*.  
(The used and available memory space will be displayed.)

## microSD Settings


### Creating Folders in the microSD Card

The following steps allow your phone to create default folders for storing files in your microSD card.

1. With the microSD inserted, press *Menu* > *Tools* > *File Manager* > *microSD Options*.
2. Select *Create Folders* and press . (The phone will create the microSD's default folders: *DCIM*, *VIDEO*, *MUSIC*, *VOICE*, *SD\_PIM*, and *BLUETOOTH*.)

### Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. With the microSD inserted, press *Menu* > *Tools* > *File Manager* > *microSD Options*.
2. Select *Format* and press . (A warning will be displayed.)
3. If you are sure you wish to remove all the files from your microSD card, press *Yes* (left softkey).



**Note**

The formatting procedure deletes all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

## microSD Folders

### Displaying Your microSD Folders

All the files stored in your microSD are accessible through your microSD card folders.

1. With the microSD inserted, press **Menu > Tools > File Manager > microSD**.
2. Select a folder (**DCIM**, **VIDEO**, **MUSIC**, **VOICE**, **SD\_PIM**, or **BLUETOOTH**) and press .
3. To view or play a file, select it and press  or the appropriate softkey.

## Backing Up Your Contacts Data to the microSD Card

You can easily back up your phone's Contacts data to the microSD card.

1. Press **Menu > Tools > File Manager > microSD Options**.
2. Select **Save Contacts**.
3. Press **Yes** (left softkey) to proceed. (Please wait while the system creates your data.)
4. Press **OK** (left softkey) to complete.

**Note**

DO NOT remove your microSD card while files are being accessed or transferred. It will result in a loss of or damage to the data.

## Setting Up the Digital Print Order Format

Digital Print Order Format (DPOF) is a feature that allows you to set up your digital picture print orders in advance. You can use it to set options such as which pictures to print, the number of prints for each picture, and index print settings.

1. With the microSD inserted, press **Menu > Tools > File Manager > microSD Options > DPOF Print**.
2. Select a print mode from **Standard Print** or **Index Print**.
  - **Standard Print** to print the image at its standard size.
  - **Index Print** to print an index sheet of thumbnail images.
3. Press **Options** (right softkey) and select an option from the following.
  - **Select Picture** to select the picture(s) you want to print. (You may select up to 99 pictures.)
  - **Picture Info** to display picture(s) information.
  - **Unselect Picture** to unselect the picture(s) you have selected.

- **Set No. of Copies** to set the number of copies you want to print. (The maximum number of copies that you can select is 99 copies.)

4. When you have finished setting the print options, press **Save** (left softkey).
  - If you are setting the print options for standard prints, you will be prompted to choose whether to print the date. Select **Yes** or **No**. (Depending on your printer, some options may not be available.)

### Note

Pictures saved on your microSD card that were not taken with your phone may not be printable.

## Clearing a DPOF Print Order

You can clear a DPOF print order for standard prints and index prints at the same time.

1. With the microSD inserted, press **Menu > Tools > File Manager > microSD Options > DPOF Print**.
2. Select **Clear Order**.

## Reviewing an Order Summary

1. With the microSD inserted, press **Menu > Tools > File Manager > microSD Options > DPOF Print**.
2. Select **Order Summary**. (The selected print options will be displayed.)
  - Press **Switch** (right softkey) to switch the display between **Standard Print** and **Index Print**.

## Connecting Your Phone to Your Computer

---

Before using your phone's mass storage capabilities, you need to prepare your phone's data services to synchronize with your desktop or laptop computer. Once the phone is connected to the computer, you can transfer your data to or from the microSD card.

### Using Mass Storage

1. With the microSD inserted, press **Menu > Tools > Mass Storage**. (A warning will be displayed.)
2. Select **OK** (left softkey).

3. Connect your phone to your computer using the included USB cable. (Wait for the connection to be completed. When connected, the host computer will automatically detect your phone.)

#### *To remove the connection:*

- ▶ When you have finished transferring data, click the USB device icon on your computer's taskbar, and follow the onscreen instructions to safely unplug the USB cable. (The process may vary depending on your computer.)

## ***Important Connection Information***

- No driver installation is required for Windows 2000/ME/XP users. If you use Windows 98/98SE, you have to download and install the USB Mass Storage Driver from the Sprint Web site at [www.sprint.com](http://www.sprint.com).
- To avoid loss of data, DO NOT remove the USB cable, the microSD card, or the battery while files are being accessed or transferred.
- DO NOT use your computer to change or edit folder or file names on the microSD, and do not attempt to transfer large amounts of data from the computer to the microSD card. Doing so may cause the microSD card to fail.
- DO NOT turn off or restart your computer, or put it into standby mode, while using a mass storage device. Doing so will result in loss or damage of data.
- While you are connected to the computer, your phone's screen will display "Phone Off." You cannot make or receive calls.
- If you connect a mass storage device to a peripheral device, your device may not work properly.

### Camera

---

- ◆ *Taking Photos (page 104)*
- ◆ *Recording Videos (page 110)*
- ◆ *Storing Photos and Videos (page 113)*
- ◆ *Sending Sprint Picture Mail (page 115)*
- ◆ *Managing Sprint Picture Mail (page 117)*
- ◆ *Printing Photos Directly From Your Phone (page 119)*


*Your phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends. It's fun, and it's as easy to use as a traditional point-and-click camera: just take a picture, view it on your phone's display, and send it from your phone to up to 25 people.*

### Taking Photos

---




Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.

*To take a picture with the phone open:*


1. Press and hold  to activate camera mode. (Additional camera options are available through the camera mode **Options** menu. See "Camera Mode Options" on page 106 for more information.)

#### Tip

*To activate camera mode, you can also select Menu > Photos > Camera.*

2. Using the phone's main screen as a viewfinder, aim the camera lens at your subject.
3. Press **Capture** (left softkey), , , or the side camera key until the shutter sounds. (The picture will automatically be saved in your selected storage area.)
  - To return to camera mode to take another picture, press .

4. Press **Options** (right softkey) for more options:

- **Take New Picture** to return to camera mode to take another picture.
- **Send Media** to send your picture. (See page 115 for details.)
- **Print** to print the pictures. You can choose whether to pick up your prints at a retail store, use a PictBridge-enabled printer (see page 119), or use a Bluetooth-enabled printer (see page 127).
- **Post to Services** to access available services. Select **Update** to display the latest services.
- **Upload** to upload the picture to the Sprint Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)).
- **Review Media** to go to the In Phone folder or microSD folder to review your saved pictures.
- **Send via Bluetooth** to send the picture via Bluetooth.
- **Set as** to assign the picture. Select an option and press .
- **Delete** to delete the picture you just took.
- **Details/Edit** to edit or display details relating to your pictures.

*To take a picture with the phone closed:*

1. Press and hold the side camera key to activate camera mode.
2. Point the camera lens at your subject. (You can check the picture framing through the external display screen.)
3. Press the side camera key to take the picture. (The picture will automatically be saved in your selected storage area.)


## **Registering Your Sprint Picture Mail Account**

The first time you use any of the picture management options involving the Sprint Picture Mail Web site, you will be prompted to register your Sprint Picture Mail account and establish a password through your phone. This password will also allow you to sign in to the Sprint Picture Mail Web site at [www.sprint.com/picturemail](http://www.sprint.com/picturemail) to access and manage your uploaded pictures and albums.

1. Press **Menu > Photos > My Albums > Online Albums**. (You will be prompted to register your Sprint Picture Mail account.)

**Note**

If your Sprint service plan does not include Sprint Picture Mail, you will first be prompted to subscribe to the service for an additional monthly charge.

2. Enter a password for your Picture Mail account and press  **OK**. (You will be prompted to confirm your password.)
3. Please wait while the system creates your account.

**Tip**

Write down your Sprint Picture Mail password in a secure place.

Once you have received confirmation that your account has been successfully registered, you may upload and share pictures and access the Sprint Picture Mail Web site.

## Camera Mode Options

When the phone is open and in camera mode, press **Options** (right softkey) to display additional camera options:



- **Picture Mode** to select a picture mode from **Normal**, **Beach/Snow**, **Scenery**, **MirrorImage**, or **Night/Dark**.
- **Zoom** to zoom in on a subject. (See “Using the Zoom” on page 108 for details.)
- **Self-Timer** to activate the camera’s timer. (See “Setting the Self-Timer” on page 107 for details.)
- **Fun Tools** to select an option from the following:
  - **Multiple Shots** to take multiple shots. (See “Taking Multiple Shots” on page 107.)
  - **Fun Frames** to select your favorite fun picture frame to decorate your picture.
  - **ColorTone** to select a wide variety of color tones for the picture.

**Note**

**Fun Frames** is not available when the resolution setting is 1.3M. (See “Selecting Camera Settings” on page 109 for details.)

- **Image Controls** to select an option from *Brightness*, *White Balance*, *Sharpness*, or *Contrast*.
- **Camera Settings** to select your settings. (See “Selecting Camera Settings” on page 109 for details.)
- **Review Media** to go to the In Phone folder or microSD folder to review your saved pictures.
- **Camcorder Mode** to switch to video mode. (See “Recording Videos” on page 110 for details.)
- **Key Guidance** to indicate the key functions in camera mode.
- **User Settings** to select your favorite setting. (See “Camera Mode Options” on page 106.)

## Setting the Self-timer

1. From camera mode, press **Options** (right softkey) > **Self-Timer**.
2. Highlight the length of delay you want the timer to use (**10 Seconds** or **5 Seconds**) and press .
3. Press **Start** (left softkey) when you are ready to start the timer.  is displayed on the upper right portion of the main screen during the self-timer countdown.)

4. Get ready for the picture. (When the timer is down to three seconds, the self-timer icon will turn red and the phone will begin to beep.)


*To cancel the self-timer after it has started:*

- ▶ Press **Cancel** (right softkey).

### Note

While the self-timer is active, all keys are disabled except **BACK**, **END**, and **Cancel** (right softkey).


## Taking Multiple Shots





This feature allows you to take up to nine shots in a continuous sequence. When you take multiple shots, the  icon will be displayed in the viewfinder.

1. From camera mode, press **Options** (right softkey) > **Fun Tools** > **Multiple Shots**.

### Note

When taking multiple shots, the resolution is temporarily set to **Low-240x320**.

2. Select an available option (**3 Shots**, **6 Shots**, **9 Shots**, or **Off**) and press .



3. Select the duration of the interval between shots (**Normal** or **Fast**) and press .
4. Press **Capture** (left softkey), , , or the side camera key to take the pictures. (The Multiple Shots folder will display up to nine thumbnail pictures per screen.)
5. Press **Options** (right softkey) to display picture options, or press  to return to Camera mode to take another picture.

**Note**

*After taking multiple shots, the pictures are automatically saved in your selected storage area.*

## Using the Zoom














 





This feature allows you to zoom in on an object when you take a picture. Depending on your resolution settings, you can adjust the zoom from 1x to 12x.

1. From camera mode, press the navigation key right or left, or the volume key up or down to adjust the zoom. (The gauge bar is displayed.)
2. Press **Capture** (left softkey), , , or the side camera key to take the picture. (The picture will automatically be saved in your selected storage area.)

## Selecting Camera Settings

- From camera mode, press **Options** (right softkey) > **Camera Settings**.
- Select an option and press **MENU OK**:
  - **Resolution** to select a picture's file size (**1.3M-960x1280**, **Medium-480x640**, or **Low-240x320**).
  - **Quality** to select the picture quality setting (**Fine**, **Normal**, or **Economy**).
  - **ShutterSound** to select a shutter sound (**Default**, **Say "Cheese," "Ready,"** or **Off**).
  - **Status Bar** to switch the status bar display **On** or **Off**.
  - **Auto Save to** to select the storage area for the pictures (**In Phone**, **In microSD**, or **Switch w/Card**). (See "Setting Storage Options" on page 113.)
  - **Save Setting** to select the way to save pictures (**Auto** or **Manual**).




## Camera Icon Key


Function	Icon	Details
Storage Area	In Phone 	Appears when the storage destination is your phone.
	In microSD 	Appears when the storage destination is the microSD.
Picture Mode	Beach/Snow 	Use this setting in bright light.
	Scenery 	Use this setting for scenery at a distance.
	Mirror Image 	Use this setting to take a mirror image.
	Night/Dark 	Use this setting in low light.
White Balance	Sunny 	Use this setting for sunny weather.
	Cloudy 	Use this setting for cloudy weather.
	Tungsten 	Use this setting for incandescent lighting.
	Fluorescent 	Use this setting for fluorescent lighting.
	Manual 	To set the white balance manually.
Brightness	Manual 	To set brightness manually.
Sharpness	Manual 	To set sharpness manually.
Contrast	Manual 	To set contrast manually.
Resolution	1.3M 	For 1.3-megapixel picture resolution.
	Medium 	For medium picture resolution.
	Low 	For low picture resolution.
Self-Timer		Numeric countdown will appear when the self-timer has been activated.
Multiple Shots		Use this setting for multiple shots.

## Recording Videos

---

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your phone's built-in video camera.

1. Press **Menu > Photos > Camcorder** to activate video mode. (Additional video options are available through the video mode **Options** menu. See "Video Mode Options" on page 111 for more information.)
2. Using the phone's main screen as a viewfinder, aim the camera lens at your subject.
3. Press **Record** (left softkey), , , or the side camera key to begin recording.
4. Press , **Stop** (right softkey), or the side camera key to stop recording. (The video will automatically be saved in your designated storage area.)
5. Press **Options** (right softkey) for more options:
  - **Take New Video** to return to video mode to take another video.
  - **Play** to play the video you just took.

- **Send Media** to send your video. (See page 115 for details.)
- **Post to Services** to access available services. Select **Update** to display the latest services.
- **Upload** to upload the video you just took to the Sprint Picture Mail Web site.
- **Review Media** to go to the In Phone folder or microSD folder to review your saved videos.
- **Send via Bluetooth** to send the video via Bluetooth.
- **Set as** to assign the video. Select an option and press .
- **Delete** to delete the video you just took.
- **Details/Edit** to edit or display details relating to your videos.

### *To take a video with the phone closed:*

1. Press the side camera key to activate the launch menu.
2. Select **Camcorder**.
3. Point the camera lens at your subject. (You can check the video framing through the outer screen.)

**Note**

When taking a video with the phone closed, the subject image appears in reverse on the external display. The captured image will not be saved in reverse.

4. Press the side camera key to start recording.
5. Press the side camera key again to stop recording.

## Video Mode Options


Several options are available from video mode.

Press **Options** (right softkey) to display additional options:

- **Video Mode** to select a video mode from *Normal*, *Beach/Snow*, *Scenery*, *Mirror Image*, or *Night/Dark*.
- **Zoom** to zoom in on an object. You can adjust the zoom from 1x to 12x.
- **Self-Timer** to activate the timer function. (See “Setting the Self-Timer” on page 107 for details.)
- **Color Tone** to select a wide variety of color tones for your video.
- **Image Controls** to select an option from *Brightness*, *White Balance*, or *Contrast*.

- **Video Settings** to select your settings. (See “Selecting Video Settings” on page 112 for details.)
- **Review Media** to go to the In Phone folder or microSD folder to review your saved videos.
- **Camera Mode** to switch to camera mode (if applicable).
- **Key Guidance** to indicate the key functions in video mode.
- **User Settings** to select your favorite setting. (See “Video Mode Options” on page 111.)



















## Selecting Video Settings

- From video mode, press **Options** (right softkey) > **Video Settings**.
- Select an option and press .
  - Resolution** to select a file size (**High-176x144** or **Medium-128x96**) for a video.
  - Quality/Length** to select video quality from **Normal-35sec.**, **Fine-25sec.**, or **120min.microSD**.
  - Silent Movie** to select **On** to record without sound. Select **Off** to deactivate this feature.
  - Cue Sound** to select a cue sound (**Default**, **"Action & Cut,"** **"Ready & Stop,"** or **Off**).
  - Fit to Screen** or **Actual Size** to switch the viewing size.
  - Skins** to select your favorite frame.
  - Auto Save to** to select the storage area for the videos. (See "Setting Storage Options" on page 113.)

### Note

Recording time varies depending on the Quality/Length setting.

## Video Icon Key

Function		Icon	Details
Storage Area	In Phone		Appears when the storage destination is your phone.
	In microSD		Appears when the storage destination is the microSD.
White Balance	Sunny		Use this setting for sunny weather.
	Cloudy		Use this setting for cloudy weather.
	Tungsten		Use this setting for incandescent lighting.
	Fluorescent		Use this setting for fluorescent lighting.
	Manual		To set the white balance manually.
Brightness	Manual		To set brightness manually.
Video Mode	Beach/Snow		Use this setting in bright light.
	Scenery		Use this setting for scenery at a distance.
	Mirror Image		Use this setting to take a mirror image.
	Night/Dark		Use this setting in low light.
Contrast	Manual		To set contrast manually.
Resolution	High		For high video resolution.
	Medium		For medium video resolution.
Silent Movie	On		Appears when the silent movie setting is on.
	Off		Appears when the silent movie setting is off.
Self-Timer			Numeric countdown will appear when the self-timer has been activated.

## Storing Photos and Videos

Your phone's picture and video storage area is called **My Albums**. There are three types of folders in My Albums:

- **In Phone** (see below)
- **In microSD** (see "microSD Picture and Video Folders" on this page)
- **Online Albums** (see page 117)

### Setting Storage Options

1. Press **Menu > Photos > Settings & Info > Auto Save to**.
2. Select **In Phone**, **In microSD**, or **Switch w/Card**.  
(**Switch w/Card** stores pictures to the In Phone folder if no microSD card is installed.)

### In Phone Folder

Your phone's internal storage area is called the **In Phone** folder. From the In Phone folder, you can view all the pictures and videos you have stored there, send items to the Sprint Picture Mail site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)), delete files, and access additional options.

To review your stored pictures and videos in the In Phone folder:

1. Press **Menu > Photos > My Albums > In Phone**.
2. Use your navigation key to view and scroll through the pictures and videos.

### microSD Picture and Video Folders


You can save pictures and videos directly to the microSD card using your phone's pictures and videos settings. A total maximum of 1000 pictures and videos can be stored and managed in each folder on the microSD.

To review your stored pictures and videos in the microSD:

1. Press **Menu > Photos > My Albums > In microSD**.
2. Use your navigation key to scroll through and view saved pictures and videos.

## In Phone Folder and microSD File Options

When you are viewing the In Phone folder or the microSD card folders, press **Options** (right softkey) to display the following options:

- **Play** to play your videos.
- **Send Media** to send your pictures and videos. (See page 115 for details.)
- **Upload** to upload pictures and videos from the In Phone folder or microSD to the Sprint Picture Mail Web site ([www.sprint.com/picturemail](http://www.sprint.com/picturemail)).
- **Print** to print the pictures. You can choose whether to pick up your prints at a retail store, use a PictBridge-enabled printer (see page 119), or use a Bluetooth-enabled printer (see page 127).
- **Post to Services** to access available services. Select **Update** to display the latest services.
- **Send via Bluetooth** to send the pictures and videos via Bluetooth.
- **Set as** to assign the picture or video. Select an option and press .
- **Delete** to delete pictures and videos.

### Note



Deleting data will free up memory space to enable you to take more pictures and videos. Once deleted, the data cannot be uploaded to your online Sprint Picture Mail account or saved to the microSD card or your phone.

- **Copy/Move to SD** to copy or move pictures and videos from your phone to your microSD card.
- **Copy/Move to Ph.** to copy or move pictures and videos from the microSD card to your phone.
- **Copy/Move** to copy or move pictures and videos from a microSD card folder to another microSD card folder or from an Online Albums folder to another Online Albums folder.
- **Details/Edit** to edit or display details relating to your pictures or videos.
- **Slideshow** to view your pictures in slideshow mode.
- **Media Filter** to filter only pictures, only videos, or to display all media files.
- **Album List** to display the album list.
- **Camera Mode** to activate camera mode.
- **Camcorder Mode** to activate video mode.

## Assigned Media Folder

When you assign a picture or video, it will automatically be saved in the **Assigned Media** folder. The folder allows you to store copies of pictures or videos on your phone and to assign pictures and videos to various phone tasks.

*To save a picture or video to the Assigned Media folder:*

1. From the In Phone folder (see “In Phone Folder” on page 113) or the In microSD folder (see “microSD Picture and Video Folders” on page 113), select a picture or video you wish to save to the Assigned Media folder and press .
2. Press **Options** (right softkey) > **Set as**.
3. Select an option and press . (A copy of the picture or video will automatically be saved to the **Assigned Media** folder.)


*To view pictures and videos stored in the Assigned Media folder:*

1. Press **Menu** > **Tools** > **Assigned Media**.  
(Thumbnails will be displayed, up to nine at a time.)
2. Use your navigation key to view and scroll.

## Sending Sprint Picture Mail


Once you have taken a picture or a video, you can use the messaging capabilities of your phone to instantly share it with family and friends. You can send pictures and videos to up to 25 people at a time using their email addresses or their phone numbers.

### Sending Photos and Videos From the In Phone Folder

1. Press **Menu** > **Photos** > **My Albums** > **In Phone**.
2. Select a picture or video to send and press .  
(The check box in the lower right corner will be marked. You can select multiple pictures and videos.)
3. Press **Options** (right softkey) > **Send Media**. (You will see a message.)


#### Note

*The first time you send Sprint Picture Mail, you will be prompted to register your Sprint Picture Mail account. (See “Registering Your Sprint Picture Mail Account” on page 105.)*

4. Follow step 2 of “Composing SMS Text Messages” on page 136.
5. If you wish to include a text message, scroll to **Text**, and then enter your message.
6. If you wish to include a voice message, scroll to **Audio** and press **Record** (right softkey) >  to record. (Maximum recording time is 10 seconds.)
7. To set the priority, scroll to **Priority**, and then select **High**, **Normal**, or **Low**.
8. Confirm the recipients, message, voice memo, and pictures or videos. (You may also select additional options by pressing the right softkey. Follow the onscreen instructions to add available options.)
9. Press **Send** (left softkey) to send the pictures and videos.

## ***Sending Photos and Videos From Messages***

You can also send Sprint Picture Mail from your phone's Messages menu.

1. Press **Menu** > **Messages** > **Picture Mail**.
2. Follow step 2 of “Composing SMS Text Messages” on page 136.
3. Select a picture or video from **In Phone**, **In microSD**, or **Online Albums** and press  > **Next** (left softkey). (You can also choose to take a new picture or a new video.)
4. To complete and send the message, follow steps 5–9 in “Sending Photos and Videos From the In Phone Folder” on this page.

## Managing Sprint Picture Mail

### Using the Sprint Picture Mail Web Site

Once you have uploaded pictures or videos to your online Sprint Picture Mail account at [www.sprint.com/picturemail](http://www.sprint.com/picturemail) (see “In Phone Folder and microSD File Options” on page 114), you can use your computer to manage your pictures. From the Sprint Picture Mail Web site, you can share pictures and videos, edit album titles, add captions, and organize images. You can even send your pictures to be printed at participating retail locations.

You will also have access to picture management tools to improve and customize your pictures. You'll be able to lighten, darken, crop, add antique effects, add comic bubbles and cartoon effects, and use other features to transform your pictures.


*To access the Sprint Picture Mail Web site:*

1. From your computer's Internet connection, go to [www.sprint.com/picturemail](http://www.sprint.com/picturemail).
2. Enter your phone number and Sprint Picture Mail password to register. (See “Registering Your Sprint Picture Mail Account” on page 105.)

## Managing Online Photos and Videos From Your Phone

Use your phone to manage, edit, or share pictures and videos you have uploaded to the Sprint Picture Mail Web site at [www.sprint.com/picturemail](http://www.sprint.com/picturemail). (See “In Phone Folder and microSD File Options” on page 114 for information about uploading.)

*To view your online pictures and videos from your phone:*

1. Press **Menu** > **Photos** > **My Albums** > **Online Albums**. (Depending on your settings you may be prompted to accept a Sprint Power Vision connection.) (The **Uploads** folder and your albums are displayed.)
2. Select **Uploads** or an available album title and press  to display. (Thumbnail pictures, up to nine per screen, are displayed.)

#### Tip

*To expand a selected picture from thumbnail to full-screen, press **Expand** (left softkey).*


3. Select a picture or video and press **Options** (right softkey) to display your online picture or video options.

## Uploading Photos and Videos


1. Press **Menu** > **Photos** > **My Albums** > **In Phone**.
2. Check the picture(s) and video(s) you wish to upload and press **Options** (right softkey) > **Upload**.
3. Select **This, Selected**, or **All**.
4. Select **"Uploads" Area** or **Other Albums**.

## Downloading Your Online Photos and Videos

From your online Sprint Picture Mail albums display at [www.sprint.com/picturemail](http://www.sprint.com/picturemail), you can select pictures and videos to download to your phone's In Phone folder or microSD card.



1. From the online pictures display, select the pictures and videos you wish to download and press **Options** (right softkey). (See "Managing Online Photos and Videos From Your Phone" on page 117.)
2. Select **Save to..** > **In Phone** or **In microSD** > .

## Accessing Online Picture and Video Options From Your Phone

1. Select a picture or video from your Online Albums. (See "Managing Online Photos and Videos From Your Phone" on page 117.)
2. Press **Options** (right softkey) to display options.
3. Select an option and press .
  - **Play** to play the video.
  - **Send Media** to send your picture or video.
  - **Order Prints** to order prints of the pictures. You can pick up your prints at a retail store.
  - **Post to Services** to access available services. Select **Update** to display the latest services.
  - **Set as** to assign the picture or video.
  - **Save to..** to select **In Phone** or **In microSD** to download the pictures and videos to the selected storage area.
  - **Delete** to delete pictures and videos saved in the current album (or Uploads folder).
  - **Copy/Move** to copy or move pictures and videos to a selected album.

- **Details/Edit** to edit or display details relating to your pictures or videos.
- **Media Filter** to filter only pictures, only videos, or to display all media files.
- **Album List** to display the album list.

*To access your online Albums options from your phone:*

1. Display the album list in the online Sprint Picture Mail menu. (See “Managing Online Photos and Videos From Your Phone” on page 117.)
2. Select an album (or Uploads folder).
3. Press **Options** (right softkey) to display options.
4. Select an option and press .
  - **Edit/Delete** to select an option from the following:
    - **Delete Album** to delete the selected album.
    - **Rename Album** to rename the selected album.
    - **Album Info** to display detailed information about the album.
  - **Create New Album** to create a new album. Enter a new album name and press  > **Save** (left softkey).

**Note** *The Uploads folder cannot be deleted or renamed.*

## Printing Photos Directly From Your Phone

Your phone is PictBridge compatible, allowing you to print directly from your phone without connecting to a computer. Simply connect your phone to a PictBridge-enabled printer and enjoy printing your photos.

**Note** *Make sure your battery is fully charged before using the PictBridge.*

*While using the PictBridge, the battery cannot be charged.*

*To print pictures directly from your phone:*

1. Press **Menu** > **Photos** > **PictBridge**.
2. Connect your phone to the PictBridge-enabled printer using the included USB cable. (Wait until the connection is completed.)
3. Set the printer settings using your navigation key.
  - **Picture to Print:** You can select the picture from the In Phone folder or the microSD. (You can select up to 99 pictures; however you can only select from one folder.)

**Note**

*You may not be able to print pictures that you cannot display on your phone.*

**Note**

*While you are connected to the printer, your phone's screen will display "Phone Off." You cannot make or receive calls during this time.*

- **Layout:** You can select the print mode from *Default Printer*, *Standard Print*, *Index Print*, or *DPOF Print*. (If you have selected *DPOF Print*, press **Yes** [left softkey] to print. To set up the DPOF Print, see "Setting Up the Digital Print Order Format" on page 101.)
  - **Num. of Copies:** You can set the number of copies (1-10). (You cannot specify number of copies when Index Print is selected.)
  - **Print Size:** You can set the print size from Default Printer, 4x6, 5x7, 8x10, or Letter. (Print sizes may vary according to the type of printer you have.)
  - **Date Stamp:** You can imprint the date on your pictures. Select **Yes** or **No**. (Date stamping may not be available depending on the type of printer you have.)
4. When you have finished selecting the printer settings, select **Print**.

5. When printing is finished, press **END**.

6. Press **Yes** (left softkey). Follow the instructions on the display to unplug the USB cable from the phone.

**PictBridge  
Error  
Messages**

*From time to time you may encounter printing problems. Any printer error messages will be displayed on your phone, informing you of the specific problems encountered. Please refer to the user's guide that came with your printer for descriptions, explanations, and possible resolutions for any error messages.*

# Bluetooth

- ◆ *Turning Bluetooth On and Off (page 121)*
- ◆ *Using the Bluetooth Menu (page 122)*
- ◆ *Using the Bluetooth Settings Menu (page 124)*
- ◆ *Bluetooth Profiles (page 124)*
- ◆ *Pairing Bluetooth Devices (page 126)*
- ◆ *Using the Trusted Devices Options (page 126)*
- ◆ *Printing Data via Bluetooth (page 127)*
- ◆ *Sending Data via Bluetooth (page 128)*

*Your phone features built-in Bluetooth technology, allowing you to share information more easily than ever before.*

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 30 feet.

## Turning Bluetooth On and Off

By default, your device's Bluetooth feature is turned off. Turning Bluetooth on makes your phone "discoverable" by other in-range Bluetooth devices. To make your phone visible to other devices you must also set your phone's visibility to other than Hidden. (See page 124.)

*To turn Bluetooth on:*

1. Press *Menu* > *Settings* > *Bluetooth* > *On/Off*.
2. Select *On* and press  to enable Bluetooth.

*To turn Bluetooth off:*

1. Press *Menu* > *Settings* > *Bluetooth* > *On/Off*.
2. Select *Off* and press  to disable Bluetooth.

## Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



– Bluetooth feature is active. (The icon will dim when the phone is connected with another Bluetooth device.)



– Your phone is discoverable by another Bluetooth device.



– Your phone is communicating with a Bluetooth device.



– Your phone is connected to or communicating with a Bluetooth device via Hands-free Profile (HFP).



– Your phone is connected to or communicating with a Bluetooth device via Advanced Audio Distribution Profile (A2DP).



– Your phone is connected to or communicating with a Bluetooth device via both Hands-free Profile (HFP) and Advanced Audio Distribution Profile (A2DP).

## Using the Bluetooth Menu

---

The **Bluetooth** menu allows you to access your phone's Bluetooth functions.

*To access the Bluetooth menu:*

- ▶ Press **Menu > Tools > Bluetooth** to select from the following options.
  - **Handsfree Pairing** to find a Bluetooth headset or hands-free device and add it to your Trusted List.
  - **Send Contact** to send a Contacts entry saved on your phone to another Bluetooth device.
  - **Print Picture** to print pictures stored in your phone using a Bluetooth-enabled printer.
  - **Add to Trusted** to add a Bluetooth device to your Trusted List. (You can specify the type of device to search for.)
  - **Trusted List** to display a list of trusted Bluetooth devices. Select <Add New> to find another Bluetooth device.
  - **Send BizCard** to send your business card to another Bluetooth device.

## Find Me

If you are going to use a Bluetooth profile to pair with a Bluetooth device, you will need to allow the other device to initiate pairing with your phone.

1. Press **Menu** > **Tools** > **Bluetooth** > **Find Me** (left softkey).
2. Follow the onscreen prompts to enter your PIN and press .

## Block List

You can prevent other Bluetooth devices from connecting with your phone.

*To add a device to the Block List:*

1. Press **Menu** > **Tools** > **Bluetooth** > **More...** > **Block List**.
2. Select <**Add New**>.
3. Select **Search** or **View Trusted**.
  - **Search** to search for devices to be added to the Block List.
  - **View Trusted** to remove a device from the Trusted List and add it to the Block List.

4. Highlight a device you want to add to the Block List and press **Block** (left softkey).

## Block List Options

From the Block List, press **Options** (right softkey) to display the following options.

- **Device Info** to display the device's information.
- **Unblock** to remove the device from the Block List.
- **Edit Name** to edit the name of the device.
- **Sort by** to sort the devices.
- **Help** to display the Block List help.

## Using the Bluetooth Settings Menu

---

The **Bluetooth Settings** menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Entering or changing the name your phone uses for Bluetooth communication.
- Setting your phone's visibility (or "discoverability") for other Bluetooth devices.
- Displaying your phone's Bluetooth address.

*To access the Bluetooth Settings menu:*

1. Press **Menu > Settings > Bluetooth**.
2. Set your Bluetooth options.
  - Select **On/Off** to enable or disable Bluetooth.
  - Select **Visibility > Always Visible, Visible for 3 min., or Hidden** to set your Bluetooth visibility.
  - Select **Device Name** to set a Bluetooth name for your phone.
  - Select **Device Info** to display your phone's Bluetooth name, address, class, and available services.

- Select **Trusted List** to display a list of trusted Bluetooth devices.
- Select **Voice Priority** to choose the default device you want to use for incoming and outgoing calls.
- Select **Exchange Folder > In Phone, In microSD, or Switch w/Card** to set the storage area for files received from other Bluetooth devices.

## Bluetooth Profiles

---

All of the Bluetooth settings you configure are stored in your phone's Bluetooth user profile. You can use different profiles for specific Bluetooth functions.

- **HSP: Headset Profile** – This profile functions as a wireless ear jack. When an incoming call is received, the ringer can be heard through the headset instead of through the phone. The call can then be received by pushing a button. While using the phone, you can use the headset instead of the phone by pushing a button on the headset, the same as inserting a jack into the phone. Increase or decrease the volume by using the volume key on the side of the phone.

- **HFP: Hands-Free Profile** – This profile functions as a wireless car kit. Incoming calls ring to the hands-free headset or device. Calls can be received by pressing a button on the headset or device. For dialing, four functions are supported: recent call dial, voice dial, speed dial, and number dial. Increase or decrease the volume by using the volume key on the side of the handset.
- **DUN: Dial-Up Network Profile** – This profile functions as a wireless data cable, connecting a computer or PDA to a network through your phone.
- **OPP: Object Push Profile** – This profile uses the Generic Object Exchange profile services to send data objects between devices and can be used to exchange objects like music files, pictures, calendar (vCal) and business cards (vCard).
- **FTP: File Transfer Profile** – This profile allows you to transfer files to or from other Bluetooth-enabled devices.
- **BPP: Basic Printing Profile** – This profile enables simpler printing from your phone to a Bluetooth-enabled printer.
- **A2DP: Advanced Audio Distribution Profile** – This profile allows you to transmit high quality stereo music from your phone to other compatible accessories including Bluetooth stereo headsets.
- **AVRCP: Audio/Video Remote Control Profile** – This profile enables your phone to remotely control compatible accessories including Bluetooth stereo headsets. You can play, pause, stop, forward, reverse, fast forward, or rewind from a headset. (Playback functions may vary among Bluetooth accessories.)
- **PBAP: Phone Book Access Profile** – This profile enables exchange of Contacts information between devices. It is typically used between a car kit and a mobile phone to allow the car kit to display the name of the incoming caller.




## Pairing Bluetooth Devices

---

### Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When devices are paired, a passkey is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

*To pair your phone with another Bluetooth device:*

1. Press **Menu > Tools > Bluetooth > Add to Trusted**.
2. Select a device type to search for and press . Your phone will display a list of any discovered devices of the type you specified. Select a device and press .
3. Enter the PIN and press . (When the owner of the other device enters the same PIN, the pairing is complete.)

#### Note

*Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.*

## Using the Trusted Devices Options

---


Once you have created paired devices, several options are available from the trusted devices list.


1. From the trusted devices list, select a device.
2. Press **Options** (right softkey) to display the following options:
  - **Connect** or **Disconnect** to connect to or disconnect from the Bluetooth device (if applicable).
  - **Send Item** to send an item saved on your phone to another Bluetooth device (if applicable).
  - **Browse** to browse and transfer files between Bluetooth devices using FTP.
  - **Print** to print the data using Basic Printing Profile or Object Push Profile (if applicable).
  - **Edit Name** to edit the name of the trusted device.
  - **Auto-Accept** to configure your phone's accessibility to other Bluetooth devices.
  - **Device Info** to display the trusted device's information.

- **Sort by** to sort the trusted devices.
- **Delete** to delete the selected device from the list.
- **Delete All** to delete all devices from the list.
- **Settings** to display the Bluetooth settings menu. (See page 124.)
- **Help** to display the assisting information.

## Printing Data via Bluetooth

You can print out your pictures, Contacts entries, business cards, calendar events, and messages stored on the phone. (Some Bluetooth-enabled printers may not support this feature.)

1. Press **Menu** > **Tools** > **Bluetooth** > **Trusted List**.
2. Select the device from the trusted devices list and then press **Options** (right softkey) > **Print**.
3. Select a category (**Picture**, **Business Card**, **Contacts**, **Calendar Event**, or **Message**) and press .
4. Follow the onscreen instructions to select the item(s) to print.

5. Select **Handset Default**, **Create Print Job**, or **Printer Default**.
  - **Handset Default** to print items by creating a print job via the Basic Printing Profile.
  - **Create Print Job** to print items by creating a print job via the Basic Printing Profile.
  - **Printer Default** to print items using the default printer settings via the Object Push Profile.
6. Make sure the printer is ready to print data, and then press **Print** (left softkey).
7. If necessary, enter the PIN and press .



### Note

Before using the Bluetooth feature, make sure your phone's battery is fully charged.

## ***Sending Data via Bluetooth***

---

You can send data saved on your phone to another Bluetooth device.

1. Press *Menu* > *Tools* > *Bluetooth* > *Trusted List*.
2. Select the device from the trusted devices list and then press *Options* (right softkey) > *Send Item*.
3. Select an item (*Business Card*, *Contacts*, *Calendar Event*, *From File Manager*, or *To File Manager*) and press .
4. Follow the onscreen instructions to select the item(s) to send.
5. Make sure the other device is ready to receive data, and then press *Send* (left softkey).
6. If necessary, enter the PIN and press .

*Section 3*

## ***Sprint® Service***



# Sprint Service Features: The Basics

---

- ◆ *Using Voicemail (page 130)*
- ◆ *Using SMS Text Messaging (page 136)*
- ◆ *Using SMS Voice Messaging (page 137)*
- ◆ *Using Caller ID (page 138)*
- ◆ *Responding to Call Waiting (page 139)*
- ◆ *Making a Three-Way Call (page 139)*
- ◆ *Using Call Forwarding (page 140)*

*Now that you've explored your phone's fundamentals, it's time to learn about the calling features that enhance your Sprint service.* This section outlines your basic Sprint service features.

## Using Voicemail

---

### Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint Voicemail and personal greeting as soon as your phone is activated.


1. Press and hold **[1☎]**.
2. Follow the system prompts to:
  - Create your passcode.
  - Record your name announcement.
  - Record your greeting.
  - Choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding **[1☎]**, bypassing the need for you to enter your passcode).

**Note****Voicemail Passcode**

*If you are concerned about unauthorized access to your voicemail account, Sprint recommends that you enable your voicemail passcode (do not activate One-Touch Message Access).*

## Voicemail Notification

There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringtype.
- By the LED blinking.
- By displaying  at the top of your screen.

## New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

*To call your voicemail:*

- ▶ Press and hold .

*To display your Missed Log:*

- ▶ Press **Menu > Messages > Voicemail > Details.**

**Note**

*When you are roaming off the Sprint National Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, press (\*) and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the Sprint National Network.*

---

*Your phone accepts messages even when it is turned off. However, you are notified of new messages only when your phone is turned on and you are in a Sprint service area.*

## Retrieving Your Voicemail Messages

You can review your messages directly from your wireless phone or from any other touch-tone phone. To dial from your wireless phone, either speed dial your voicemail or use the menu keys.

## Using One-Touch Message Access

- ▶ Press and hold .  
(Your phone will dial your voicemail box.)

## Using the Menu Keys on Your Phone to Access Your Messages

1. Press *Menu* > *Messages* > *Voicemail*.
2. Press  to listen to your messages.

### Note

*You are charged for airtime minutes when you are accessing your voicemail from your wireless phone.*

## Using Another Phone to Access Messages













1. Dial your wireless phone number.
2. When your voicemail answers, press the asterisk (\*) key.
3. Enter your passcode.

### Tip

*When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press 4 during the header.*

## Voicemail Key Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see “Voicemail Menu Key” on page 135.

 Date/Time	 Send Reply	 Advance
 Replay	 Rewind	 Forward
 Delete	 Return Call	 Save
 Cancel	 Help	 Skip

## Voicemail Options

Your phone offers several options for organizing and accessing your voicemail.

## Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

1. Press and hold **[1 ▼]** to access your voicemail. (If your voicemail box contains any new messages, press **[★ SHFT]** to access the main voicemail menu.)
2. Press **[3 DEF]** to change your Personal Options, following the system prompts.
3. Press **[3 DEF]** for Expert Mode.
4. Press **[1 ▼]** to turn Expert Mode on or off.

## Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 Sprint voicemail users.

1. Press and hold **[1 ▼]** to access your voicemail. (If your voicemail box contains any new messages, press **[★ SHFT]** to access the main voicemail menu.)
2. Press **[3 DEF]** to change your Personal Options, following the system prompts.
3. Press **[1 ▼]** for Settings.
4. Press **[5 JRL]** for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.

## Sprint Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press **[8 TUY]** after listening to a message. (Once the call is complete, you're returned to the voicemail main menu.)

## Voicemail-to-Voicemail Message

Record and send a voice message to other Sprint Voicemail users.

1. From the main voicemail menu, press **[2 ABC]** to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.

## Voicemail-to-Voicemail Message Reply

Reply to a voice message received from any other Sprint Voicemail user.

1. After listening to a voice message, press **[2 ABC]**.
2. Follow the voice prompts to record and send your reply.

## Vicemail-to-Vicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other Sprint Vicemail users.

1. After listening to a message, press **[6 WHO]**.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

## Vicemail-to-Vicemail Receipt Request

Receive confirmation that your voice message has been listened to when you send, forward messages to, or reply to messages from other Sprint users.

1. After you have recorded a message, press **[2 ABC]** to listen to the recorded message.
2. Press **[5 MFL]** for More Options.
3. Press **[3 DEF]** to mark receipt requested.
4. Press **[1 M]** to send your voicemail message.

## Extended Absence Greeting

When your phone is turned off or you are off the Sprint National Network for an extended period, your phone can play this greeting instead of your normal personal greeting.

1. From the main voicemail menu, press **[3 DEF]** for Personal Options.
2. Press **[2 ABC]** for Greetings.
3. Press **[3 DEF]** to record an Extended Absence Greeting.

## Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

1. Press **Menu > Messages > Voicemail > Reset Indicator**.
2. Press **Yes** (left softkey).

## VoiceMail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines the Sprint voicemail system menu structure.

### 1 Listen

1 Date and Time Information

2 Send a Reply Message

3 Advance a Few Seconds

4 Replay

5 Rewind a Few Seconds

6 Forward Message

7 Erase

8 Return This Call

9 Save

0 Options

\* Skip to the Next Message

2 Send a Message

3 Personal Options

1 Settings

1 Skip Passcode

2 Autoplay

3 Play Back Date, Time, and Caller Info.

4 Change Passcode

5 Group Distribution Lists

6 Numeric Paging

\* Return to Personal Options Menu

2 Greetings

1 Personal Greetings

2 Name Announcement

3 Extended Absence Greeting

\* Return to Personal Options Menu

3 Expert Mode

8 Place a Call

\* Exit

## Using SMS Text Messaging


With SMS Text Messaging, you can send and receive instant text messages between your wireless phone and another messaging-ready phone. When you receive a new message, it will automatically display on your phone's screen.

In addition, SMS Text Messaging includes a variety of preset messages, such as "The meeting has been cancelled," that make composing messages fast and easy. Use your phone to customize your own preset messages (up to 50 characters).

### Composing SMS Text Messages

1. Press **Menu** > **Messages** > **Send Message** > **Text Message**.
2. Select the entry method you prefer:
  - **Go to Contacts** to select a recipient from your Contacts. (Qualifying Contacts entries must contain a wireless phone number or an email address.)
  - **Multiple** (left softkey) to select multiple recipients.

- **NewAddr.** (right softkey) to enter a recipient's wireless phone number or email address directly.

3. Press **Continue** (left softkey) when you have finished entering recipients. (You may include up to 25 recipients per message.)
4. Compose a message.
  - Press **TextMode** (right softkey) to change a text input mode.
5. Highlight **Options** >  to select additional options.
6. Review your message and press **Send** (left softkey).

#### Tip

You can also send an SMS Voice message when the left softkey displays the **Send Msg** option.

### Accessing SMS Text Messages

*To read an SMS Text message:*

- ▶ When you receive a text message, it will be displayed automatically on your phone's screen. Use your navigation key to scroll down and view the entire message.

**Tip**

If you have two or more notifications, the *Missed Alert* list will appear. Select a message in the list and press **View** (left softkey) to view the message.

### To reply to an SMS Text message:

1. While the message is open, press **Reply** (left softkey).  
– or –  
Highlight the message in the Inbox, and press **Options** (right softkey) > **ReplyWith** > **Text Message**.
2. Follow the steps 4-6 of “Composing SMS Text Messages” on the previous page.

### Using Preset Messages

Preset messages make sending text messages to your friends, family, and co-workers easier than ever.

1. Press **Menu** > **Settings** > **Messages** > **Preset Msgs**.
2. Highlight a message you wish to send and press **Options** (right softkey) > **SendText**.
3. Follow steps 2-6 in “Composing SMS Text Messages” on the previous page.

## Using SMS Voice Messaging

In addition to SMS Text Messaging, your phone is enabled with SMS Voice Messaging. With SMS Voice Messaging, you can send a voice message to other SMS-enabled phones or to working email addresses without making a phone call. Just record a message and send it directly to the recipient's phone messaging inbox.

### Playing an SMS Voice Message

1. Press **Menu** > **Messages** > **VoiceSMS**.
2. Select a message and press **OK** (right softkey) to play. (To display the message options, press **Options** [right softkey].)

### Composing SMS Voice Messages

1. Press **Menu** > **Messages** > **Send Message** > **VoiceSMS** and select the entry method you prefer:
  - **Go to Contacts** to select a recipient from your Contacts. (Qualifying Contacts entries must contain a wireless phone number or an email address.)
  - **Multiple** (left softkey) to select multiple recipients.

- **New Addr.** (right softkey) to enter a recipient's wireless phone number or email address directly.
- 2. Start recording after the beep. (You can record up to two minutes.)
- 3. To finish recording press **Done** (left softkey).
- 4. Press **Send** (left softkey) to send the voice message.

**Tip**

You can also send an SMS Voice message when the left softkey displays the **Send Msg** option.

## Accessing SMS Voice Messages

- ▶ When you receive a voice message, a pop-up notification will automatically be displayed on your phone's screen. Use your softkeys to access and play the voice message.

*To reply to an SMS Voice message:*

1. From the SMS Voice inbox, press **Reply** (left softkey).
2. Record your reply, and then press **Send** (left softkey).

## Using CallerID

---

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Press **\* SHIFT 6 MIN 7 PORS**.
2. Enter the number you want to call.
3. Press **TALK**.

To permanently block your number, call Sprint Customer Service.

## Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding one beep. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

*To respond to an incoming call while you're on a call:*

- ▶ Press **TALK**. (This puts the first caller on hold and answers the second call.)

*To switch back to the first caller:*

- ▶ Press **TALK** again.

### Tip

For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing **\*70** before placing your call. Call Waiting is automatically reactivated once you end the call.

## Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press **TALK**.
2. Once you have established the connection, press **TALK**. (This puts the first caller on hold.)
3. Select **Contacts**, **Recent History**, or **EnterPhone#**.
4. Select a number from your Contacts or Recent History, or enter it directly, and then press **TALK**.
5. When you're connected to the second party, press **TALK** or **Join** (right softkey) again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

## Using Call Forwarding

---

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

*To activate Call Forwarding:*

1. Press **\* SHFT 7 PQRS 2 ABC**.
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press **TALK**. (You will hear a tone to confirm the activation of Call Forwarding.)

*To deactivate Call Forwarding:*

1. Press **\* SHFT 7 PQRS 2 ABC 0 +NEXT**.
2. Press **TALK**. (You will hear a tone to confirm the deactivation.)

**Note**

*You are charged a higher rate for calls you have forwarded.*

## Sprint Power Vision

---

- ◆ *Sprint Power Vision Applications (page 141)*
- ◆ *Getting Started With Sprint Power Vision (page 142)*
- ◆ *Accessing Messaging (page 146)*
- ◆ *Downloading Content (page 149)*
- ◆ *Exploring the Web (page 151)*
- ◆ *Phone as Modem (page 154)*
- ◆ *Sprint Power Vision FAQs (page 156)*

*Sprint Power Vision offers easy and amazing data services you will really use.* These features – including messaging, games, downloadable ringers and screen savers, and portable Web access – let you have fun, stay in touch, and stay informed no matter where you go on the Sprint National Network.

## Sprint Power Vision Applications

---

Here is a brief list of the applications available through your phone. For more information, please visit us online at [www.sprint.com](http://www.sprint.com).

**Sprint Picture Mail** – Instantly shoot, share, and print sharp digital pictures, and take and send short video clips with your phone.

**Messaging** – Send and receive email messages and instant messages and participate in online chat discussions on your wireless phone.

**Games** – Play exciting games with full-color graphics, sound, and vibration. Choose from hundreds of games to play anytime.

**Ringers** – Personalize your phone by downloading and assigning different ringers to numbers in your Contacts.

**Screen Savers** – Download unique images to use as screen savers, or make it easy to tell who's calling by assigning specific images to numbers in your Contacts.

**Web** – Experience full-color graphic versions of popular Web sites from your phone.

**Phone as Modem** – Use your phone as a high-speed Internet connection for your laptop computer.

# Getting Started With Sprint Power Vision

---

With your Sprint service, you are ready to start enjoying the advantages of Sprint Power Vision. This section will help you learn the basics of using your Sprint Power Vision services, including managing your user name, launching a data connection, and navigating the Web with your phone.

## Your User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com." (For example, the third John Smith to sign up for Sprint Power Vision services might have [jsmith003@sprint.com](mailto:jsmith003@sprint.com) as his user name.)

When you use Sprint Power Vision services, your user name is submitted to identify you to the Sprint National Network. The user name is also useful as an address for Sprint Mail, as a way to personalize Web services, and as an online virtual identity.

Your user name will be automatically programmed into your phone. You don't have to enter it.

## Finding Your User Name

If you aren't sure what your user name is, you can easily find it online or on your phone.

- **At [www.sprint.com](http://www.sprint.com).** Sign on to your account using your phone number and password. To display your user name, click on the **My Personal Information** menu, then click on **Power Vision Username**.
- **On your phone.** You can find your user name under the **Phone Info** option in your phone's **Settings** menu (**Menu > Settings > Phone Info > Phone#/User ID**).

## Updating Your User Name

If you choose to change your user name and select a new one online, you must then update the user name on your phone.


- ▶ Press **Menu > Settings > More... > Data > Update Profile**. (To cancel, press **END** before completing the update.)

## Launching a Sprint Power Vision Connection

To launch a Sprint Power Vision connection:

- ▶ Press **Menu** > **Web**. (Your Sprint Power Vision connection will start and the Sprint Power Vision home page will be displayed.)

### The Sprint Power Vision Home Page

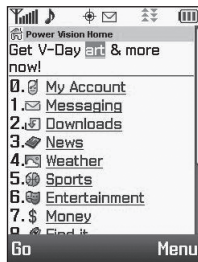

**Note** If Net Guard is enabled and displayed, press **OK** (left softkey) to continue and launch the Web.

While connecting, an animation may be displayed.

#### Tip

To change the default launch page to the last page you viewed, press **Menu** (right softkey) > **More...** > **Preferences** > **Launch Page** and select **Last Page**.

## Net Guard

When you first connect to the Web, the Net Guard will be displayed to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

To change your Net Guard settings:


- ▶ Press **Menu** > **Settings** > **More...** > **Data** > **Net Guard**.
  - Select **On** to activate the Net Guard.
  - Select **Off** to deactivate the Net Guard.


#### Note

When enabled, the Net Guard appears only once as long as you have not turned the phone off and on.

## Data Connection Status and Indicators

Your phone displays the current status of your Data connection through indicators at the top of the screen. The following symbols are used:

 Your phone is connected to the high-speed Sprint Mobile Broadband Network (EVDO). When the triangles are black, data is being transferred (for example, when you are opening a Web page); when the triangles are gray, you are connected to the network but data is not currently being transferred (for example, when you are viewing a Web page that is completely open).

 Your phone is on and is connected to the Sprint 1xRTT data network. When the arrows are white, data is being transferred (for example, when you are opening a Web page) and you cannot receive calls. When the arrows are gray, you are connected to the network but data is not currently being transferred (for example, when you are viewing a Web page that is completely open), and you can receive calls.

If no indicator is displayed, your phone does not have a current data connection. To launch a connection, see “Launching a Sprint Power Vision Connection” on page 143.

## Navigating the Web

Navigating through menus and Web sites during a Sprint PowerVision session is easy once you’ve learned a few basics. Here are some tips for getting around:

### Softkeys

During a Sprint PowerVision session, the bottom line of your phone’s display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkeys directly below the phone’s display screen.

#### Tip

*Depending on which Web sites you visit, the labels on the softkeys may change to indicate their function.*

### To use softkeys:

- ▶ Press a softkey. (If an additional pop-up menu is displayed when you press the softkey, select menu items using your keypad [if they're numbered], or by highlighting the option and pressing **MENU OK**.)

## Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

### To scroll line by line through Web sites:

- ▶ Press the navigation key up and down.

### To scroll page by page through Web sites:

- ▶ Press the volume buttons on the side of the phone.

## Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

### To select onscreen items:

- ▶ Use the navigation key to highlight an item, and then press the left softkey (or press **MENU OK**).

### Tip

You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK."

If the items on a page are numbered, you can use your keypad (number keys) to select an item.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

### To select links:

- ▶ Highlight the link and press the appropriate softkey.

## Going Back

### To go back one page:

- ▶ Press the **BACK** key on your phone.

### Note

The **BACK** key is also used for deleting text (like a **BACKSPACE** key) when you are entering text.

## Going Home

### To return to the home page from any other page:

- ▶ Press and hold **BACK**.  
– or –  
Press the Menu icon (right softkey) > **Home**.

## Accessing Messaging

---

You can send and receive email messages, instant messages, and text messages and participate in Web-based chat rooms right from your phone. Messaging allows you to stay connected 24 hours a day anywhere on the Sprint National Network.

### Message Types

There are many types of text messaging available on your phone. These include SMS Text Messaging, Sprint Instant Messaging, Email, and Chat.

(Sprint Voicemail provides voicemail-to-mailbox messaging. For information on using your phone's voicemail feature, see "Using Voicemail" on page 130.)

### Using Sprint Mail


Sprint Mail allows you to perform many of the typical email functions from your phone that you can from your personal computer. You can manage your Sprint Mail account from your phone or online at [www.sprint.com](http://www.sprint.com).

To access Sprint Mail from your phone:

1. Press **Menu > Web**.
2. From the Sprint Power Vision home page, select **Messaging > Email > PCS Mail**.
3. If you're a first-time user, your phone will prompt you to set up your Sprint Mail account by establishing a user name and password.
4. Select the folder you wish to view, such as **Inbox** or **Compose**.

### Sending Sprint Mail

1. From the **Sprint Mail** page (see above), select **Compose** (or **Reply** or **Reply All** if you're viewing a message).
2. Enter a recipient or recipients for your email:
  - Select **To** and press **MENU OK** to display your Sprint Mail address book. To add a recipient, select it and press **MENU OK**.
  - or –
  - Select the addressee box (under or adjacent to **To**) and enter an email address.

3. Repeat as necessary for **CCs** and **BCCs**.
4. Enter the **Subject** and your **Message**. (Select each field and press  to enter text.)
5. Press **Send** (left softkey) to send your Sprint Mail message.

For information and instructions about reading, replying to, and managing Sprint Mail (including setting up your address book), please visit [www.sprint.com](http://www.sprint.com).

## Accessing Additional Email Providers

With Sprint Power Vision, you can use popular email services such as AOL® Mail, AIM® Mail, MSN® Mail, Gmail, and Yahoo!® Mail to keep in touch, even while you're on the go.

1. From the Sprint Power Vision home page, select **Messaging > Email**.
2. Select an email provider, such as **AOL Mail**, **AIM Mail**, **MSN Hotmail**, **Gmail**, or **Yahoo! Email**.

3. Use your keypad to enter the required sign-in information for the selected provider, such as user name, email address, or password, and select **Sign In**. (Your mailbox for the selected provider will be displayed.)

### Note

*The information required to sign in will vary depending on the email provider you are accessing.*

4. Follow the onscreen instructions to read, reply to, compose, send, and manage your email account.

### Tip

*You can also access the Email and Instant Messaging options from the main menu. Press **Menu > Messages > Email** or **IM** and select an option.*

## Accessing Sprint Instant Messaging

Sprint PowerVision also provides you with access to popular instant messaging (IM) clients, including AOL® Instant Messenger™, MSN® Messenger, and Yahoo!® Messenger.

1. From the Sprint PowerVision home page, select **Messaging > IM**.
2. Select an IM provider, such as **AOL Instant Messenger**, **MSN Messenger**, or **Yahoo! Messenger**.
3. Use your keypad to enter the required sign-in information for the selected provider, such as user name or password, and select **Sign In**. (Your IM screen for the selected provider will be displayed.)

**Note** The information required to sign in will vary depending on the instant messaging provider you are accessing.

4. Follow the onscreen instructions to read, reply to, compose, send, and manage your IM account.

## Accessing Wireless Chatrooms

Sprint PowerVision gives you the ability to join wireless chatrooms from your phone.

1. From the Sprint PowerVision home page, select **Messaging > Chat & Dating**.
2. Select a chat provider and follow the onscreen instructions to sign up and begin chatting.

**Note** Chat & Dating options change frequently, so check back often to see what's new.

## Downloading Content

With Sprint PowerVision, you have access to a dynamic variety of Premium Services content, such as downloadable Games, Ringers, Screen Savers, and other applications. (Additional charges may apply.) The basic steps required to access and download Premium Services content are outlined below.

### Accessing the Download Menus

1. Press **Menu > Get Stuff**.
2. Select the item you wish to download from the corresponding category (**Games, Ringers, Screen Savers**, etc.).

*To access the download menus from the Web browser:*


1. From the Sprint PowerVision home page, select **Downloads**.
2. Select **Games, Ringers, Screen Savers, Applications, IM & Email**, or **Call Tones** to go to the corresponding download menu. (For more information on navigating the Web, see “Navigating the Web” on page 144.)

### Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Featured** displays a rotating selection of featured items.
- **Categories** allows you to narrow your search to a general category, such as Country or Pop/Rock for Ringers or For the Ladies for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search.

## Downloading an Item

Once you've selected an item you wish to download, highlight it and press , or press **OK** (left softkey). You will see a summary page for the item including its title, the vendor, the download details, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download, and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

### *To download a selected item:*

1. From the information page, select **Buy**. (The item will download automatically. When the **New Download** screen is displayed, the item has been successfully downloaded to your phone.)

**Note** *If you have not previously purchased an item, you will be prompted to create your purchasing profile.*

2. Once the item has been successfully downloaded and the completed screen appears, select an option to assign the ringer or screen saver, run the application, play the game, etc.

## Using My Content Manager

Whether you purchase your Premium Services content from your phone or from your online account management page at [www.sprint.com](http://www.sprint.com), all of your purchases are stored in **My Content Manager** and may be downloaded to your phone from there.

**My Content Manager** is a storage area on the Sprint National Network that allows you to store all your Premium Services downloadable files. The files remain in My Content Manager until their license terms have expired – even after you have downloaded the content to your phone. This provides you with a convenient place to access information about your downloaded files without having to store the information in your phone's memory.

### *To access My Content Manager:*

- ▶ From the Sprint Power Vision home page, select **Downloads > My Content Manager**. (A list of your purchased items will be displayed.)

To download purchased content from *My Content Manager*:

1. From the *My Content Manager* display (see the previous page), highlight the item you wish to download, and press **MENU OK**. (The information page for the selected item will be displayed.)
2. Select **Download** and press **MENU OK**. (The item will download automatically. When the *New Download* screen is displayed, the item has been successfully downloaded to your phone.)
3. Once the item has been successfully downloaded and the completed screen appears, select an option to assign the ringer or screen saver, run the application, play the game, etc.

#### Tip

You can also access *My Content Manager* through the phone's main menu. Press **Menu > My Stuff > [Games, Ringers, Screen Savers, Applications or IM & Email] > My Content Manager**. The browser will open and take you to the corresponding content.

For complete information and instructions on downloading *Games, Ringers, Screen Savers, Applications, IM & Email*, and *Call Tones*, visit the Digital Lounge at [www.sprint.com](http://www.sprint.com).

## Exploring the Web

With Web access on your phone, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores, breaking news, and weather, and shop on your phone anywhere on the Sprint National Network.

In addition to the features already covered in this section, the Sprint Power Vision home page offers access to these colorful, graphically rich Web categories, including *News, Weather, Entertainment, Sports, Money, Travel, Shopping*, and *Tools*, as well as useful management options including *My Account* and *Search*. Many sites are available under more than one menu – choose the one that's most convenient for you.

### Using the Browser Menu

Navigating the Web from your phone using the Sprint Power Vision home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 144.

Although the Sprint PowerVision home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific Web sites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional options to expand your use of the Web on your phone.


## Opening the Browser Menu


The browser menu may be opened anytime you have an active Sprint PowerVision session, from any page you are viewing.

*To open the browser menu:*

- ▶ Press the right softkey from any page during an active Sprint PowerVision session. (The browser menu will be displayed.)

Options available under the browser menu include:

- **Home.** Returns the browser to the Sprint PowerVision home page.
- **Forward.** Returns you to a previously viewed page (after having used the .

- **Mark this page.** Allows you to bookmark the current site.
- **View Bookmarks.** Allows you to access and manage your bookmarks.
- **Search.** Launches a Web search.
- **Send page.** Allows you to send a URL via SMS.
- **Go to URL....** Allows you to navigate directly to a Web site by entering its URL (Web site address).
- **History.** Keeps a list of links to your most recently visited sites. To navigate to a site, highlight it and press , and then select **Connect**.
- **Refresh this page.** Reloads the current Web page.
- **More....** Displays additional options:
  - **Show URL.** Displays the URL (Web site address) of the site you're currently viewing.
  - **Restart Browser.** Refreshes the current browser session.
  - **Error Log.** Lets you display the error log.
  - **About Browser.** Allows you to display information about your browser.
  - **Preferences.** Lets you configure and manage your browser settings.

## Creating a Bookmark

Bookmarks allow you to store the address of your favorite Web sites for easy access at a later time.

1. Go to the Web page you want to mark.
2. Press the right softkey to open the browser menu.
3. Select **Mark this page > Save** (left softkey) > **OK** (left softkey).

### Note

*Bookmarking a page does not store the page contents, just its address.*

*Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.*

## Accessing a Bookmark

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Select a bookmark and press **MENU OK** (or press the number corresponding to the bookmark you wish to access).

## Deleting a Bookmark

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Select a bookmark and press the right softkey.
4. Select **Delete**. (A confirmation will be displayed.)
5. Press **Yes** (right softkey) to remove the bookmark.

## Going to a Specific Web site

*To go to a particular Web site by entering a URL (Web site address):*

1. Press the right softkey to open the browser menu.
2. Select **Go to URL...**
3. Select the **Input Address** and press **MENU OK**.
4. Use your keypad to enter the URL of the Web site you wish to go to and press **MENU OK**.
5. Press **MENU OK** again to go to the Web site.

### Note

*Not all Web sites are viewable on your phone.*

## Reloading a Web Page

*To reload (refresh) a Web page:*

1. Press the right softkey to open the browser menu.
2. Select **Refresh this page**. (The browser will reload the current Web page.)

## Restarting the Web Browser

If the Web browser seems to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

1. Press the right softkey to open the browser menu.
2. Select **More...>Restart Browser**.

## Phone as Modem

---

Your phone's data capabilities enable you to use its high-speed data connection as a modem for your laptop computer. You'll be able to send and receive email, browse the Internet, and access your company's network anywhere on the Sprint National Network.

### Note

*To use this service, you are required to sign up on a Sprint Power Vision with Phone as Modem plan. Go to [www.sprint.com](http://www.sprint.com) or visit a Sprint Store for Phone as Modem plan details and more information.*

## Setting Up a Data Connection With Your Computer

In order to use your phone as a modem, you'll first need to load the Sprint PCS Connection Manager<sup>SM</sup> software on your computer. Then, use a compatible USB cable or built-in Bluetooth connection to connect your phone to your computer.

1. From your computer's traditional Internet connection, go to [www.sprint.com/downloads](http://www.sprint.com/downloads) and download the *Sprint PCS Connection Manager for Phone as Modem/USB Cables* software. (The software and drivers can be downloaded free of charge.)
2. Double-click the downloaded file and follow the onscreen instructions to install the Sprint PCS Connection Manager software and drivers to your computer.
3. Once the software has been fully installed, connect your phone to your computer using a USB cable or built-in Bluetooth connection. (Your computer will detect the connection and a status icon may appear in your system tray.)

4. Launch the Sprint PCS Connection Manager software, select a profile, and click **Connect**.
5. Once the connection is established, launch an Internet session, check your email, or do anything else you would do using a traditional data connection.
6. When you're ready to terminate the data connection, double-click the Sprint PCS Connection Manager icon in the system tray, and then click **Disconnect** to end the session.

### Note

*While your data connection is active, you will not be able to receive incoming calls; all incoming calls will be forwarded to your Sprint Voicemail. Placing an outgoing call during a data session terminates the data connection.*

*Sprint Vision services are available on the Sprint National Network. Sprint Power Vision services work anywhere on the Sprint National Network, but broadband-like download speeds are only available in areas covered by the Sprint Mobile Broadband Network.*

# Sprint Power Vision FAQs

---



## *How will I know when my phone is ready for Sprint Power Vision service?*

Your user name (for example, [bsmith01@sprint.com](mailto:bsmith01@sprint.com)) will be displayed when you access **Menu > Settings > Phone Info > My Account**.

## *How do I sign in for the first time?*

You are automatically signed in to access Sprint Power Vision services when you turn on your phone.



## *How do I know when my phone is connected to Sprint Power Vision services?*

Your phone automatically connects when Sprint Power Vision service is used or an incoming message arrives. Your phone will also display the  or  indicator.

## *Can I make calls and use Sprint Power Vision services at the same time?*

You cannot use voice and Sprint Power Vision services simultaneously. If you receive a call while Sprint Power Vision service is active, the call will be forwarded to voicemail. You can place an outgoing call anytime, but it will interrupt any in-progress Sprint Power Vision session.

## *When is my data connection active?*

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When active, the  or  indicator flashes on your phone's display screen.

## *When is my data connection dormant?*

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period of time, the connection will terminate.

***Can I sign out of data services?***

You can sign out without turning off your phone; however, you will not be able to browse the Web or use other Sprint Power Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to **Settings > More... > Data > Disable Data** in your phone's menu.

# Entertainment: Sprint TV and Sprint Music

- ◆ *SprintTV* (page 158)
- ◆ *The Sprint Music Store* (page 162)
- ◆ *Streaming Music* (page 165)

**SprintTV** gives you the ability to listen to audio clips and to view video clips right from your phone's display. Watch live TV and catch up on episodes of your favorite shows – anywhere on the Sprint National Network.

**Sprint Music** lets you preview, purchase, download, and listen to over a million songs right on your phone. You can even add songs from your own library to round out your on-the-go playlist.

## SprintTV

### Your SprintTV Channel Options

The SprintTV application offers a wide variety of accessible channels. Subscription options include comprehensive basic packages as well as a full menu of “a la carte” channels. Visit [www.sprint.com](http://www.sprint.com) for more information on channels and pricing.


Some of the available categories may include:

- Sprint Radio
- Sprint PowerView
- Primetime TV
- Music Videos
- Sprint TV Live
- Music & Radio
- Sports
- Entertainment
- Cartoons
- News & Weather
- Movies & Shorts
- Mobile Previews

#### Note


Available categories and content are subject to change.

## Playing a Video or Audio Clip

1. Press **Menu** > **Entertainment**.
2. Select **Music**, **TV**, or **Games** to display channel options.
3. Use your navigation key and press  to select a channel from the Sprint TV listings or to select an available category.

### Note

The first time you access a channel, you will be prompted to purchase access (unless the channel doesn't have a monthly fee). Select **Subscribe** to purchase access, or select **Preview** to view a preview of the selected channel.

4. If applicable, select a clip and press  to view the program. The clip will automatically load and begin playing.


### Tip

While you are playing a clip, you can press the navigation key up and down to surf to a different channel. A small pop-up screen will be displayed that tells you which channel you are watching as well as other channels that you have access to. Use the navigation key to scroll through the channels. Once you find a channel that you want to watch or listen to, scroll to it and press **OK** (or simply wait approximately three seconds), and the channel will begin loading.

## Playing Music Applications Using the External Control Keys

The external control keys can be used to play, pause, stop, forward, or rewind a music application.

### Key Operation While Playing Music Applications

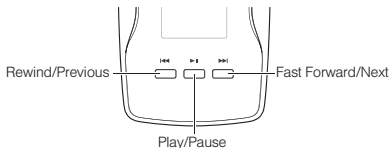

Key	Operation
▶	Plays or pauses a music application.
▶▶	Skips to the next music application. Fast forwards the current music application when held down.
◀◀	Returns to the previous music application. Rewinds the current music application when held down.

## Sprint TV FAQs

### 1. Will I know if I'm receiving an incoming call while I'm viewing or listening to a media clip?

No. All incoming calls will roll into voicemail while you are playing a clip. If the caller leaves a voicemail, the voicemail icon will be displayed on the screen.

### 2. How long are the clips? Will I know the estimated time it will take to play the clip prior to accessing it?

Once you have selected a channel, you will see a listing of the available clips, with each clip's length displayed after the clip's title. In general, a clip's duration will depend on the story or content being provided, and can be fairly short or as long as a few minutes.

### 3. Can I access a clip wherever I am, as long as I have my phone?

As long as you are on the Sprint National Network, you will have access to the audio and video clips.

#### Note

Sprint TV Service does not work while roaming off of the Sprint National Network or where service is unavailable.

4. *Are the videos that I'm viewing "live" videos?*

It depends on the content provider. Some of the channels available through Sprint TV stream live content.

5. *After purchasing access to an Available Channel for a monthly fee, do I receive any confirmation? That is, how do I know it has been purchased?*

The next time you access the channel, you bypass the **Preview/Purchase** page and go directly to the available content.

6. *If I don't subscribe to a Sprint Power Vision Plan, will I still be able to view the multimedia clips?*

Yes. For service access charges, please consult your Sprint service plan or visit [www.sprint.com](http://www.sprint.com).

7. *What does it mean when the video pauses and I see the word "loading" at the bottom of the screen?*

This happens when the phone is loading the data necessary to play the clip. It typically occurs when there is heavy traffic on the network.

8. *How can I cancel service if I decide I don't want it?*

To cancel your Sprint TV service, visit [www.sprint.com](http://www.sprint.com) and sign on to **My Sprint Wireless** with your account number and password. From this

page, you have the ability to cancel the service or any channels to which you subscribe.

9. *If I put on my stereo headset and insert it into the phone's headset jack, can I close the phone while I am playing an audio (or video) clip without interrupting the clip?*

Yes. When you insert your stereo headset into the phone's headset jack, the phone automatically goes into "headset mode," allowing you to close the phone and continue playing the clip. (Likewise, if your phone is in "headset mode," a phone call will not disconnect when you close the phone.)

10. *Can I surf to a different channel while I am playing a clip?*

Yes. While you are playing a clip, you can use the up and down navigation keys to surf to a different channel. A small pop-up screen will be displayed that tells you which channel you are watching as well as other channels that you have access to. Use the navigation keys to scroll through the different channels. Once you find a channel that you want to watch, scroll to it and press **MENU OK** (or simply wait approximately three seconds), and the channel will begin loading.

## The Sprint Music Store

---

The Sprint Music Store enables you to purchase and download digital music files to play on your phone or computer.

### Accessing the Sprint Music Store

You can access the Sprint Music Store right from your phone's main menu, anywhere on the Sprint National Network. When you enter the store for the first time, you will be prompted to set up your user identification and password.

1. Press **Menu > Get Stuff**.
2. Follow the onscreen instructions to establish your User ID and password.

#### Tip

Your User ID for the Sprint Music Store is your 10-digit wireless phone number. The password may be any 4-digit number.

3. After you have entered your password, highlight **Create New Account** and press **MENU OK**.
4. Use your keypad and navigation key to explore the store.

### Purchasing and Downloading Music

Now that you're in the store, you can shop for songs to purchase and download to your phone's microSD card.




1. From the Sprint Music Store opening page, select an option to browse the store:
  - **Featured Music** offers a revolving selection of highlighted songs and artists.
  - **Categories** allows you to choose from categories such as Top 10s, New This Week, What's Hot, Songs You Know, and specific musical genres.
  - **Search** gives you the option of searching for specific songs or artists. Just use your keypad to enter your search criteria in the available field.
2. Select a song and press **MENU OK**. (The song information screen will be displayed.)
3. Select an option and press **MENU OK**:
  - **Preview** to play an audio clip of the selected song.
  - **Buy Song** to purchase the song and download it to your phone's microSD card.

- When you select **Buy Song**, the file will download to your phone's microSD card. (If there is no microSD card installed or if there is not enough free memory space on the card, you will see an alert.)
- Once the song has been downloaded to your microSD card, you will see options allowing you to listen to the song, add it to a playlist, or continue shopping.

## Playing Music From the Sprint Music Store

The Sprint Music Store not only gives you access to great music, it also gives you a place to listen to and organize your music library.

### Accessing the Music Player

1. From the Sprint Music Store opening page, use your right navigation key to select the **Player** tab.
2. From the Player display, select an option:
  - **All My Music** to browse through all of your downloaded music, including music purchased from the Sprint Music Store and any additional songs you have loaded onto your microSD card from your computer.
  - **<playlist>** to select a customized playlist you've created to organize your music.
  - **Create Playlist...** to set up a custom playlist of songs you like to hear together. Follow the onscreen instructions to create a name for the playlist, select songs by artist, genre, and title, and create an order for the playlist.
3. Once you've displayed a list of songs, you can browse through your available titles by Song, Artist, or Genre to select a specific song.
  - To play a song, select it and press .
  - To listen to a playlist, select it and press  to open the playlist, and then press  again to begin playing from the selected song. (You can also highlight the playlist and use the softkey menu to begin listening.)

## Backing Up Your Downloaded Music Files

When you purchase and download a music file from the Sprint Music Store, you get two versions of the song: one to download and play on your phone (file type: AAC+), and another to download from <http://musicstore.sprint.com> and play on your computer (file type: WMA). The AAC+ files downloaded to your phone can only be played on your phone and on your account, and once they have been downloaded, they cannot be downloaded again without being repurchased.

Sprint recommends you back up your AAC+ music files to your computer so you can access the files in case your microSD card is lost or damaged, or if you install a new microSD card.

1. Connect your phone using the included USB cable (page 102) or Bluetooth (page 128).
2. Use your computer to navigate to the microSD card's **MUSIC** folder.
3. Select and copy the music files to a folder on your computer's hard drive.

### Note

Although you can store AAC+ files on your computer, they will only be playable on your phone and on your account.

If you copy the files to a new microSD card, you will need to create a folder on the card called "Get Staff" to be able to play the music files.

## Receiving an Incoming Call While Playing Music

An incoming call causes the currently played music file to be paused while the phone call is active. Once the current call is ended, you can select to resume any paused applications (music will resume playing automatically).

1. Answer an incoming call by pressing **TALK**.
2. When you are done with your call, press **END** to end the call. The previously paused application then resumes.

### Note

When placing an outgoing call, the Application Manager pauses your current music playback and allows you to proceed with your outgoing call. When the call is ended, the Application Manager restarts the music playback.

If the phone is running more than one simultaneous application (such as **MusicStore**, **Application** [from My Stuff], and **Games**), the user interface can begin to slow down and result in music or sound interruptions.

- To solve this type of issue, it is best to close down all other applications (**Menu > My Stuff > Options > My Content Manager**) before initiating a new application.

Also, in some situations, the camera or camcorder may have limited functionality or become unavailable. For example, if you were currently playing music (via the Music Store), or playing a game in the background, and then wanted take a photo, the phone may prompt you with a “CPU Low, Kill the Application” dialog. This indicates that the current phone resources are stretched and one of the current applications should be terminated before continuing. Refer to the procedure above to exit either a specific application or all current applications, and then launch the camera or camcorder again.

## Streaming Music

In addition to the Sprint Music Store, Sprint PowerVision offers a variety of musical options through the Music category in the Sprint TV menu, including SIRIUS Music, Music Choice, VH1, and many others. Choose from rock, pop, hip-hop, and R&B, and access exclusive video clips, music industry news, performances, and interviews with your favorite artists.

1. Press **Menu > Entertainment > Music or TV > [selection]**.
2. Select **Preview** to see and hear a preview of your selected channel (if available).  
– or –  
Select **Subscribe** to purchase a monthly subscription to your selected channel.

Once you have purchased access to a music or radio channel, you can select from a variety of stations to listen to your favorite music or get caught up on what's new in music.



*Section 4*  
***Safety and Warranty  
Information***



# Important Safety Information

---

- ◆ *General Precautions (page 168)*
- ◆ *Maintaining Safe Use of and Access to Your Phone (page 169)*
- ◆ *Using Your Phone With a Hearing Aid Device (page 170)*
- ◆ *Caring for the Battery (page 172)*
- ◆ *Radio Frequency (RF) Energy (page 173)*
- ◆ *Owner's Record (page 175)*
- ◆ *User Guide Proprietary Notice (page 175)*

*This phone guide contains important operational and safety information that will help you safely use your phone.* Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

## General Precautions

---

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

### Note

*For the best care of your phone, only Sprint-authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.*

## Maintaining Safe Use of and Access to Your Phone

### **Do Not Rely on Your Phone for Emergency Calls**

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

### **Using Your Phone While Driving**

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

#### **Tip**

*Purchase an optional hands-free accessory at your local Sprint Store, or call Sprint at 1-800-974-2221. You can also dial # 222 on your phone.*

### **Following Safety Guidelines**

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

### **Using Your Phone Near Other Electronic Devices**

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

#### **Note**

*Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.*

### **Turning Off Your Phone Before Flying**

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

### ***Turning Off Your Phone in Dangerous Areas***

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

#### **Note**

*Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.*

### ***Restricting Children's Access to Your Phone***

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint invoice.

## ***Using Your Phone With a Hearing Aid Device***

---

A number of Sprint phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your KATANA® Eclipse by SANYO has an M4 and a T4 rating.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying

out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.


Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "excellent use." This is synonymous for T ratings.

Sprint further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to

find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store within 30 days of purchase. With the Sprint 30-day Risk-Free Guarantee, you may return the phone within 30 days of purchase for a full refund. More information about hearing aid compatibility may be found at: [www.fcc.gov](http://www.fcc.gov), [www.fda.gov](http://www.fda.gov), and [www.accesswireless.org](http://www.accesswireless.org).

## Getting the Best Hearing Device Experience With Your Phone

*To further minimize interference:*

- Set the phone's display and keypad backlight settings to ensure the minimum time interval:
  1. Press **Menu > Settings > Display > Main Screen or Outer Screen > Backlight**.  
– or –  
Press **Menu > Settings > Display > Keypad Light**.
  2. Select the minimum time interval setting and press  **OK**.
- Position the phone so the internal antenna is farthest from your hearing aid.
- Move the phone around to find the point with least interference.

# Caring for the Battery

---

## Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Sprint is not aware of similar problems with Sprint phones resulting from the proper use of batteries and accessories approved by Sprint or the manufacturer of your phone. Use only Sprint-approved or manufacturer-approved batteries and accessories found at Sprint Stores or through your phone's manufacturer, or call 1-866-343-1114 to order. They're also available at [www.sprint.com](http://www.sprint.com) — click **Accessories**. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.

- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

## Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest Sprint authorized service center.

**Special Note:** Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

# Radio Frequency (RF) Energy

## *Understanding How Your Phone Operates*

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

## *Knowing Radio Frequency Safety*

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

## *Body-Worn Operation*

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint supplied or

approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least **0.945 inch (2.4 centimeters)** from your body when transmitting. Use of non-Sprint-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Web site at [www.fcc.gov](http://www.fcc.gov).

## Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations

in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the KATANA® Eclipse by SANYO® are:

**Cellular CDMA mode (Part 22):**

Head: 0.600 W/kg; Body-worn: 0.231 W/kg

**PCS mode (Part 24):**

Head: 0.912 W/kg; Body-worn: 0.283 W/kg

## FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: JOYSCP-6750.

More information on the phone's SAR can be found from the following FCC Web site: <http://www.fcc.gov/oet/ea/>.

## FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note**

*This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.*

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Owner's Record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: KATANA® Eclipse by SANYO®

Serial No.:

## User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797  
 5,506,865 5,544,196 5,657,420 5,101,501  
 5,267,261 5,414,796 5,504,773 5,535,239  
 5,600,754 5,778,338 5,228,054 5,337,338  
 5,710,784 5,056,109 5,568,483 5,659,569  
 5,490,165 5,511,073

T9 Text Input is licensed by Nuance Communications, Inc. and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

User Guide template version 7B (December 2007)

## Section 4B

# Manufacturer's Warranty

---

### ◆ Manufacturer's Warranty (page 177)

*Your phone has been designed to provide you with reliable, worry-free service.* If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at 1-888-211-4727.

#### Note

*In addition to the warranty provided by your phone's manufacturer, which is detailed on the following pages, Sprint offers a number of optional plans to cover your equipment for non-warranty claims. Sprint Total Equipment Protection provides the combined coverage of the Sprint Equipment Replacement Program and the Sprint Equipment Service and Repair Program, both of which are available separately. Each of these programs may be signed up for within 30 days of activating your phone. For more details, please visit your nearest Sprint Store or call Sprint at 1-800-584-3666.*

# Manufacturer's Warranty

## Manufacturer's Warranty

**KYOCERA SANYO Telecom, Inc.** ("KSTI") offers you, the original purchaser who has purchased the enclosed subscriber unit ("Product") only from an authorized dealer in the United States, a limited warranty that the Product, including accessories in the Product's package, will be free from defects in material or workmanship as follows:

**A. ONE (1) YEAR LIMITED WARRANTY:** For a period of one (1) year from the date of original purchase, KSTI will, at its option, either repair or replace a defective Product (with new or rebuilt parts/replacements).

**B. LIMITED WARRANTY ON REPAIRED/REPLACED PRODUCTS:** For a period equal to the remainder of the limited warranty period on the original Product or, on warranty repairs which have been effected on Products for 90 days after the date of its repair or replacement, whichever is longer, KSTI will repair or replace (with new or rebuilt parts/replacements) defective parts or Products used in the repair or replacement of the original Product under the Limited Warranty on it.

Proof that the Product is within the warranty period in the form of a bill of sale or warranty repair document that includes the date of purchase, Product serial number and the authorized dealer's name and address, must be presented to obtain warranty

service. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. Transfer or resale of a Product will automatically terminate warranty coverage with respect to it.

This limited warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks. Also this limited warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by KSTI for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SANYO brand mobile phone for which it is specified.

This limited warranty does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or Products used with software, accessories, goods or ancillary or peripheral equipment not supplied or expressly authorized by KSTI for use), abuse, accident, physical damage, abnormal use or operation, improper handling or storage, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature, (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, set up, removal or reinstallation; (viii) signal

reception problems (unless caused by defect in material or workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of KSTI and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as memory cards, fuses, etc.); or (xi) any Products which have been opened, repaired, modified or altered by anyone other than KSTI or a KSTI authorized service center.

This warranty is valid only in the United States.

***REPAIR OR REPLACEMENT, AS HEREIN ABOVE PROVIDED, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. KSTI SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF DATA, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT). THIS WARRANTY DOES NOT COVER PRODUCTS SOLD "AS IS" OR "WITH ALL FAULTS". KSTI MAKES NO OTHER EXPRESS WARRANTY WITH RESPECT TO THE PRODUCTS. THE DURATION OF IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS EXPRESS WARRANTY.***

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State.

To obtain warranty service, contact

KYOCERA SANYO Telecom, Inc

Attention : Customer Services for Wireless Products

Phone : 866-SANYOWC (866-726-9692)

Web : <http://www.sanyowireless.com>

*This product contains NetFront Browser of ACCESS CO., LTD. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries. This software is based in part on the work of the Independent JPEG Group.*

*Copyright © 2008 InnoPath Software. All rights reserved.*

*The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kyocera Corporation is under license. Other trademarks and trade names are those of their respective owners.*

*© 2008 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are the property of their respective owners. SANYO is a registered trademark of SANYO Electric Co., Ltd. and used under license.*

*KYOCERA SANYO Telecom, Inc. is a wholly-owned subsidiary of KYOCERA International Inc.*

# **Index**

## **A**

*Abbreviated Dialing* 27, 50  
*Airplane Mode* 47  
*Alarm Clock* 84  
*Answering Calls* 21  
*Automatic Speech Recognition (ASR)* 86

## **B**

*Backlight* 39  
*Battery*  
    *Capacity* 16  
    *Charging* 17  
    *Installing* 17  
*Bluetooth* 121 – 128  
*Bookmarks* 153  
*Browser Menu* 151

## **C**

*Calculator* 84  
*Calendar* 80  
*Call Forwarding* 140  
*Call Guard* 62  
*Call Waiting* 139  
*CallerID* 138  
*Camera* 104 – 120  
*Chat* 148  
*Clock Display* 41  
*Contacts* 69  
    *Adding a Phone Number* 73  
    *Creating an Entry* 69  
    *Dialing From* 28  
    *Editing an Entry* 73  
    *Entry Options* 72  
    *Finding Entries* 70  
    *Secret Entries* 76  
*Contrast* 40

## **D**

*Data Roam Guard* 63  
*Deleting Phone Content* 56  
*Dialing Options* 21  
*Display Language* 50  
*Display Screen* 11  
*Display Settings* 39

## **E**

*Entering Text* 29  
    *Alphabet Mode* 32  
    *Emoticons* 33  
    *Numbers* 33  
    *Preset Messages* 33  
    *Selecting Input Options* 29  
    *Symbols* 33  
    *T9 Text Input* 30

**H***Headset Options 51**History 64**Deleting 68**Making a Call From 66**Menu Options 66**Prepending a Phone Number  
67**Saving a Phone Number From  
67**Thread 65***I***Icon indication 65, 109, 112**Illumination 40**Instant Messaging 148***K***Key Functions 9**Keytones 37***L***Location 43**Lock Code**Changing 54**Locking Your Phone 54***M***Making Calls 20**Maps 34**Menu ii**Menu Style 40**Messaging Settings**Deleting Old Messages 44**Notification 44**Setting Reminders 44**Signature 45**microSD Card 94**Adapter 94**Creating Folders 99**Formatting 99**My Content Manager 150***N***Net Guard 143***P***Phone (Illus.) 8**Phone Number**Displaying 19**Finding 26**Saving 26**With Pauses 26**Phone Settings 35**Airplane Mode 47**Auto-Answer Mode 49**Call Answer Mode 49**Display Settings 39 – 42**Location Settings 43**Messaging Settings 43 – 46**Shortcut 49**Sound Settings 35 – 38**TTY Use 47 – 48**Preset Messages 33, 45, 137*

- R**
- Resetting* 57
  - Restricting Calls* 55
  - RingerTypes* 35
  - Roaming* 60
    - Setting Roam Mode* 61
- S**
- Saving a Phone Number* 26
  - Security* 53
  - Silence All* 38
  - Sleep Mode* 42
  - SMS Text Messaging* 136 – 137
  - SMS Voice Messaging*
    - 137 – 138
  - Special Numbers* 56
  - Speed Dialing* 29
    - Assigning Numbers* 74
  - Sprint Music Store* 162
  - Sprint Picture Mail*
    - Downloading Photos and videos* 118
    - Sending* 115 – 116
    - Uploading Photos and Videos* 118
    - Web Site* 117
  - Sprint Power Vision* 141
    - Applications* 141
    - Chat* 148
    - Downloading Content* 149
    - FAQs* 156
    - Home Page* 143
    - Launching* 143
    - My Content Manager* 150
    - Modem* 154
    - Navigating the Web* 144
    - Net Guard* 143
    - Password* 5
    - Security Features* 58
    - UserName* 142
  - Sprint Service*
    - Account Passwords* 4
    - Dialing Sprint Services* 77
    - Operator Services* 6
    - Setting Up* 2
    - Sprint 411* 6
  - Sprint TV* 158
  - Streaming Music* 165
- T**
- T9 Text Input* 30
  - Taking Photos* 104 – 109
  - Three-Way Call* 139
  - TTY Use* 47 – 48
  - Turning Your Phone On and Off* 15
- U**
- Unlocking Your Phone* 54

**V***Videos**Options* 111*Recording* 110*Settings* 112*Voice Memos* 89 – 91*Voice Services* 86 – 93*Voicemail**Menu Key* 135*Options* 132*Retrieving* 131*Setting Up* 4*While Roaming* 61*Volume* 37**W***Warranty* 177*Web* 151 – 154*Wireless Backup* 77*World Clock* 85

## NOTES

[illegible]