

CONTENT

1. Your Phone

1.1	For your safety	1
1.2	Unpacking	2
1.3	Phone layout	3
1.4	Icon description	5

2. Getting Start

2.1	Battery	6
2.2	SIM card	7
2.3	Power On / Off	8

3. SIM Card Services

3.1	PIN	9
3.2	PIN2	9
3.3	PUK	9
3.4	PUK2	9

4. Call Functions

4.1	Making calls	10
4.2	Answering a call	13
4.3	Emergency call	13
4.4	View all call logs	14

5. In-Call Functions

5.1	Mute / un-mute	17
5.2	Send DTMF	17
5.3	Write message	18
5.4	Save (Left soft key)	18
5.5	Hold / Unhold	18
5.6	Swap	18

6. Text Editing

6.1	English input mode	19
6.2	Symbol input mode	20
6.3	Numeric input mode	21
6.4	Stroke input mode	22
6.5	Pinyin input mode	24

7. Using the Menu

7.1	Call log (Menu 1)	
	Missed calls (Menu 1-1)	26
	Received calls (Menu 1-2)	30
	Dialed calls (Menu 1-3)	34
	Delete call log (Menu 1-4)	37
	Call duration (Menu 1-5)	40

7.2 Message (Menu 2)

Read message (Menu 2-1)	43
Write message (Menu 2-2)	46
Voice message (Menu 2-3)	47
Template (Menu 2-4)	47
Message setup (Menu 2-5)	48
Info message (Menu 2-6)	49
MMS (Menu 2-7)	50

7.3 Ring (Menu 3)

Ring tone (Menu 3-1)	53
Message tone (Menu 3-2)	53
Key tone (Menu 3-3)	53
Ring volume (Menu 3-4)	53
Alert type (Menu 3-5)	53
Key volume (Menu 3-6)	55
Folder open (Menu 3-7)	55
Folder close (Menu 3-8)	55

7.4 Setting (Menu 4)

Call setting (Menu 4-1)	56
Phone setting (Menu 4-2)	57
Display setting (Menu 4-3)	57
Security setting (Menu 4-4)	58
Default setting (Menu 4-5)	60
Clock setting (Menu 4-6)	61
Network setting (Menu 4-7)	61

7.5 Phonebook (Menu-5)

Search (Menu 5-1)	68
Add new (Menu 5-2)	71
Group edit (Menu 5-3)	72
Speed dial (Menu 5-4)	74
Delete all (Menu 5-5)	76
Check memory (Menu 5-6)	77
Set store memory (Memo 5-7)	77
Own number (Menu 5-8)	77

7.6 Organizer (Menu-6)

Scheduler (Menu 6-1)	78
Alarm (Menu 6-2)	80
Calculator (Menu 6-3)	81
Memo (Menu 6-4)	82
World time (Menu 6-5)	82

7.7 Game (Menu-7)

Adventure (Menu 7-1)	83
----------------------	----

7.8 WAP (Menu-8)

Homepage (Menu 8-1)	86
Bookmarks (Menu 8-2)	86
Go to URL (Menu 8-3)	87
Profiles (Menu 8-4)	88

CONTENT

7.9 Camera (Menu 9)	
Frame (Menu 9-1)	91
Image effect (Menu 9-2)	92
Image size (Menu 9-3)	92
Self photo (Menu 9-4)	93
Salt timer (Menu 9-5)	93
Flash (Menu 9-6)	94
Shutter sound (Menu 9-7)	94
Storage option (Menu 9-8)	95
Image folder (Menu 9-9)	96
Reference Information	97

FAVORITES

Basic Functions

Power On / Off	8
Making calls	10
Answering a call	13
Emergency call	13
View all call logs	14
Call duration	40
Ring tone	53
Ringing volume	53
Security setting	58

Phonebook

Search	68
Edit Phonebook	72
Speed dial	74
Set store memory	77

Message

Read message	43
Write message	46
Voice message	47
Delete all	45

Phone Setting

Display setting	57
Security setting	58
Clock setting	61
Network setting	61

Organizer

Scheduler	78
Alarm	80
Calculator	81
World time	82
Memo	82





YOUR PHONE

1. Your Phone

1.1 For your safety



Switch off in aircraft

Mobile phone can cause interference.
Using them on aircraft is both illegal and dangerous.

Road safety comes first

Do not use hand-held phone while driving ;
park vehicle first. Remember that some countries,
it is illegal to use hand-held phone while driving.



Use only in the normal position.

Don't touch the antenna unnecessarily.



Only qualified personnel may install
or repair phone equipment. (KEY IMAGE)



Use only approved accessories and batteries.
Do not connect incompatible products.



Your phone is not water-resistant.
Please keep it dry.

YOUR PHONE

1.2 Unpacking

Your package contains the following items:



Mobile Phone



 
Slim & Standard Battery



Desktop Charger



Handstrap

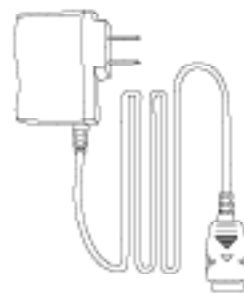

Travel Adapter

 
*: The appearance of the travel adapter varies depending on country.

YOUR PHONE

1.3 Phone Layout





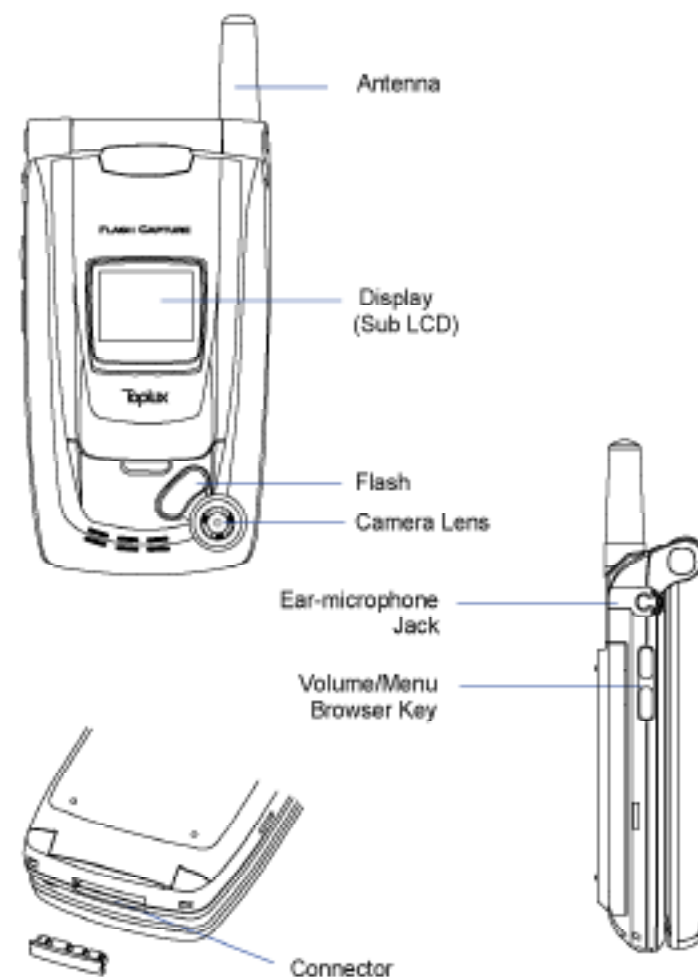




YOUR PHONE



YOUR PHONE

1.4 Icon description

-  Show the received signal strength. The greater the number of bars, the stronger the signal.
-  Appear when a call is in progress.
-  Appear when a new text message is received.
-  Appear when you set an alarm.
-  Appear when manner mode is active.
-  Appear when you connect internet.
-  Show the level of your battery.

GETTING START

2. Getting Started

 
2.1 Battery

How to insert the battery



1. Place the battery back to match the tabs on it to the holes at the bottom the phone.
2. Press the battery up towards the catch until it locks into place or you hear a "click" sound.

How to remove the battery

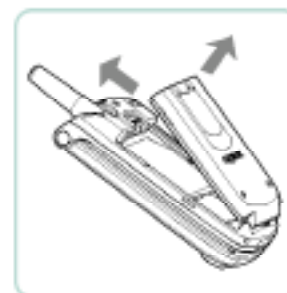

1. Press and hold down the catch above the battery on the back of the phone.
2. Lift up the battery.

GETTING START

2.2 SIM card

How to insert the SIM card



1. Remove the battery from the mobile phone.
2. Insert a SIM Card into the SIM Card holder, ensuring that the cut corner faces top right and the gold contacts of the card face into the phone.

How to remove the SIM card



1. Remove the battery from the mobile phone.
2. Push the SIM card up to the right.

GETTING START


2.3 Power On / Off

Power On

1. Open the folder
2. Hold down  [END] key until the phone switches on.



Power Off

1. When you wish to switch the phone off, hold down  [END] key until the power-off image is displayed.



SIM CARD SERVICES

3. SIM Card Services

In addition to the functions available in the phone, your SIM card is capable of providing additional services that you can access through Menu 0, SIM Services. Menu 0 will be shown only if your SIM card supports it. The items and contents of the menu depend entirely on the SIM card.

3.1 PIN (Personal Identification Number) - 4 to 8 digits

PIN code, supplied with your SIM card, is used to safeguard your Phone/SIM card against unauthorized use. If wrong PIN code is entered three times in a row, the phone will request for the PUK code.

3.2 PIN2 (Personal Identification Number 2) - 4 to 8 digits

PIN2 code, supplied with certain SIM cards, is used to access specific functions of your SIM card. For example, PIN2 code can be used to set Fixed Dialing Number. These functions are only available if supported by the SIM card. If wrong PIN2 code is entered three times in a row, the phone will request for the PUK2 code.

3.3 PUK (PIN Unblocking Key) - 8 digits

PUK code that may have been supplied with your SIM card is required to change a blocked PIN code. If wrong PUK code is entered ten times in a row, the SIM will be permanently blocked. Contact your service provider for a new card.

3.4 PUK2 (PIN Unblocking Key 2) - 8 digits

PUK2 code that may have been supplied with certain SIM cards is required to change a blocked PIN2 code. If wrong PUK2 code is entered ten times in a row, the SIM will be permanently blocked. Contact your service provider for a new card.

 
CALL FUNCTIONS

4. Call Functions

 
4.1 Making calls

Local call

1. When the idle screen is displayed, enter the desired phone number including the area code.

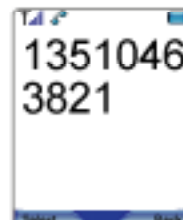



2. Press  [SEND] key.

Note: If you enter wrong number,
Press  [Clear] to remove it.




International call

1. Hold down  key until a "+" sign, the international prefix appears.
2. Enter the country code, the area code (without any leading zero), and the phone number.
3. Press  [SEND] key.


CALL FUNCTIONS

Ending a call

To finish a call, simply press  [END] key.

Last number redial

Numbers dialed and caller identified numbers received or missed are stored by the phone.

1. From the idle screen, press  [SEND] key. Once to access the list of last-dialed numbers.
2. Use the [up] and [down] keys to reach the desired number or name.



Accessing the voice mailbox

1. From the idle screen, press and hold [1] key.
2. Enter the Voice Mailbox number if the phone requests for it, then press [Ok]

Note: This number is provided by your service provider.

CALL FUNCTIONS

Speed dialing

Press and hold a numeric key (from [2] to [9]) that the entry number is assigned to form the speed dial list. By doing so, number assigned to the key will be automatically dialed.

Making a call using Phonebook

The phone stores numbers dialed and received. Frequently dialed numbers can be also stored with assigned names in the SIM card or the phone's memory, referred to as Phonebook. Then simply select the desired name to recall the associated number.

- Refer to the Phonebook section.

Entering a "Pause" in a dial string



A **pause** character can be entered into a dial string by pressing and holding down [★] key until a 'p' sign appears.

OPEN

OPEN
GARDEN & PLANT
P P P

CALL FUNCTIONS


4.2 Answering a call

1. Open the phone or press  [SEND] key.
2. Press  [END] key to finish the call.

Note: To reject an incoming call, press [END] key or close the phone. If the **Forward When Busy** function is activated, to your voice mailbox for example, rejecting an incoming call will simultaneously forward the call.


4.3 Emergency call

 
Emergency calls may not be available on all mobile phone networks or when certain network services and/or phone features are in use. Check with the local cellular service provider.

1. If the phone is not on. Turn it on.
2. Key in the emergency number for your region.
(Emergency numbers vary by location)
3. Press  [SEND] key.

CALL FUNCTIONS


4.4 View all call logs


In idle state, press  [SEND] key.

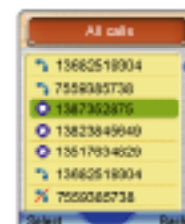


View

To view the entire call log :

 1. Select the number or name
(if have number or name),
and press  [Select]

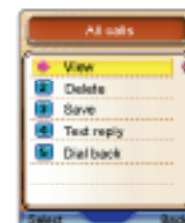





2. Select **View** from the following menu list
and press  [Select]

 
 


CALL FUNCTIONS

Delete


To remove an entry from the call log :


1. Select number or name
(if the call log has number or name),
and press  [Select]
2. Select **Delete** from the following menu list,
and press  [Select]
3. Press  [Ok] or  [Cancel] .

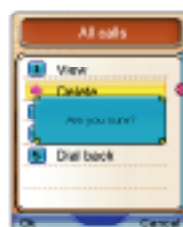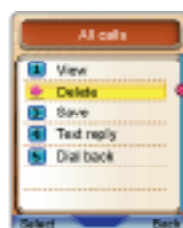


Save

1. To save an entry from the call log :

Select number or name
(if the call log has number or name),
and press  [Select]

 2. Select **Save** from the following menu list,
and press  [Select]

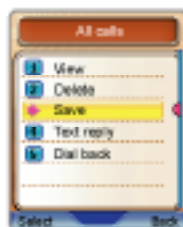

- Refer to the Phonebook Add new section (menu 5-2)

 
 


CALL FUNCTIONS

Text reply (Sending a message)



To send a reply message from the call log:

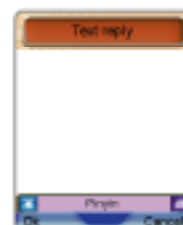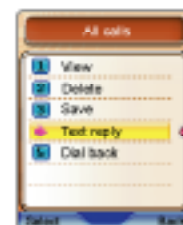1. Select number or name,
(if the call log has number or name)
and press  [Select]
 2. Select **Text reply** from the following
menu list, and press  [Ok]
- Refer to the Write message section
(menu 2-2)



Dial back

To dial a sent call from the call log :

1. Select number or name,
(if the call log has number or name)
and press  [Select]
2. Select **Dial back** from the following
menu list, and press  [Select]



IN-CALL FUNCTIONS

5. In-Call Functions

A number of control functions can be accessed during a call. To access these functions during a call, press the [Menu], [Save], [Hold], and [Swap] soft keys.

5.1 Mute / Un-mute (Menu-1 in call)

The function to set the phone's microphone [On] or [Off] to block the other party from hearing you can be accessed from this menu.

5.2 Send DTMF (Menu-2 in call)

DTMF tone can be turned off by configuring Send DTMF.

On : If the **ON** option is selected, your phone transmit the key tones.

Off : If the **OFF** option is selected, your phone will not transmit the key tones.

Note: To communicate with answering machines, the Send DTMF option must be selected.

IN-CALL FUNCTIONS

5.3 Write Message

Write message during a call. Please refer to p.46 for details.

5.4 Save (Left Soft Key)

Store entered phone numbers to Phonebook during a call.

5.5 Hold/Un-hold (Right Soft key)



Place the current call on hold or reactivates it during a call.

5.6 Swap (Right Soft key)

Swap between two calls.













TEXT EDITING

6.Text Editing







Text input mode can be selected by pressing  (backwards) and  (forwards) from each editing screen.

6.1 English input mode

<key function table>

Left-soft-key(OK)		Accept the string entered in the editing field, and then turn to the next menu or screen.
Right-soft-key(Cancel)		Clear the entire string entered in the editing area, and then revert back to the previous menu.
Clear-key		Clear a character from the string entered in the editing field.
NAVI-LEFT key		Move the cursor left by a single character in the editing field.
NAVI-RIGHT key		Move the cursor right by a single character in the editing field.
END key		Clear the entire string entered in the editing field, and then revert back to the idle screen.
0 key		Space
1 key		Smart punctuation (, . ? !)
2 key		Text entry (ABC, abc)
3 key		Text entry (DEF, def)
4 key		Text entry (GHI, ghi)
5 key		Text entry (JKL, jkl)










TEXT EDITING

6 key		Text entry (MNO, mno)
7 key		Text entry (PQRS, pqrs)
8 key		Text entry (TUV, tuv)
9 key		Text entry (WXYZ, wxyz)
# key		Pinyin→Stroke→English(ABC)→English(abc)→Number→Symbolic
* key		Pinyin→Stroke→English(ABC)→English(abc)→Number→Symbolic

6.2 Symbol input mode

This input mode allows the user to enter symbol or to format character into text message.

<key function table>

Left-soft-key(OK)		Accept the string entered in the editing field, and then turn to the next menu or screen.
Right-soft-key(Cancel)		Revert back to the previous character input mode.
NAVI-LEFT key		Move the cursor left by a single character in the editing field.
NAVI-RIGHT key		Move the cursor right by a single character in the editing field.
NAVI-UP key		Move the cursor up by a single character in the editing field.
NAVI-DOWN key		Move the cursor down by a single character in the editing field.
END key		Clear the entire string entered in the editing field, and then revert back to the idle screen.
# key		Pinyin→Stroke→English(ABC)→English(abc)→Number→Symbolic
* key		Pinyin→Stroke→English(ABC)→English(abc)→Number→Symbolic

TEXT EDITING

[Available symbols]

.	,	!	?	()	..
'	/	:	;	+	-	*
%	<	=	>	&	#	@

6.3 Numeric input mode

<key function table>

Left-soft-key(OK)		Accept the string entered in the editing field, and then turn to the next menu or screen.
Right-soft-key(Cancel)		Clear the entire string entered in the editing area, and then revert back to the previous menu.
Clear-key		Clear a character from the string entered in the editing field.
NAV-LEFT key		Move the cursor left by a single character in the editing field.
NAV-RIGHT key		Move the cursor right by a single character in the editing field.
END key		Clear the entire string entered in the editing field, and then revert back to the idle screen.
0 key		Number entry 0
1 key		Number entry 1
2 key		Number entry 2
3 key		Number entry 3
4 key		Number entry 4
5 key		Number entry 5

TEXT EDITING

6 key		Number entry 6
7 key		Number entry 7
8 key		Number entry 8
9 key		Number entry 9
# key		Pinyin→Stroke→English(ABC)→English(abc)→Number→Symbolic
* key		Pinyin→Stroke→English(ABC)→English(abc)→Number→Symbolic

6.4 Stroke input mode

The input mode can be used to quickly and easily enter texts (Chinese language). This mode allows the user to enter individual Chinese strokes in written order, from top to bottom, and from left to right. To enter a stroke, key in the desired stroke.

<Key function table>

Left-soft-key(OK)		Accept the string entered in the editing field, and then turn to the next menu or screen.
Right-soft-key(Cancel)		When the right soft key displays as Stop, press the right softkey to return the Stroke Mode to the initial mode. When the right soft key displays as Cancel, press the right soft key to return the Stroke Mode to the previous mode.
Clear-key		Clear a character from the string entered in the editing field.
NAV-Center key		When the user presses [Select] on the highlighted Chinese character on the candidate window, the character associated with that character will appear.

<S> ↔ <PY> (Pinyin mode) ↔ <ST> (Stroke mode) ↔
<A> (Large alphabetic mode) ↔ <a> (Small alphabetic mode)
<1> (Numeric mode) ↔ <S> (Symbol mode) ↔ <PY>

* PY ST A a 1 S #



TEXT EDITING

NAVI-LEFT key		Move the cursor left by a single character in the editing field.
NAVI-RIGHT key		Move the cursor right by a single character in the editing field.
NAVI-UP key		Move the cursor up by a single character in the editing field.
NAVI-DOWN key		Move the cursor down by a single character in the editing field.
END key		Clear the entire string entered in the editing field, and then revert back to the idle screen.
0 key		Space
1 key		Stroke entry —
2 key		Stroke entry
3 key		Stroke entry /
4 key		Stroke entry \
5 key		Stroke entry 7
6 key		Stroke entry)
7 key		Stroke entry L
8 key		Stroke entry ?
9 key		Stroke entry 2
# key		Pinyin→Stroke→English(ABC)→English(abc)→Number→Symbolic
* key		Pinyin→Stroke→English(ABC)→English(abc)→Number→Symbolic

TEXT EDITING

Sample : " 我 快 到 了 "

我 : [3] key → [1] key → [2] key → [1] key → [7] key → [Select]

快 : [4] key → NAVI Right key(4th select) → NAVI Right key(3rd select)

到 : [1] → [7] → NAVI Right key (3rd select)





了 : [5] → [Select]

6.5 Pinyin input mode

This input mode can be used to quickly and easily input texts (Latin based alphabet with variations in pronunciation).

In the Pinyin system, Chinese characters are represented phonetically in Latin combinations.

<Key function table>

Left-soft-key(OK)		Accept the string entered in the editing field, and then turn to the next menu or screen.
Right-soft-key(Cancel)		When the right soft key displays as Stop, press the right soft key to return the Pinyin Mode to the initial mode. When the right soft key displays as Cancel, press the right soft key to return the Pinyin Mode to the previous mode.
Clear-key		Clear a character from the string entered in the editing field.
NAVI-Center key		After the user enters in a Pinyin spelling, matched Pinyin pronunciations are displayed in the candidate window. At this time, the phone will display the matching Chinese character when the user has pressed [Select]. The user may then select the highlighted Chinese character by pressing [Select].

TEXT EDITING

NAVI-LEFT key		Move the cursor left by a single character in the editing field.
NAVI-RIGHT key		Move the cursor right by a single character in the editing field.
NAVI-UP key		Move the cursor up by a single character in the editing field.
NAVI-DOWN key		Move the cursor down by a single character in the editing field.
END key		Clear the entire string entered in the editing area, and then revert back to the idle screen.
0 key		Space
1 key		Smart punctuation (, . ? !)
2 key		Pinyin starting from abc
3 key		Pinyin starting from def
4 key		Pinyin starting from ghi
5 key		Pinyin starting from jkl
6 key		Pinyin starting from mno
7 key		Pinyin starting from pqrs
8 key		Pinyin starting from tuv
9 key		Pinyin starting from wxyz
# key		Pinyin→Stroke→English(ABC)→English(abc)→Number→Symbolic
* key		Pinyin→Stroke→English(ABC)→English(abc)→Number→Symbolic

Sample : "我快到了" (Wo Kuai Dao Le)

我 : [9] key → [6] key → 'wo' select → [Select]

快 : [5] key → [8] key → [2] key → [4] key → 'kuai' select → NAVI Right Key(2th select)

到 : NAVI Right Key(4th select)

了 : NAVI-Down Key → NAVI-Right Key(2th select)

USING THE MENU

7. USING THE MENU

7.1 Call log (Menu 1)

Your mobile phone automatically stores the following numbers and name. (if have number or name) in memory:

Missed / Received / Dialed

The names and/or numbers are displayed with the date and time at which the call was made.

Missed calls (Menu 1-1)

Displays numbers and/or names (if have number or name) of the last 10 missed calls on the screen. Confirm the numbers of missed calls and delete, save in Phonebook, send a message, or dial.




View

 
 
To view the missed call log :

1. Select the number or name
(if have number or name)
and press [Select].




USING THE MENU

2. Select **View** from the following menu list, and press  [Select].

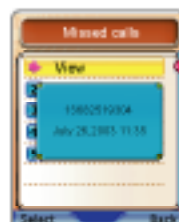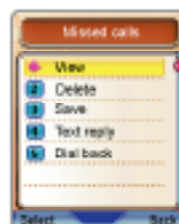


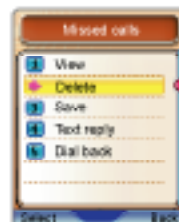 
Delete

To remove a missed call from the log :

1. Select the number or name, (if have number or name) and press  [Select].

 


2. Select **Delete** from the following menu list, and press  [Select].




CALL LOG


3. Press  [Ok] or  [Cancel] to confirm.

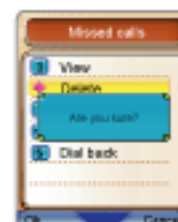


Save

To save a missed call number to Phonebook :

 1. Select the number or name, (if have number or name) and press  [Select].

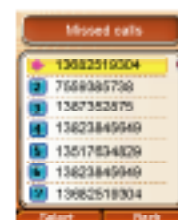

2. Select **Save** from the following menu list, and press  [Select].





- Refer to Phonebook Add new (Menu 5-2)

 
 
USING THE MENU

Text reply (Sending a message)

To send a message to a number from the missed call log:



1. Select the number or name, (if have number or name) and press  [Select].
2. Select **Text reply** from the following menu list, and press  [Select].

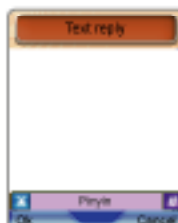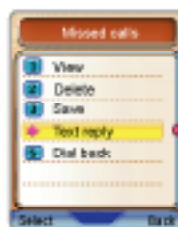
- Refer to the Write Message section (Menu 2-2)



Dial back

To dial back to a number from the missed call log:

 1. Select the number or name, (if have number or name) and press  [Select].
2. Select **Dial back** from the following menu list, and press  [Select].

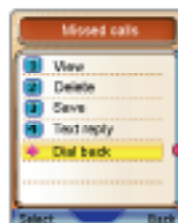


CALL LOG

Received calls (Menu 1-2)

Displays numbers and/or names



 (If have number or name) of the last 10 received calls on the screen.


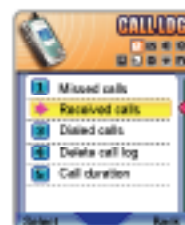
Confirm the numbers of received calls and delete, save in Phonebook, send message, or dial.



View

To view the received call log :

  
1. Select the number or name, (if have number or name) and press  [Select].
2. Select **View** from the following menu list, and press  [Select].

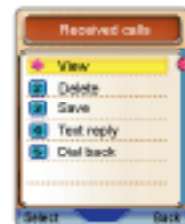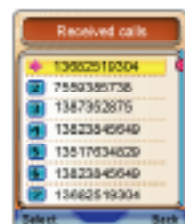



USING THE MENU


Delete

To remove a received number from the log :

 
1. Select the number or name,
(if have number or name)
and press  [Select].

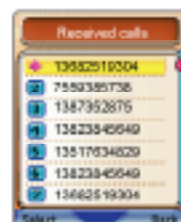

 2. Select **Delete** from the following menu list,
and press  [Select].

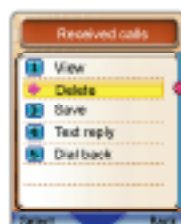

 
3. Press  [Ok] or  [Cancel] to confirm.

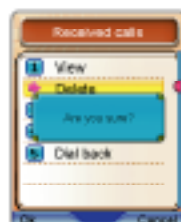



CALL LOG


Save

To save a received number to Phonebook :

 
1. Select the number or name,
(if have number or name)
and press  [Select].

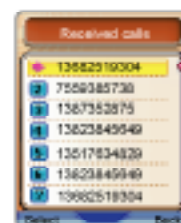

 2. Select **Save** from the following menu list,
and press  [Select].

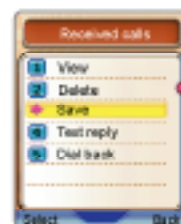

- Refer to Phonebook Add new (Menu 5-2)

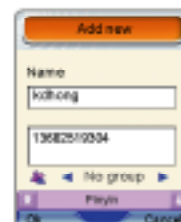 






USING THE MENU

Text reply (Sending a Message)

To send a message to a number from the received call log:



 1. Select the number or name, (if have number or name) and press  [Select].
2. Select **Text reply** from the following menu list, and press  [Select].

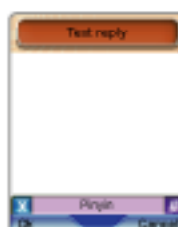
- Refer to the Write Message section (menu 2-2)



Dial back

To dial back to a number from the received call log:

 1. Select the number or name, (if have number or name) and press  [Select].
2. Select the **Dial back** to following menu list, and press  [Select].

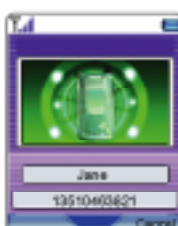

CALL LOG

Dialed calls (Menu 1-3)



Displays numbers and/or names (if have number or name) of the last 10 dialed calls on the screen.

 
 
Confirm the numbers of dialed calls and delete, save in Phonebook, send message, or dial.



View

To view the dialed call log :



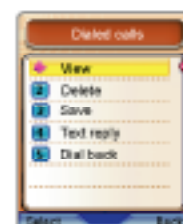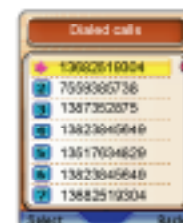

1. Select the number or name, (if have number or name) and press  [Select].
2. Select **View** from the following menu list, and press  [Select].

 
 


USING THE MENU

Delete

To remove a dialed number from the log :

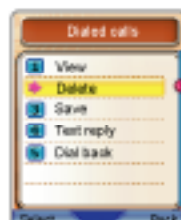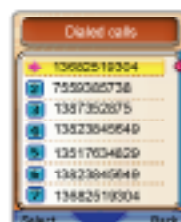

1. Select the number or name,
(if have number or name)
and press  [Select].
2. Select **Delete** from the following menu list,
and press  [Select].
3. Press  [Ok] or  [Cancel].



 
CALL LOG

Save

To save a dialed number to Phonebook:



1. Select the number or name,
(if have number or name)
and press  [Select].
2. Select **Save** from the following menu list,
and press  [Select].

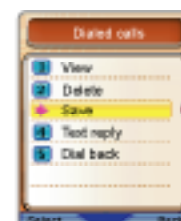- Refer to Phonebook Add new (menu 5-2)

 


Text reply (Sending a Message)

To send a message to a number
from the dialed call log :

1. Select the number or name,
(if have number or name)
and press  [Select].
2. Select **Text reply** from the following
menu list, and press  [Select].

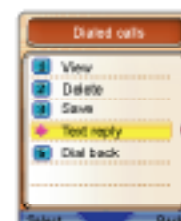

- Refer to the Write Message section (menu 2-2)

 
 
 


USING THE MENU

Dial back

To dial back to a number from the dialed call log:

1. Select the number or name, (if have number or name) and press  [Select].
2. Select **Dial back** from the following menu list, and press  [Select].

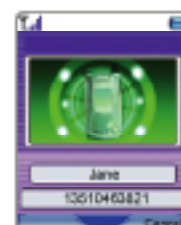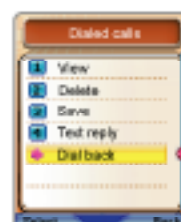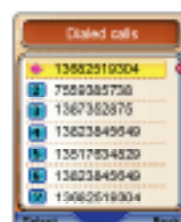




Delete call log (Menu 1- 4)

 
 
Deletes all missed call log, all received call log, all dialed call log, or all call log.

CALL LOG

Missed calls (Menu 4-1)




To clear the entire missed call log:

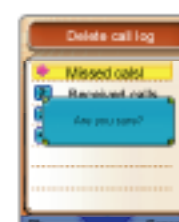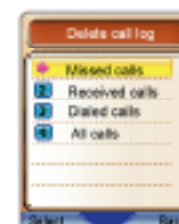1. Select **Missed calls** menu, and press  [Select].
2. Press  [OK] or  [Cancel] to confirm.



Received calls

To clear the entire received call log :




1. Select **Received calls** menu, and press  [Select].
2. Press  [OK] or  [Cancel] to confirm.

 
 


USING THE MENU

Dialed calls




To clear the entire dialed call log :

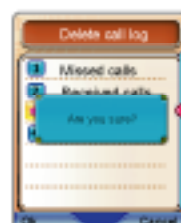
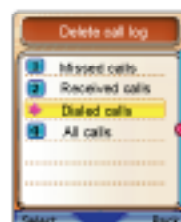
1. Select **Dialed calls** menu,
and press  [Select]
2. Press  [Ok] or  [Cancel] to confirm.



All calls

To clear the entire call log :

  1. Select the **All calls** Menu,
and press  [Select].
2. Press  [Ok] or  [Cancel] to confirm.

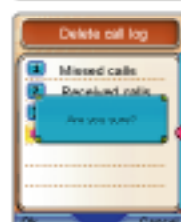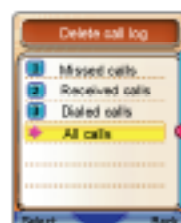


CALL LOG

 
Call Duration (Menu 1- 5)

Displays the last call, total call, total dialed call, and total received call times. Resets the call duration.

Last call (Menu 1-5-1)

To view the last call time :


1. Select **Last call** menu
and press  [Select].

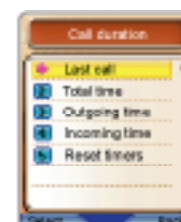


USING THE MENU

Total Time (Menu 1-5-2)

To view the total call time :


 
1. Select the **Total time** menu, and press  [Select].

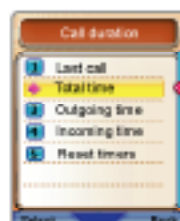

Outgoing time

To view the dialed call time :

  1. Select the **Outgoing time** menu, and press  [Select].

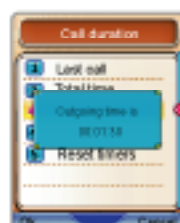
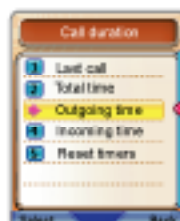


CALL LOG

Incoming Time (Menu 1-5-4)



  To view the received call time :

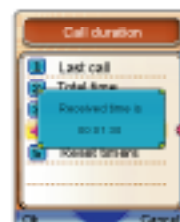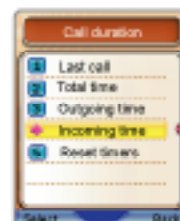1. Select the **Incoming time** menu, and press  [Select].



Reset timers

To reset call timers :

1. Select the **Reset timers** menu, and press  [Select].
2. Enter the password (1234 by default). Press  [OK] or  [Cancel] to confirm.





USING THE MENU


7.2 Message (Menu 2)


Read Message (Menu 2-1)

Inbox Message (Menu 2-1-1)

The number on the right side of the Inbox indicates the total amount of messages. With this menu, new text messages can be viewed or read.

The name and/or number of the sender are also displayed on the list.

Pressing  [Select] will display message contents with the sender's number and/or name (if stored in Phonebook), along with the arrival time.

While reading a message, the following options can be selected by pressing  [Select].

Delete: Deletes the viewed message.

 
Text reply: Send a reply message to the sender.

Dial back: Calls the sender.

Extract number: Saves the sender's number to Phonebook.


Forward: Forwards the viewed message to a third party.


Exit: Modifies the viewed message.

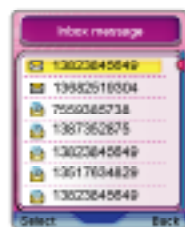

MESSAGE

Outbox message (Menu 2-1-2)

The number on the right side of the Outbox indicates the amount of messages. With this menu, saved text messages can be viewed. Destination name or number is displayed on the list. Pressing  [Select] will display message contents with the destination name and number (if stored in Phonebook).

While reading a message, the following options can be selected by pressing  [Select].

Delete: Deletes the viewed message.

Forward: Forwards the viewed message to a third party.

Extract number: Saves the receiver's number to Phonebook.

Exit: Modifies the sent message.



USING THE MENU

Delete All (MENU 2-1-3)

Deletes all messages (Inbox & Outbox).

To delete all messages:

1. Select **Delete all** menu, and press  [Select].

3. Press  [OK] or  [Cancel] to confirm.



Storage status (Menu 2-1-4)


Displays the SIM card memory usage status (Inbox & Outbox).

MESSAGE

Write message (Menu 2-2)

With this menu, text messages can be composed, saved, and sent.



Maximum length for a single text message including English alphabet characters and numbers is 160 characters. However, the maximum length may shorten to as much as 70 characters when composing in Chinese characters.

 
 
Compose a text message and press  [OK] to access the following options:

Send only : Sends the message to the recipient but the message will not be saved.

Save only : Saves the text message only but the message will not be saved.

Send and save : Sends the text message and saves it to Outbox.

Pressing  [Select] to **Send** , **Save**, or both will display the Input Number screen. Enter the recipient's number on the Input Number screen before sending the message. Recipient's number can be directly inputted or retrieved from Phonebook by pressing  [Phonebook].

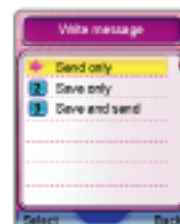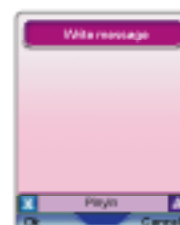

USING THE MENU

Voice message (Menu 2-3)

 
Your phone is capable of handling voice message services if supported by the network.

Set VM server number (Menu 2-3-1)

Allows the user to change the number of the voice message server.

Dial to VM server (Menu 2-3-2)

Select this option to listen to your messages.

This function allows for quick connection to the voice server by pressing and holding down  [1 key] from the idle mode.

Template (Menu 2-4)

Up to ten most frequently used messages are pre-composed and saved.

The title of each template is displayed in a list format.

Pressing  [Select] will access the following options:

Edit : Enables editing of viewed message contents.

Send & save : Sends and saves the messages to Outbox.

Delete : Deletes viewed messages.

MESSAGE

Message setup (Menu 2-5)

Private Setup (Menu 2-5-1)


Select Private Setup and press  [Select] on the screen to access the following options:

Service center : Message service center number can be edited or stored from here. This number can be obtained from your home network service provider.

Protocol type : The default message type can be setup from here (Text, Fax, Email).

Validity period : This menu allows setting the duration of storage for your text messages in the Message Center while delivery attempts are made. Available options are 1 hour, 6 hours, 12 hours, 24 hours, 72 hours, 1 Week and maximum.

Public setup (Menu 2-5-2)


Select Public Setup and press  [Select] access the following options:

Reply path : Allows the SMS message recipient reply via your message centre if this service is provided by your network.

Status report : When this function is activated, the network informs the user of whether the message has been delivered or not.

USING THE MENU

Password setup (Menu 2-5-3)

Select Password setup and press  [Select] to access the following options:

Password change : The SMS-Password can be changed from here.
(1234 by default)


Password setting : Setting this menu to On will configure the phone to request for the SMS Password whenever a SMS message arrives and when it is checked.

Info message (Menu 2-6)

Inbox message (Menu 2-6-1)

With this menu, new info messages can be viewed or read.

Channel ID is displayed in the list.

Pressing  [Select] will display the message content and its arrival time.

When reading a message, pressing **Delete** will delete the viewed message.

Setup (Menu 2-6-2)

Selecting **Enable** will allow you to receive Info messages.

MESSAGE

Channel (Menu 2-6-3)

Allows the user to select channels to receive broadcasted messages from. The following options are available:

All channel mode : The user receives all channel Info messages.

Add new channel : Adds new channels.

Selecting a channel and pressing **Delete** will remove such channel from the list.

Language (Menu 2-6-4)

Preferred languages of broadcasted message can be set from here.


MMS (Menu 2-7)

Create (Menu 2-7-1)

With this menu, multimedia message can be created and sent.

Notification (Menu 2-7-2)

With this menu, notification indication can be viewed.


Pressing [Select] will be connected server to download multimedia message. 

USING THE MENU

Inbox (Menu 2-7-3)

With this menu, new multimedia messages can be viewed or read.

The sender number is displayed on the list.

Pressing  [Select] will display message contents with the sender's number along with the arrival time.

While reading a message, the following options can be selected.

View: Views the multimedia message.

Delete : Deletes the viewed multimedia message.

Outbox (Menu 2-7-4)

With this menu, failed to send multimedia messages can be viewed.

Destination number is displayed on the list.

Pressing  [Select] will display message contents with the destination

While reading a multimedia message, the following options can be selected

View: Views the multimedia message.

Delete : Deletes the viewed message.

MESSAGE

Sent (Menu 2-7-5)

With this menu, sent multimedia messages can be viewed.

Destination number is displayed on the list.

Pressing  [Select] will display message contents with the destination

While reading a multimedia message, the following options can be selected.

View: Views the multimedia message.

Delete: Deletes the viewed message.

Draft (Menu 2-7-6)

With this menu, draft multimedia messages can be viewed.

Destination number is displayed on the list.

Pressing  [Select] will display message contents.

While reading a multimedia message, the following options can be selected.

View: Views the multimedia message.

Delete: Deletes the viewed message.

Profiles (Menu 2-7-7)

With this menu, all network operator profiles and destination numbers are displayed on the list.

Pressing  [Select] will allow users to modify the setting of selected profile.