

USING THE MENU

7.3 Ring (Menu 3)

Ring tone (Menu 3-1)

Use the Ring Tone menu to choose a ringing tone for incoming call.

Message tone (Menu 3-2)

Use the Message Tone menu to choose a ringing tone played when receiving a mobile message.

Key tone (Menu 3-3)

Use the Key Tone menu to choose the tone played when pressing key.

Ringing volume (Menu 3-4)

Use the Ring Volume menu to control the volume of your phone's rings and message tones.

Alert type (Menu 3-5)

Use the Alert Type menu to choose incoming call or message or connection establishment notification methods.

RING

Incoming call (Menu 3-5-1)

Available received call notifications:

Ring : The phone rings normally by using the currently selected ring tone.

Vibrate : The phone vibrates when a call is received.

Ring & Vibrate : The phone both rings and vibrates simultaneously.

LED : The phone makes silent but its LED light flashes.

Message (Menu 3-5-2)

Alert setting (Menu 3-5-2-1)

Available received message notifications:

Ring: The phone rings normally using the currently selected message tone.

Vibrate: The phone vibrates when a message is received.

Ring & Vibrate: The phone rings and vibrates simultaneously.

Alert periodic (Menu 3-5-2-2)

Available message notifications for unread messages:

Off: This feature is disabled.

2 minute: The alert frequency is 2 minutes.

5 minute: The alert frequency is 5 minutes.

USING THE MENU

Connect tone (Menu 3-5-3)

This menu allows the user to specify whether the phone beeps when the phone connects to the network.

On: The phone beeps when a connection is made.

Off : The phone does not beep.

Key volume (Menu 3-6)

Use the Key Volume menu to select the volume of tones generated when the keypad is pressed.

Folder open (Menu 3-7)

In this menu, set whether a tone sounds when the phone is opened or not.

On: The phone uses a tone.

Off: The phone does not use any tone.

Folder close (Menu 3-8)

In this menu, set whether a tone sounds when the phone is closed or not.

On: The phone uses a tone.

Off: The phone does not use any tone.

SETTING

7.4 Setting (Menu 4)

Call settings (Menu 4-1)

Speed dial (Menu 4-1-1)

Once phone numbers have been stored in the SIM card or memory, they can be dialed more conveniently by using this function. To speed dial a number, press and hold down the appropriate key (2 to 9).

Note: Memory location 1 is reserved for your Voice Mail server number.

On : Speed Dial enabled.

Off : Speed Dial disabled.

Sending own number (Menu 4-1-2)

Your phone number can be restricted from being displayed on the other party's telephone when called.

Note: Certain networks do not allow the user to change this setting.

On : Your number will be send each time when a call is made and your number will be displayed on the other party's phone.

Off : Your number will not be send to the other party's phone.



USING THE MENU

Phone setting (Menu 4-2)

Language (Menu 4-2-1)

This menu sets the language used by the phone.

The language of this phone is set by default to English.

Using Language : press  [Up / Down] key, and then press  [Ok].

Available Languages : English / Traditional Chinese

Phone lock (Menu 4-2-2)

This function prevents other persons from accessing your phone by locking it.

To unlock, enter the 4-digit password.

Display setting (Menu 4-3)

Backlight (menu 4-3-1)

This menu adjusts the duration of how long the backlight stays lit.

Using Backlight : Press  [Up / Down] to select and then

Press  [OK].

Off : The backlight is disabled.

Short : The backlight comes on when a key is pressed or call is received

- Switches off in 20 seconds after the last key is pressed.


Long : The backlight comes on when a key is pressed or a call is received

- Switches off in 40 seconds after the last key is pressed.

SETTING



Contrast (Menu 4-3-2)

Adjust the level of contrast for the internal & external LCD's.

Adjust the brightness by using  [Left] and [Right] keys.

Wallpaper (Menu 4-3-3)

This menu configures the background image in display.

Using Wallpaper : Press  [Up / Down],
then press  [Select]

1. Main wallpaper (main LCD Background image)
2. Sub wallpaper (sub LCD Background image)

Number display size (Menu 4-3-4)

The size of characters of number entered into the phone from idle and during call can be adjusted from here.




Security setting (Menu 4-4)

Your phone is equipped with a versatile security system to prevent its or the SIM card from unauthorized use.

USING THE MENU

Power on PIN (Menu 4-4-1)

When the PIN Check feature is enabled, the PIN must be entered whenever the phone is powered off. Consequently, any person who does not have the PIN cannot use the phone.

Using Power on PIN : Press  [Up / Down]
and then press  [Ok] or  [Cancel]

Fixed dial number (Menu 4-4-2)

This menu restricts outgoing calls to a limited set of phone numbers. The following options are available.

On : Only the numbers stored in Phonebook can be dialed to.

PIN2 must be entered.

Off : No restrictions.

Access code (Menu 4-4-3)

Change PIN1 (Menu 4-4-3-1)

Provided that the PIN check feature is enabled, this feature allows the user to change the current PIN. The current PIN must be entered before specifying a new one.

Once the new PIN has been entered, the phone will request to confirm by entering it again.

SETTING

Change PIN2 (Menu 4-4-3-2)

See the menu 4-4-3-1

Change phone password (Menu 4-4-3-3)

This menu feature allows the user to change the current phone password to a new one. The current password must be entered before specifying a new one. The default password is 1234.



Change barring password (Menu 4-4-3-4)

This menu feature allows the user to change the current barring password to a new one. The current password must be entered before specifying a new one.

Default setting (Menu 4-5)

This menu resets all user-configured values and Phonebook entries to default.

Using the Default setting :


1. Enter the Password.
2. Press  [Ok] or  [Cancel].

USING THE MENU

Clock setting (Menu 4-6)


Time setting (Menu 4-6-1)

Use this menu to change the time.

Using the Time setting : Press the number key, then press  [OK].

Date setting (Menu 4-6-2)

This menu allows you to change the date.

Using the Date Setting : Press the number key, then press  [OK].

Network setting (Menu 4-7)

These menu functions are network related services. If these services are desired, please contact your service provider to check the availability.

Call divert (Menu 4-7-1)

This network service is used to forward incoming calls to your voice-mail box (voice calls only) or to another number. Forwarding options not supported by your network operator may not be shown.



SETTING

All divert (Menu 4-7-1-1)

All calls are diverted. If this service is activated, calls will be forwarded no matter what the condition of subscriber.

Interrogate, Active, Deactive

-See the sub menu p.67



Busy divert (Menu 4-7-1-2)

Calls are forwarded when calls are not received. If this service is activated, a call is diverted only if the call meets mobile subscriber busy signal.

Interrogate, Active, Deactive

-See the sub menu p.67

No answer (Menu 4-7-1-3)

Calls are forwarded when unanswered. When this service is activated, a call is diverted only if the call meets no reply.

Interrogate, Active, Deactive

-See the sub menu p.67

USING THE MENU

No service (Menu 4-7-1-4)

Calls are forwarded when out of the area covered by your service provider. If this service is activated, a call will be diverted only if the mobile subscriber is roaming.

Interrogate, Active, Deactive

-See the sub menu p.67

Cancel divert (Menu 4-7-1-5)

Cancels all set call divert options.

Call bar (Menu 4-7-2)

This service makes it possible for a mobile subscriber to block certain categories of calls by selecting one or more blocking settings. Call blocking service is not supported by all network service providers. Please check before attempting to select.

SETTING

All outgoing calls (Menu 4-7-2-1)

All outgoing calls locked. If this service is activated, all outgoing call will be blocked except emergency calls.

Interrogate, Active, Deactive

-See the sub menu p.67

All int'l calls (Menu 4-7-2-2)

International calls cannot be made. If this service is activated, all outgoing international calls are blocked.

Interrogate, Active, Deactive

-See the sub menu p.67

Int'l except to home (Menu 4-7-2-3)

When abroad, calls can be made only to numbers within the current country and your home country where the parent network provider is located. If this service is activated, calls terminated for the served subscriber will be blocked when roaming outside the home PLMN country. All outgoing international calls will be blocked.

Interrogate, Active, Deactive

-See the sub menu p.67

USING THE MENU

All incoming calls (Menu 4-7-2-4)

Calls cannot be received. If this service is activated, all incoming calls are blocked.

Interrogate, Active, Deactive

-See the sub menu p.67

Incoming while roam (Menu 4-7-2-5)

Calls cannot be received when using the phone outside your home service area. If this service is activated, terminated calls for the served subscriber will be blocked when roaming outside home PLMN.

Interrogate, Active, Deactive

-See the sub menu p.67

Cancel all (Menu 4-7-2-6)

Cancels all call barring settings. If this service is selected, all call barring settings will be cancelled. Calls can be made and received normally.

SETTING

Call wait (Menu 4-7-3)

The Call Waiting Service permits a mobile subscriber to be notified of an incoming call during another call.

Interrogate, Active, Deactive

-See the sub menu p.67

Network select mode (Menu 4-7-4)

The connection network can be selected either automatically or manually.

Automatic selection (Menu 4-7-4-1)

In automatic mode, your phone will search for the network and automatically select from the list of preferred networks stored in the SIM card.

Manual selection (Menu 4-7-4-2)

In Manual mode, your phone will display a list of the available networks for you to choose from.

USING THE MENU

Network Setting (Call divert, Call bar, Call wait) - Sub Menu

Interrogate

This service can be set enabled or disabled.



Activate

An action taken by either the service provider or the subscriber:

Enable a process to run as and when required by the service concerned, resulting in the active phase. Some services can be either "supported" or "not supported" during the active phase according to whether or not the system would be able to invoke or use the service.

Deactivate

An action taken by either service provider or subscriber to terminate the process started at the activation.


PHONEBOOK

7.5 Phonebook (Menu 5)


Phone numbers and their corresponding names can be stored in the SIM card. Up to 150 name slots are available in the phone. The phone is capable of allocating 4 numbers, one email address, and one Note for each entry. SIM card and phone memories are physically separated but they are searched as a single entity.

 
Search (Menu 5-1)

After having stored numbers in Phonebook, those entries can be searched by name.



1. When the idle screen is displayed, press  [Phonebook].




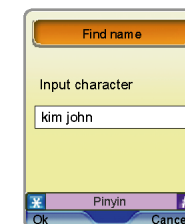

2. Press  [Select] soft key when **Search** is highlighted. Enter the letters of the entry name that you wish to find.



 
USING THE MENU

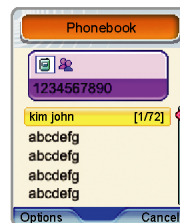3. Press  [OK] (The first matching entry is highlighted.) Find the desired number the under the name by pressing  [Up / Down] key.



4. Press  [Send] Once you have found the desired entry, press  [Send] to dial the number.



Press  [Options] to access Phonebook entry options.



PHONEBOOK

Using Phonebook entry Options

When viewing an entry in Phonebook, [Options] will appear in the left soft key to allow the user to access Phonebook options.

View details: Displays detailed information of the selected entry.

Edit: Edits the name and numbers of selected entry.

Delete: Deletes the selected entry.

 
Copy: Copies to another memory.

- If the memory of the selected entry is set to SIM, it will be saved in Phone.
- If the memory of the selected entry is set to Phone, it will be saved in SIM.

USING THE MENU

Add new (Menu 5-2)

1. When the idle screen is displayed, press [Phonebook].
2. Press [Select].
- 3-1. If memory setting is **SIM**, you can add a name, numbers, and assign that entry to a group.
 - **Name & number** : Text Editing reference.
 - **Group** : Press (NAVI Left) and (NAVI Right) to select group.
- 3-2. If memory setting is **PHONE**, you can add a name, numbers (mobile, home, office, fax), an email address, memo, and assign that entry to a group.
 - **Name** : Text Editing reference.
 - **Number** : Text Editing reference.
 - **Mobile** : Mobile telephone number.
 - **Home** : Home telephone number.
 - **Office** : Office telephone number.
 - **Fax** : Fax number.
 - **Email** : Text Editing reference.
 - **Memo** : Text Editing reference.
 - **Group** : Press [NAVI Left] or [NAVI Right] to select group.
4. New item is stored if press [OK].

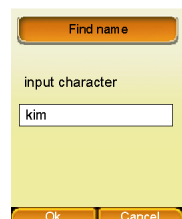

PHONEBOOK

Group edit (Menu 5-3)

1. When the idle screen is displayed, press [Phonebook]
2. Press [Select]
3. Group list is shown.
(Family, Friend, Company are set by default.)



Using group edit [Add]

If "Undefined" from the group list is selected, a new group can be added.

Using group edit [Option]


If "Undefined" from the group list is selected, the corresponding group can be edited.



USING THE MENU

< Option menu >

Member list

1. Displays members belonging to a relevant group.
2. Select one member from the member list and press  [Select].



- Delete Member : Remove a member from relevant group.
- Add member : Add a new member to a relevant group.
(Phonebook menu's Search-Find name reference)

Rename : Change a relevant group's name.

(Text Editing reference, default group can not be changed)

Ring tone : Establish a ring tone for a relevant group.

Group icon : Establish an icon for a relevant group.

Delete group : Remove a relevant group.

(The default group cannot be removed)

PHONEBOOK



Speed dial (Menu 5-4)


Speed dial numbers can be added, changed, or deleted from this menu.


To speed dial a number from the idle screen, press and hold the corresponding numeric key (2 to 9). The number is automatically dialed without further input.

Note: Memory location 1 is reserved for your Voice Mail server.

Setting up Speed Dial Entries

1. When the idle screen is displayed, press  [Phonebook].
2. Select a key from 2 to 9 to assign a speed dialing feature to and press  [Add new].


Note: If a number has already been assigned to a particular key  [Options] replaces [Add] . Go to Step 7.

3. Enter the name from a Phonebook entry to be used and press  [Ok] .

4. Select desired number if the entry has more than one number, then press  [Left] or [Right] key.



USING THE MENU

5. After finding the number, press  [Select].
6. Once a number has been assigned to the selected key, two options are available:

Change : Allows to assign a different number to the key.

Delete : Allows to clear the setting, so that no number is assigned to the key.

 


PHONEBOOK



Delete all (Menu 5-5)

Deletes the number selected.

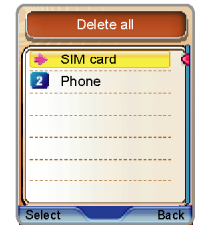

If FDN is set, enter the PIN2 to delete it.
Selecting **Delete all** from Phonebook access into 2 sub-menus.



SIM card (Menu 5-5-1)

1. Press  [Select].
2. Press  [Ok].

Phone (Menu 5-5-2)

1. Press  [Select].
2. Press  [Ok].

USING THE MENU

Check memory (Menu 5-6)

This Menu allows the user to check the number of entries stored and vacant slots available in the SIM card and phone memories.



 
Set store memory (Menu 5-7)

This menu selects the memory (SIM or Phone) to save data of phonebook.



Own number (Menu 5-8)

The user's own number can be stored into the SIM card using this feature. However, certain SIM cards do not support this function. Please check with your own network service provider.

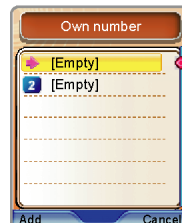

ORGANIZER

7.6 Organizer (Menu 6)

The Organizer enables you to write your Schedule, set an Alarm, use a Calculator, note Memos, and find out the Times in various cities around the world.

Scheduler (Menu 6-1)

The Scheduler makes it possible for you to keep a track of important events. The phone can be set to remind you before an appointment; this way, you can be certain not to miss any important events such as appointments and to do's.

Move the cursor to the desired date by following the steps below:

1. **Left key** : move to previous day
2. **Right key** : move to next day
3. **Up key** : move to previous week
4. **Down key** : move to next week
5. **[2] key** : move to previous year
6. **[4] key** : move to previous month
7. **[5] key** : move to today
8. **[6] key** : move to next month
9. **[8] key** : move to next year

 


USING THE MENU

1. Move the cursor to the desired date.


2. Press  [Options].

Add new : This option creates a new schedule.

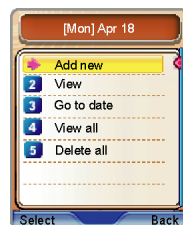

View : Displays the selected schedule.


If there is no scheduled event, the phone will display "**No Schedule**".

When  [Options] is pressed from this screen, there are two options available:

- **Add new** - Add a new schedule.
- **View all** - View all schedule lists.

Go to date : Move to the desired calendar date.

View all : Displays all schedule lists.

If there is more than one note in the calendar, scroll the list and press  [Select].

When [Options] is pressed, there are several options available:

- **Edit**: Edit the schedule.
- **Add new**: Add a new schedule.
- **Delete**: Deletes the schedule.
- **Go to date**: Move to selected date.

ORGANIZER

If there is no schedule, the phone will display "**No Schedule**" and revert back to the previous menu.

Delete all : Delete all schedules in your calendar.

Alarm (Menu 6-2)

You can set alarm time at different options (interval, melody and snooze).

On/Off

Enables or disables the alarm function.

Time

Set the alarm time.

Interval

Set the alarm's interval (Once, daily, or weekly).

Melody

Set the alarm's melody.


USING THE MENU

Calculator (Menu 6-3)

The phone has a calculator function. This calculator provides basic arithmetic functions :

 
addition, subtraction, multiplication, and division.

Using the Calculator :

1. Enter the first number using the numerical keypad (0 to 9).
2. Press an arithmetic symbol : +, -, x, /
3. Enter the second number using the numerical keypad.
4. Repeat Steps 2 to 3 as many times as needed.
5. Press  [Select].

The phone can be used as an 8-digit calculator.

To erase any mistakes or clear the display, press  [Clear] key


To enter a decimal point, press  key


To enter a negative designation, press  key

ORGANIZER


Memo (Menu 6-4)

This function reminds the user of his/her appointments or notes.

Edit : Modify the memo if necessary, then press  [Save]

Delete : Delete a memo if necessary, and press  [Yes]

Add new : To add a new memo, compose the text memo in this mode.

Delete all : Deletes all the memos when  [Yes] is pressed.

Note: For further details on Text Editing, refer to the Text Editing section of this manual.

World time (Menu 6-5)

The phone can display the current time of major cities around the world. 21 major cities are available with the adjusted local times. The World Time feature is based on Universal Time Coordinated (UTC).

The screen will display name of the city, its current time and date, and time difference from UTC.

USING THE MENU

7.7 Game (Menu 7)

Adventure (menu 7-1)

< Game Introduction >

There are two Brat Monks. One is strong in talisman and another one is good at using a cudgel to defeat monsters. Once upon a time, there were 108 monsters safely locked by a magical bead. But after a while, an unidentified fire was broken at a temple where the magical beads kept, then the magical bead lost its magic power and unlocked to all monsters escape away. They hide at different places and also started to make chaos around the world. To save the world, two monks have to gather their powers with praina-para-mita-sutra and start their adventures to defeat the monsters.

The main monk character throws the talisman to defeat the monsters while the brat monk uses cudgel to attack them. Now two main characters will present you excitement when playing the game.

You can enjoy of selecting the characters in our own preference. The main monk who is good at throwing a talisman is appropriate for common user. The brat monk who has outstanding performance in using cudgel to defeat monster from short distance is suitable for expert player.

Game player has option to choose either character and take different journeys. Different characters will have different save points.



 

 

 
 
 
GAME

Main monk character and brat monk need to fight against monsters with their weapons (talisman and cudgel) in 15 stages. Each stage environment is different as well. It is important to put the beads to quickly capture the monster into the pocket. You have to bear in mind that the power (Merit) that you gained by catching monsters will be reduced after being attacked by monsters. Meanwhile, the captured monsters will be released again.

Most of the items appearing in this game have noticeable function. At every stage, monsters are marked with "AI". This fact will give more challenge to players and ambitious to conquest each stage. Adding to the function of diagonal movement, it enables player to perform more accurate and speedy attack. Much faster action and more accurate attack you take, much higher points you get. Let's start the adventure now!

Manual

[Action Keys]

- Menu Button  : View the menu
- Side Button : Control the sound volume
- Navigation Key      : Move Character
- [1] key  : Jump to left diagonal
- [3] key  : Jump to right diagonal
- [#] & [,]  : Use weapons (Talisman or cudgel)

[Game Playing]

- There are total of 15 stages that the monk characters experience adventures.
- One monk defeats the monsters by throwing a talisman toward them and other monk blockade the monsters by thrusting them with cudgel.
- Each character will have its' own story line in the different map. If those two characters passed at same point, there will be only 3 stage to pass.
- You have to avoid physical impact from the monsters and throw talisman or cudgel in order to blockade them into beads and put them in the pocket.
- You have to put certain numbers of monster into your pocket for each stage. If main character died all the monsters captured in that particular stage will be finally released.
- You will earn the power (equivalent to game points) for each monster you caught, but you will lose your power when attacked by monsters.
- You can utilize the following tools at every stage:

Triangle Rice : It can enhance the power of talisman and cudgel.

A Bottle of Wine : It can increase your point.

Rosary : It can enable your character undefeatable for short period of time.

A Wooden Gong : At the moment you get this item you will be able to blacked all the monsters to magic bead.


The Sutras : There are four letters. If you collect all those four letters, you will have an extra life.

All above tools can strengthen the power of the monks. You are better to move such faster and accurate in every stages.

WAP (Menu 8)

WAP is a global standard for mobile communication devices that provides easy and fast access to information and services of the Internet. Now, you can access the internet through the WAP browser of your mobile phone.

[Main Menu]

This is the initial menu displayed when Internet menu has been selected or the  button has been pressed.

Home (Menu 8-1)

If the activated profile has been defined, the Home URL will be connected to using this function. Then, the user will be able to access to difference services, such as chatting, news, games, sports, music, and etc. If the browser cannot connect to the activated page, an error message will be display.

Pressing  button to directly connect to Home URL.

Bookmarks (Menu 8-2)

The bookmark list can be accessed using this menu.

Selecting a bookmark, user can connect, edit, or delete it. Also new URL's can be added into the bookmark list by simply selecting the last empty item without being on that line.

USING THE MENU

[Select an Existing Bookmark]

Connect (Menu 8-2-1)

Connect to the selected page. If the browser cannot connect to the page, an error message will be displayed.

Edit (Menu 8-2-2)

Changes the title and URL of a bookmark.

Delete (Menu 8-2-3)

Current bookmark is deleted from the list.

[Adding a New Bookmark]

Adds a new bookmark title and URL. After adding a new entry, the user can connect to the URL by selecting it from the Bookmark list.

Total 10 new bookmarks can be stored.

Go To URL (Menu 8-3)

Connect to a selected URL.

If the browser cannot connect to the address entered, an error message will be displayed.

WAP

Profiles (Menu 8-4)

To access Internet services, at least one profile must be defined and activated. A profile is a set of options needed to access services from an ISP (Internet Service Provider). A profile includes home page URL, port number, gateway address, bearer type, security option, network timeout, and ISP access information

such as dial number, login name, password, circuit type, or access point name according to the bearer type. An existing profile setting can be edited by selecting or adding a new entry, or by selecting the last empty item from the profile list.

[Adding a new Profile]

Title (Menu 8-4-1)

Create or modify a title for the new profile.

Home URL (Menu 8-4-2)

Display the home address of this profile.

Port number (Menu 8-4-3)

Display the port number of this profile. It can be omitted if the ISP does not specified its own port number.

USING THE MENU

Bearer type (Menu 8-4-5)

Select the bearer type for a profile between GPRS and CSD (Circuit Switched Data). GPRS contains the access point name, user ID, password, and an authentication option. CSD contains the digital dial number, analog dial number, circuit type, and user ID/password.

Security (Menu 8-4-6)

Used to specify the login type to the ISP as secured or not.

Network timeout (Menu 8-4-7)

The network connection time can be configured from this menu. If no action is detected during this time, the connection with the ISP will be automatically terminated.

[Changing an Existing Profile]

An activated profile


All profile options can be changed.

A deactivated profile

All options can be changed and the selected profile can be activated.

WAP

< Option Menu >

This menu will be displayed when  key is pressed (while surfing the internet).

Home

While surfing the Internet, select this menu to jump to the activated profile home page.

Bookmark

This option menu will display the current bookmark list.

Add to bookmark list

This option menu is used to Bookmark the current WAP page to access it at another time. The maximum number of bookmarks is 10. When the maximum number of bookmarks has been reached, the phone will rewrite over starting from the oldest bookmarked link.

Reload


The browser will refresh the current page from the server.


USING THE MENU

7.9 Camera (Menu 9)

 
 
Frame (Menu 9-1)

Total 12 sets of frames are available for your option.

1. Select **Frame** from the following menu list, and press  [Select]

2. Select one of frames from the list and press  [Select]

3. Press  [Camera]

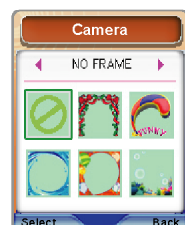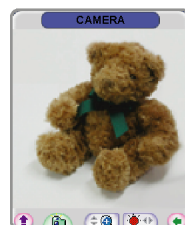

CAMERA

Image effect (Menu 9-2)

The function provides various picture effects.

Normal (Menu 9-2-1)

The Normal Image

Cool (Menu 9-2-2)

The Cool Image : Blue emphasis

Negation (Menu 9-2-3)

The Negation Image

Warm (Menu 9-2-4)

The Warm Image : Red emphasis

Image size (Menu 9-3)

 
 
2 sizes can be selected.

Standard (Menu 9-3-1)

The mark of general size (176 x 184 pixels)

Dual LCD Image (Menu 9-3-2)

The mark of a sub LCD image size (96 x 72 pixels)

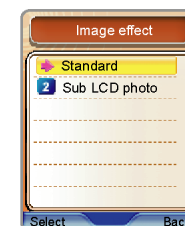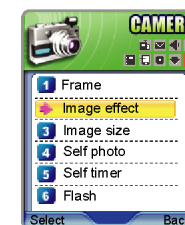

USING THE MENU

Self photo (Menu 9-4)

User can take his/her self image through a sub LCD for preview.

On : Preview image display on sub LCD

Off : Preview image display on main LCD



Self timer (Menu 9-5)

Image can be automatically taken at a preset time.

Off : Self timer is disabled

5 sec : After 5 second, image will be captured.

10 sec : After 10 second, image will be captured.



CAMERA

Flash (Menu 9-6)

Flash light can be emitted when taking photo.

On : Flash is enabled

Off : Flash is disabled

 


Shutter sound (Menu 9-7)

When we take a photograph, the shutter will sound.

On : Shutter sound is activated

Off : Shutter sound is deactivated.

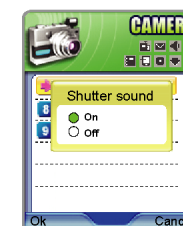

USING THE MENU

Storage Option (Menu 9-8)

3 kinds of image quality can be provided:

High quality

Quality

Standard




CAMERA

Image folder (Menu 9-9)

All stored images are listed for further editing options.

 Select a specified image, and press [Option] for editing.

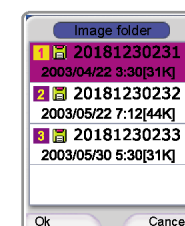

Delete (menu 9-9-1)

Delete the selected image from the folder.

 
Rename (menu 9-9-2)

Change the name of selected image



Delete all (menu 9-9-3)

Delete all images stored in the folder.

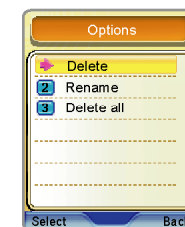

REFERENCE INFORMATION

Using the Batteries

Your phone is powered by a rechargeable Li-ion battery.

The following batteries are available (ask your local dealer for further details):

- Slim battery
- Standard battery

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging times depend on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only approved batteries and recharge your battery only with approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and life-time of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
- Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and – terminals of the battery (metal strips on the back of the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Safety Information

Traffic Safety

Do not use a hand-held mobile phone while driving a vehicle. If using a hand-held phone, park the vehicle before conversing. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.

Remember, road safety always comes first!

REFERENCE INFORMATION

Operating Environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your mobile phone.

Pacemakers

Pacemaker manufacturers recommended that a minimum separation of 6 inches (20 cm) be maintained between a hand-held mobile phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Person with pacemakers:

- Should always keep the phone more than 6 inches (15 cm) from their pacemaker when the phone is switched on;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing Aids

Some digital mobile phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

Other Medical Devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

REFERENCE INFORMATION

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicle (for example, electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems).

Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where poster notices so require.

Potentially Explosive Atmosphere

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemicals plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Vehicles

Only qualified personnel should service the phone, or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all mobile phone equipment on your vehicle is mounted and operation properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartments as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Switch off your phone before boarding an aircraft. The use of mobile phones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.

REFERENCE INFORMATION

Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.


Emergency Calls

Important!

This phone, like any mobile phone, operates using radio signals, wireless and landline networks as well as user-programmed functions which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (for example, medical emergencies).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 112 or other official emergency number). Emergency numbers vary by location.
3. Press  [SEND] key.

If certain features are in use (keyguard, restrict calls, etc.), you may first need to turn those features off before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident – do not cut off the call until given permission to do so.

Radio Frequency (RF) Signals

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies:

- American National Standards Institute (ANSI) IEEE C95.1-1992
- National Council on Radiation Protection and Measurement (NCRP), Report 86
- International Commission on Non-Ionising Radiation Protection (ICNIRP) 1996
- Ministry of Health (Canada), Safety Code6.

REFERENCE INFORMATION

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The highest SAR value for this model phone when tested for use at the ear is 0.871W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the relevant international guidelines for RF exposure.

For body worn operation, to maintain compliance with FCC RF exposure guidelines, use only approved accessories. When carrying the phone while it is on, use the specific belt-clip that has been tested for compliance.

Use of non-approved accessories may violate FCC RF exposure guidelines and should be avoided.

For additional information concerning exposure to radio frequency signals, see the following websites:

Federal Communications Commission (FCC)

RF Safety program (select "Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters"):
<http://www.fcc.gov/oet/rfsafety>

World Health Organization (WHO)

International Commission on Non-Ionising Radiation Protection (select Qs & As):
<http://www.who.int/emf>

United Kingdom, National Radiological Protection Board:

<http://www.nrbp.org.uk>

Cellular Telecommunications Industry Association (CTIA):

<http://www.wow-com.com>

U.S. Food and Drug Administration (FDA)

Centre for Devices and Radiological Health:
<http://www.fda.gov/cdrh/consumer/>

REFERENCE INFORMATION

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and allow you to enjoy this product for many years. When using your phone, battery, charger, OR any accessory:

- Keep it and all its parts and accessories out of small children's reach.
- Keep it dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use or store it in dusty, dirty areas as its moving parts can be damaged.
- Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store it in cold areas. When the phone warms up (to its normal operating temperature), moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint it. Paint can clog the device's moving parts and prevent proper operation.
- Use only supplied or an approved replacement antenna. Unauthorised antennas, modifications of attachments could damage the phone and may violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Notes:

- This phone may be possibly not applicable for special services offered by particular network service provider. Please check with your network service provider for details.
- With continuous software and hardware enhancement of this phone, the contents of this owner's manual may be varied from actual availability. Toplux reserves the right to revise this manual or withdraw it any time without prior notice.