

A

B

C

D

E


A

B

C

D

E

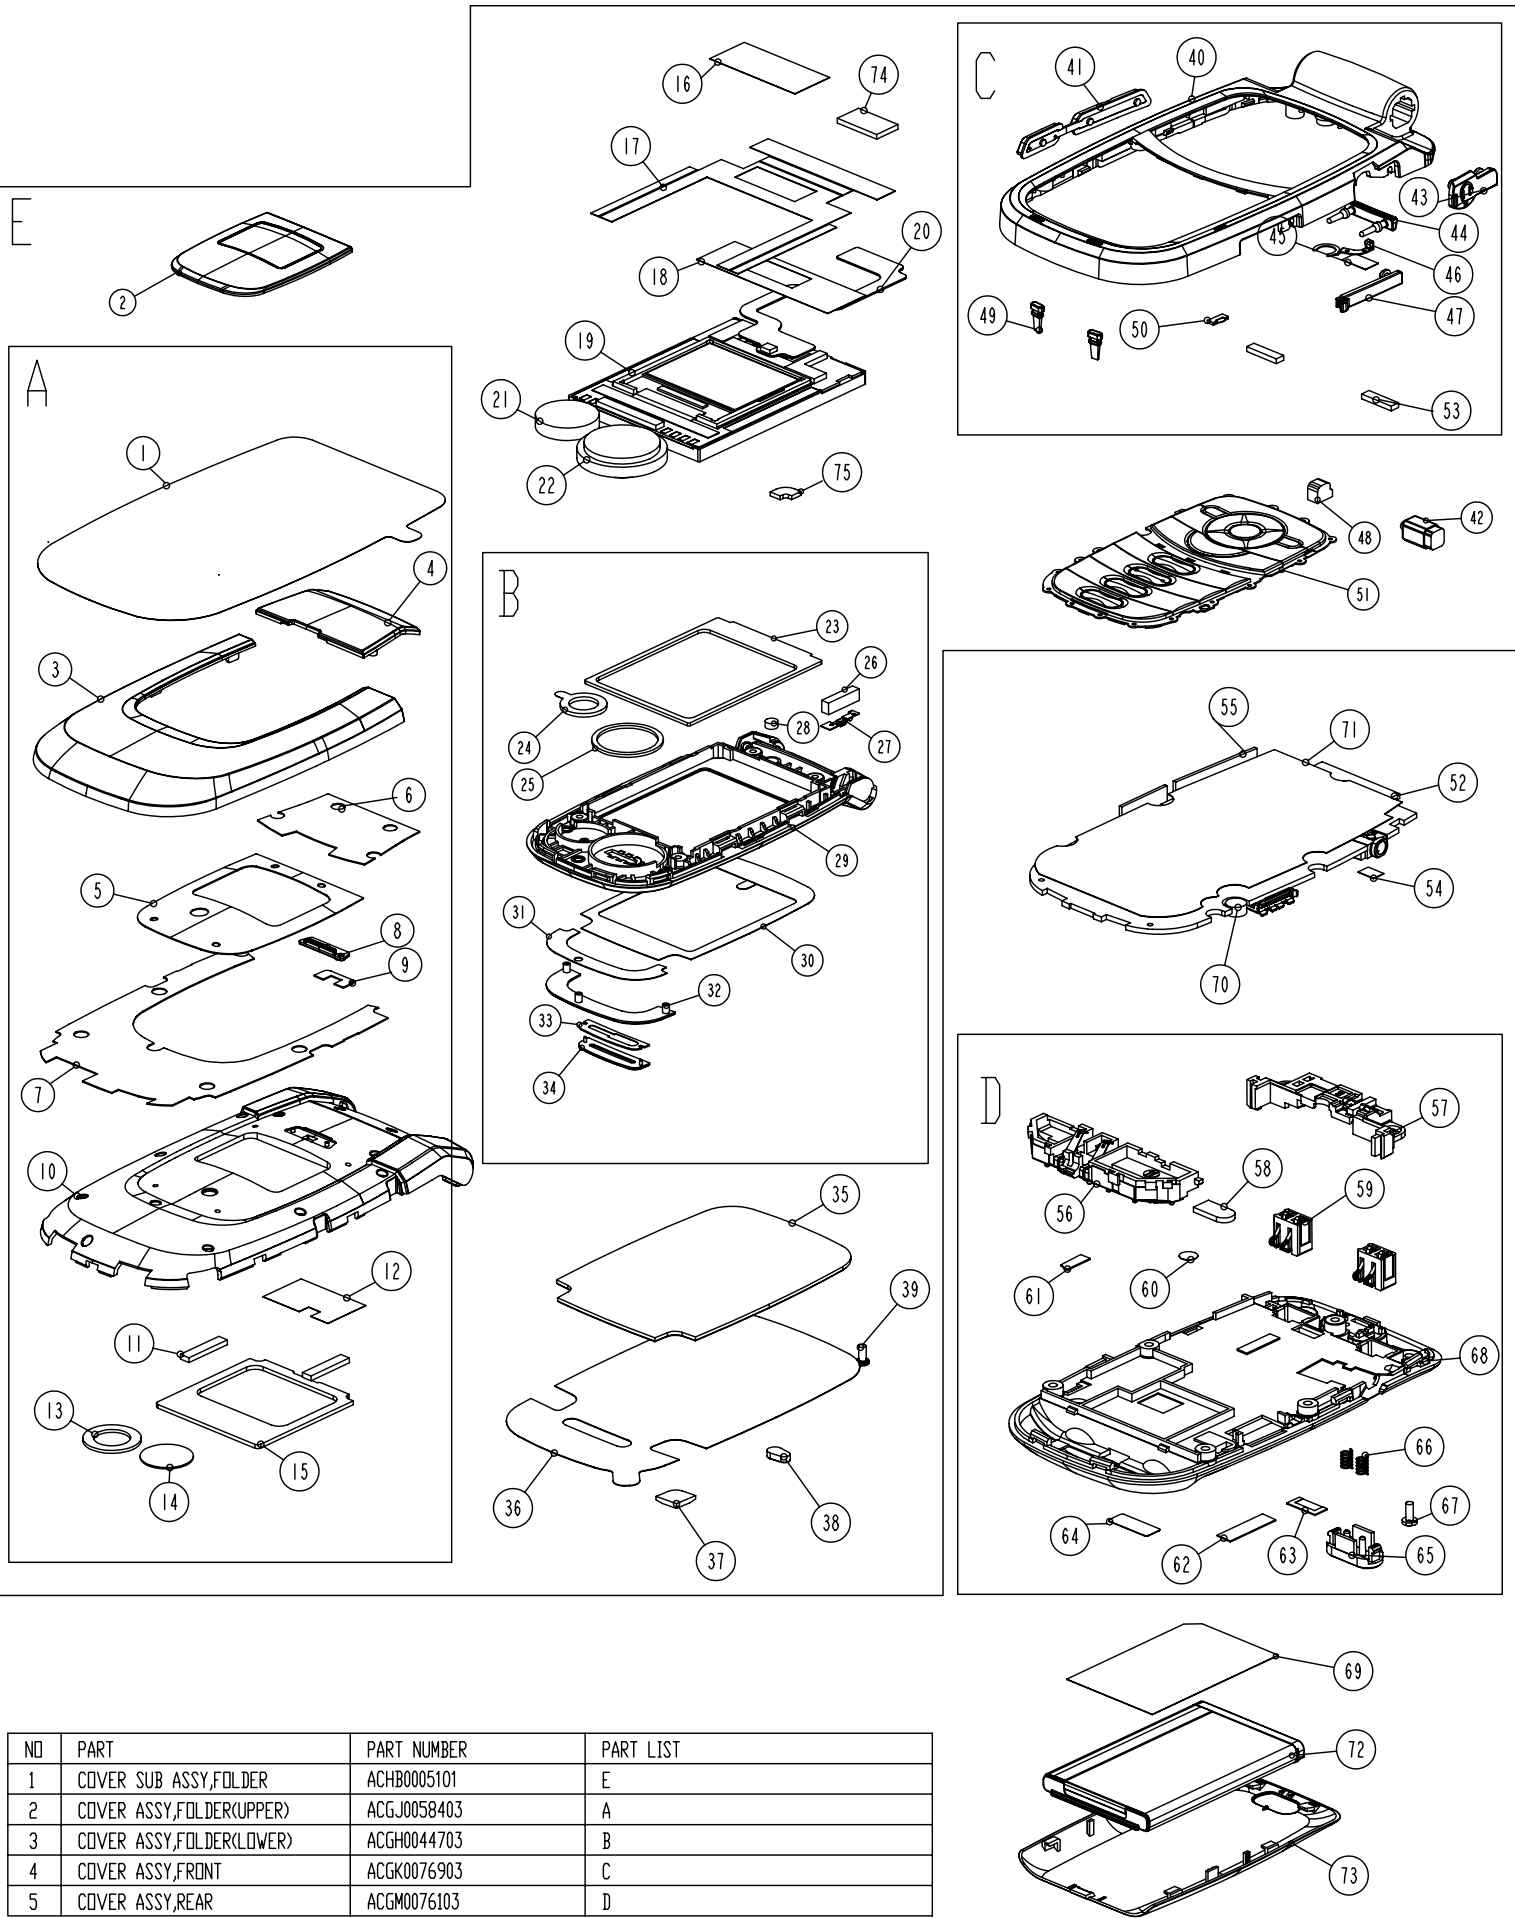

NO	PART	PART NUMBER	PART LIST
1	COVER SUB ASSY,FOLDER	ACHB0005101	E
2	COVER ASSY,FOLDER(UPPER)	ACGJ0058403	A
3	COVER ASSY,FOLDER(LOWER)	ACGH0044703	B
4	COVER ASSY,FRONT	ACGK0076903	C
5	COVER ASSY,REAR	ACGM0076103	D

90					
89					
88					
87					
86					
85					
84					
83					
82					
81					
80					
79					
78					
77					
76					
75	PAD	1	MPBZ0138501		
74	GASKET,SHIELD,FORM,CONN	1	MGAD0123501		
73	COVER BATTERY	1	MCJA0034304		
72	BATTERY PACK,LI-ION	1	SBPL0081602		
71	DOME,ASSY,METAL	1	ADCA0055701		
70	MICROPHONE	1	SUNY0003802		
69	LABEL,APPROVAL	1	MALL0029902		
68	COVER,REAR	1	MCJN0055503		
67	SCREW,MACHINE,BIND	7	GMEY0009201		
66	SPRING,LOCKER	2	MSDC0010601		
65	LOCKER,BATTERY	1	MLEA0032403		
64	LABEL,QUALCOMM	1	MLAN0000603		
63	SHEET_1(RECEPTICAL)	1	MSAZ0039403		
62	SHEET_2(REAR TOP)	1	MSAZ0039404		
61	SHEET_3(REAR BOTTOM)	1	MSAZ0043902		
60	LABEL AS	1	MLAB0000601		
59	CONNECTOR,ETC	2	ENZY0013201		
58	PAD,MIC	1	MPBH0026801		
57	ANTENNA,MOBILE,FIXED	1	SNMF0024301		
56	ANTENNA,MOBILE,FIXED	1	SNMF0027401		
55	PCB,SIDEKEY	1	SPKY0037301		
54	PAD,PCB	1	MPBZ0164901		
53	GASKET,FRONT	2	MGAD0132901		
52	PCB ASSY MAIN SMT	1	SAFF0101301		
51	KEYPAD	1	MKAZ0031705		
50	FILTER,MIKE	1	MFB00017801		
49	BUMPER	2	MBHY0019909		
48	STOPPER	1	MSGY0017202		
47	CAP,RECEPTACLE	1	MCCE0032003		
46	FINGER,GROUND	1	MFAA0006902		
NO.	DESCRIPTION	Q'TY	DRAWING NO.	REMARK	

45	GASKET,EMI(FRONT)	1	MGAB0014802		
44	STOPPER,HINGE	1	MSGB0015601		
43	CAP,EARPHONEJACK	1	MCCC0037803		
42	HINGE,FOLDER	1	MHFD0013701		
41	BUTTON,SIDE	1	MBJL0034603		
40	COVER,FRONT	1	MCJK0060803		
39	SCREW,MACHINE,BIND	4	GMEY0002001		
38	CAP,SCREW(BOTTOM)	2	MCCH0090003		
37	CAP,SCREW(TOP)	2	MCCH0087702		
36	TAPE,PROTECTION(LOWER)	1	MTAB0143502		
35	WINDOW,LCD	1	MWAC0068702		
34	DECO,RECEIVER	1	MDAH0018401		
33	TAPE,DECO(RECEIVER)	1	MTAA0119502		
32	DECO,FOLDER(LOWER)	1	MDAH0018902		
31	TAPE,DECO(LOWER)	1	MTAA0119501		
30	TAPE,WINDOW	1	MTAD0054601		
29	COVER,FOLDER(LOWER)	1	MCJH0035703		
28	MAGNET,SWITCH	1	MMAA0002301		
27	FINGER,GROUND(LOWER)	1	MFCA0006901		
26	GASKET,SHIELD FORM(LOWER)	1	MGAD0126103		
25	FILTER,SPEAKER	1	MFB00024201		
24	PAD,MOTOR(LOWER)	1	MPBJ0034301		
23	PAD,LCD	1	MPBG0047901		
22	SPEAKER	1	SUSY0023501		
21	VIBRATOR,MOTOR	1	SJMY0002604		
20	PCB ASSY,FLEXIBLE,SMT	1	SACE0048801		
19	LCD MODULE	1	SVLM0020301		
18	INSULATOR,LCD	1	MIDZ0021901		
17	GASKET,EMI	1	MGAB0014801		
16	INSULATOR LCD TOP	1	MIDA0024301		
15	PAD,LCD(SUB)	1	MPB00028701		
14	PAD,SPEAKER(UPPER)	1	MPBN0031801		
13	PAD,MOTOR(UPPER)	1	MPBJ0034401		
12	INSULATOR(INDICATOR)	1	MIDZ0112001		
11	GASKET,SHIELD FORM	2	MGAD0123601		
10	COVER,FOLDER(UPPER)	1	MCJJ0044403		
9	TAPE(INDICATOR)	1	MTAZ0163501		
8	INDICATOR,LED	1	MIAA0019801		
7	TAPE,DECO(UPPER,BOTTOM)	1	MTAA0119602		
6	TAPE,DECO(UPPER,TOP)	1	MTAA0119601		
5	TAPE, WINDOW(SUB)	1	MTAE0028101		
4	DECO,FOLDER(UPPER TOP)	1	MDAE0037403		
3	DECO,FOLDER(UPPER BOTTOM)	1	MDAE0037903		
2	WINDOW,LCD(SUB)	1	MWAF0035201		
1	TAPE, PROTECTION(UPPER)	1	MTPB0119101		
NO.	DESCRIPTION	Q'TY	DRAWING NO.	REMARK	